

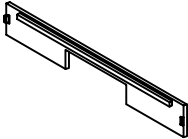






























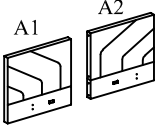




PARTS LIST

| | | | | | |
|--|--|--|--|---|---|
| A HEADBOARD (2 PCS) TOP  | B FOOTBOARD (1 PC)  | C SIDE RAIL (2 PCS)  | D CENTRAL RAIL (2 PCS) 2040mm  | E SUPPORT LEG (4 PCS) 265mm  | F SIDE RAIL (4 PCS) SUPPORT 266 x 60 x 15mm  |
| G LEGS (2 PCS) 70 x 70 x 50(H)  | H FOOTBOARD (1 PC) FRONT PANEL (WITH LABEL 1)  | I FOOTBOARD (1 PC) BACK PANEL (WITH LABEL 2)  | J FOOTBOARD & SIDE RAIL SIDE PANEL (6 PCS) (WITH LABEL 3)  | K FOOTBOARD (1 PC) BOTTOM PANEL (WITH LABEL 4)  | L SIDE RAIL (2 PCS) FRONT PANEL (WITH LABEL 5)  |
| M SIDE RAIL (2 PCS) BACK PANEL (WITH LABEL 6)  | N SIDE RAIL (2 PCS) BOTTOM PANEL (WITH LABEL 7)  | O BOTTOM PANEL (7 PCS) BIG SUPPORT (WITH LABEL 8)  | P BOTTOM PANEL (4 PCS) SMALL SUPPORT (WITH LABEL 9)  | Q SLAT (14 PCS) 1827mm  | R HEADBOARD (2 PCS) BOTTOM R1 R2  |



HARDWARE LIST
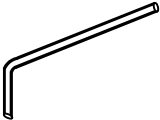
| | | | | |
|--|---|---|---|--|
| 1 JCBC M6 X 40mm(10 PCS)  | 2 JCBB M8 x 16 mm (8 PCS) (PRE-ATTACHED)  | 3 ALLEN KEY M4 X 65mm (1 PC)  | 4 ALLEN KEY M5 X 70mm (1 PC)  | 5 CSK M3.5 x 16mm (54 PCS)  |
| 6 CSK M4 x 28mm (12 PCS)  | 7 CSK M4 x 32mm (64 PCS)  | 8 CSK M4 x 50mm (28 PCS)  | 9 ROLLER (14 PCS)  | 10 WOOD DOWEL 20MM (8 PCS)  |
| 11 POWER NAIL 6/8 (24 PCS)  | 12 BIG ADJUSTER (4 PCS)  | 13 JCBC M6 X 50mm (10 PCS)  | 14 SPRING WASHERS (10 PCS)  | 15 FLAT WASHERS (10 PCS)  |
| 16 METAL STOPPER (6 PCS)  | | | | |


Step 1 : Unzip the black non-woven fabric on the back of headboard bottom (R). Tighten the headboard bottom (R1) to headboard bottom (R2) as shown.

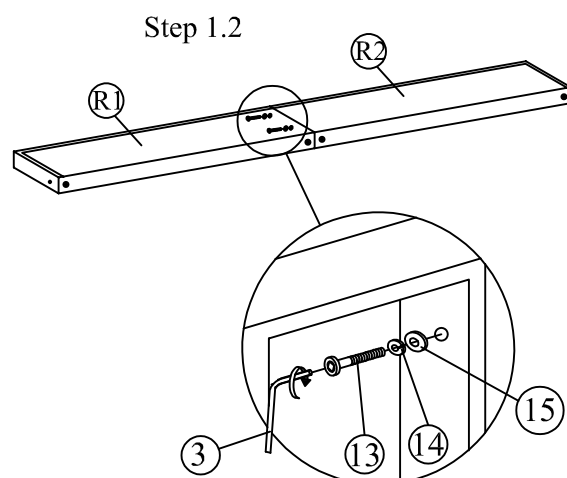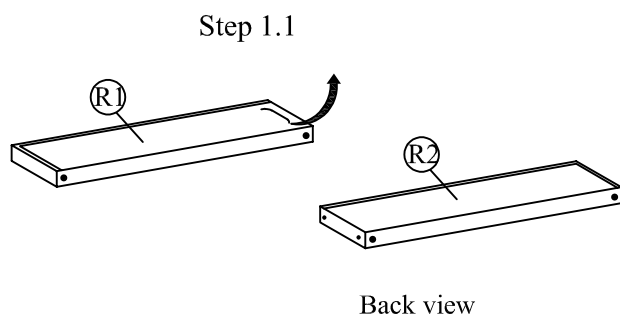


Step 2 : Unzip the black non-woven fabric on the back of headboard bottom (A). Tighten the headboard Upper (A1+A2) as shown.

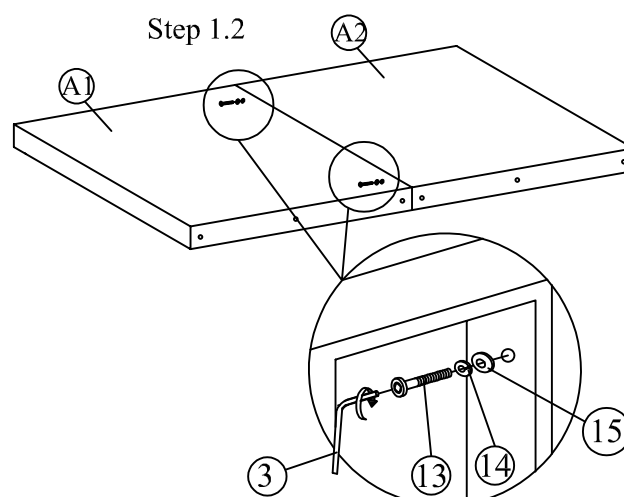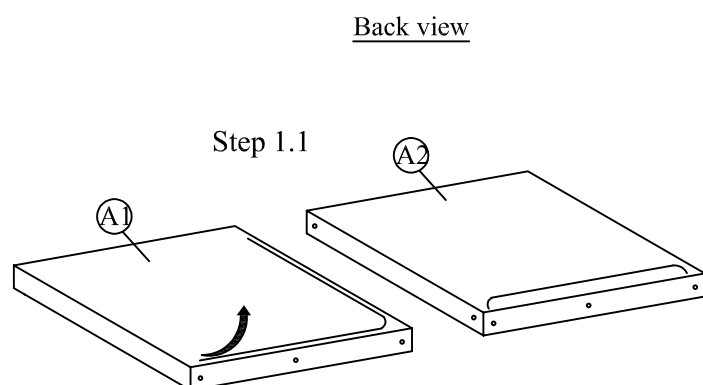


Step 3 : Unzip the black non-woven fabric on the back of headboard bottom (A1+A2). Tighten the headboard Upper (A1+A2) to headboard bottom (R1+R2) as shown.

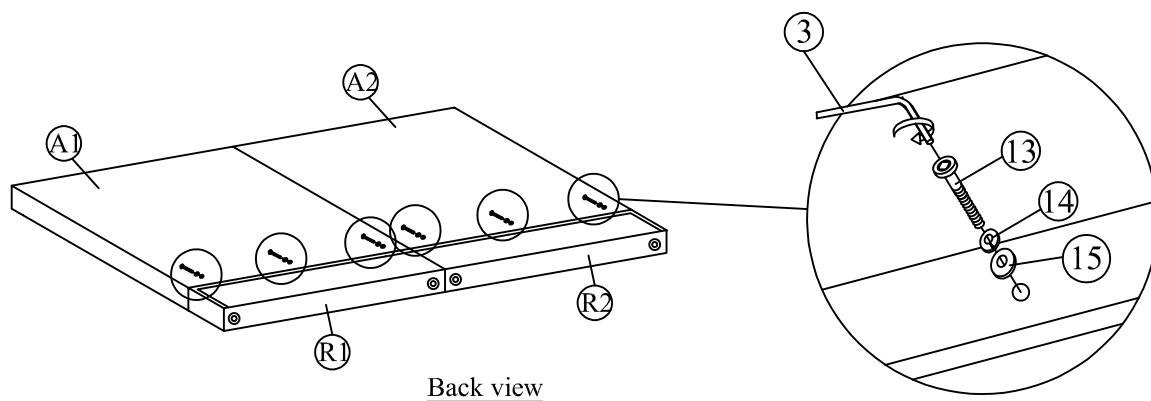


Step 4 : Tighten the legs (G) by using self tapping screws to both headboard (A) and footboard (B) as shown.
Predrilled holes not required.

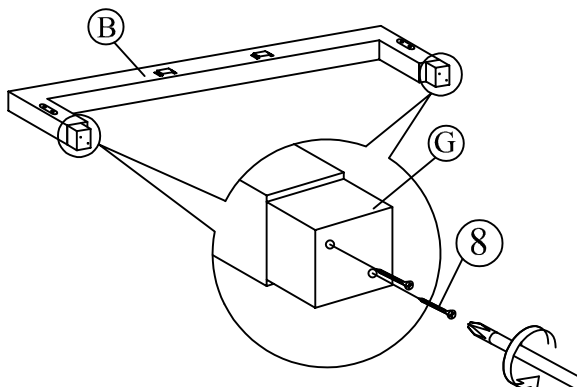

Step 5 : Attach wood dowel (10) to side rail (C). Tighten the side rail support (F) to the side rail (C) with screws (6) using screw driver (not included).


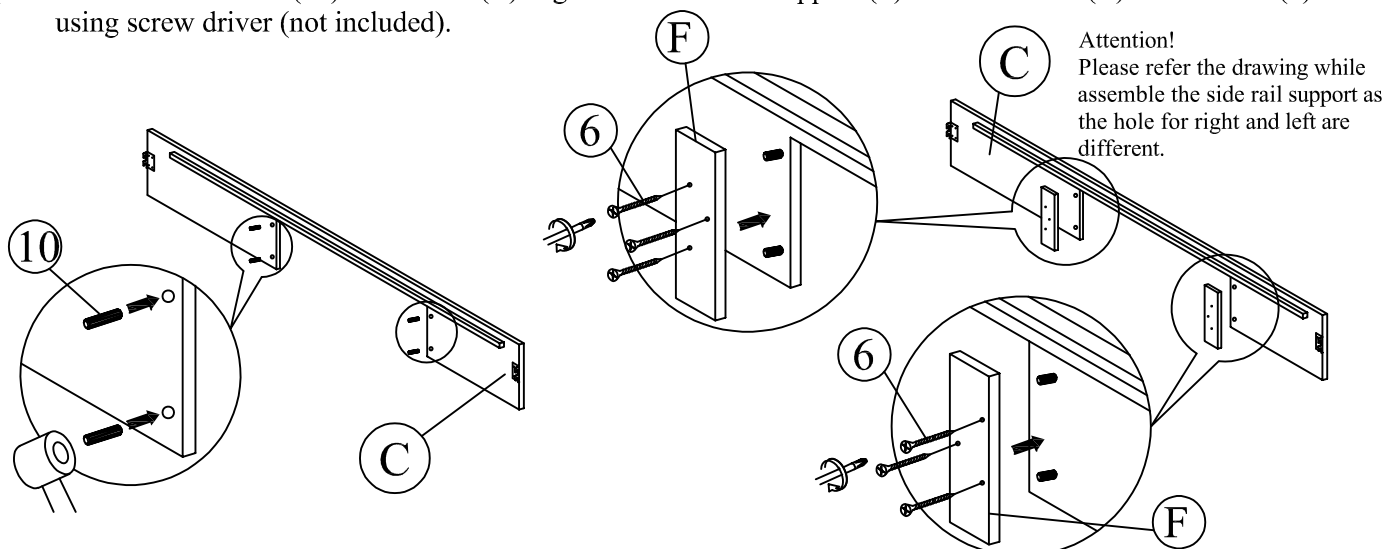


Step 6 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

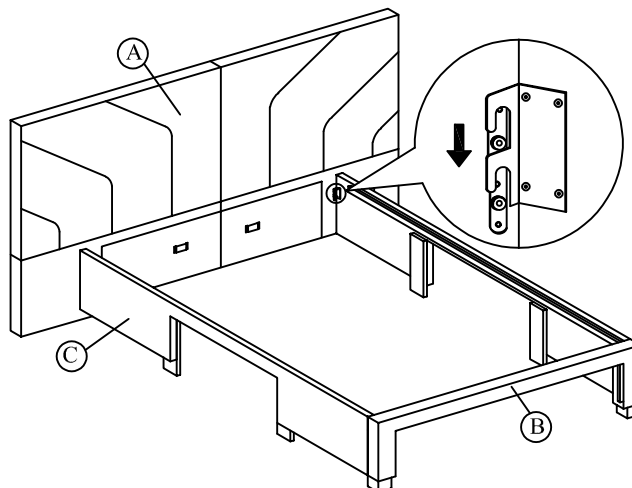


ASSEMBLY INSTRUCTIONS


Step 7 : Attach the support legs (E) to the center rail (D) of the bed as shown. Slide the center rail (D) to the headboard (A) and footboard (B).

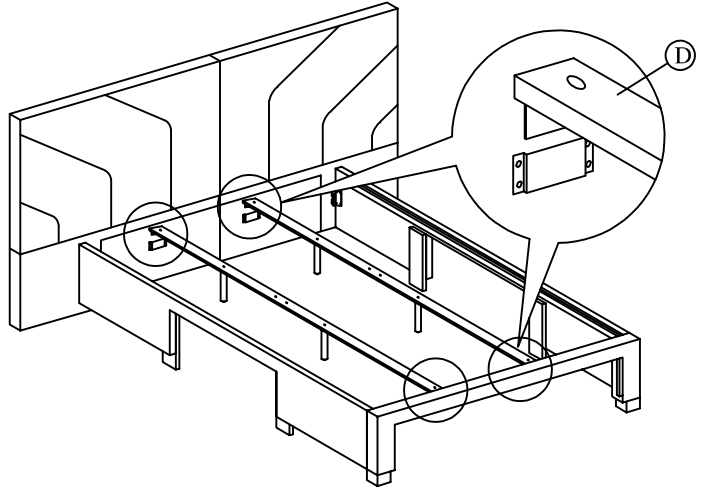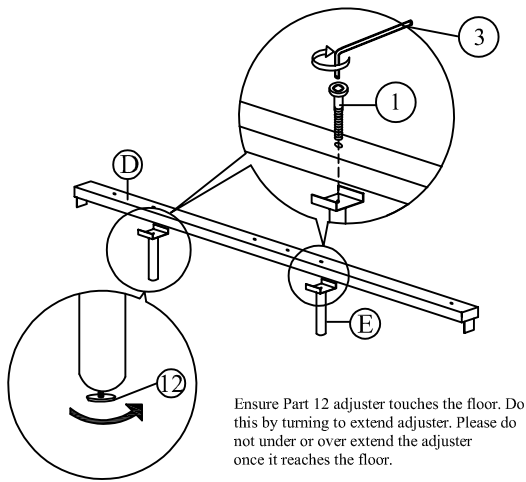


Step 8 : Tighten the footboard side panel (J) to the footboard front panel (H) and footboard back panel (I) with screws (8) using screw driver (not included).

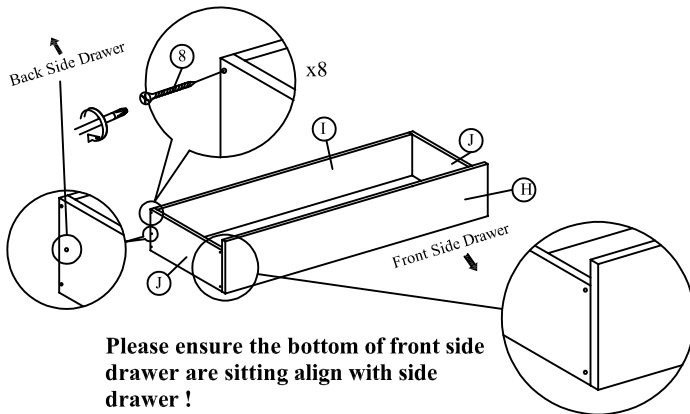


Step 9 : Slide the footboard bottom panel (K) to the set up drawer.

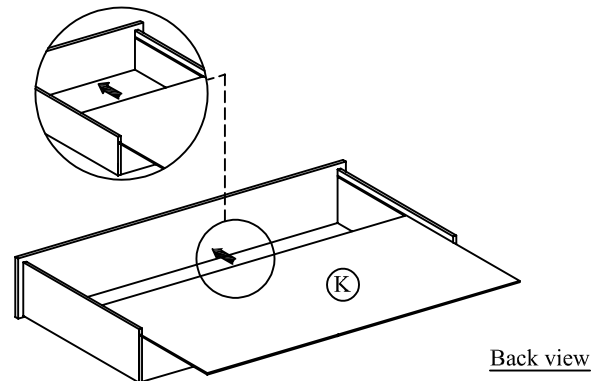


Step 10 : Tighten the bottom panel support (O & P) with screws (7) using screw driver (not included). Attach the bottom panel with Nail (11) using the hammer (not included).

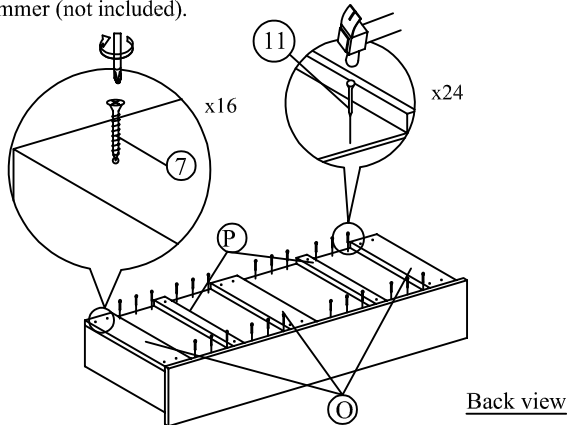


Step 11 : Tighten the roller (9) with screws (5) using screw driver (not included).

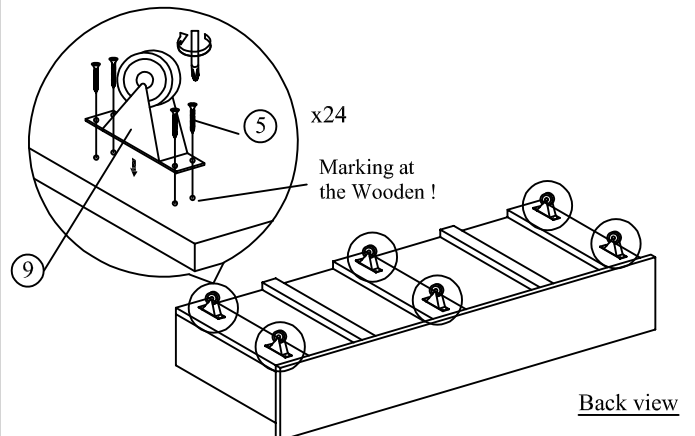


Step 12 : Tighten the side rail side panel (J) to the side rail front panel (L) and side rail back panel (M) with screws (8) using screwdriver (not included).

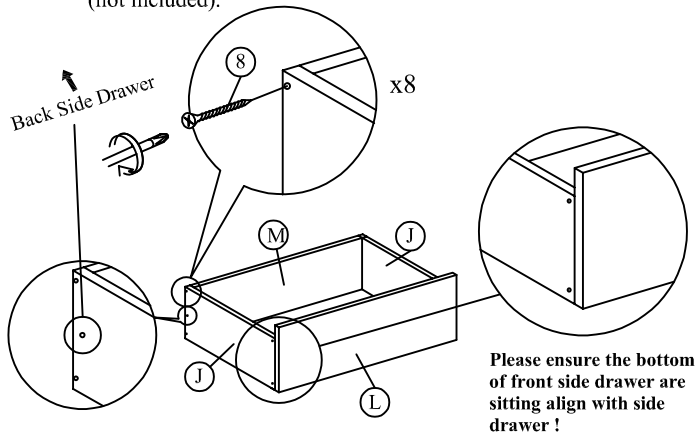


Step 13 : Slide the side rail bottom panel (N) to the set up drawer.

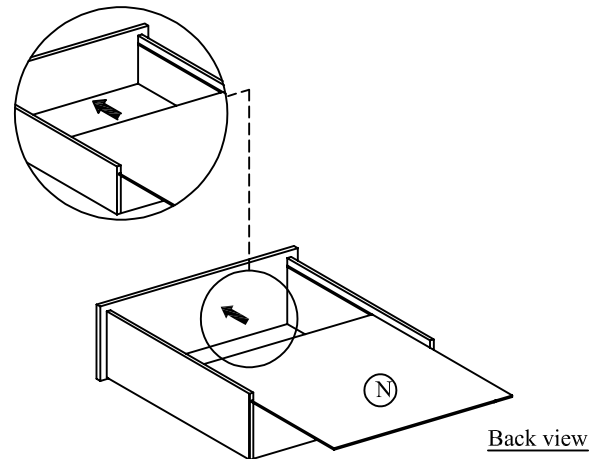


Step 14 : Tighten the bottom panel support (O & P) with screws (7) using screw driver (not included).

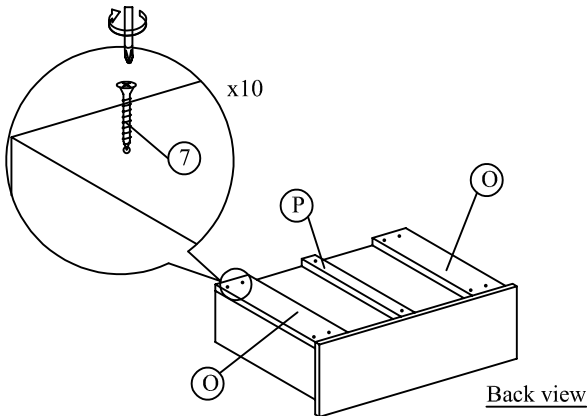

Step 15 : Tighten the roller (9) with screws (5) using screw driver (not included).

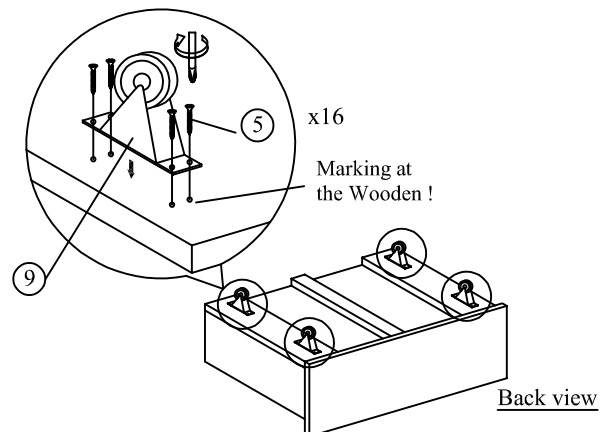

Step 16 : Affix the Slat (Q) to the side rail support wood and the center rail (D). Tighten all the 4 corner .

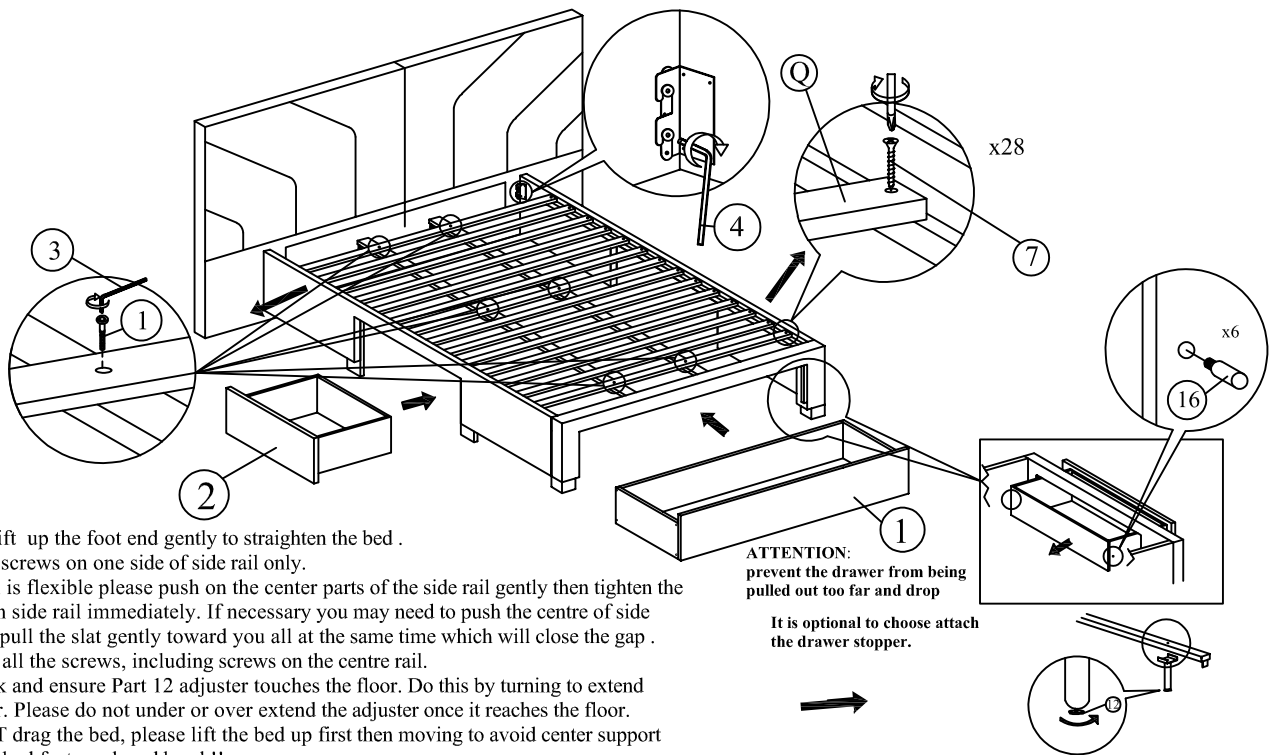

Remark

- A) Please lift up the foot end gently to straighten the bed .
- B) Tighten screws on one side of side rail only.
- C) Side rail is flexible please push on the center parts of the side rail gently then tighten the screw on side rail immediately. If necessary you may need to push the centre of side rail and pull the slat gently toward you all at the same time which will close the gap .
- D) Tighten all the screws, including screws on the centre rail.
- E) Recheck and ensure Part 12 adjuster touches the floor. Do this by turning to extend adjuster. Please do not under or over extend the adjuster once it reaches the floor.
- F) DO NOT drag the bed, please lift the bed up first then moving to avoid center support leg and bed feet crack and break!!