


CLAMELIAQC / CLAMELIAQS / CLAMELIAQG


QUEEN BED

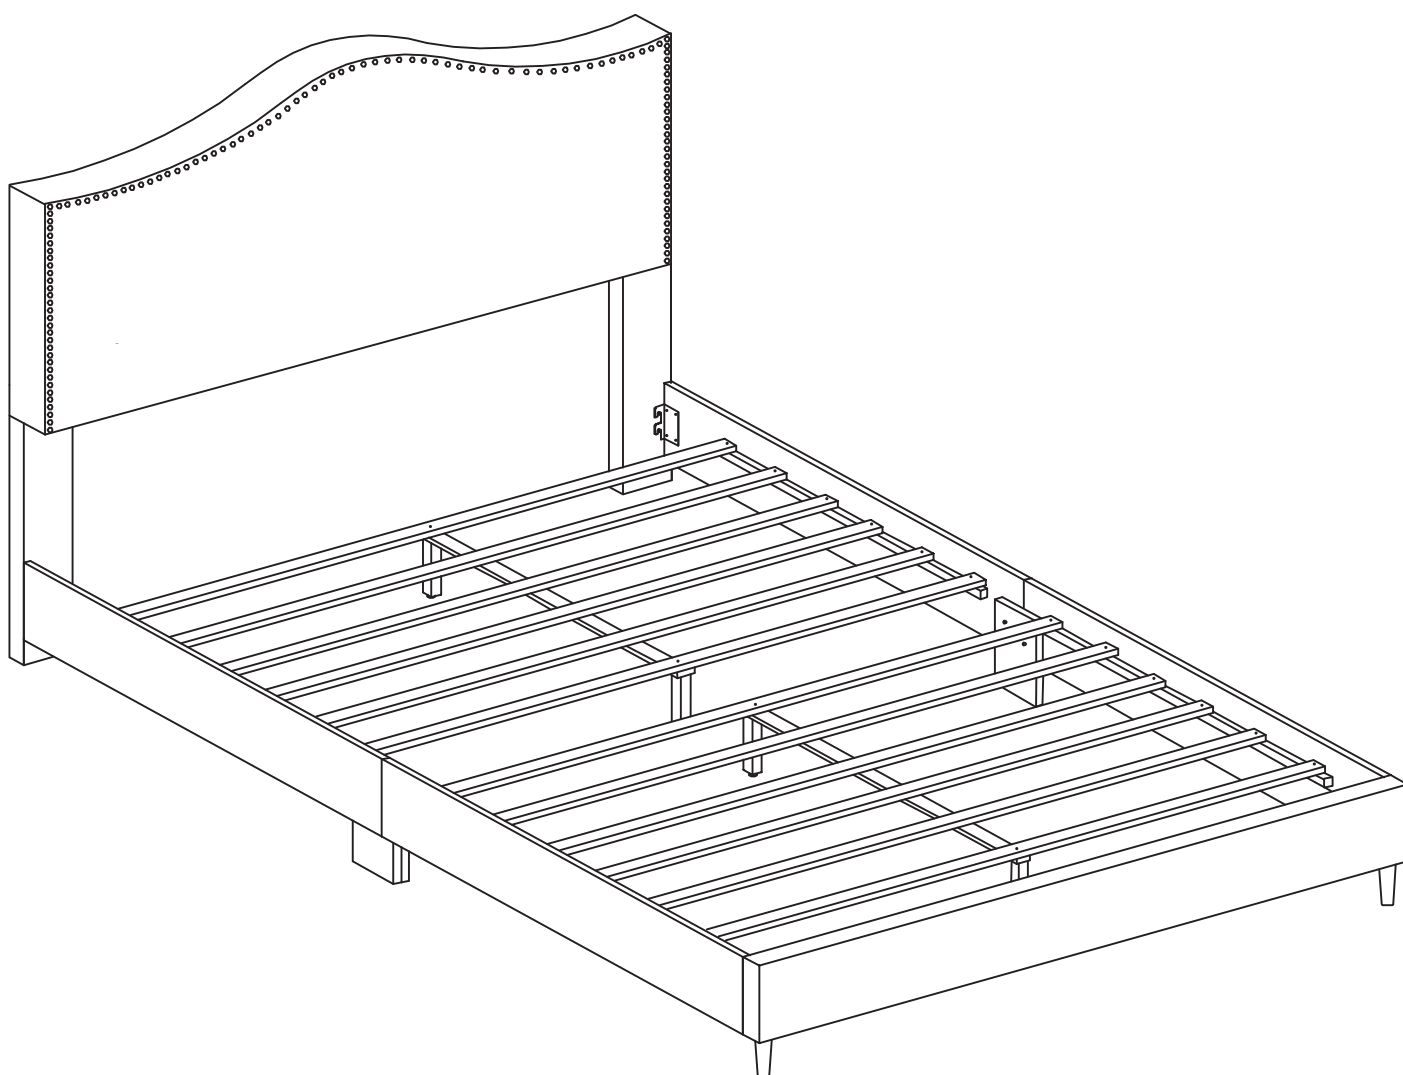














**PLEASE DO NOT RETURN TO  
STORE!**


---

**Bed Parts are Inside the Headboard  
Zipper Compartment**

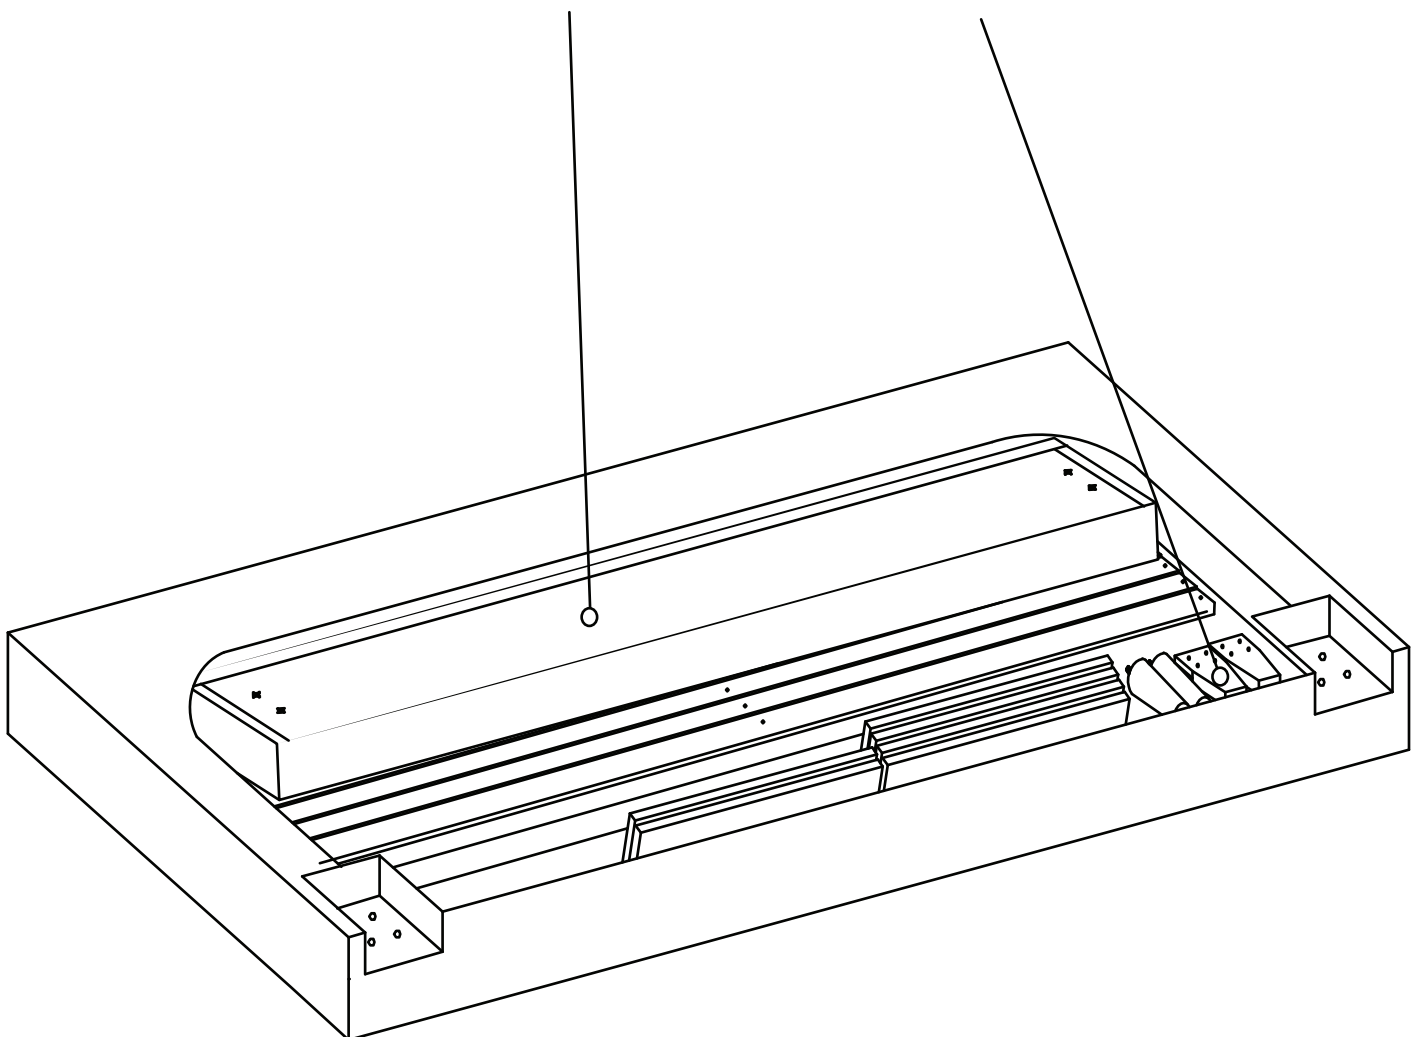


# PARTS AND HARDWARE / PIEZAS Y HARDWARE

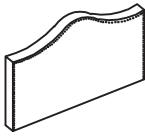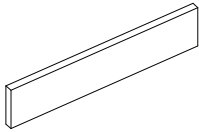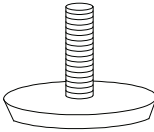
| No.                     | SKETCH<br>ESQUEMA                                                                   | DESCRIPTION<br>La Description                 | QTY<br>CANTIDAD | No. | SKETCH<br>ESQUEMA                                                                    | DESCRIPTION<br>La Description              | QTY<br>CANTIDAD |
|-------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------|-----------------|-----|--------------------------------------------------------------------------------------|--------------------------------------------|-----------------|
| A                       |    | Headboard Panel<br>Panel De La Cabecera       | 1               | K   |    | Screw M4x32mm<br>Tornillo M4x32mm          | 24              |
| B                       |    | Headboard Legs<br>Patas De Cabecera           | 2               | L   |    | Allen bolt M8x20mm<br>Perno Allen M8x20mm  | 8               |
| C                       |    | Footboard<br>Pie De Cama                      | 1               | M   |    | Allen bolt M6x35mm<br>Perno Allen M6x35mm  | 8               |
| D                       |    | Center Support<br>Soportes Centrales          | 2               | N   |    | Allen bolt M6x50mm<br>Perno Allen M6x50mm  | 6               |
| E                       |  | Side Rail<br>Largueros Lateral                | 4               | O   |  | Allen bolt M6x60mm<br>Perno Allen M6x60mm  | 4               |
| F                       |  | Footboard Leg<br>Patas Del Pie De Cama        | 2               | P   |  | Allen Key M4x65mm<br>Llave Allen M4x65mm   | 1               |
| G                       |  | Slats<br>Listones                             | 2               | Q   |  | Allen Key M5x70mm<br>Llave Allen M5x70mm   | 1               |
| I                       |  | Slat Support Legs<br>Tas De Apoyo De Listones | 4               | S   |  | Flat washer M6<br>Arandela plana M6        | 8               |
| J                       |  | Center Rail<br>Central Rail                   | 2               | T   |  | Spring washer M6<br>Arandela De Resorte M6 | 6               |
| service@furnsdirect.com |                                                                                     |                                               |                 | U   |  | Adjustable Leveler<br>Nivelador ajustable  | 4               |






PHILIPS SCREWDRIVER  
REQUIRED  
(NOT INCLUDED)


\*Remove Parts From  
Headboard Zipper  
Compartment

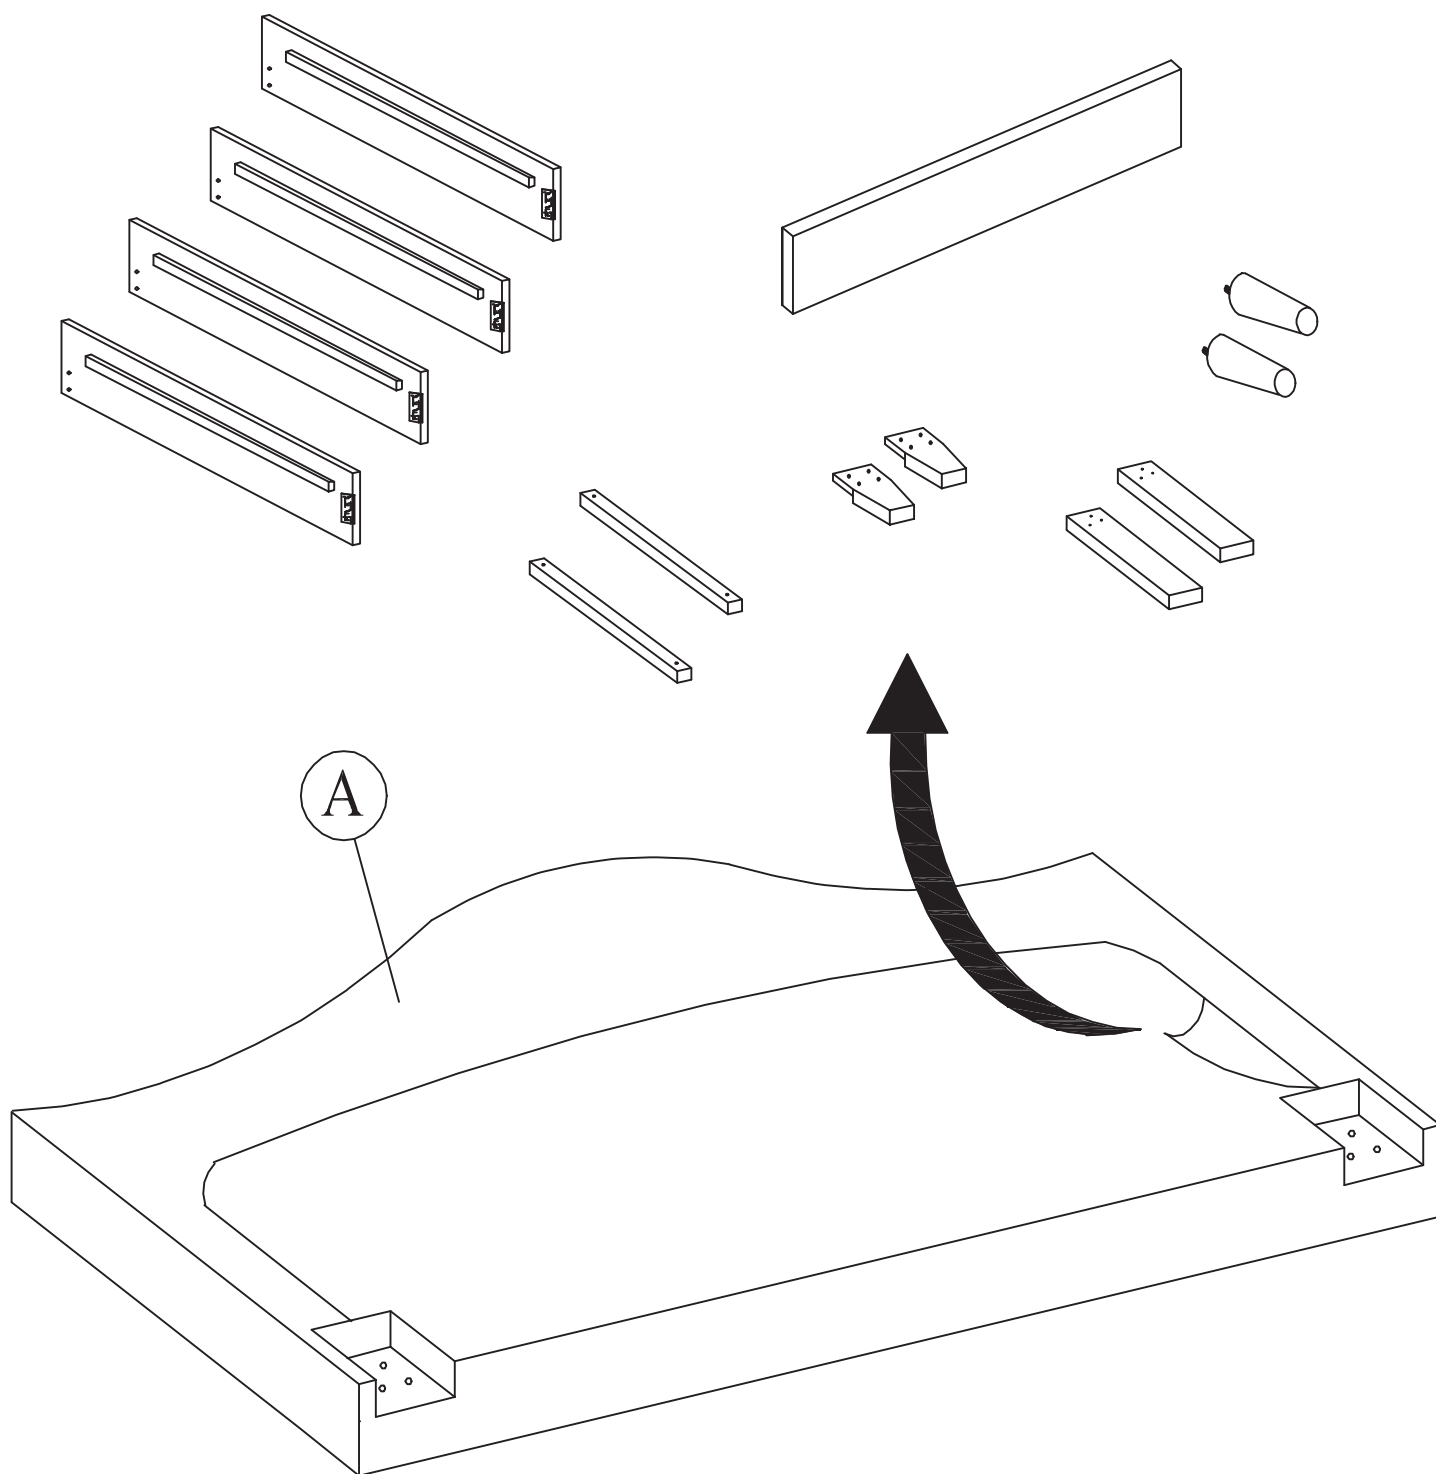


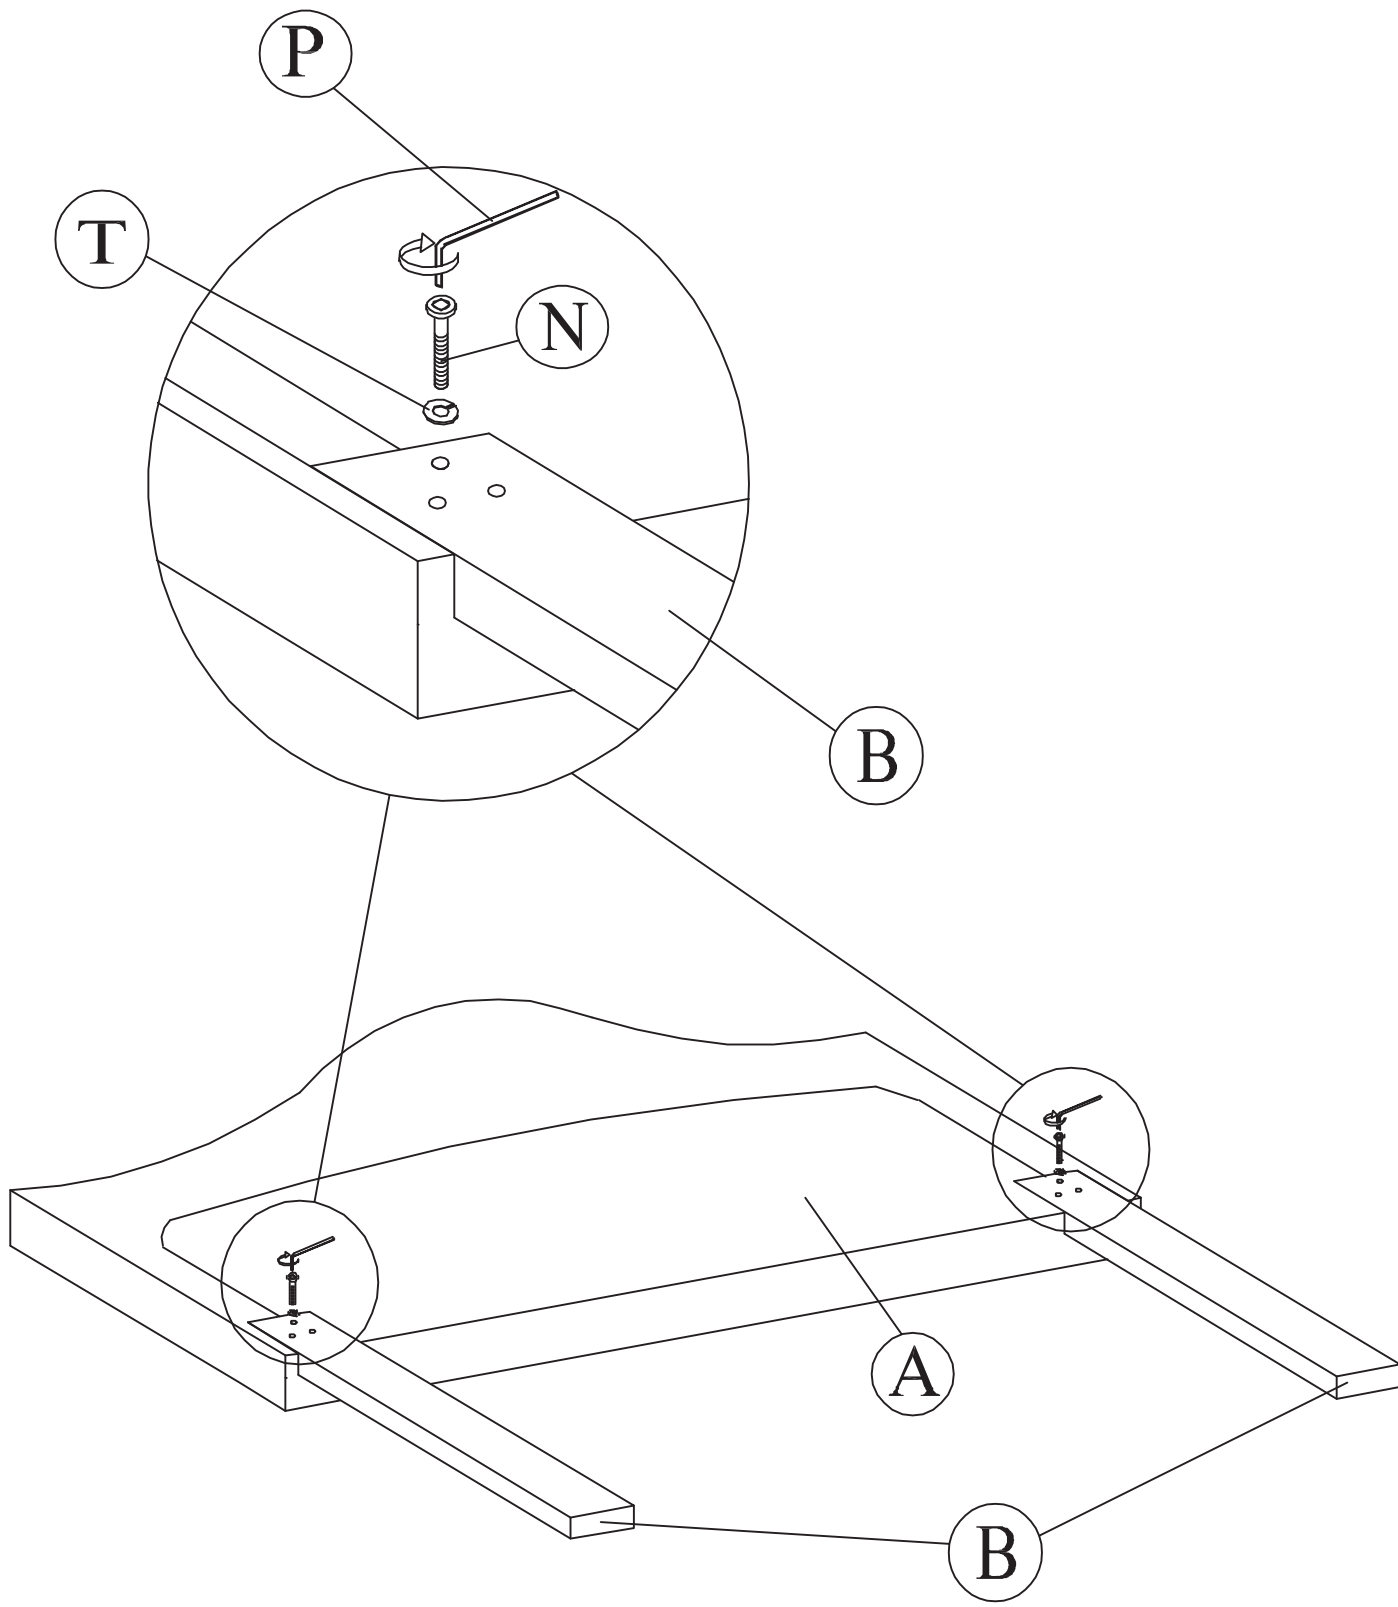


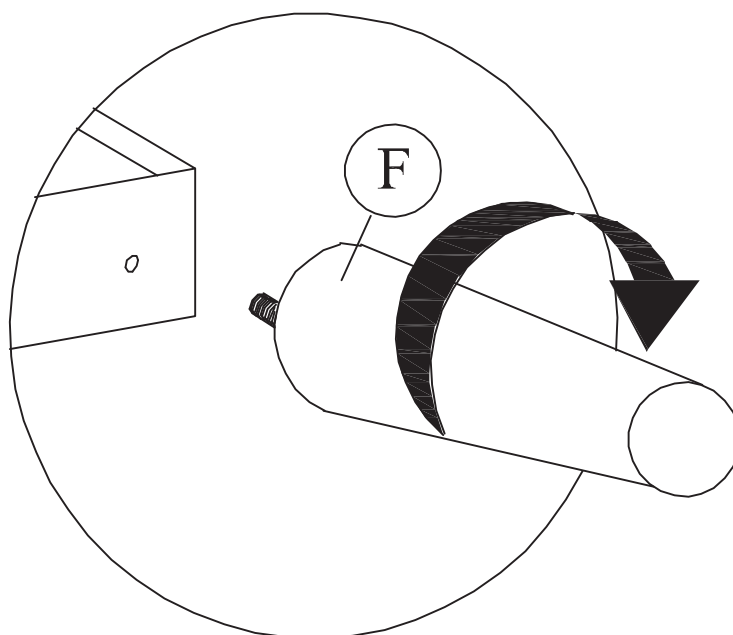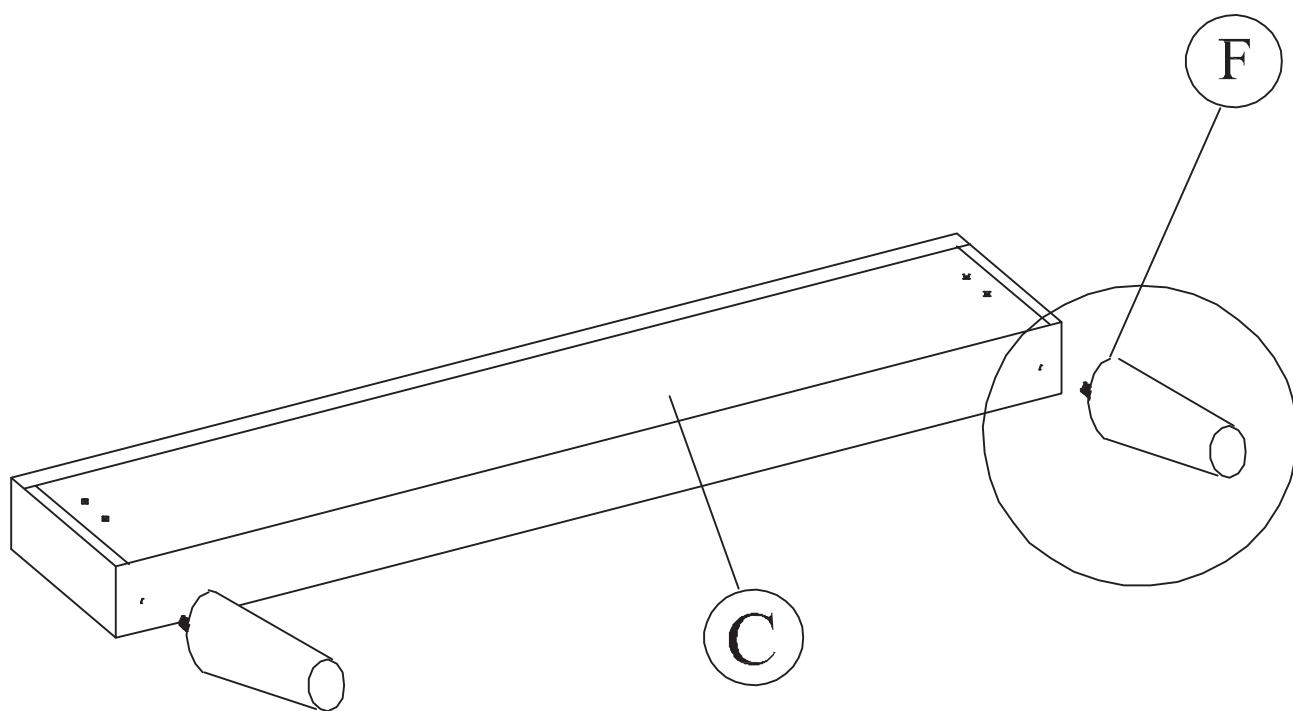


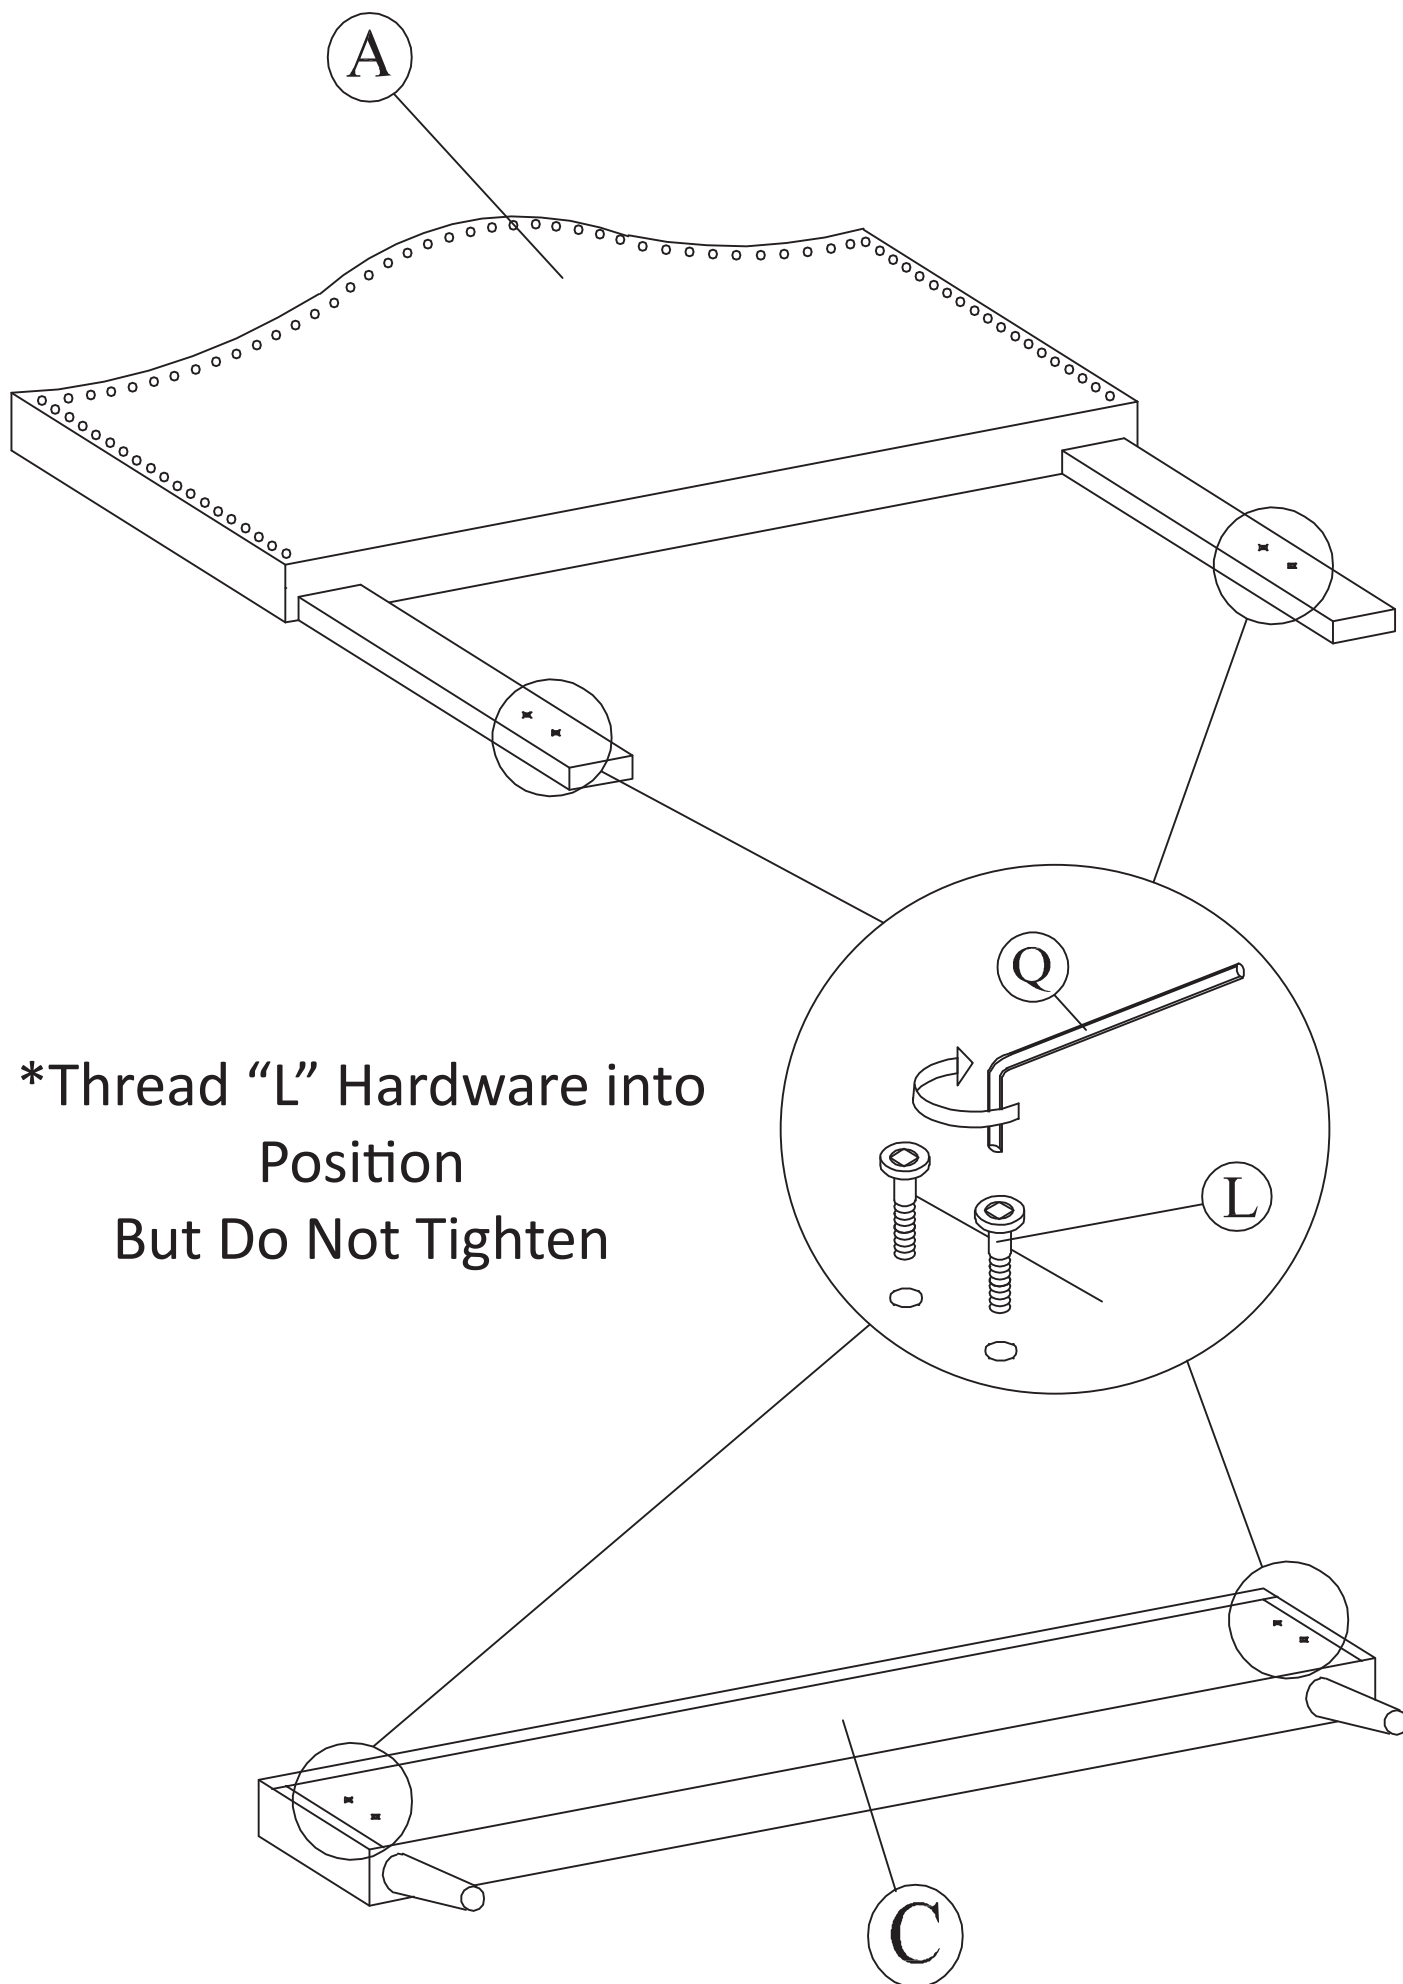


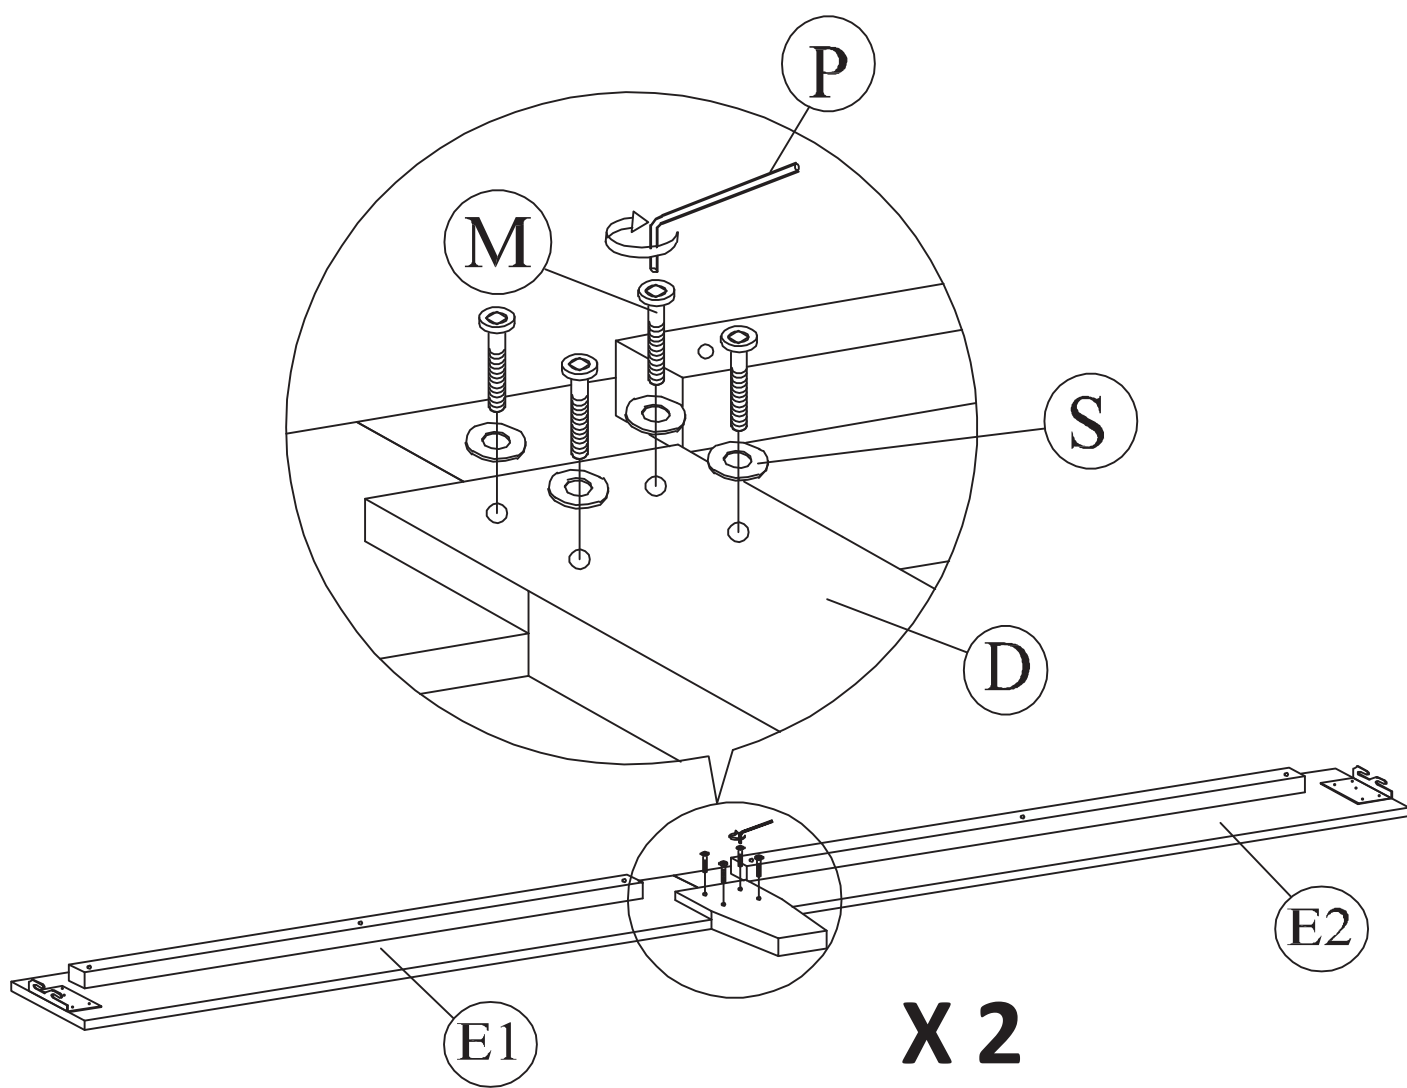

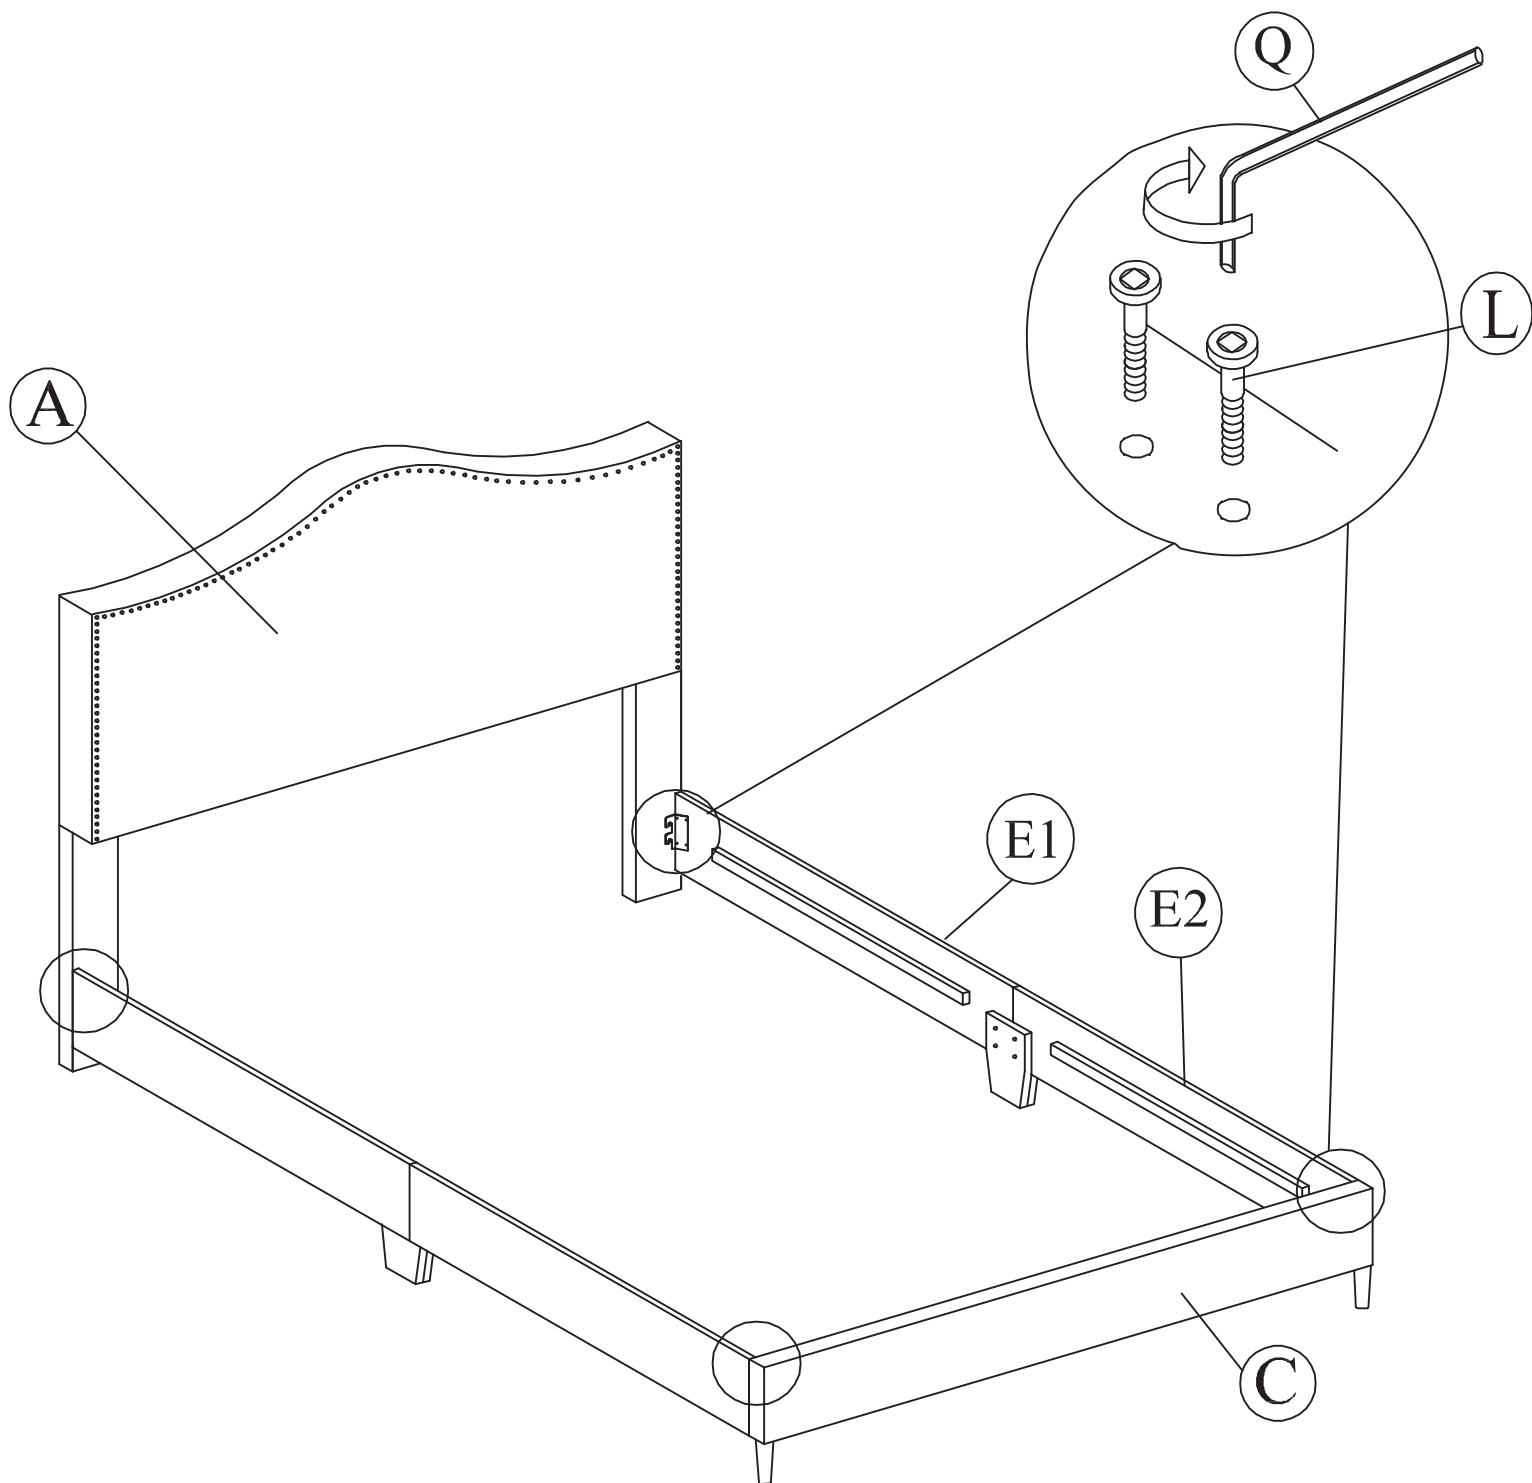

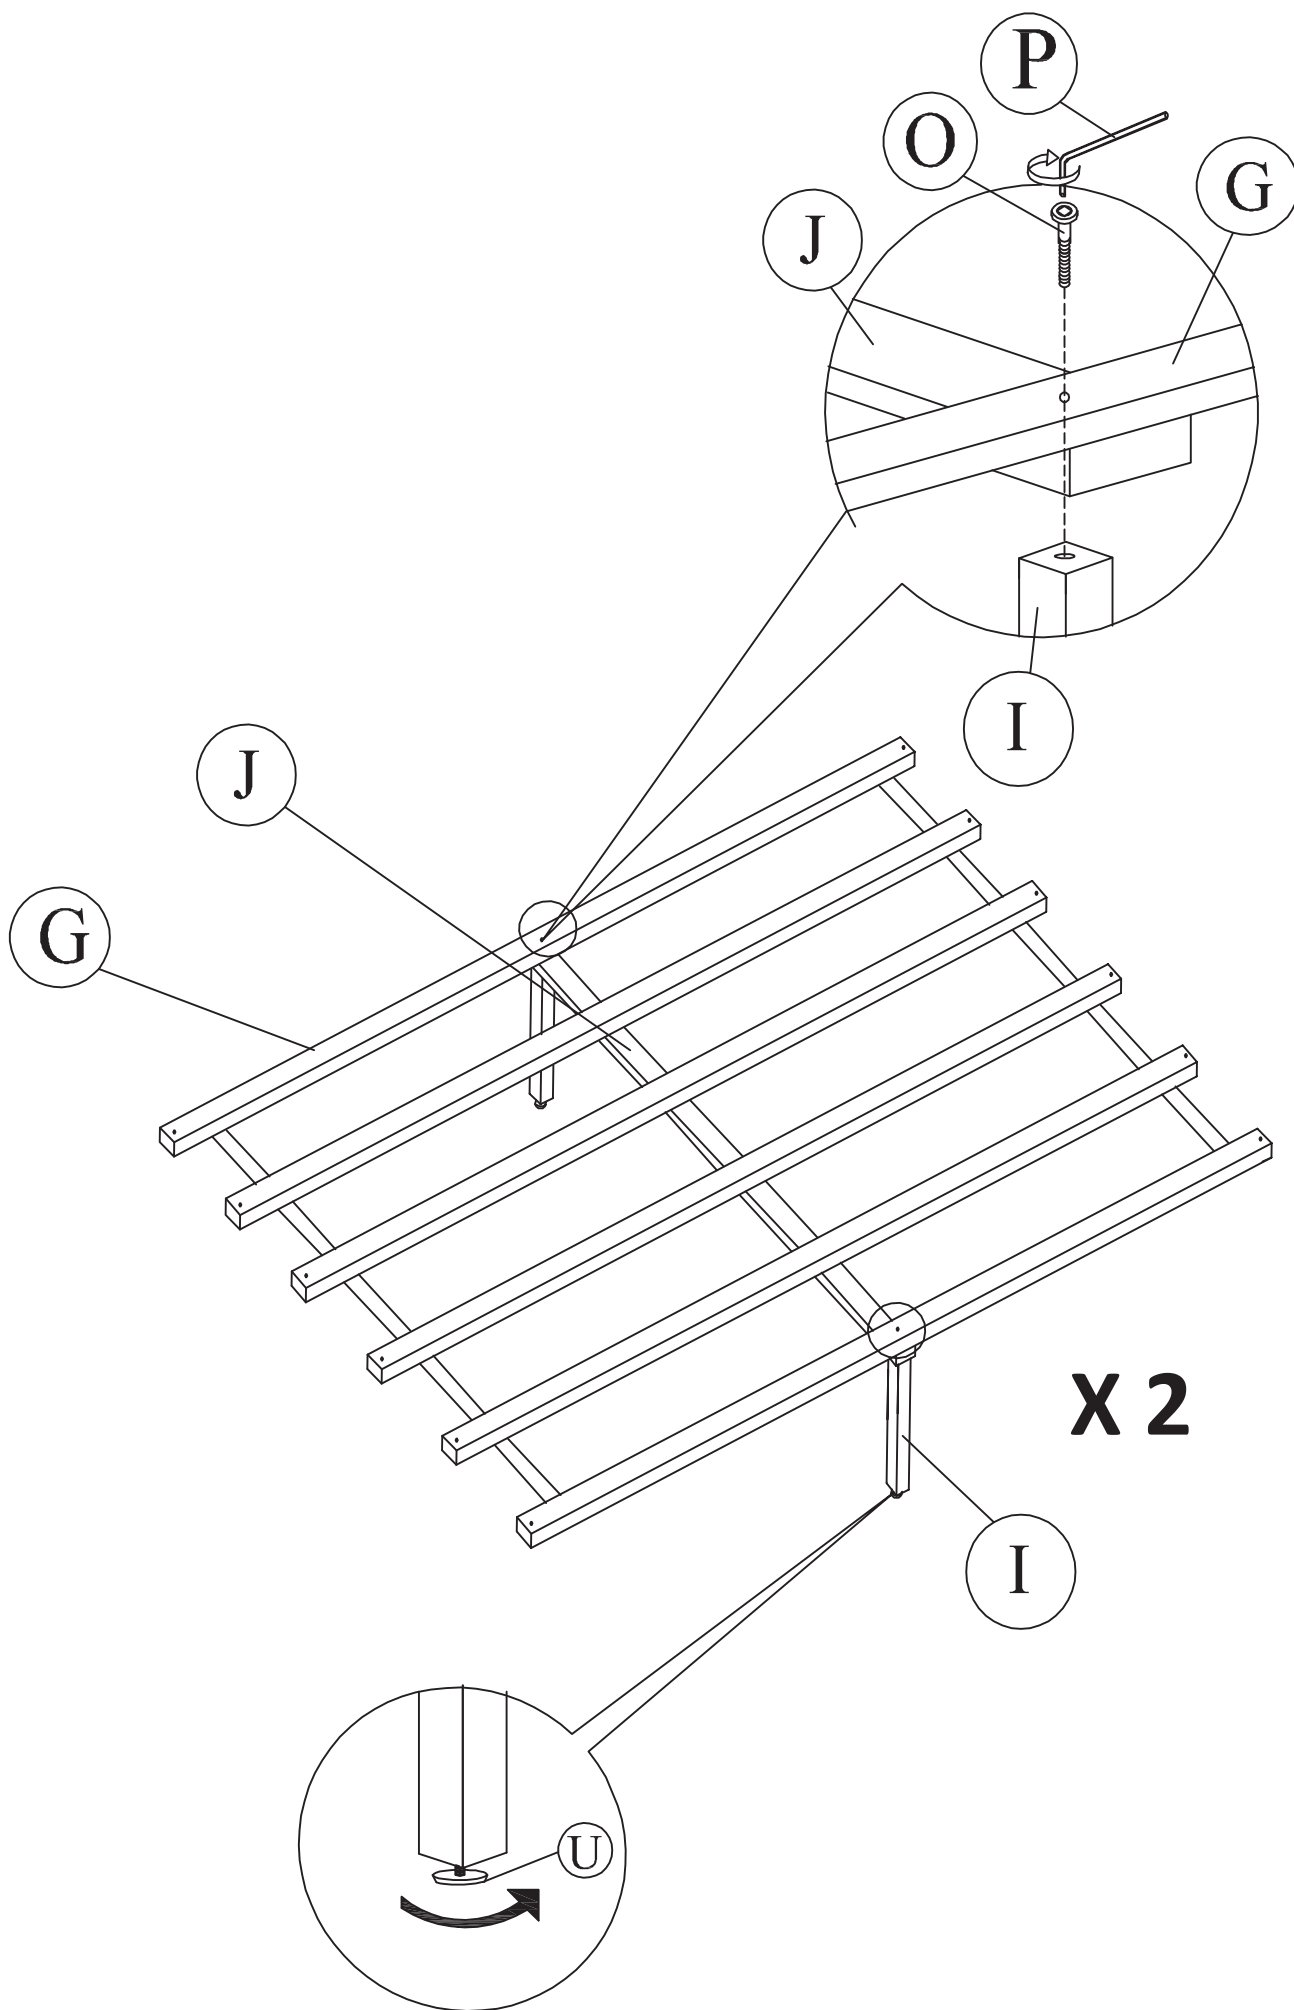


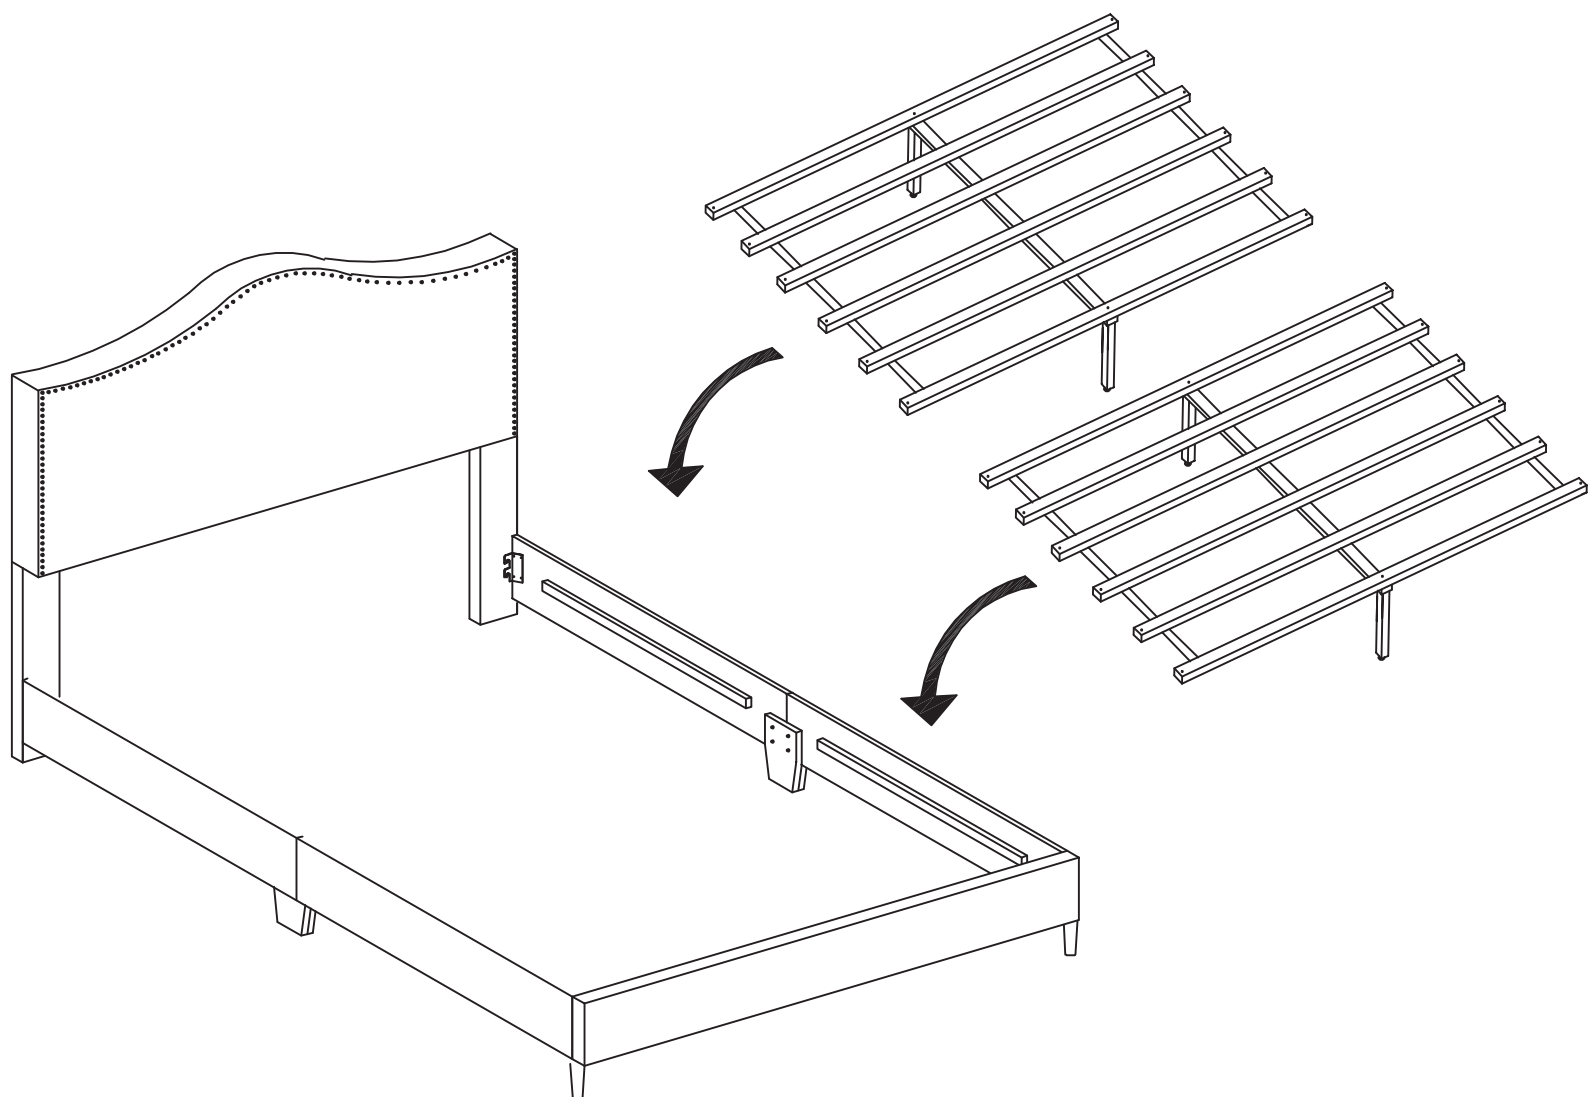

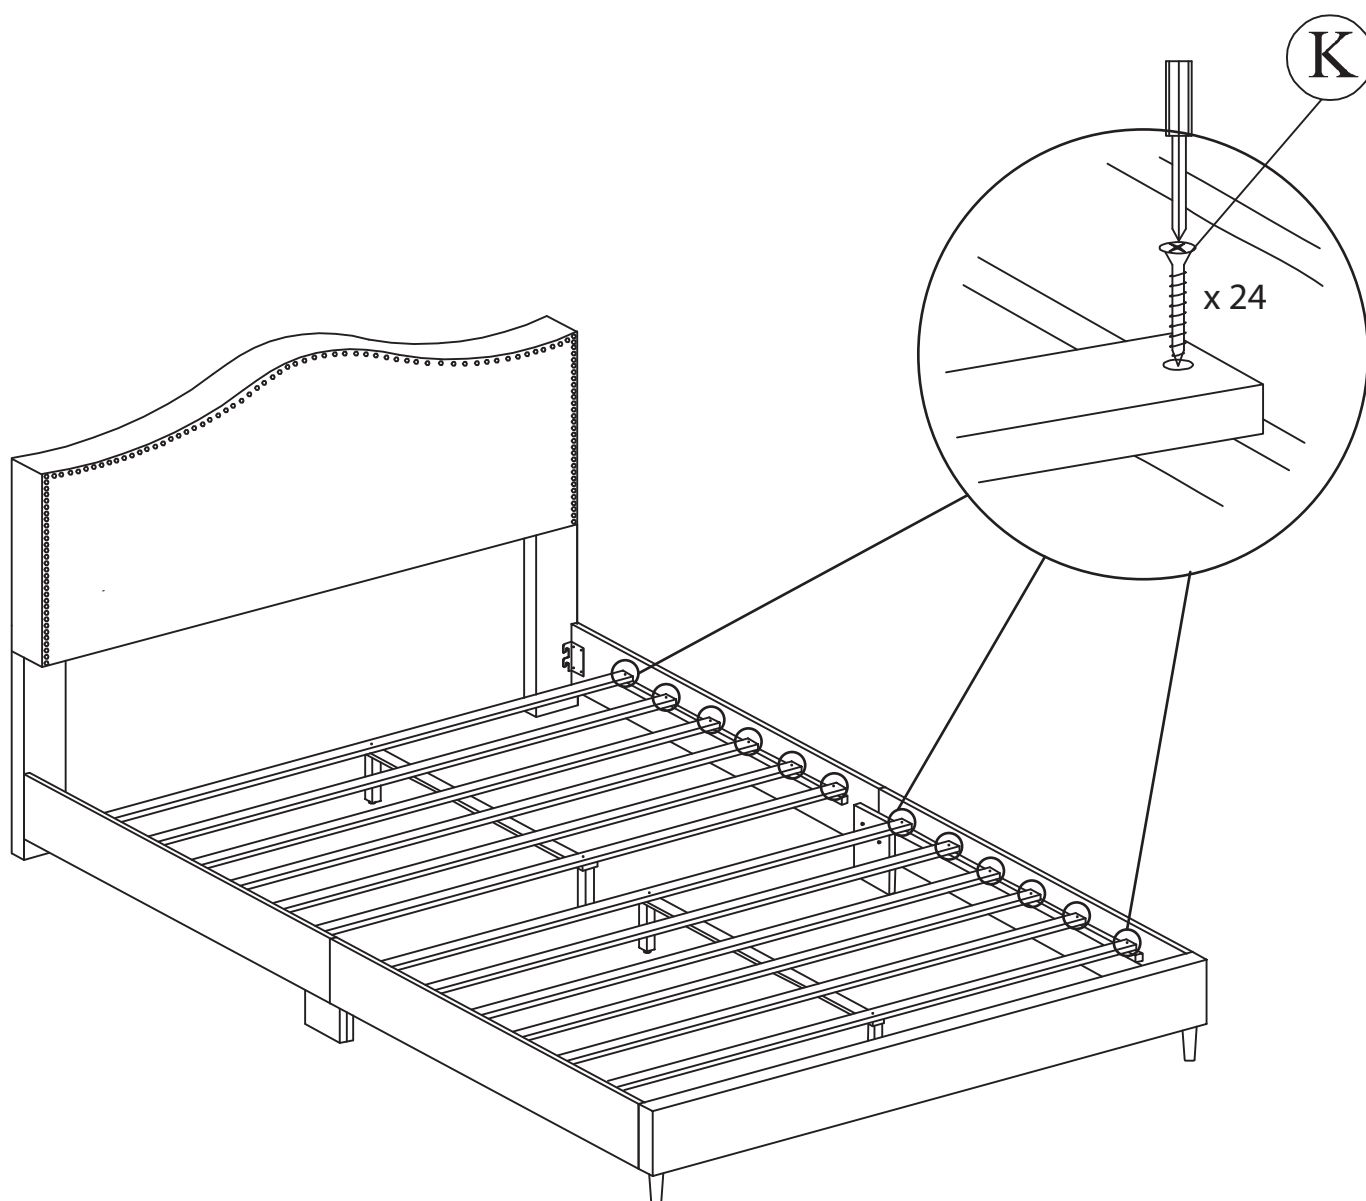

Use Screwdriver to Install  
"K" Screws Though Each  
Slat into Side Rail Cleat

Adjust Leveling Feet “U” to  
Touch Floor

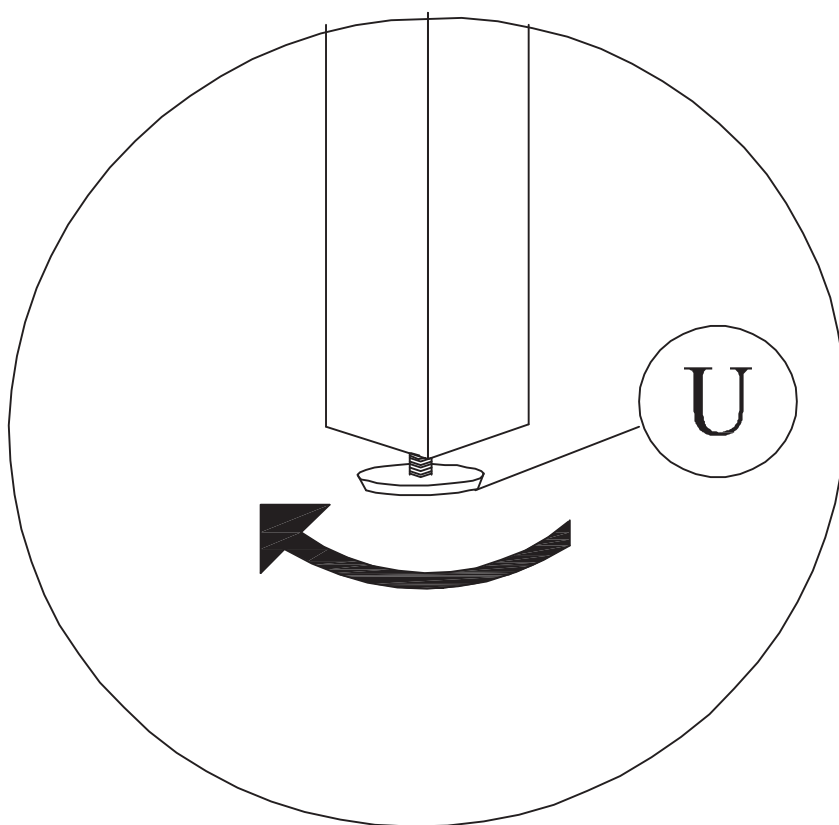

# NEED ADDITIONAL HELP?

---

## **CAUTION:**

Do not attempt to move the bed when fully assembled. This could result in damage to the rails, headboard, or footboard.

When Placing Furniture on non-carpeted flooring, we recommend the use of floor protection such as an area rug or furniture pads. Area rugs and padding not included with purchase.