

# Assembly Instruction

## **SAFETY WARNING !**

A)

WARNING : TOP BUNKS AND ELEVATED BEDS

ARE DANGEROUS AND ARE NOT RECOMMENDED

FOR CHILDREN UNDER THE AGE OF 9

Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. This is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is :

10 x greater for 7-8 year olds

7 x greater for 9-10 year olds


3 x greater for 11-12 year olds

B) Children should be discouraged from playing on the bunk bed.

C) The bunk bed should be checked periodically to ensure that the guardrail, access device and other components are maintained in the correct position and state of repair and that all connectors are tight.

D) **WARNING** : The upper bunk must be more than 2m from any ceiling fan.

# ASSEMBLY INSTRUCTIONS

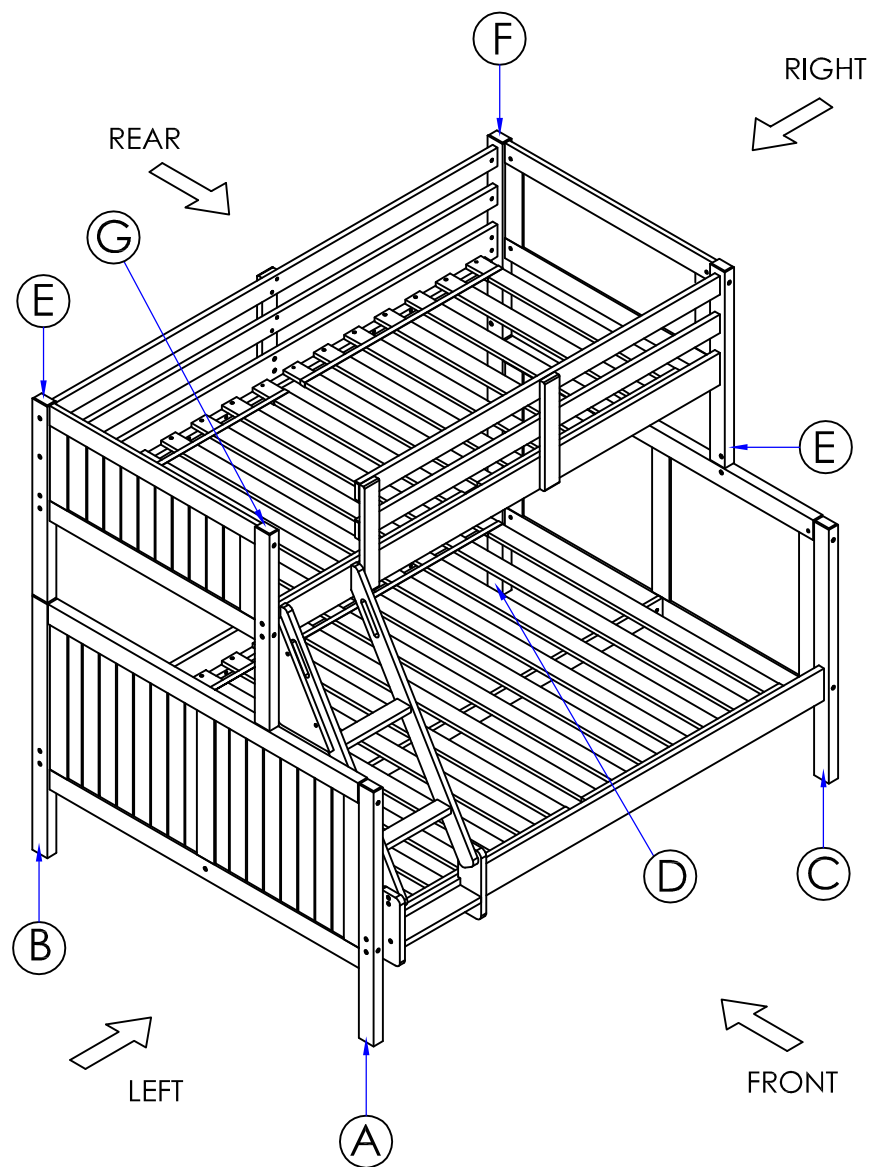

## ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.






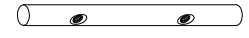




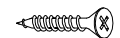



## Warning !





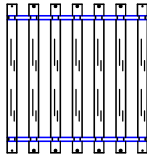

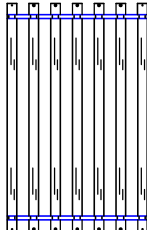
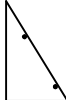



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

"Slat base is using the timber wood material which is LVL (Laminated Veneer Lumber). Laminated veneer lumber (LVL) is an engineered wood product that uses multiple layers of thin wood assembled with adhesives, and it is comparable in strength to solid timber slat. Some of the slat you might find the timber wood joiner which is not a crack or defect which is still strong and solid".


## HARDWARE LIST

1		16 PCS	8		40 PCS
	JCBC M6 x 100mm			WOOD DOWEL Ø10 x 30mm	
2		22 PCS	9		46 PCS
	JCBC M6 x 80mm			BARREL NUT M6 x 13mm	
3		8 PCS	10		4 PCS
	JCBC M6 x 60mm			METAL HOLLOW PIN WITH HOLE	
4		20 PCS	11		1 PC
	JCBC M6 x 30mm			ALLEN KEY M4	
5		16 PCS	12		4 PCS
	JCBC-W M6 x 30mm			L-BRACKET	
6		54 PCS			
	WOOD SCREW 4.0 x 30mm				
7		10 PCS			
	WOOD SCREW 3.5 x 16mm				

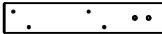COMPONENT LIST					
A	 LOWER LEG (LEFT - FRONT)	1 PC	J	 UPPER HEADBOARD FRAME	1 PC
B	 LOWER LEG (LEFT - REAR)	1 PC	K	 UPPER FOOTBOARD FRAME (WITH STICKER)	1 PC
C	 LOWER LEG (RIGHT - FRONT)	1 PC	L	 CENTER RAIL	1 PC
D	 LOWER LEG (RIGHT - REAR)	1 PC	M	 SIDE RAIL (LOWER FRONT)	1 PC
E	 UPPER LEG (LEFT REAR & RIGHT FRONT)	2 PCS	N	 SIDE RAIL (LOWER REAR)	1 PC
F	 UPPER LEG (RIGHT REAR)	1 PC	O	 SIDE RAIL (UPPER FRONT)	1 PC
G	 UPPER LEG (LEFT FRONT)	1 PC	P	 SIDE RAIL (UPPER REAR)	1 PC
H	 LOWER HEADBOARD FRAME	1 PC	Q	 FRONT GUARD RAIL	2 PCS
I	 LOWER FOOTBOARD FRAME	1 PC			


COMPONENT LIST					
R		2 PCS	Y		1 PC
S		3 PCS	Z		2 PCS
T		2 SETS	A1		1 PC
U		2 SETS	A2		1 PC
V		1 PC			
W		1 PC			
X		1 PC			

STEP 1

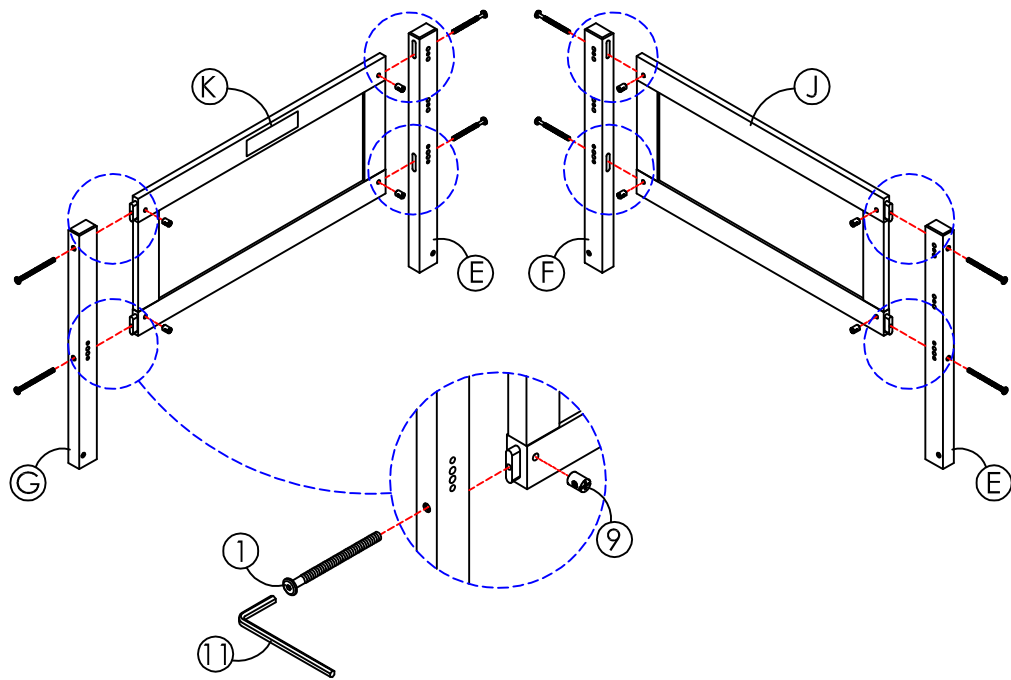


UPPER BED

STEP 2

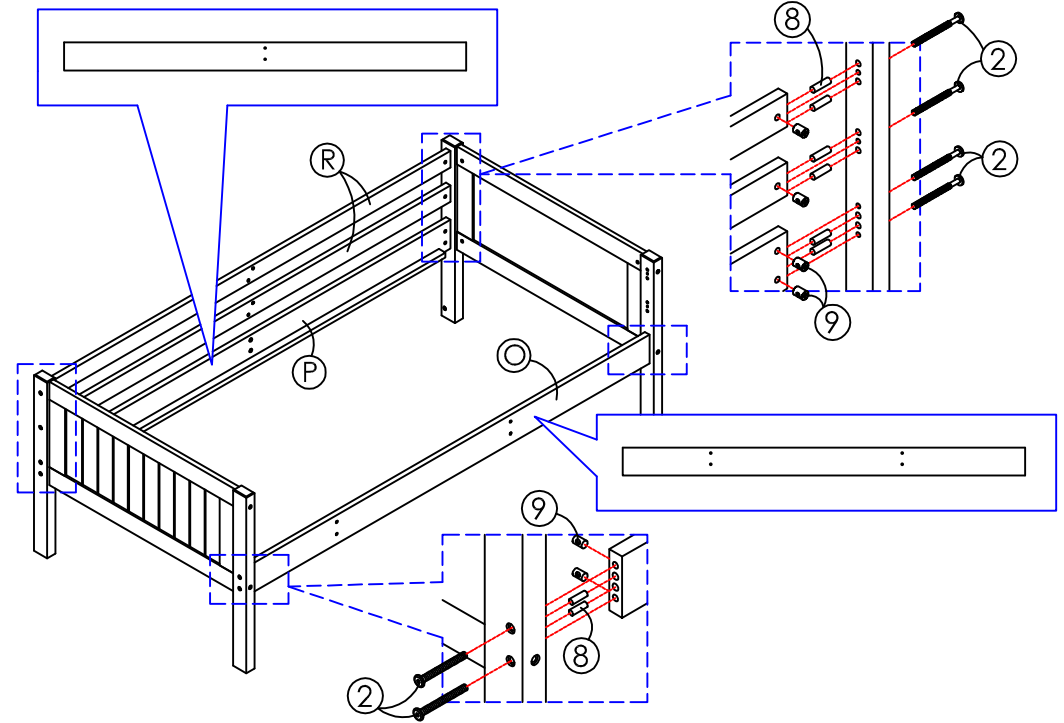


UPPER BED

STEP 3

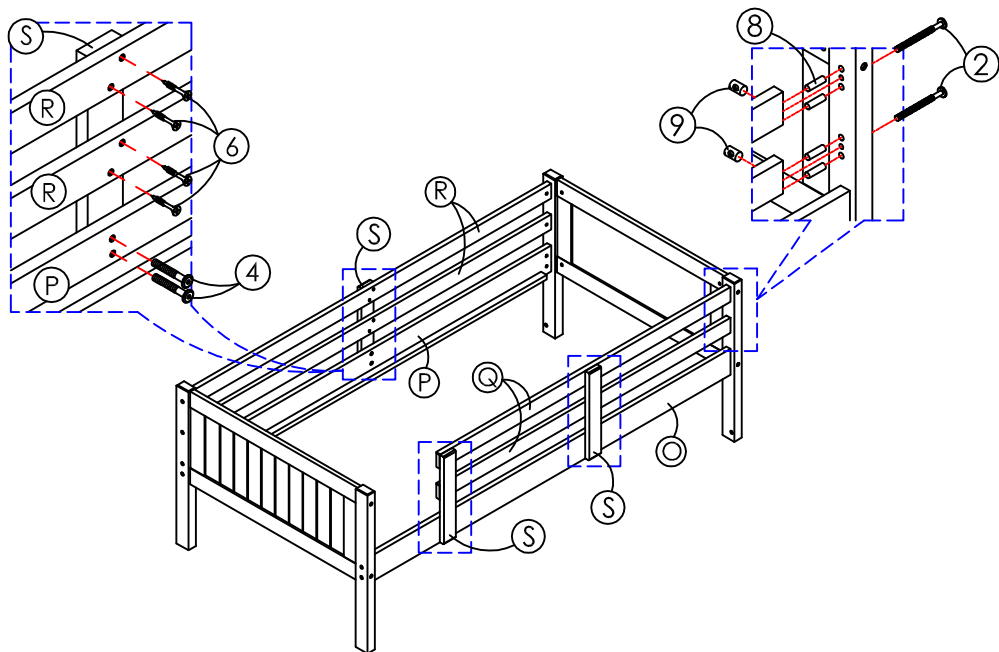

UPPER BED


STEP 4

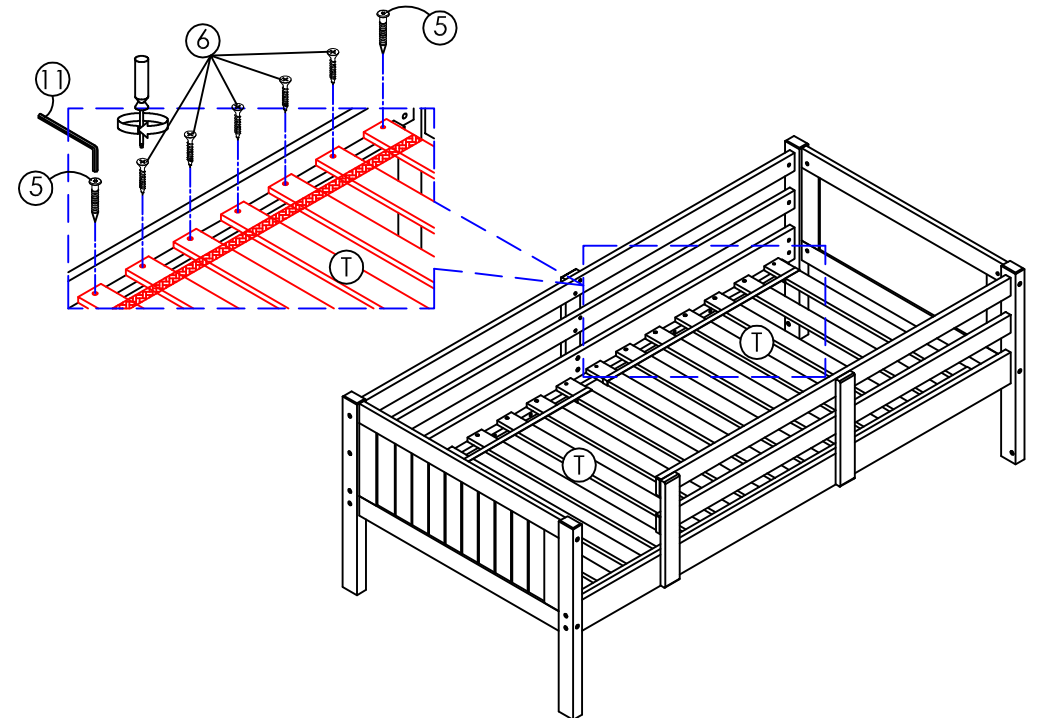

UPPER BED


# STEP 5

Left side Part A , I and B together.  
Right side Part C, H and D together.  
Make sure holes as pictures:

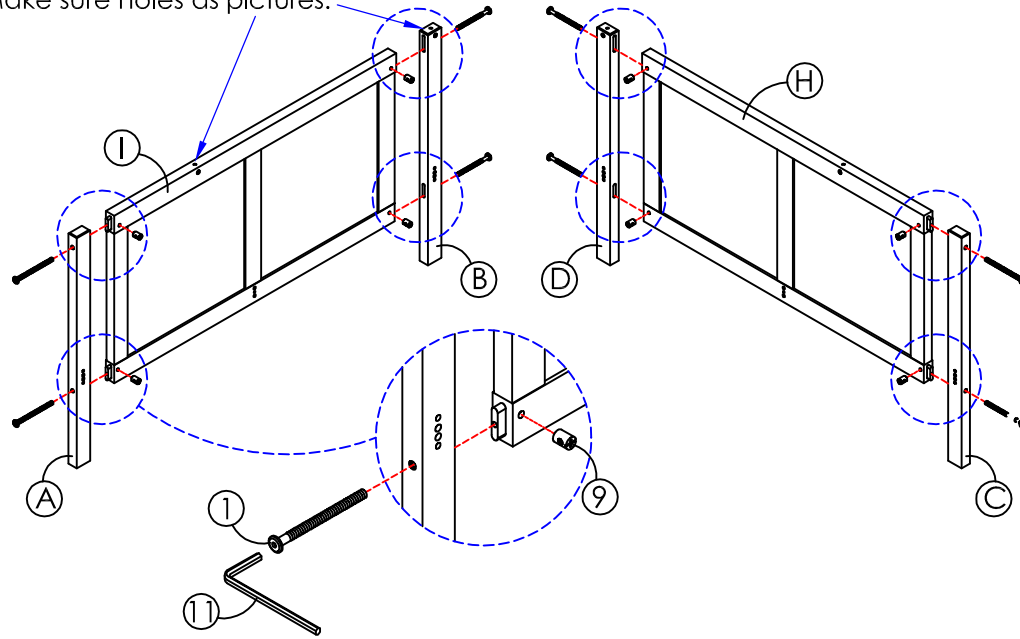


# LOWER BED

# STEP 6

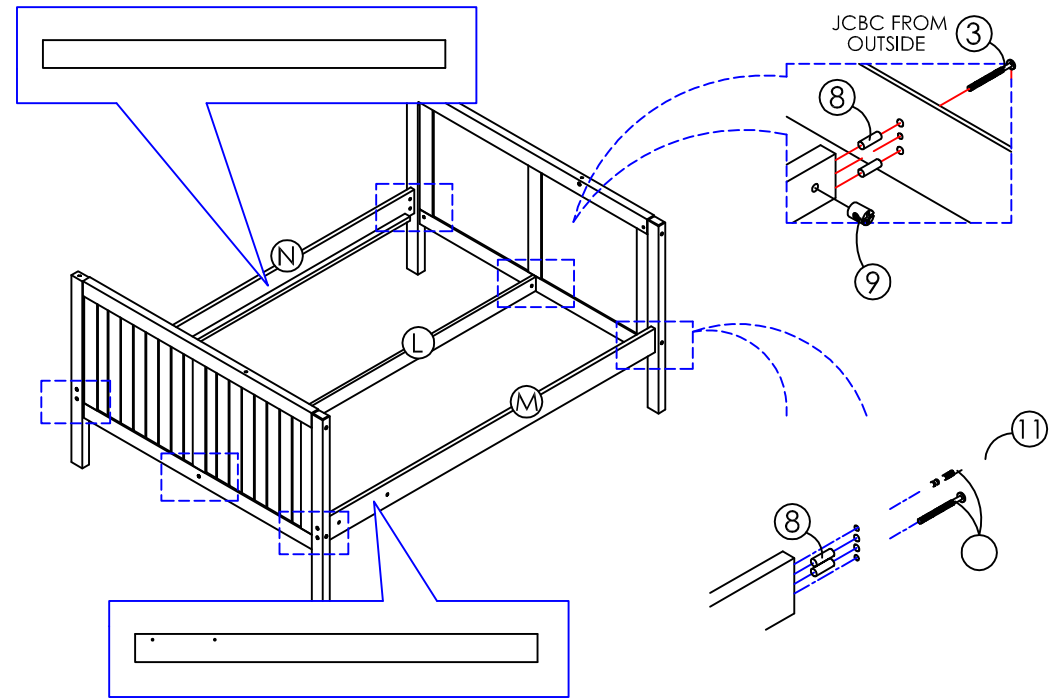


# LOWER BED

# STEP 7

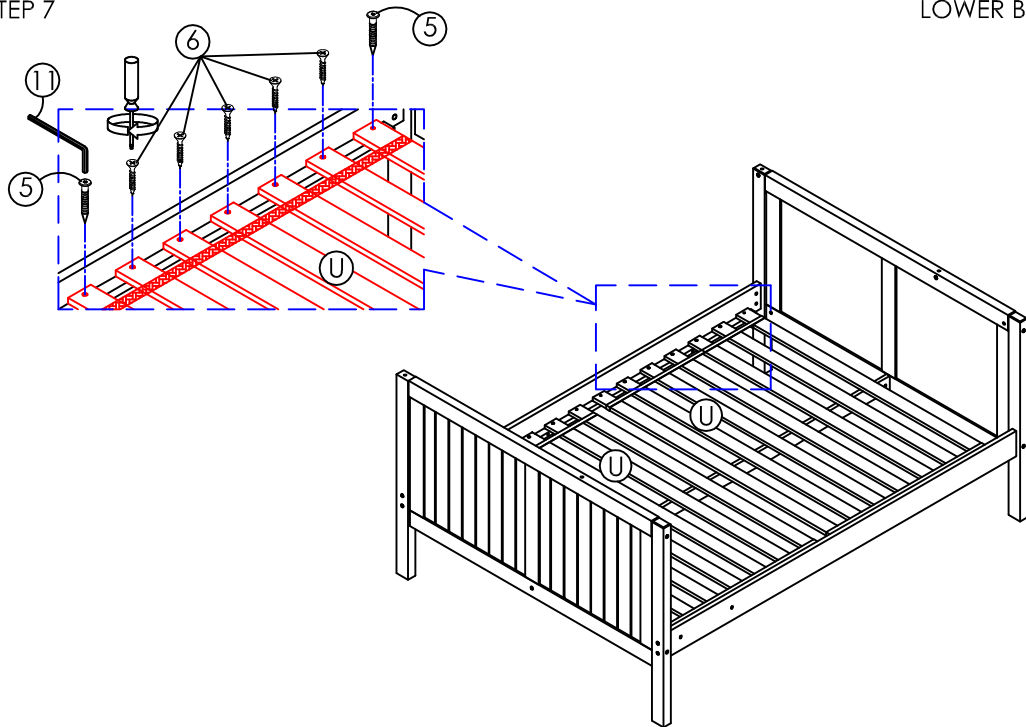


# LOWER BED

# STEP 8

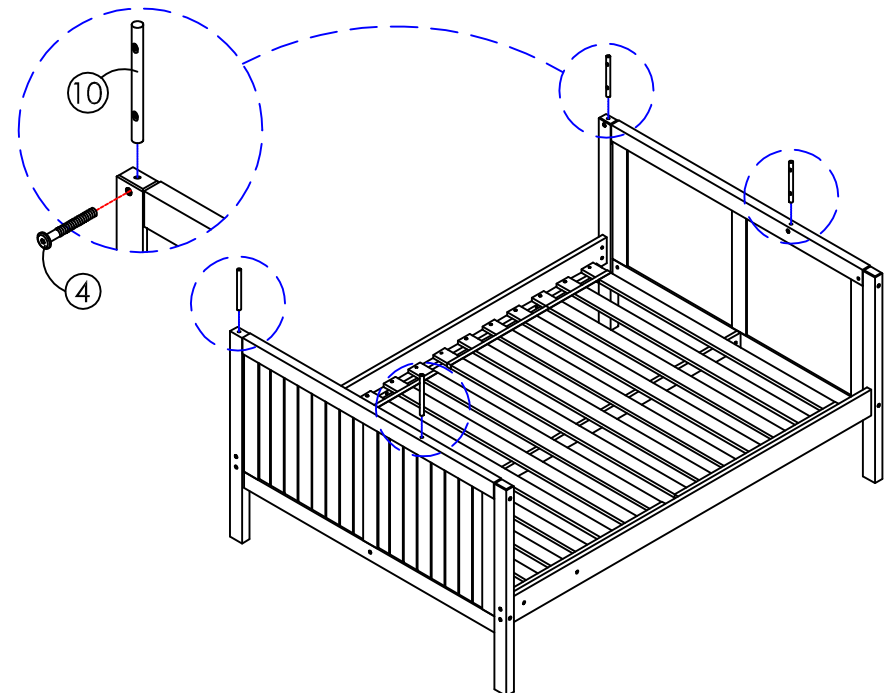


# LOWER BED


STEP 9

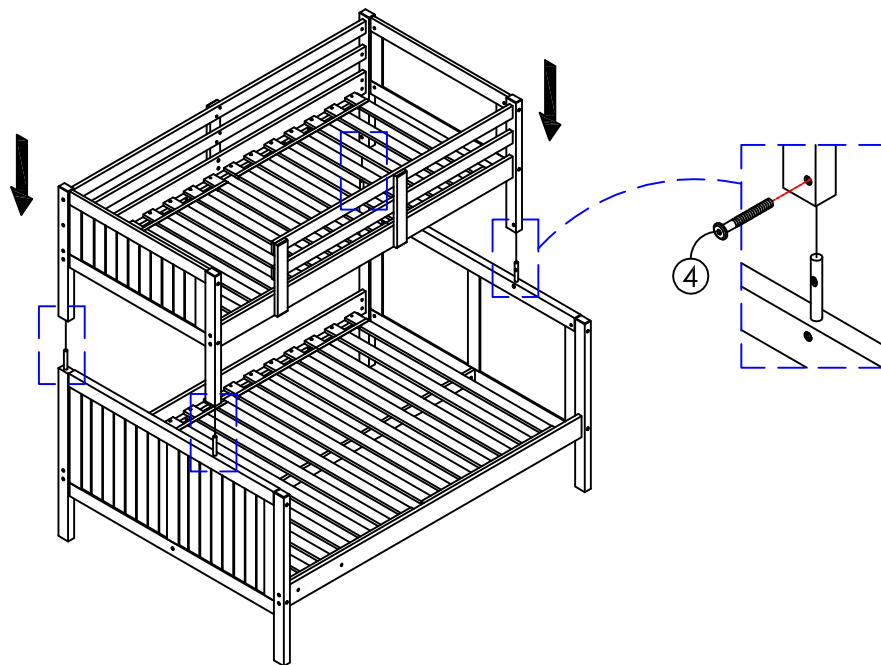


STEP 10

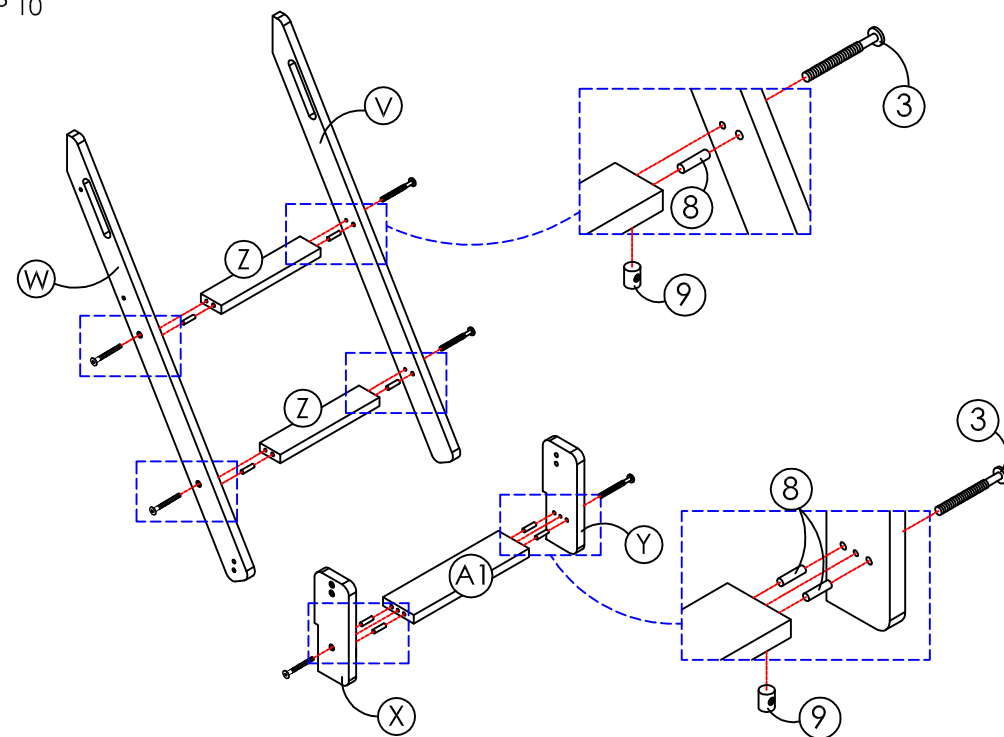


STEP 11

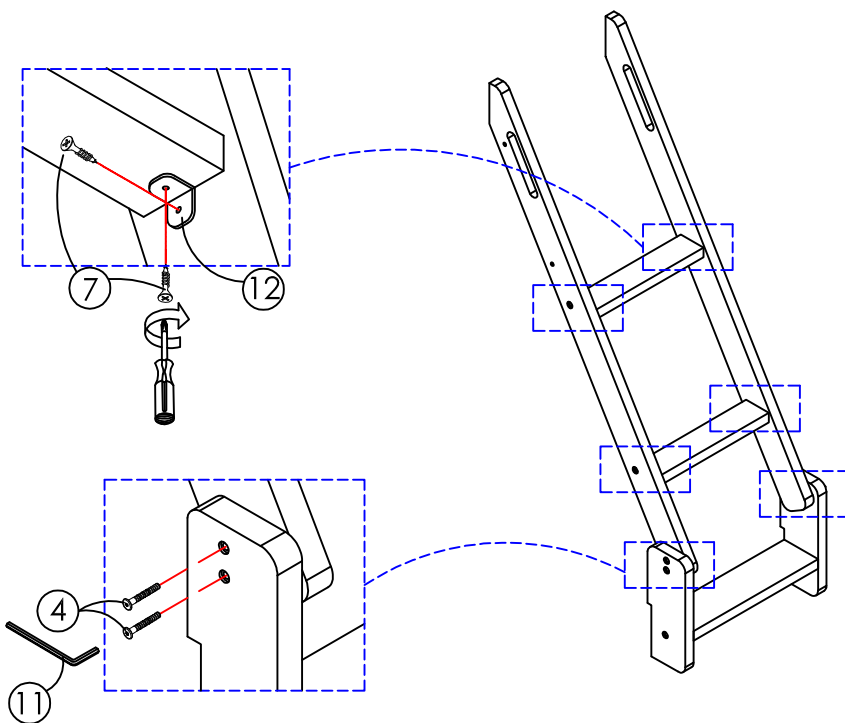

STEP 12

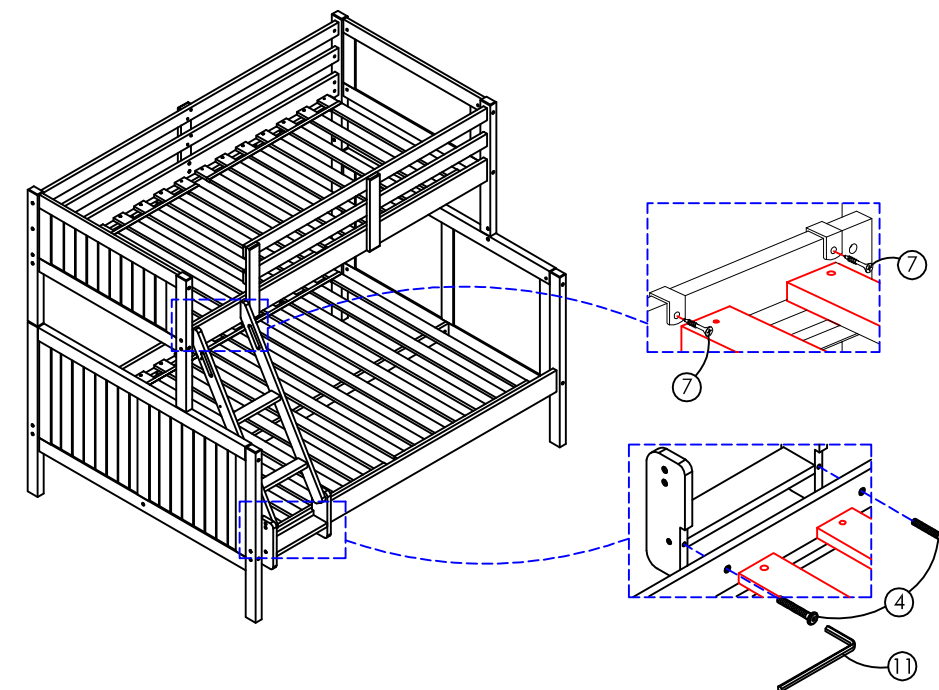


STEP 13

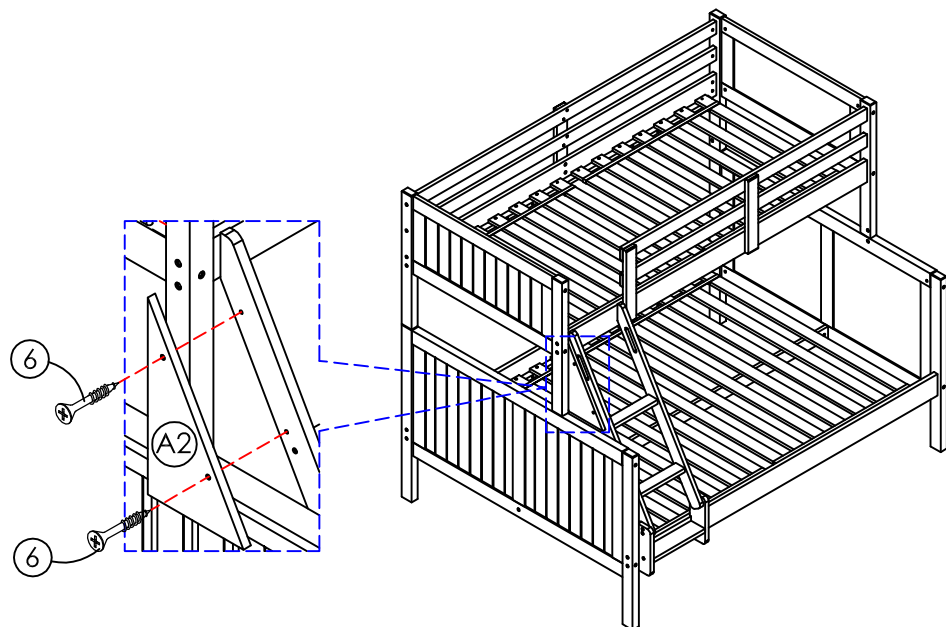


STEP 14

**COMPLETE ASSEMBLY FOR TWIN FULL BUNK.**

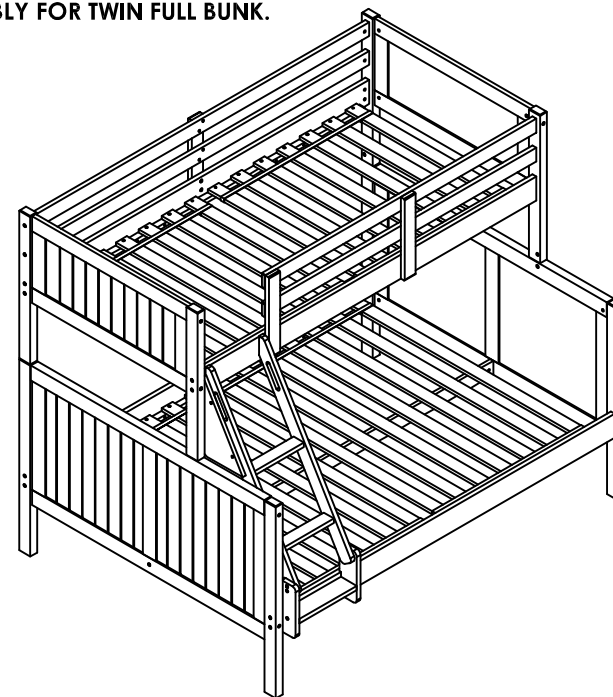


STEP 15

**INSTRUCTION TO CHANGE THE TWIN FULL BUNK INTO SINGLE BEDS.**

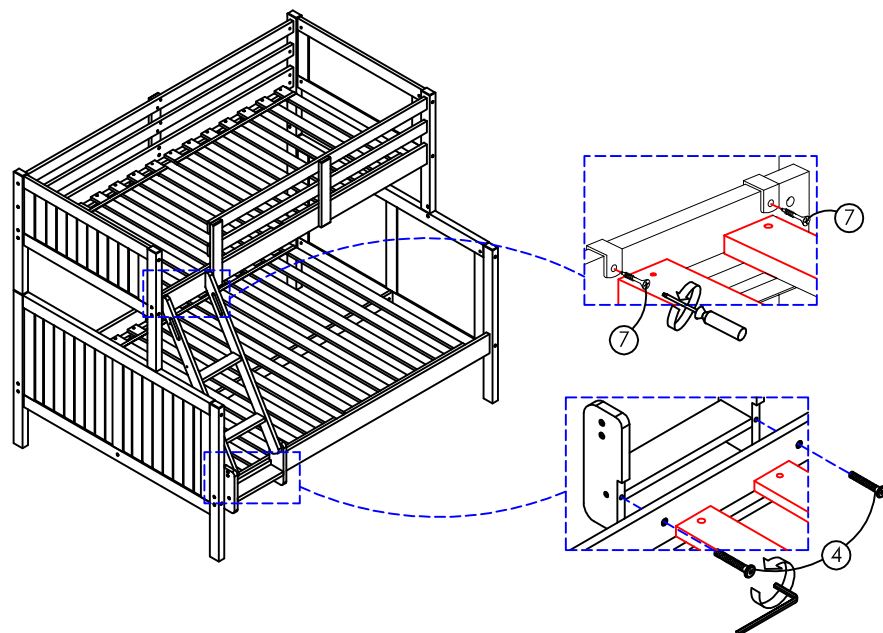

Remove wood screw (7) & jcbc bolts (4). Then take out ladder from bed.


STEP 16

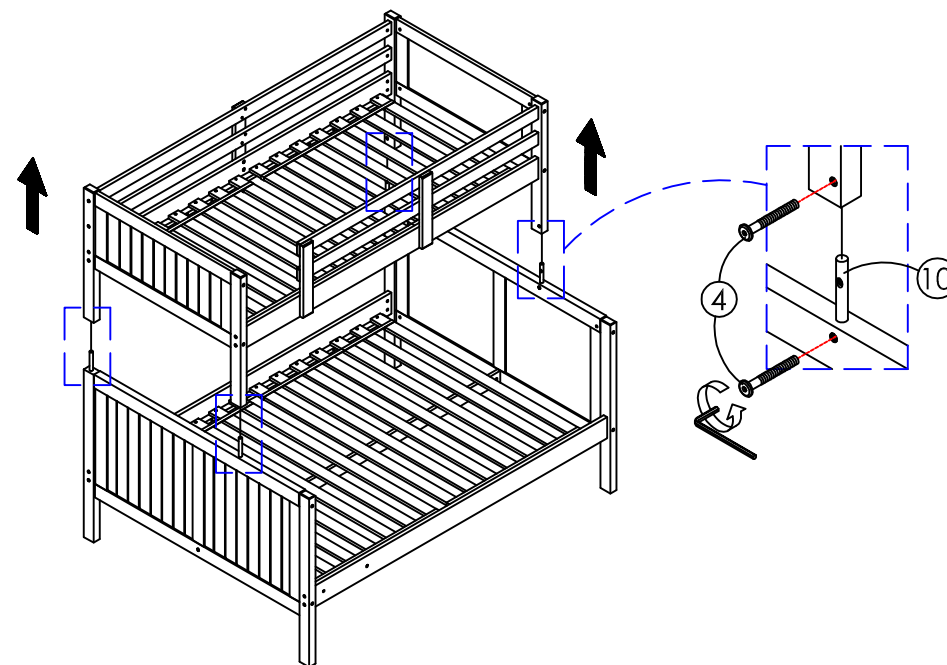

Remove the jcbc bolts (4) then lift the upper bed and remove metal pins (10).




STEP 17

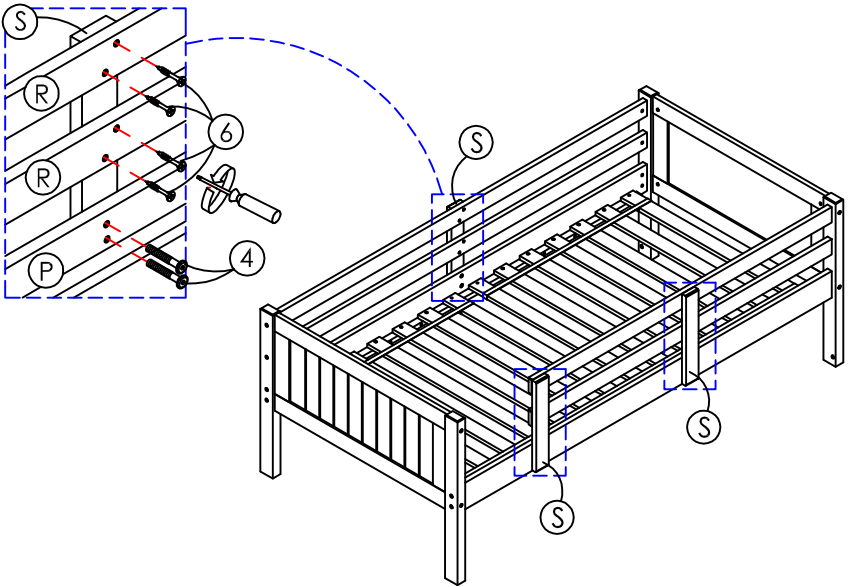

Unscrew the wood screws (6) & jcbc bolts (4) on guard rail support (S).

STEP 18

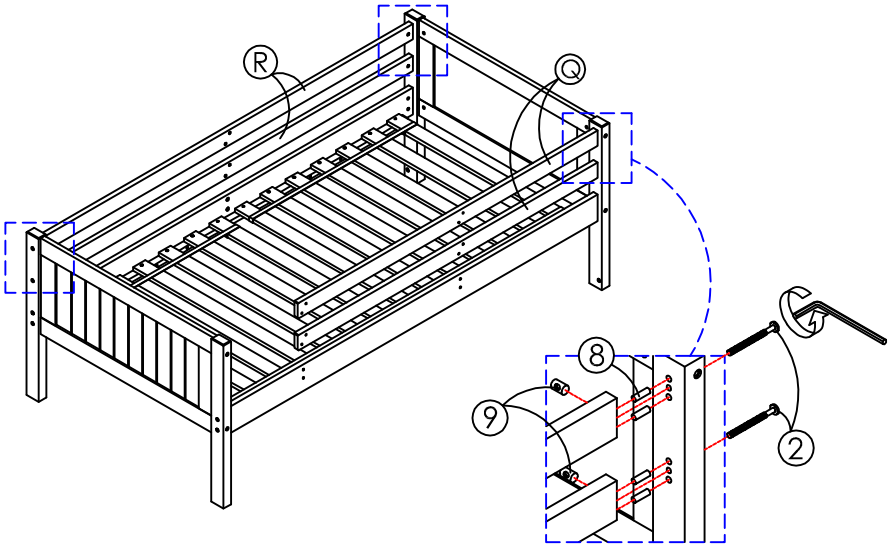

Loosen the jcbc bolts (2) & remove front & rear guard rail (Q & R).

STEP 19  
**COMPLETE ASSEMBLY FOR TWO BEDS.**

