


# ASSEMBLY INSTRUCTIONS

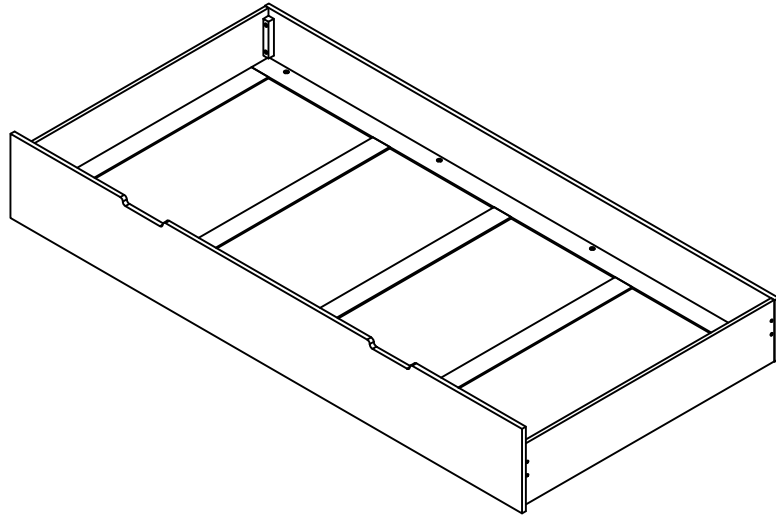

## ASSEMBLY TIPS








1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.










## Warning !

1. Don't attempt to repair or modify parts that are broken or defective.  
Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.


## HARDWARE LIST

1		10 PCS	5		10 PCS
	JCBC M6 x 100mm			BARREL NUT M6 x 13mm	
2		8 PCS	6		1 PC
	JCBC M6 x 30mm			M 4 ALLEN KEY	
3		8 PCS	7		4 PCS
	WOOD SCREW 4.0 x 30mm			WHEEL	
4		16 PCS			
	WOOD SCREW 3.5 x 16mm				


## COMPONENT LIST

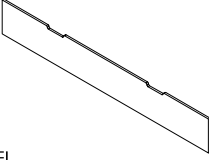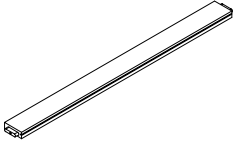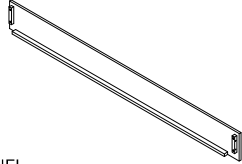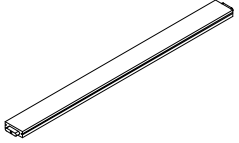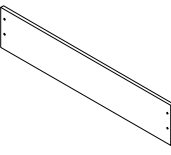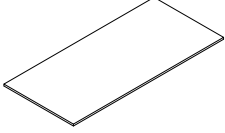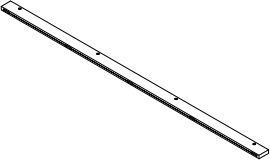A		1 PC	E		2 PCS
	FRONT PANEL			BOTTOM RAIL SUPPORT (LEFT & RIGHT)	
B		1 PC	F		3 PCS
	BACK PANEL			BOTTOM RAIL SUPPORT (CENTER)	
C		2 PCS	G		4 PCS
	SIDE PANEL			BOTTOM PANEL	
D		2 PCS			
	BOTTOM RAIL				


STEP 1

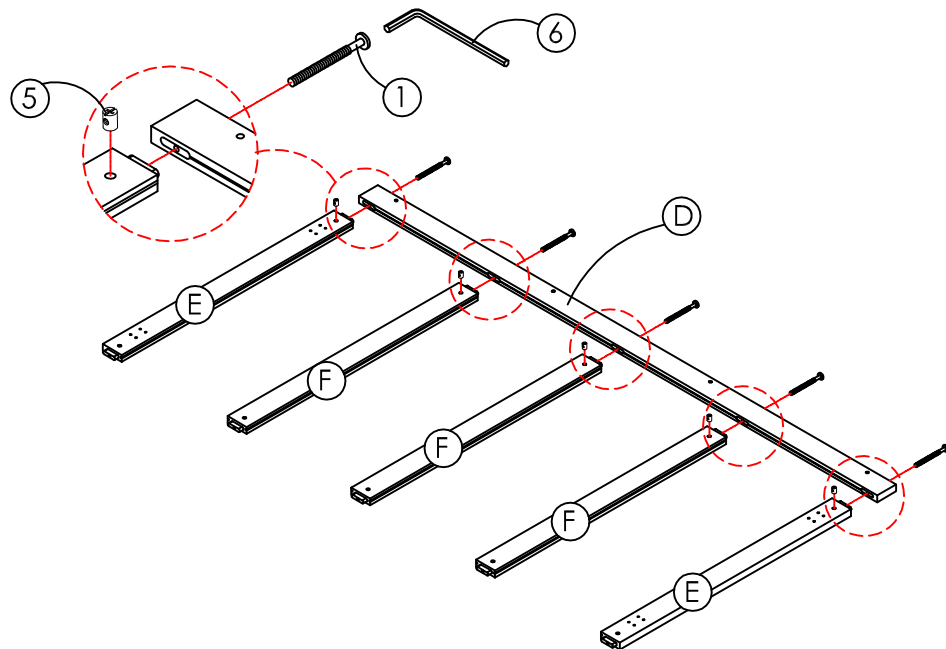


STEP 2

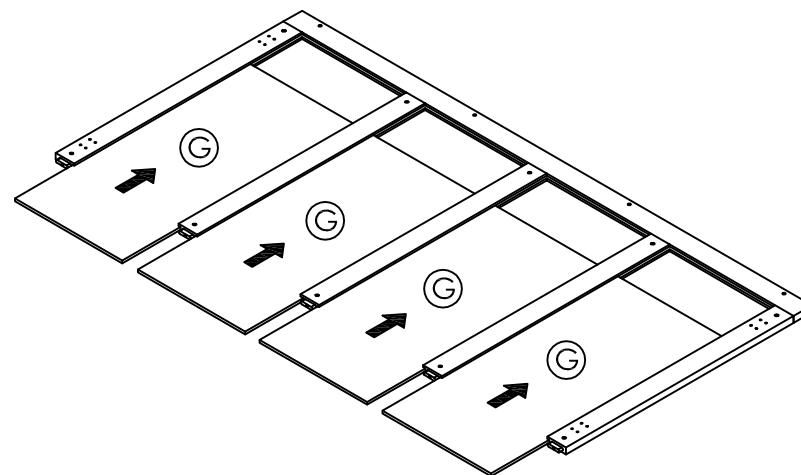


STEP 3

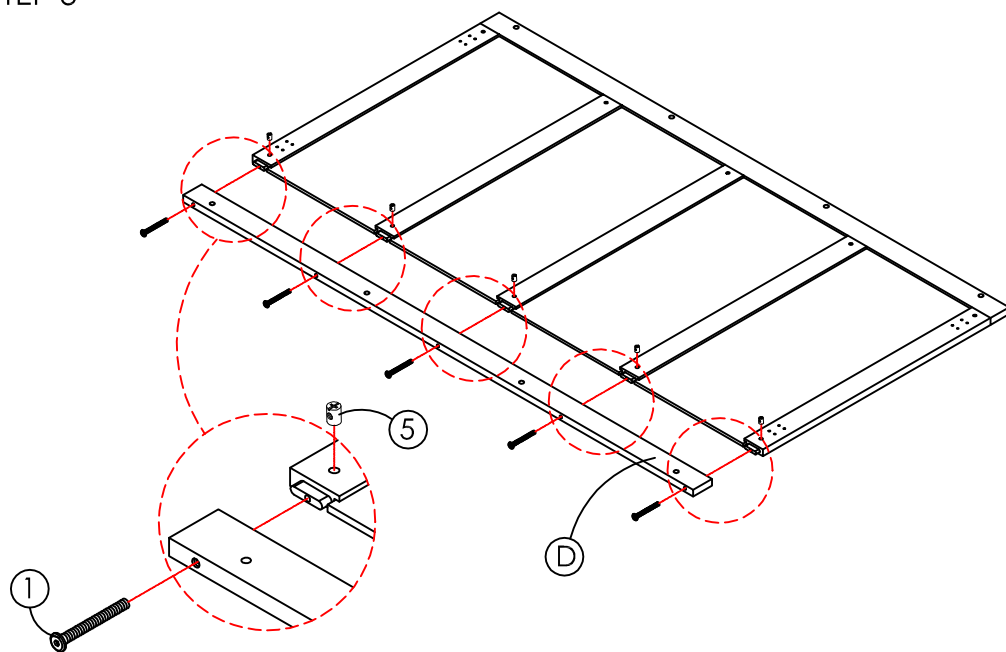


STEP 4

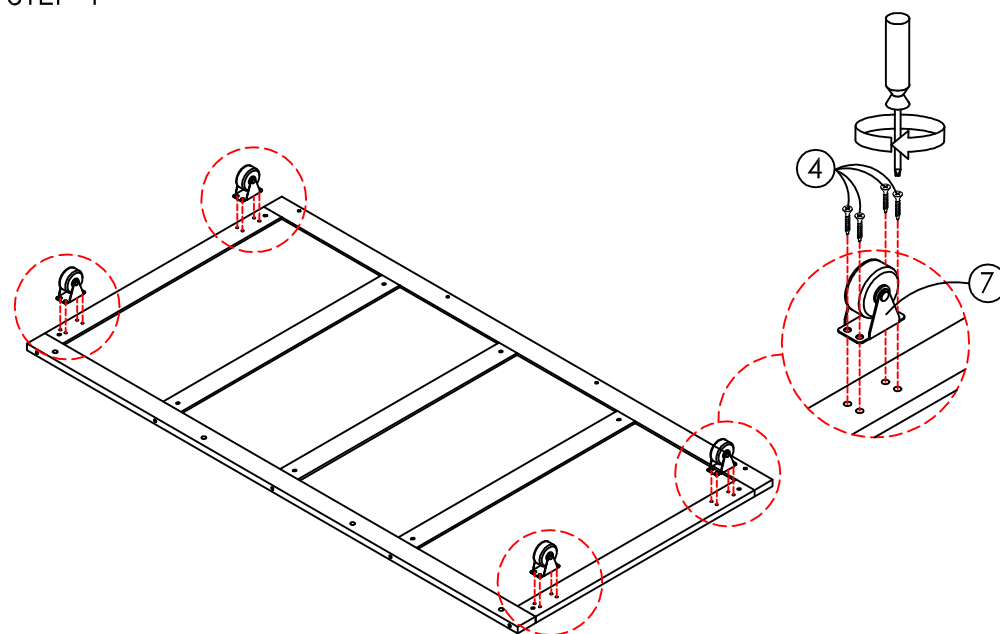


STEP 5

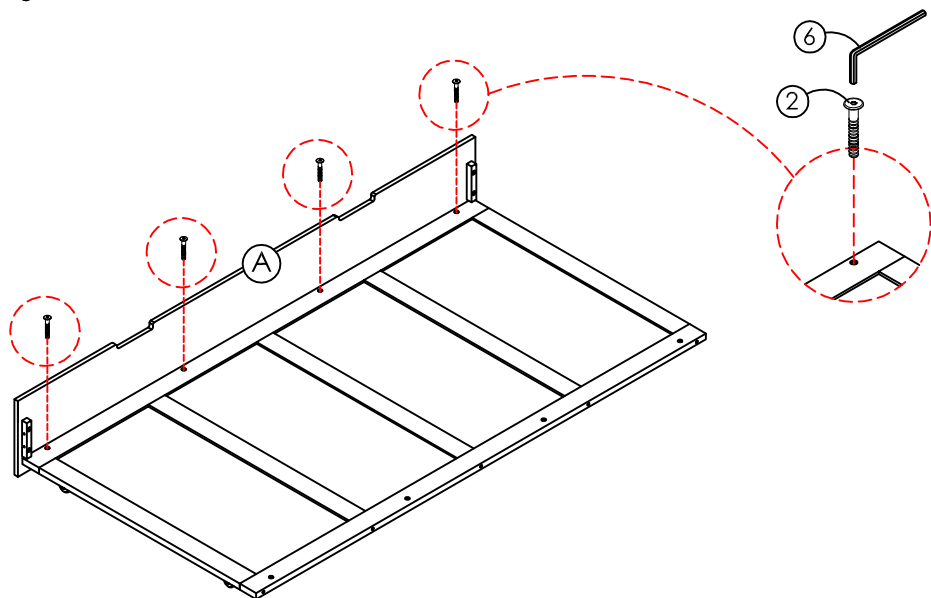


STEP 6

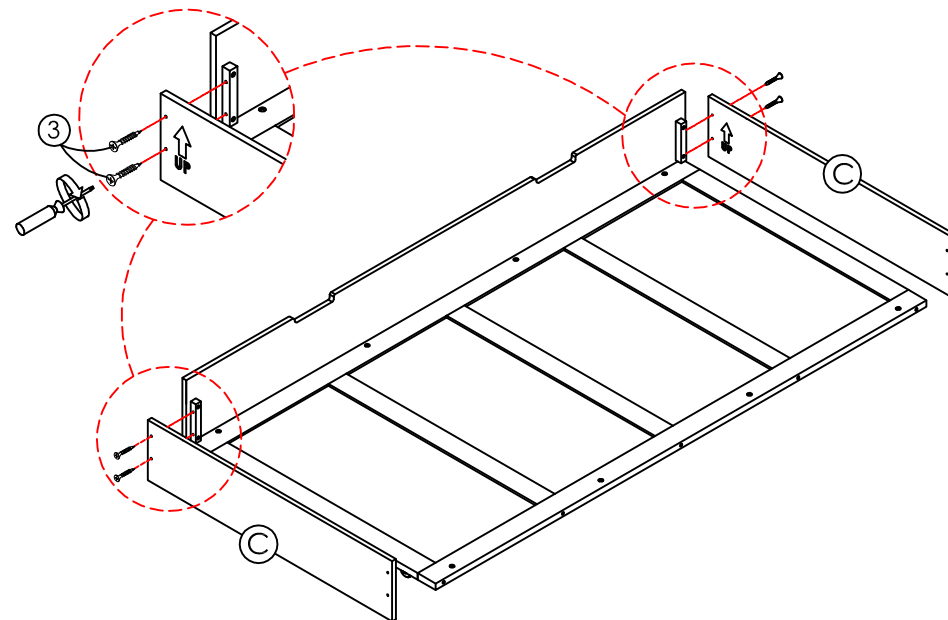


STEP 7

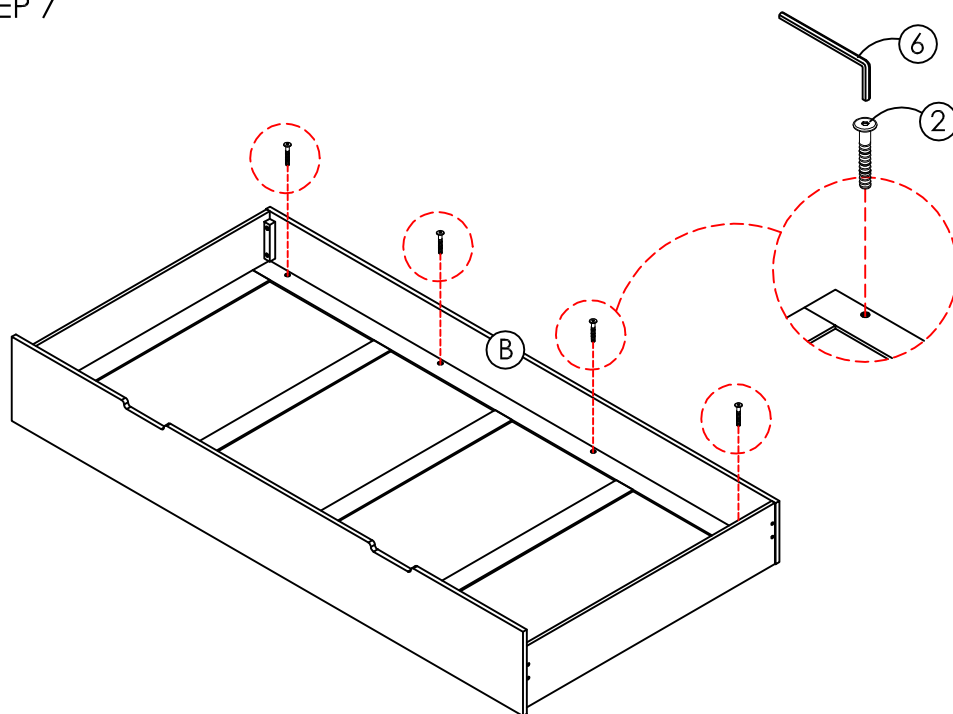

STEP 8

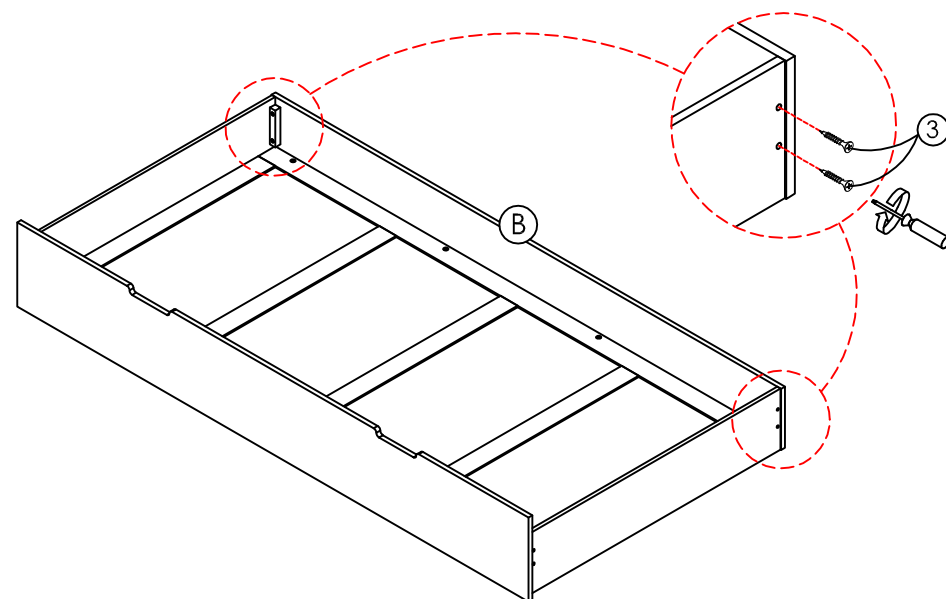

STEP 9

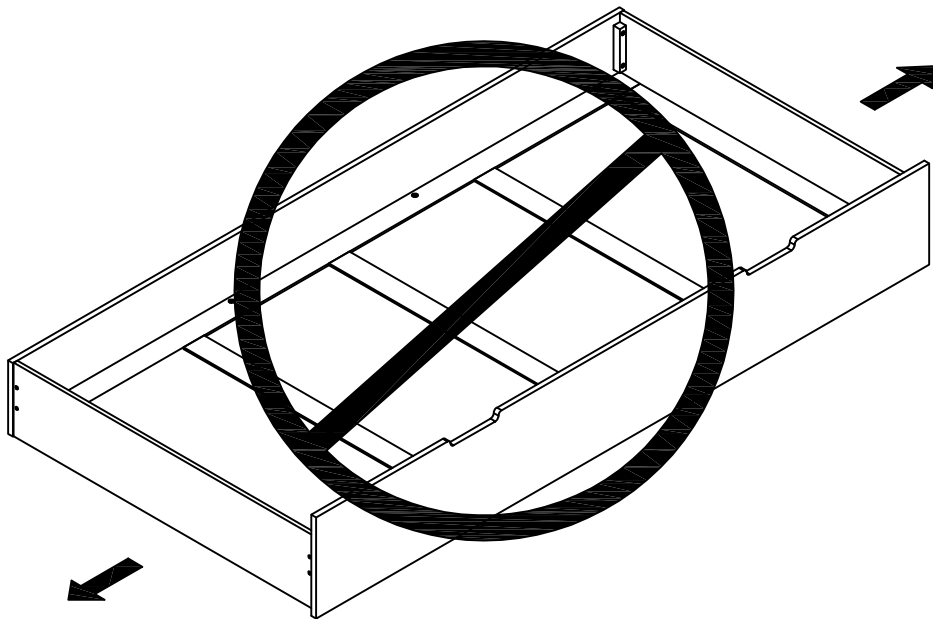

STEP 10

