


Bathroom Utility Cabinet 2 colour handle option

1.0hr

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY

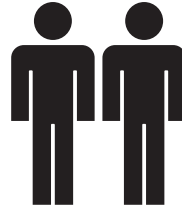


FLOOR AREA
1M x 2M




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS



POZI SCREWDRIVER

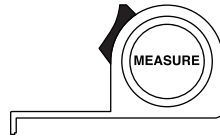


MEASURING TAPE

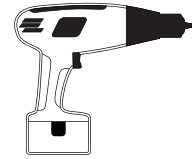

DRILL

ASSEMBLED DIMENSIONS

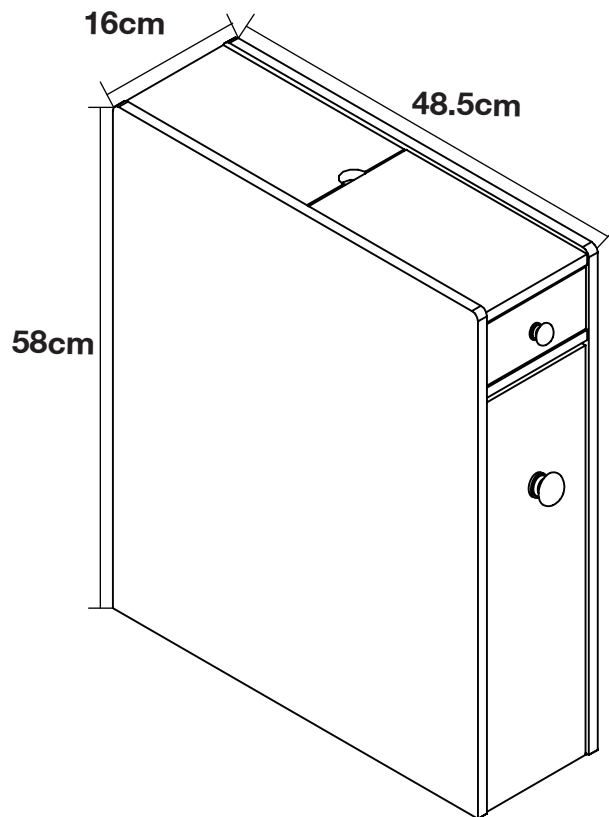

Bathroom Utility Cabinet 2 colour handle option

Tips before you start:


1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of your Furniture


- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (eg. Hot drinks) directly on to the surface.
- Please do not drag and pull your furniture.

Bathroom Utility Cabinet 2 colour handle option


HARDWARE LIST

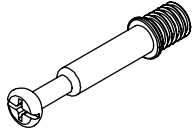

14 x A
Quickfit Screw




14 x B
Cam Lock




15 x C
Wooden Dowel
6x30mm



30 x D
Screw
3x25mm



2 x E
Bolt
4x16mm



2 x F
Hinge Pin



2 x G
Handle



3 x H
Castor




6 x I
Screw

PARTS LIST


1 1PC	2 1PC	3 1PC	4 1PC	5 1PC
6 1PC	7 1PC	8 1PC	9 1PC	10 1PC
11 1PC	12 1PC	13 1PC	14 1PC	15 2PCS
16 1PC	17 1PC	18 2PCS	19 1PC	20 2PCS
21 1PC	22 1PC			

Bathroom Utility Cabinet 2 colour handle option

STEP 1

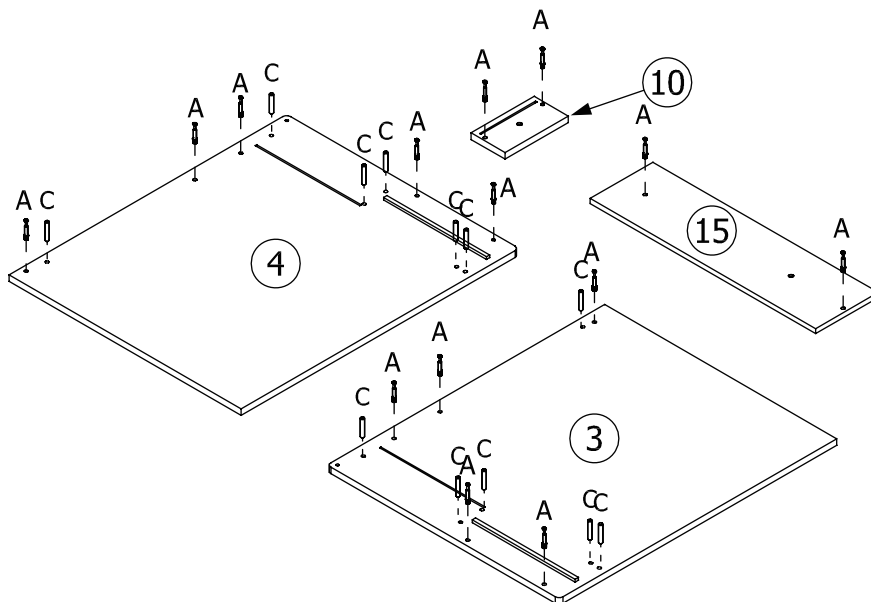


STEP 2

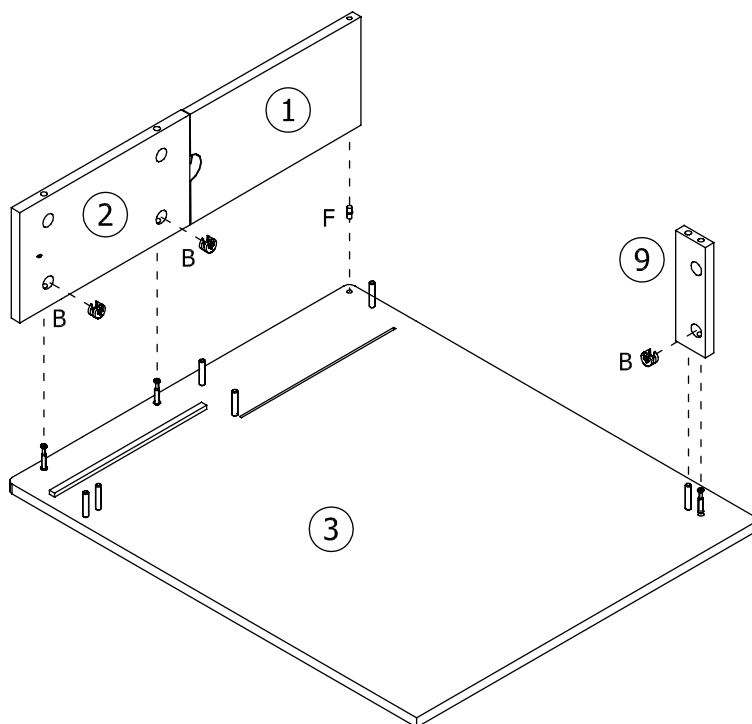


Bathroom Utility Cabinet 2 colour handle option

STEP 3

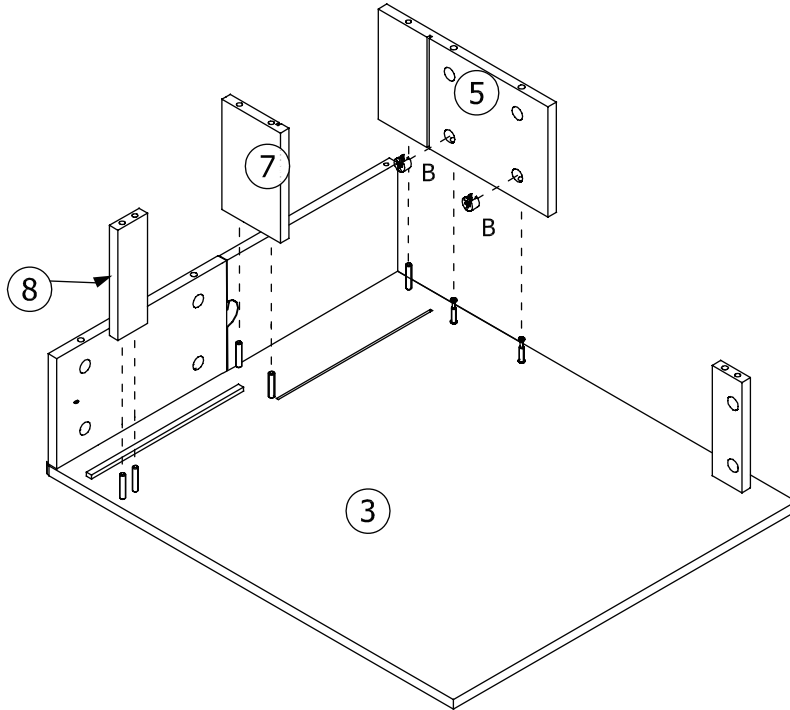


STEP 4

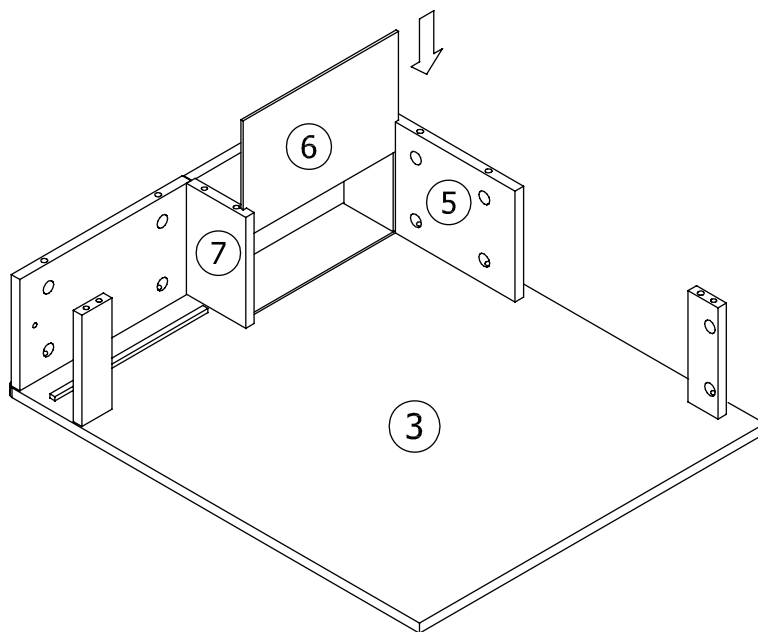


Bathroom Utility Cabinet 2 colour handle option

STEP 5

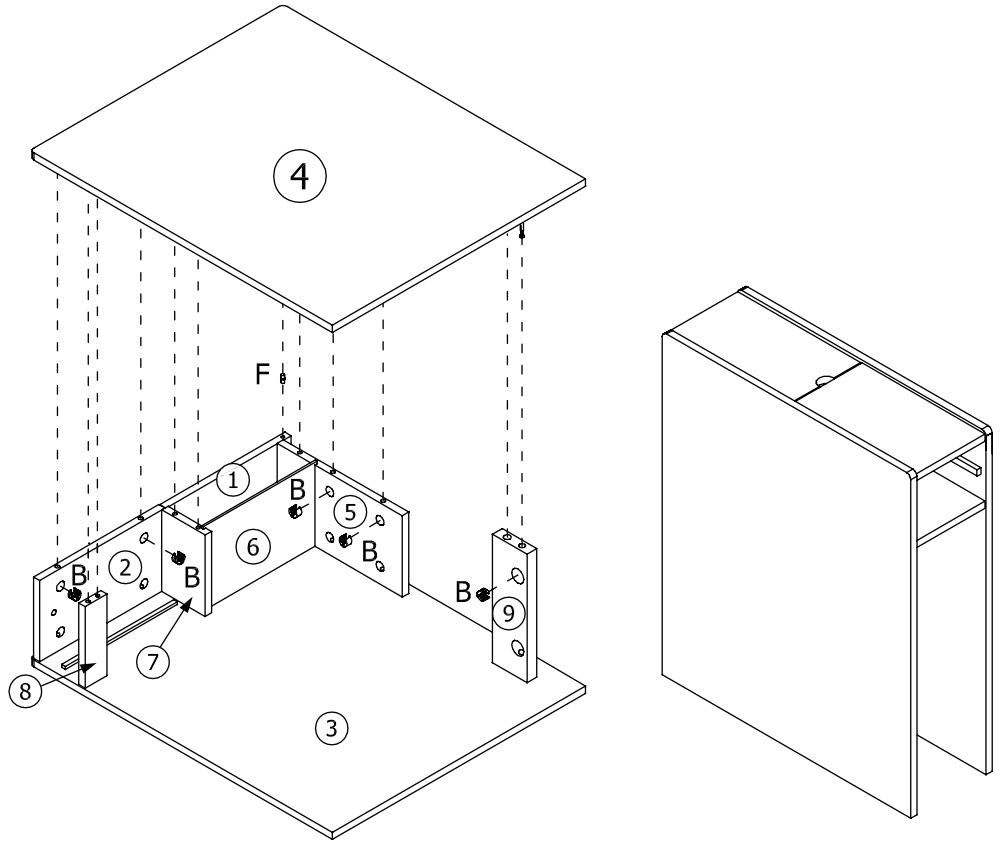


STEP 6

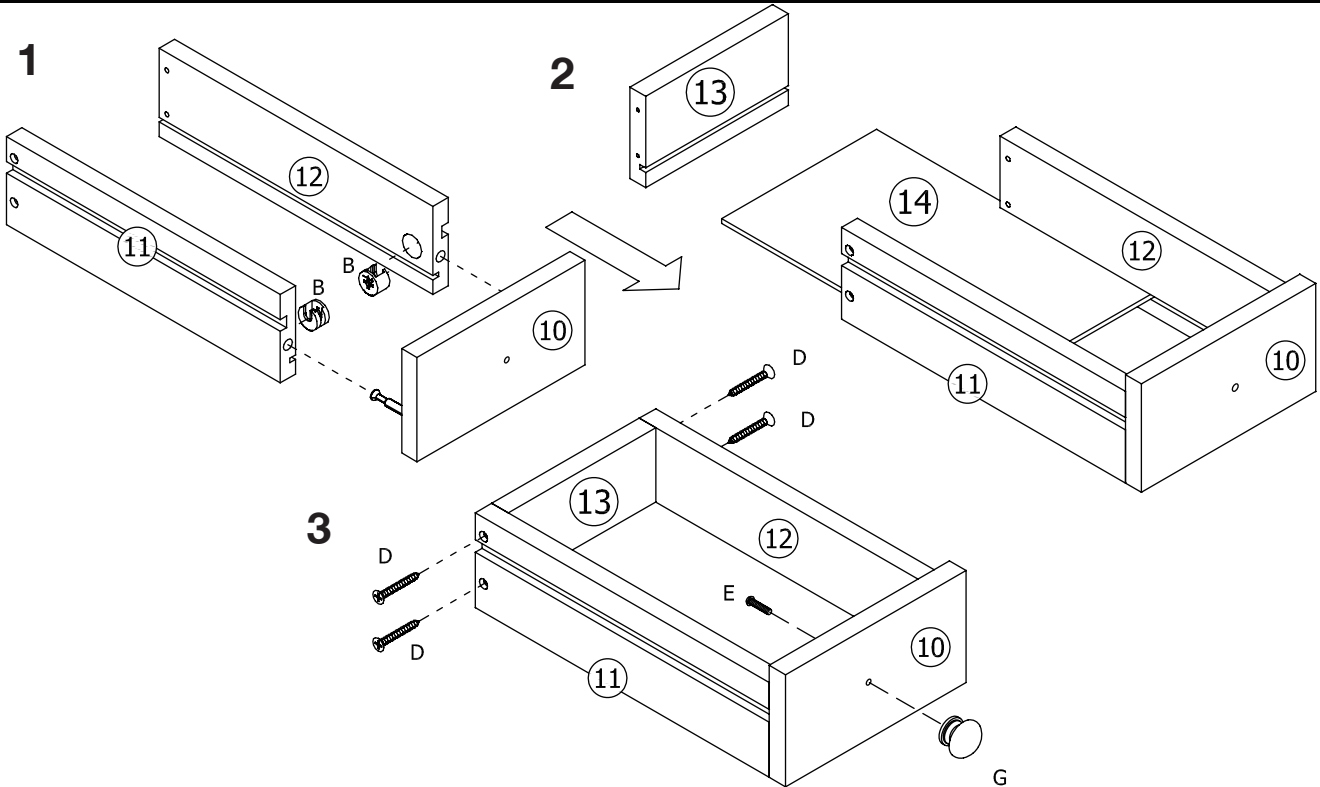


Bathroom Utility Cabinet 2 colour handle option

STEP 7

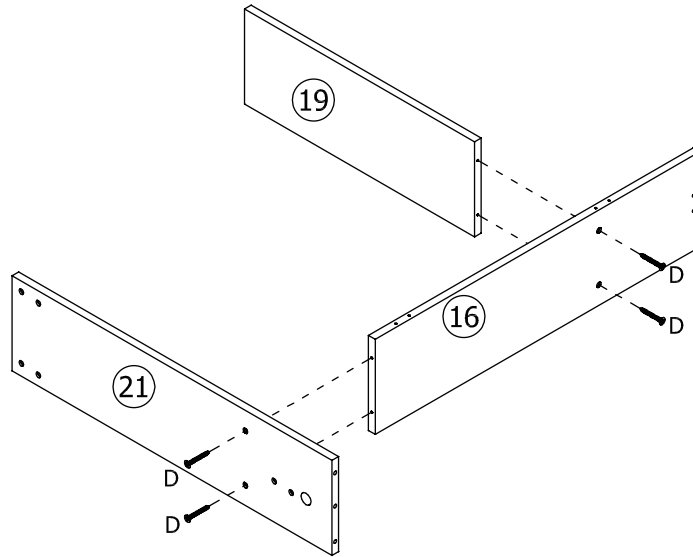


STEP 8

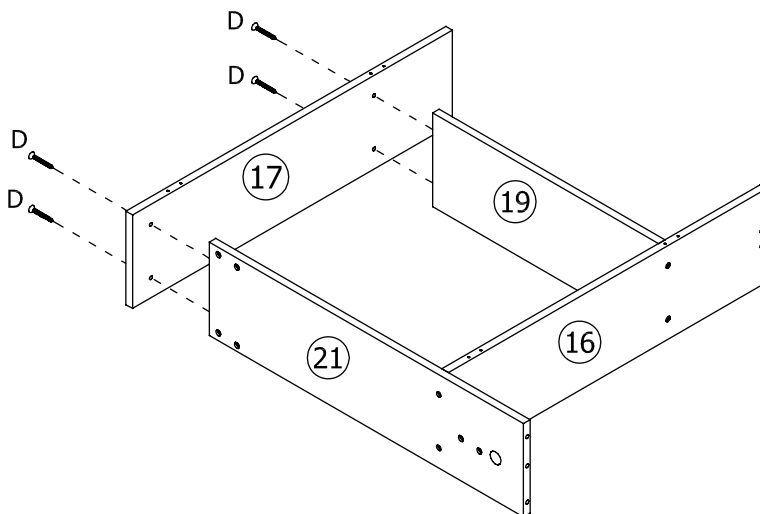


Bathroom Utility Cabinet 2 colour handle option

STEP 9

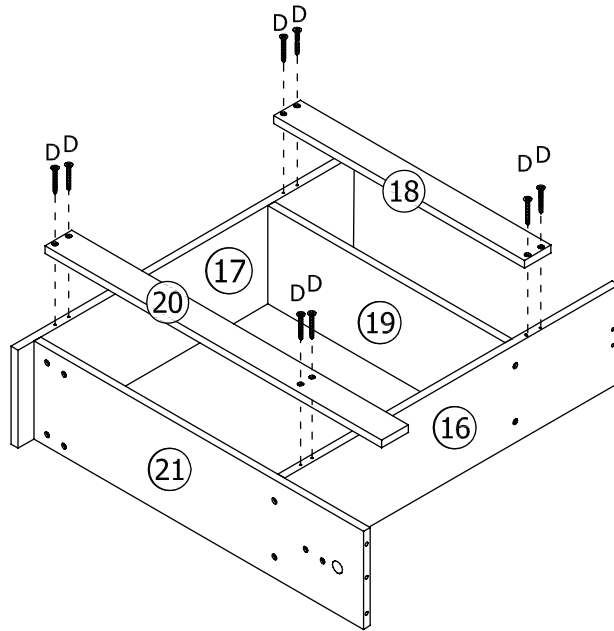


STEP 10

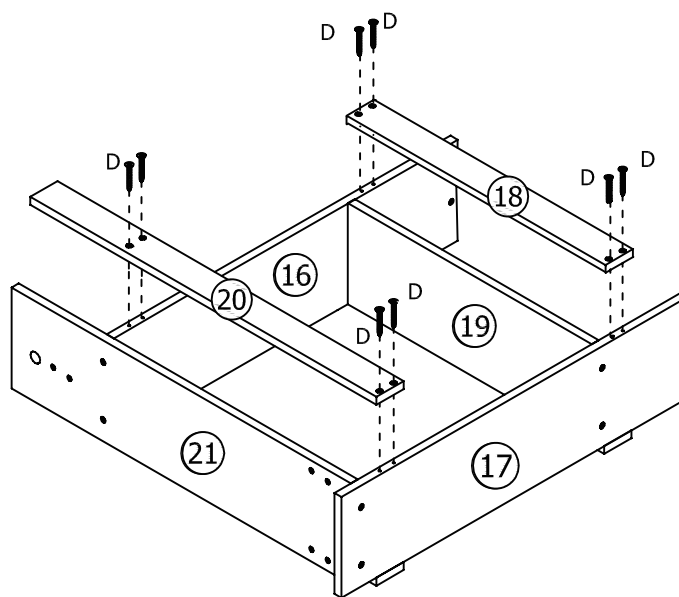


Bathroom Utility Cabinet 2 colour handle option

STEP 11

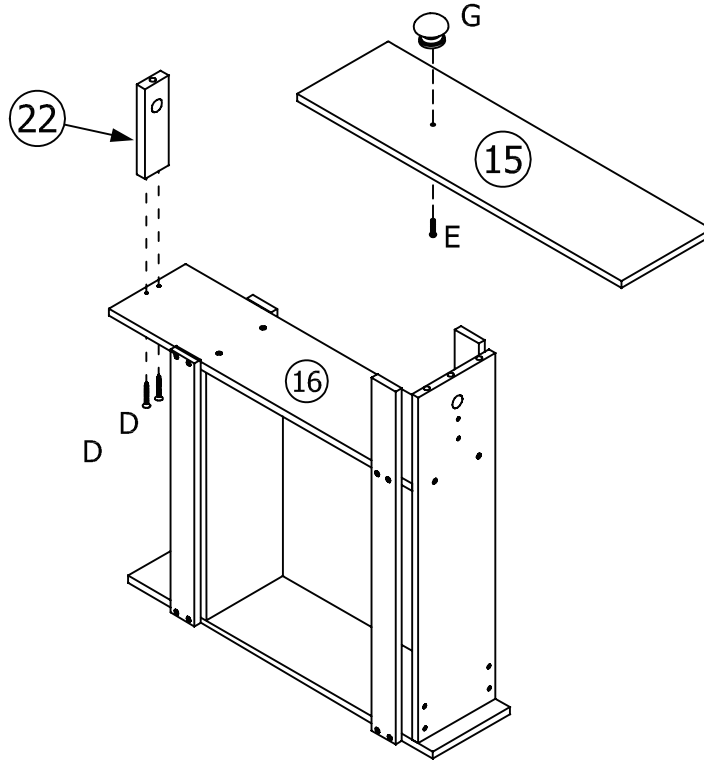


STEP 12

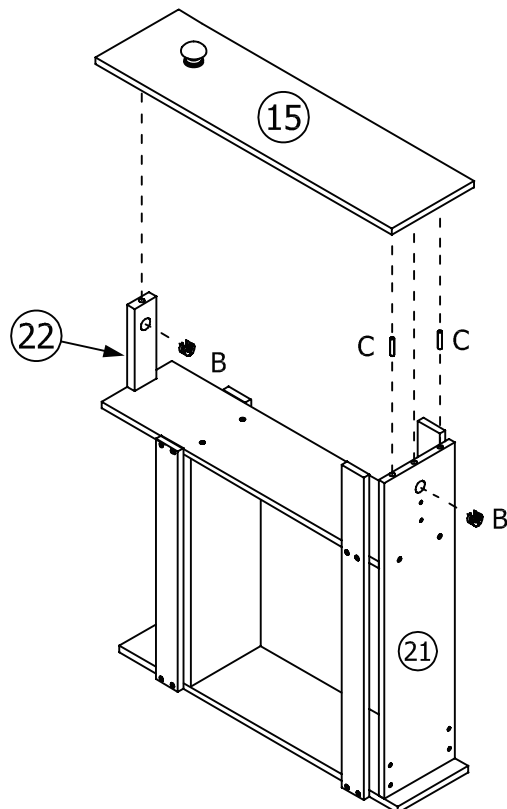

Bathroom Utility Cabinet 2 colour handle option

STEP 13

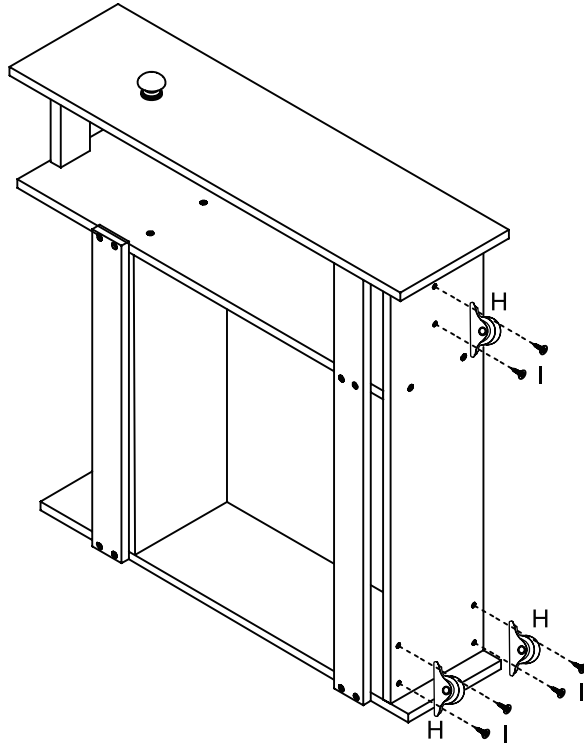

STEP 14

