TRIBECCA 6 DRAWER LOWBOY

1.0 HR		FLOOR AREA 2.5M X 1.5M
APPROXIMATE ASSEMBLY TIME	2 PERSON ASSEMBLY	REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS



POZI SCREWDRIVER



HAMMER



MEASURING TAPE



DRILL

ASSEMBLED DIMENSIONS

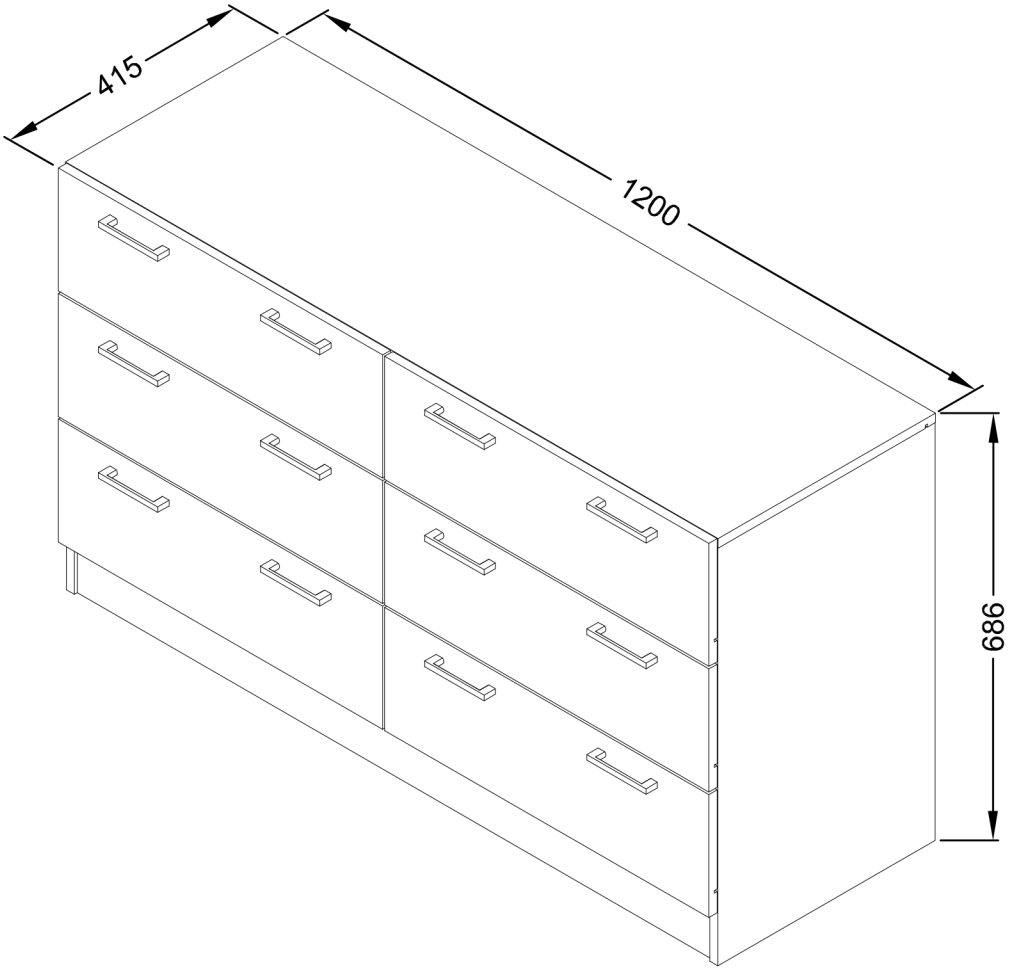

CA5259M1711J02-01

TRIBECCA 6 DRAWER LOWBOY

Tips before you start:

1. Please check that all parts are present before you start the assembly of your furniture.

2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.

4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.

6. During assembly please take care not to over-tighten any fittings, as this may damage the product.

7. Always place the product on a flat, steady and stable surface.

8. Do not stand on the product. Do not use the product as a stepladder.

9. This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of your Furniture

☑ Please periodically check all fittings and re-tighten as necessary.

☑ To clean your item, please use a damp cloth and wipe clean.

☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

☑ Please do not place hot item (e.g. hot drinks) directly on to the wood surface.

☑ Please do not drag or pull your furniture.

TRIBECCA 6 DRAWER LOWBOY

Tips before you start:

QUICKFIT

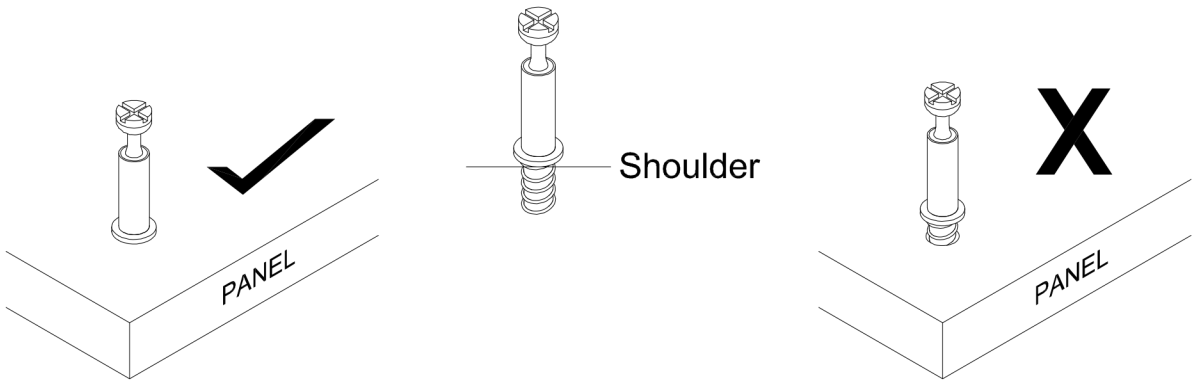

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

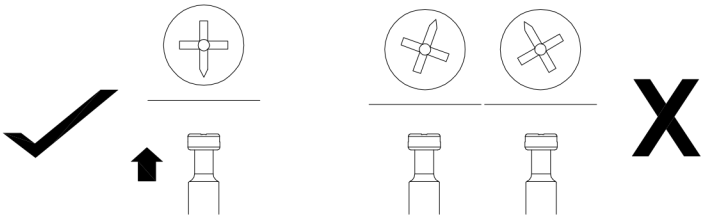

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

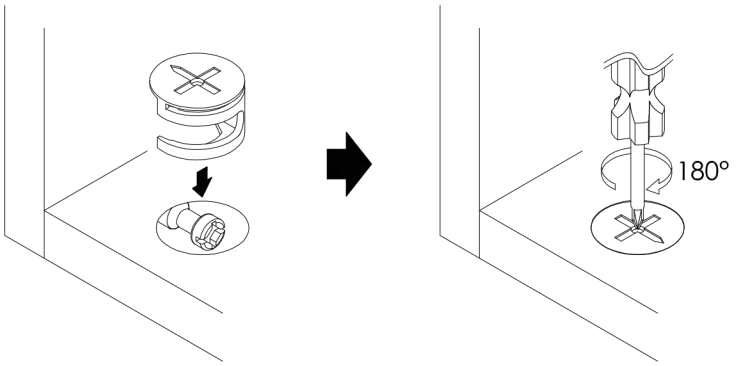

Turn camlock clockwise to tighten.

TRIBECCA 6 DRAWER LOWBOY

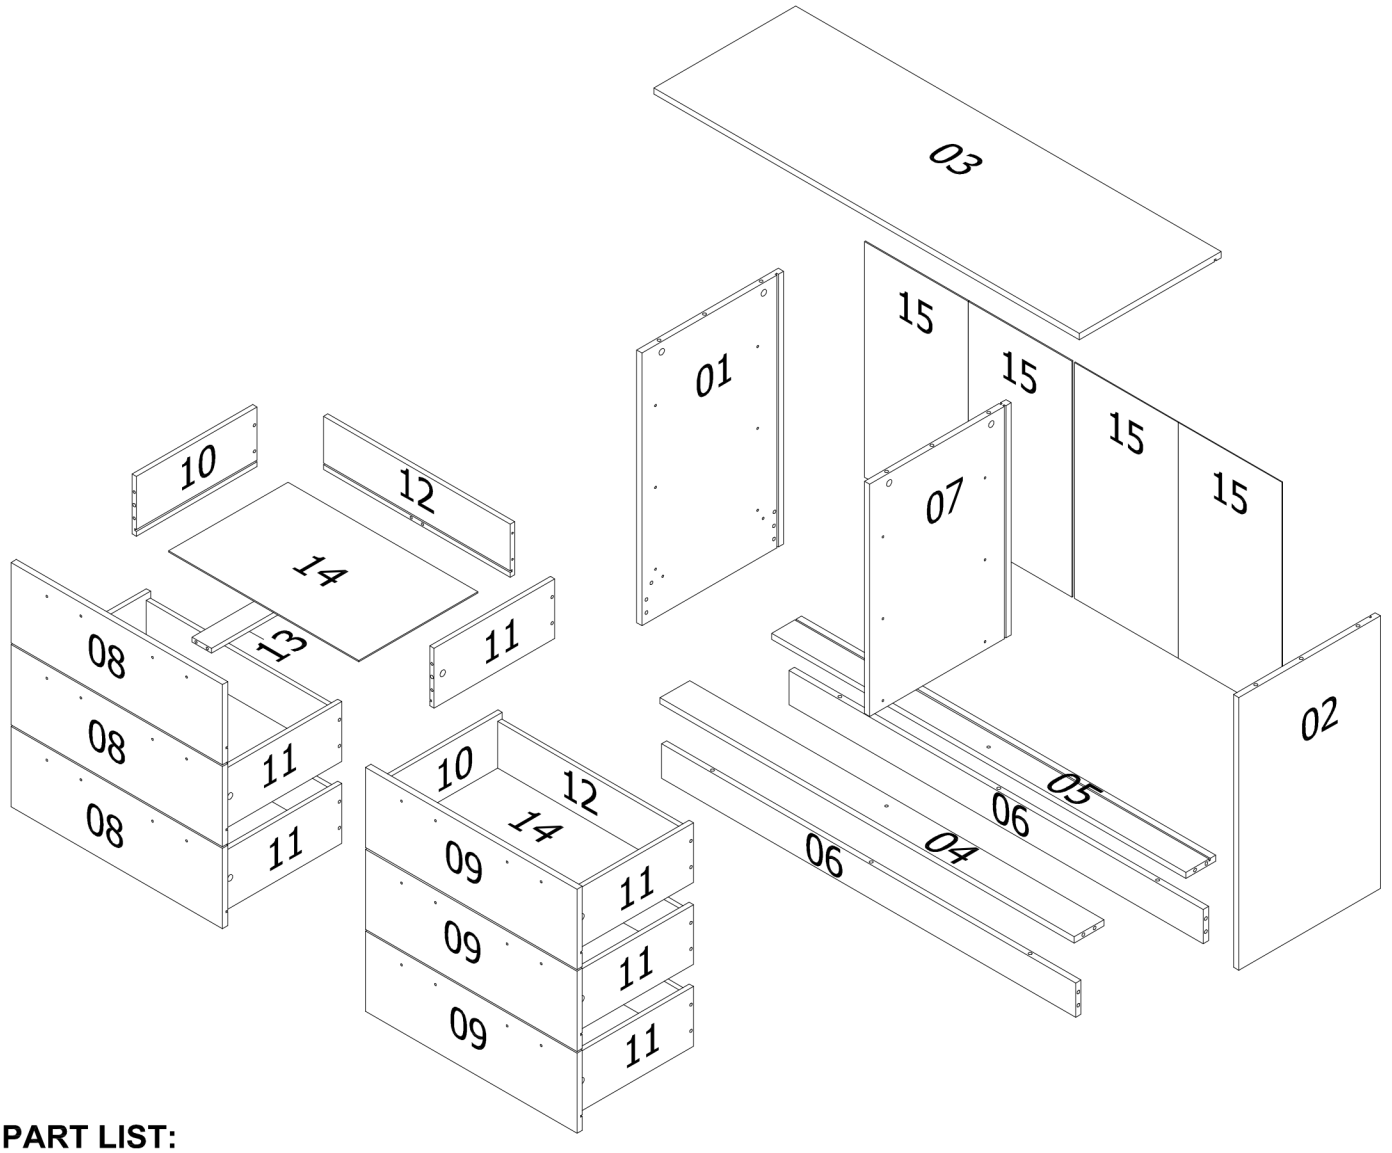

PART LIST:

NO.	PART NAME	QTY
1	SIDE PANEL (LEFT)	1
2	SIDE PANEL (RIGHT)	1
3	TOP PANEL	1
4	BOTTOM PANEL (FRONT)	1
5	BOTTOM PANEL (BACK)	1
6	BOTTOM RAIL	2
7	CENTER PANEL	1
8	DRAWER FRONT (LEFT)	3

NO.	PART NAME	QTY
9	DRAWER FRONT (RIGHT)	3
10	DRAWER SIDE (LEFT)	6
11	DRAWER SIDE (RIGHT)	6
12	DRAWER BACK	6
13	DRAWER SUPPORT	6
14	DRAWER BOTTOM	6
15	BACK PANEL	4

TRIBECCA 6 DRAWER LOWBOY

HARDWARE LIST

Ⓐ X24

CSK SCREW
M3.5 X 12MM

Ⓑ X21

CSK SCREW
M3.5 X 15MM

Ⓒ X24

EURO SCREW
M6 X 9MM

Ⓓ X26



JCBC(W) SCREW
M6 X 40MM

Ⓔ X48

WOOD DOWEL
Ø6 X 20MM

Ⓕ X21

WOOD DOWEL
Ø8 X 25MM

Ⓖ X22



9047975 BOLT DOWEL
DU319 20X5MM

Ⓗ X10



9064684 CAM 15/15

Ⓙ X12

9116018 CAM 15/12

Ⓚ X12



96MM PVC U SHAPE
HANDLE=(1PC) SCREW
M3.5 X 25MM=(2PCS)

Ⓛ1 X6



METAL DRAWER SLIDE
(350MM)

Ⓛ2 X6



METAL DRAWER SLIDE
(350MM)

Ⓜ1X6

METAL DRAWER SLIDE
(350MM)

Ⓜ2X6

METAL DRAWER SLIDE
(350MM)

Ⓝ X6



PLASTIC LEG STUD

Ⓟ X1



ALLEN KEY M4

Ⓠ X20

BACKPLY STOPPER

Ⓡ X1

WEBBING TAPE
(1.2 X 12 X 145MM)

Ⓢ X6



GLUE

TRIBECCA 6 DRAWER LOWBOY

STEP 1

Using glue (S) insert dowel (E & F) into pieces (1 , 2 , 4 , 5 , 6 , 7 , 10 , 11 & 13) as shown.

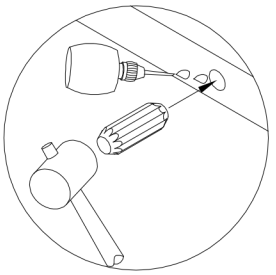

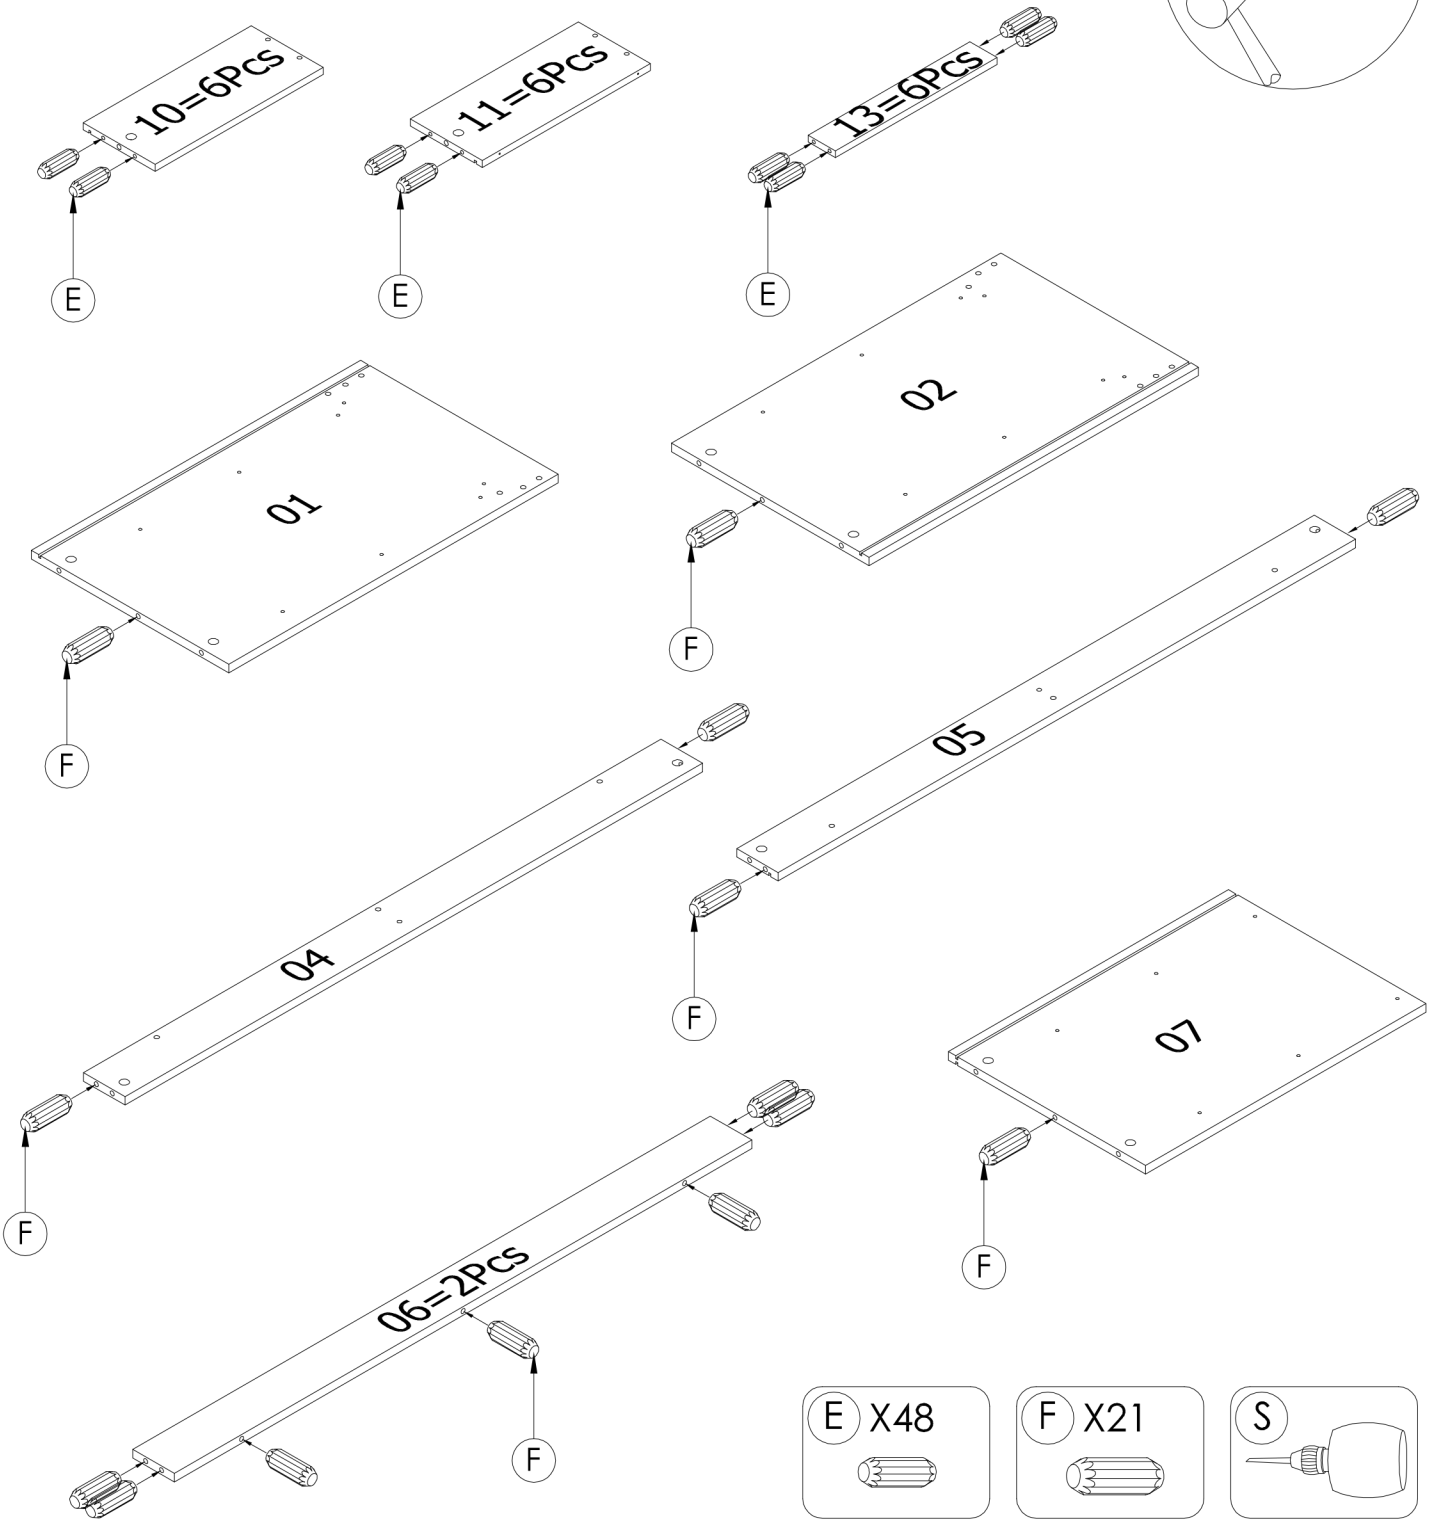

TRIBECCA 6 DRAWER LOWBOY

STEP 2

Take all panels (1 , 2 , 3 , 8 & 9) , using a drill on low speed / torque or a phillips head screw driver CAM PINS (G) as shown.

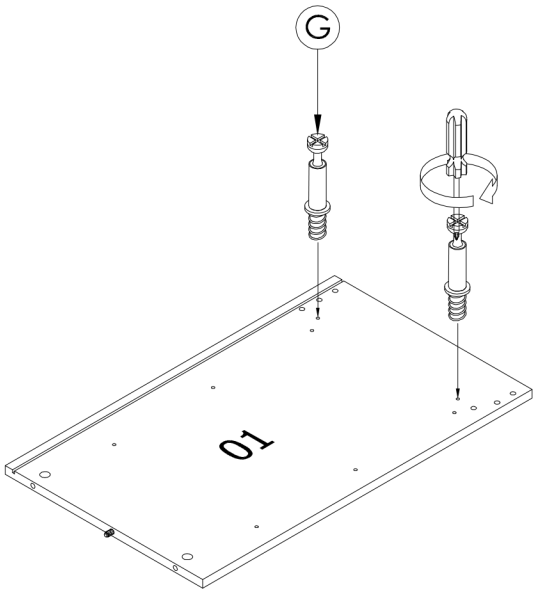

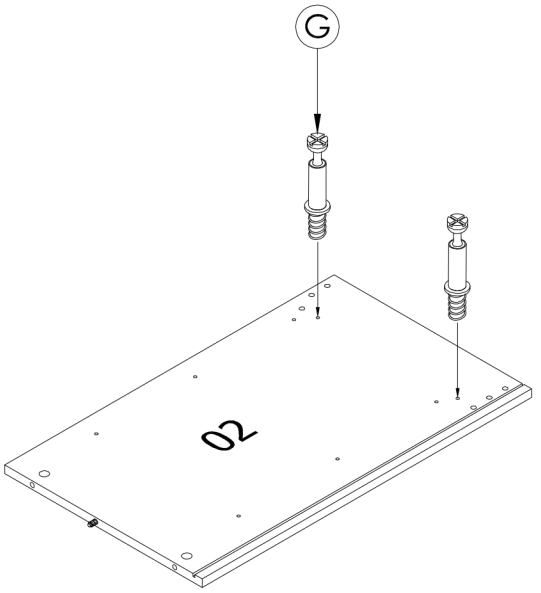

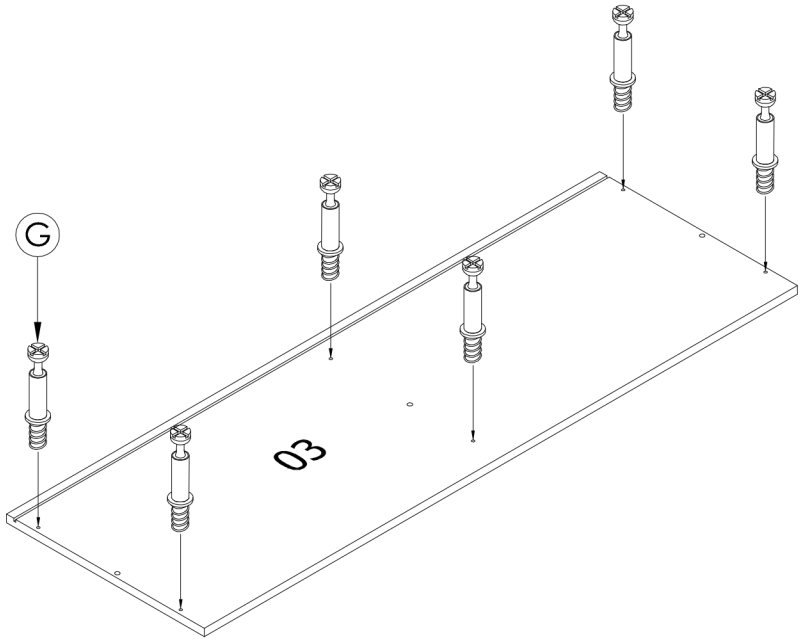

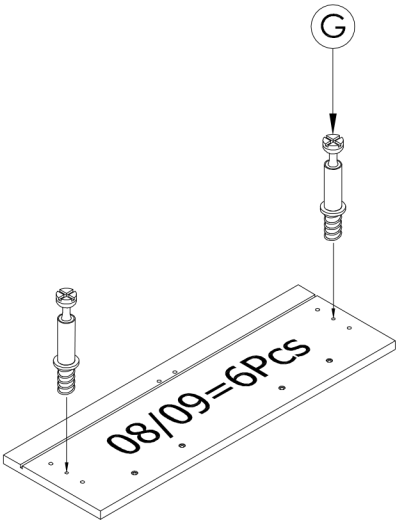

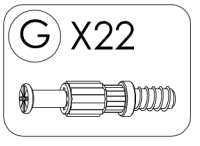

TRIBECCA 6 DRAWER LOWBOY

STEP 3

Attach drawer side (10 & 11) to drawer back (12) using screw (D).
Using glue (S) attach panel (13) to drawer backs (12) as shown.

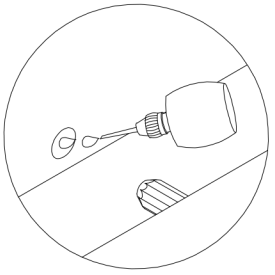

X6

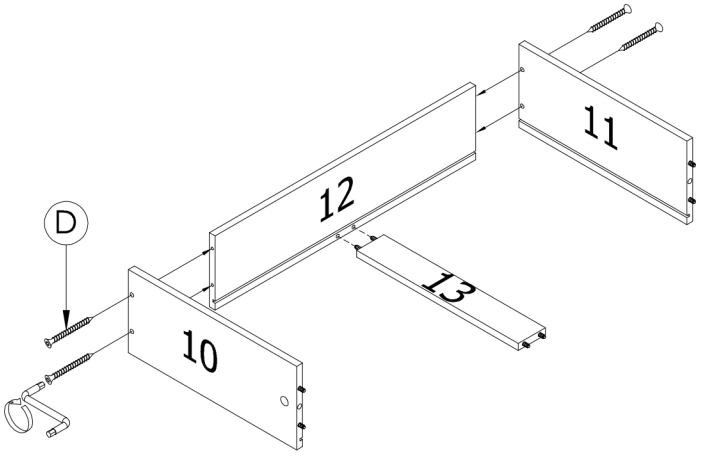

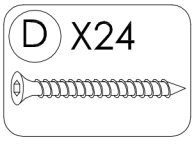

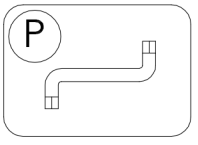

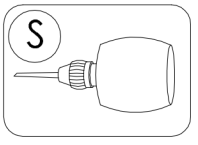

STEP 4

Slot the drawer bottom (14) into the drawer body.

X6

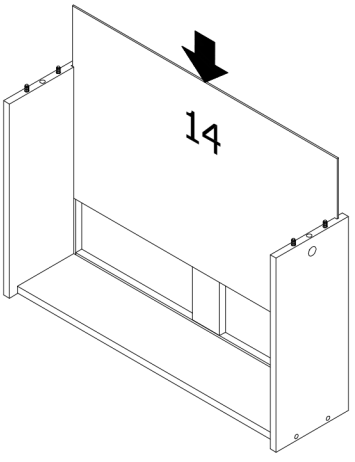

TRIBECCA 6 DRAWER LOWBOY

STEP 5

Using glue (S) attach drawer front (8 & 9) to drawer side (10 & 11).
Fasten into place using CAM LOCK (J) as shown.

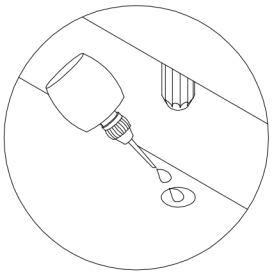

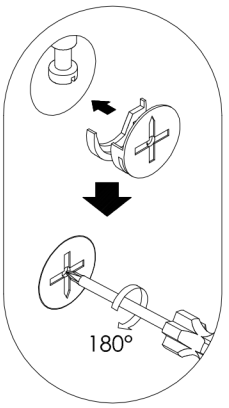

X6

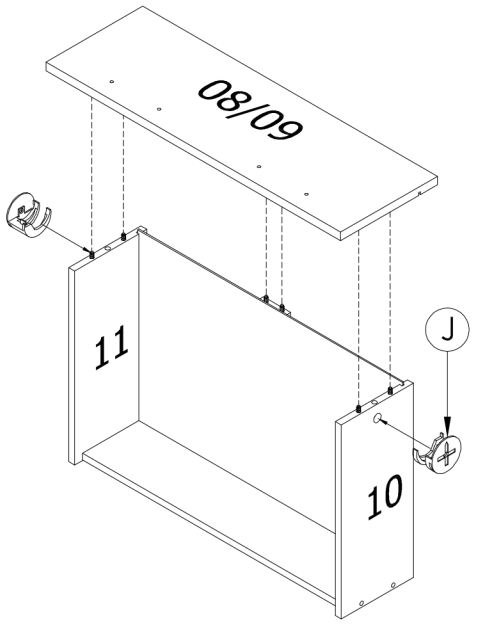

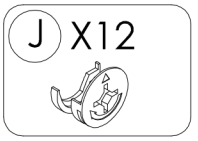

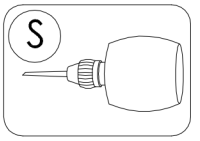

STEP 6

Affix the handle (K) to the drawer front (8 & 9) with the 25mm screw.

X6

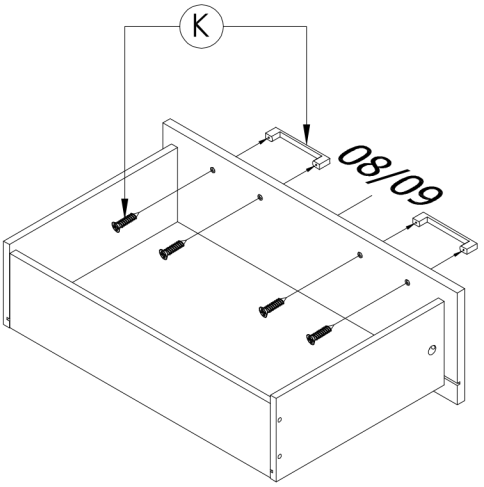

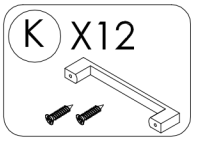

TRIBECCA 6 DRAWER LOWBOY

STEP 7

Attach the drawer slide inserts (M1 & M2) to the base of the drawer side (10 & 11) with the 12mm screw (A) as shown.

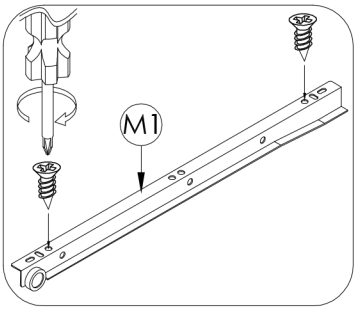

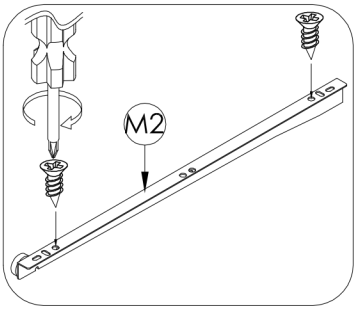

X6

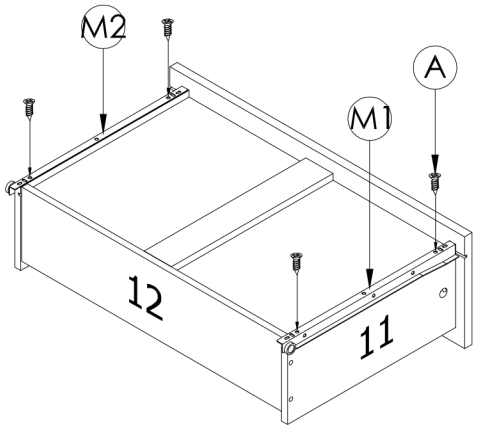

A X24

M1 X6

M2 X6

TRIBECCA 6 DRAWER LOWBOY

STEP 8

Take both side panels (1 , 2 & 7), attach drawer slide casing (L1 & L2) using screw 9mm (C) as shown.

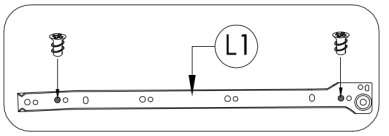

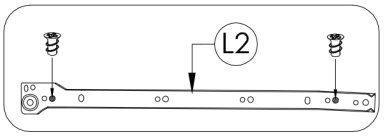

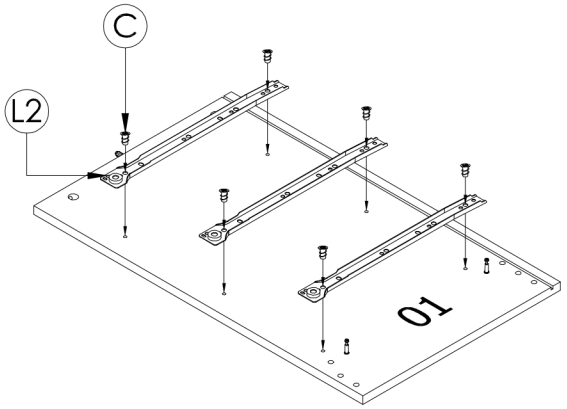

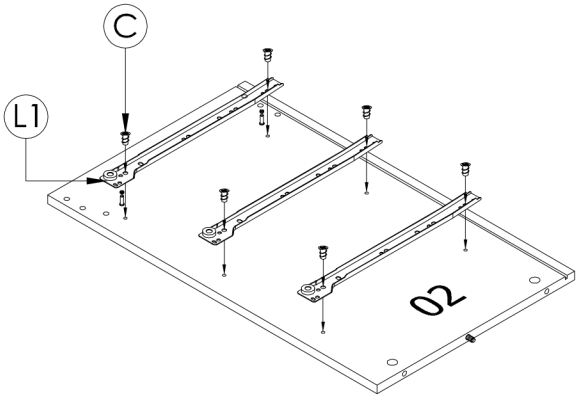

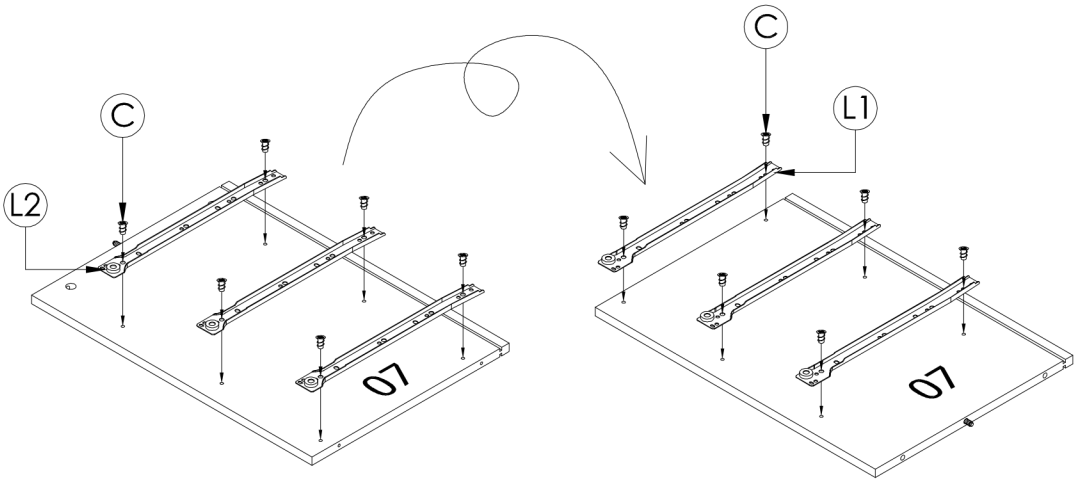

C X24

L1 X6



L2 X6



TRIBECCA 6 DRAWER LOWBOY

STEP 9

Attach bottom panel (4 & 5) to center panel (7) using screw 40mm (D) as shown.

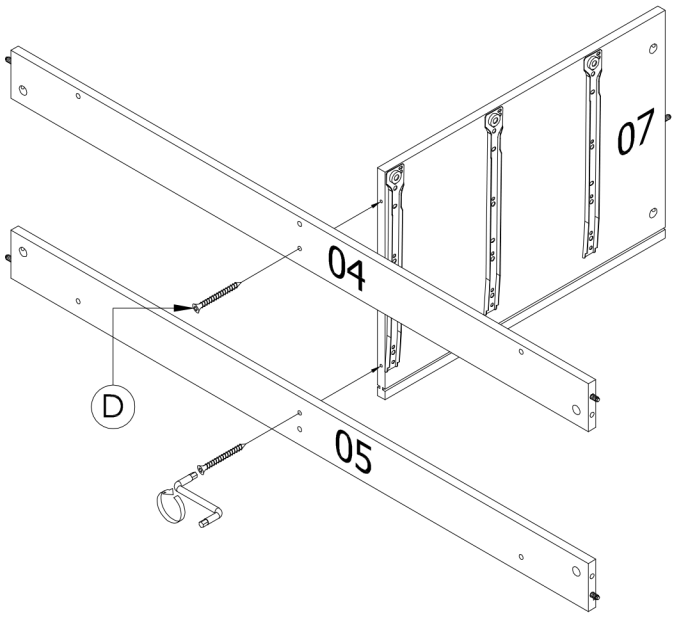

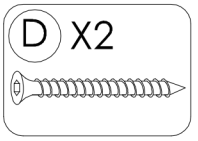

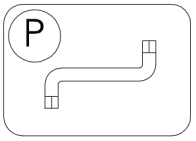

STEP 10

Attach bottom rail (6) to frame using glue (S) as shown.

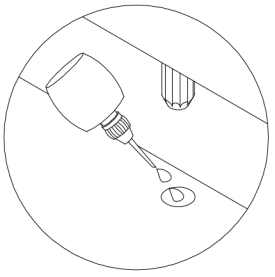

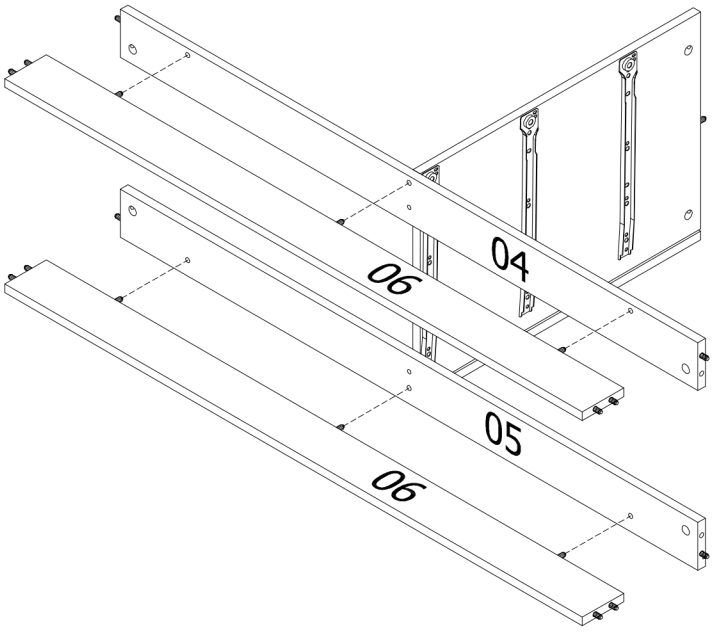

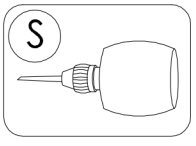

TRIBECCA 6 DRAWER LOWBOY

STEP 11

Attach panels (1 & 2) to frame using glue (S) with CAM LOCKS (H) as shown. Turn CAM LOCKS using screw driver until they tighten into place.

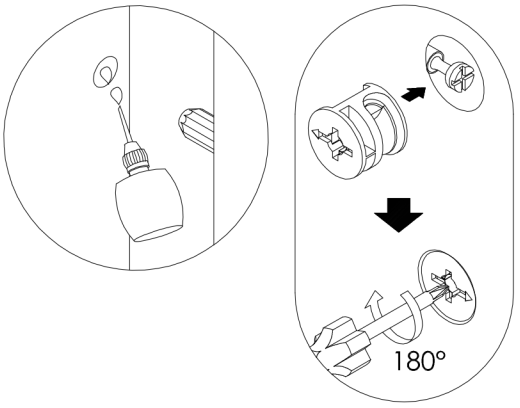

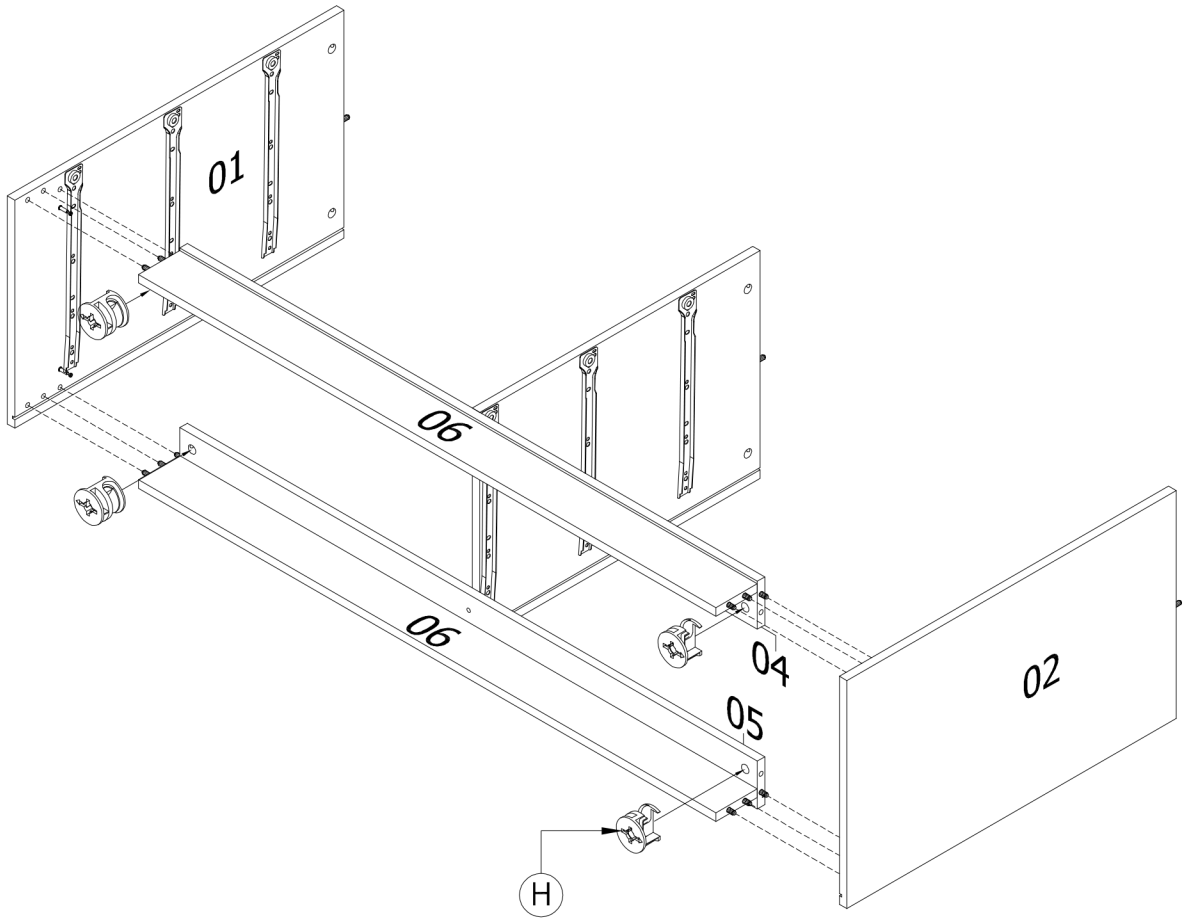

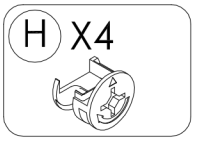

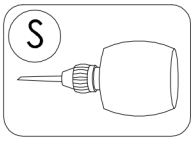

TRIBECCA 6 DRAWER LOWBOY

STEP 12

Attach plactic leg stud (N) to bottom as shown.

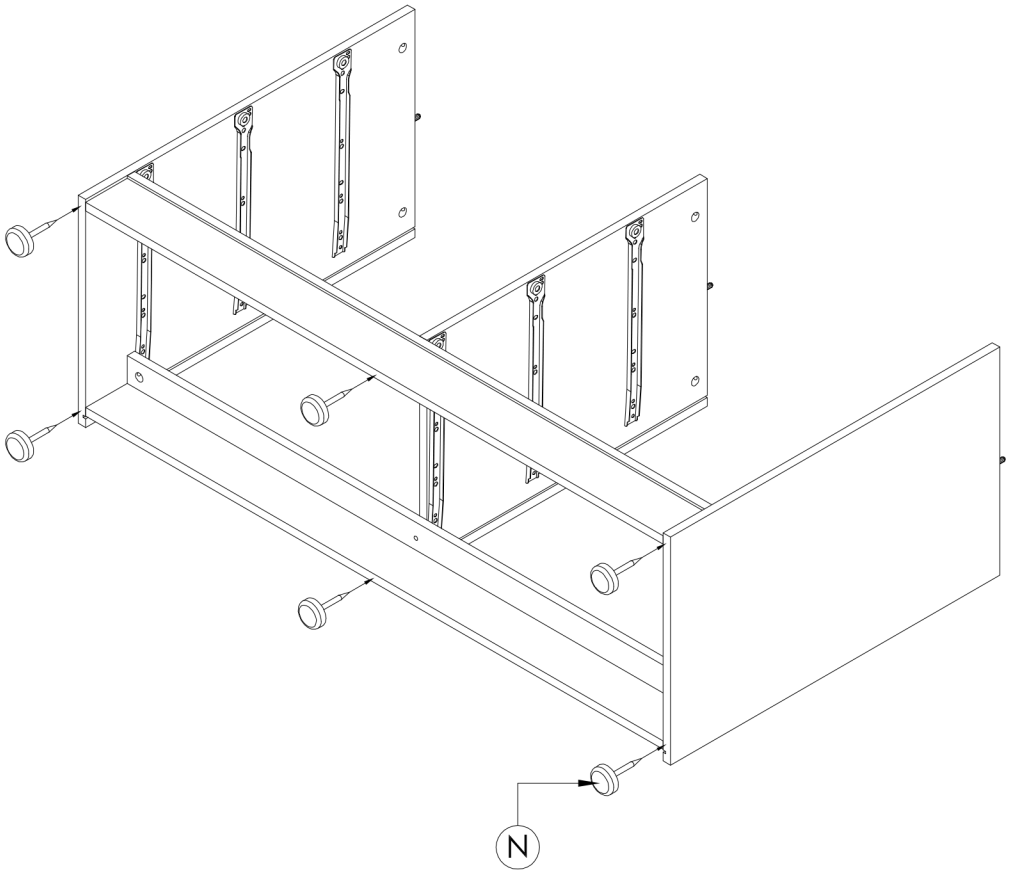

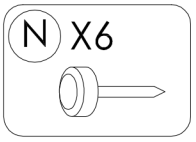

TRIBECCA 6 DRAWER LOWBOY

STEP 13
Slot panels (15) to frame.

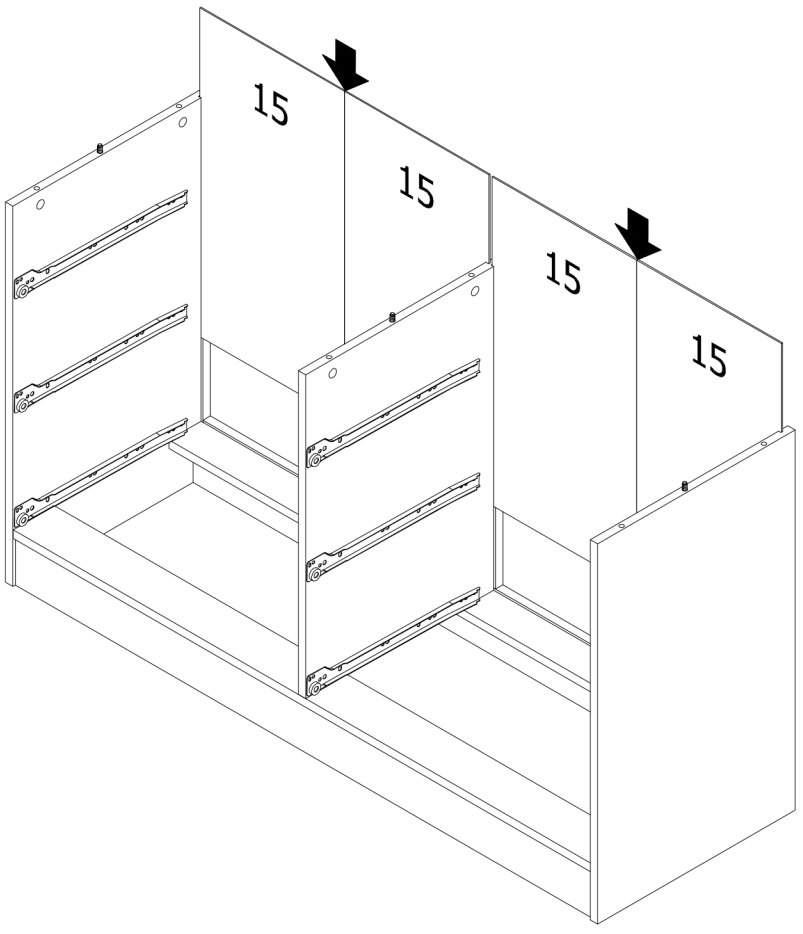

TRIBECCA 6 DRAWER LOWBOY

STEP 14

Using glue (S) attach top of the tall chest to frame.
Fasten into place using CAM LOCKS (H) as shown.

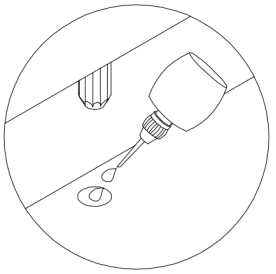

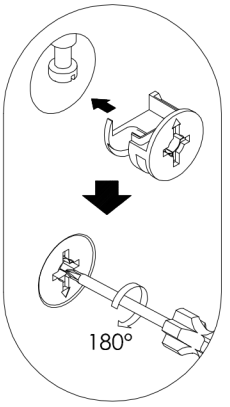

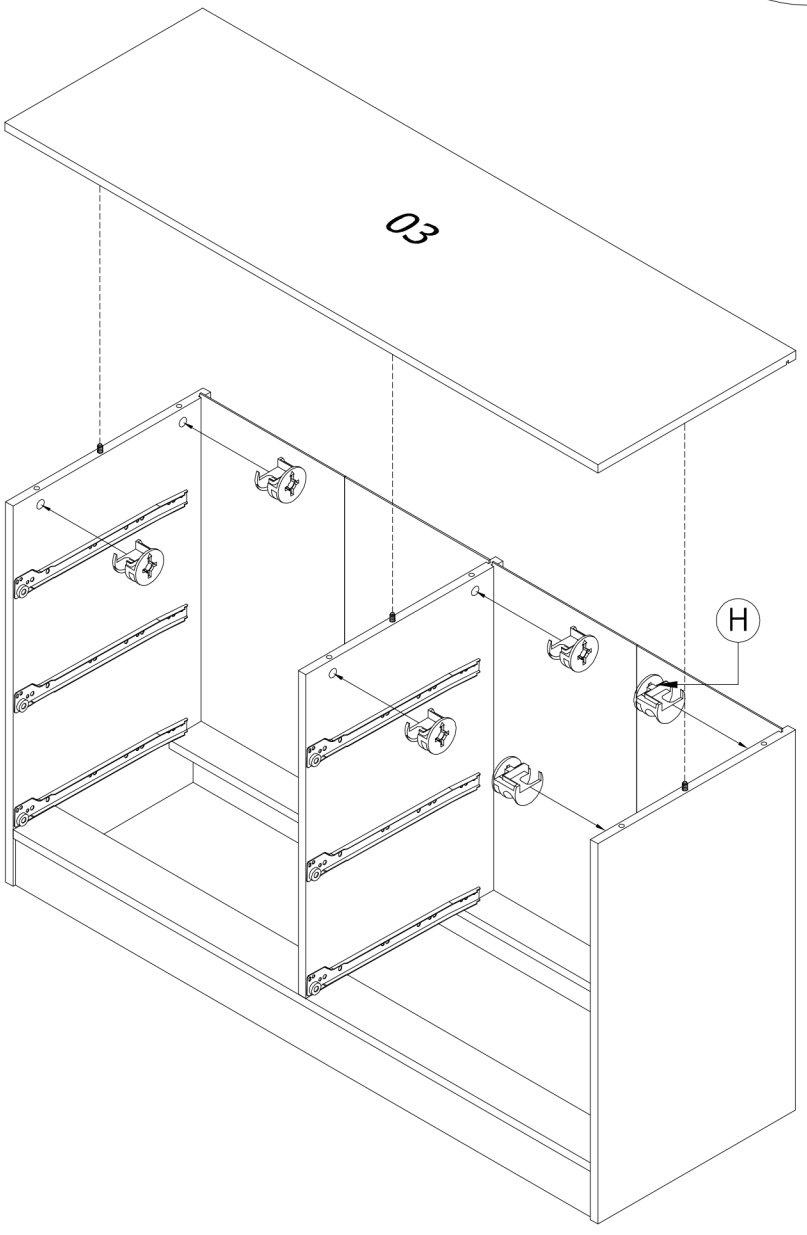

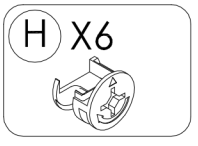

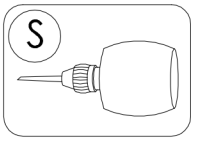

TRIBECCA 6 DRAWER LOWBOY

STEP 15

Affix the drawer to the body.

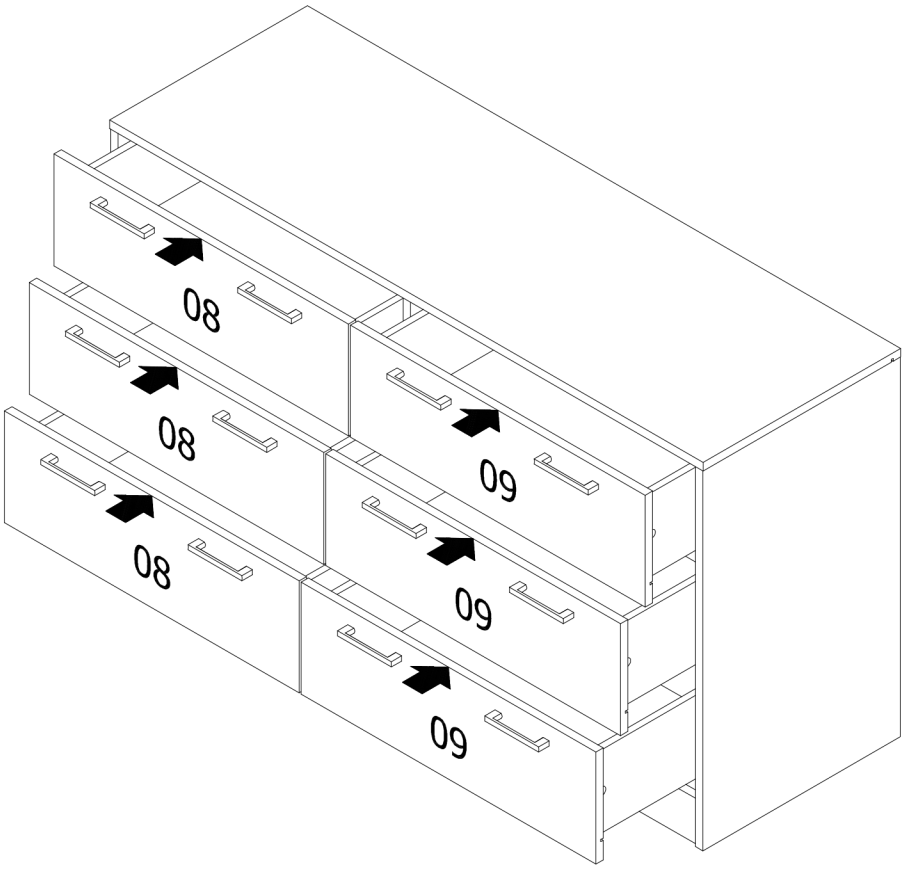

TRIBECCA 6 DRAWER LOWBOY

STEP 16

Attach the backply stoppers (Q) to the rear panels (15) using 15mm screw (B). Attach webbing tape (R) to top panels (3) with 15mm screw (B).

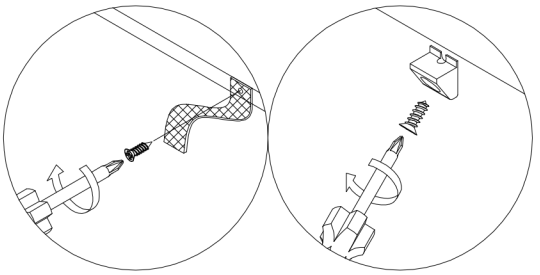

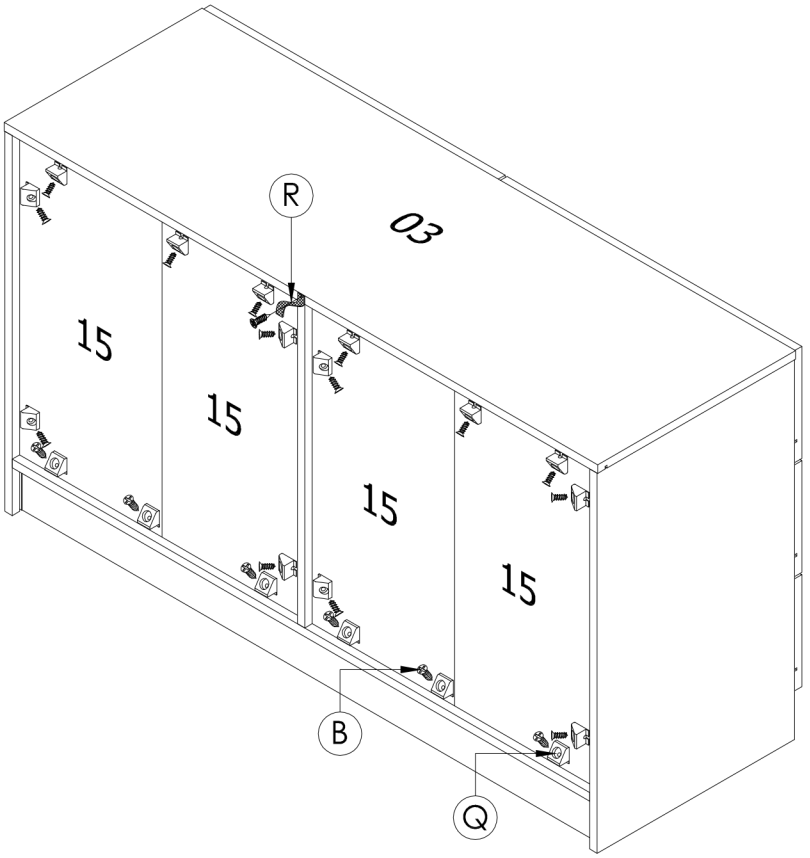

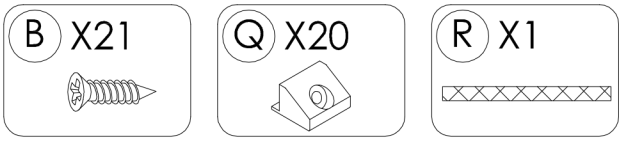

TRIBECCA 6 DRAWER LOWBOY

ASSEMBLY IS COMPLETE

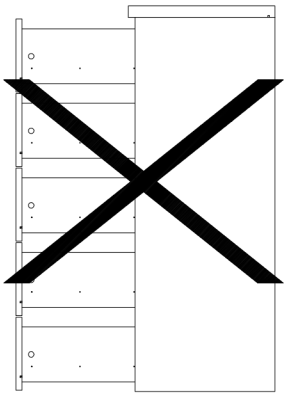

CAUTION :
FURNITURE THAT TIPS CAN CAUSE SERIOUS INJURIES AND CHILDREN ARE MORE AT RISK. SECURE THIS PIECE OF FURNITURE TO THE WALL, USING THE STRAP PROVIDED.

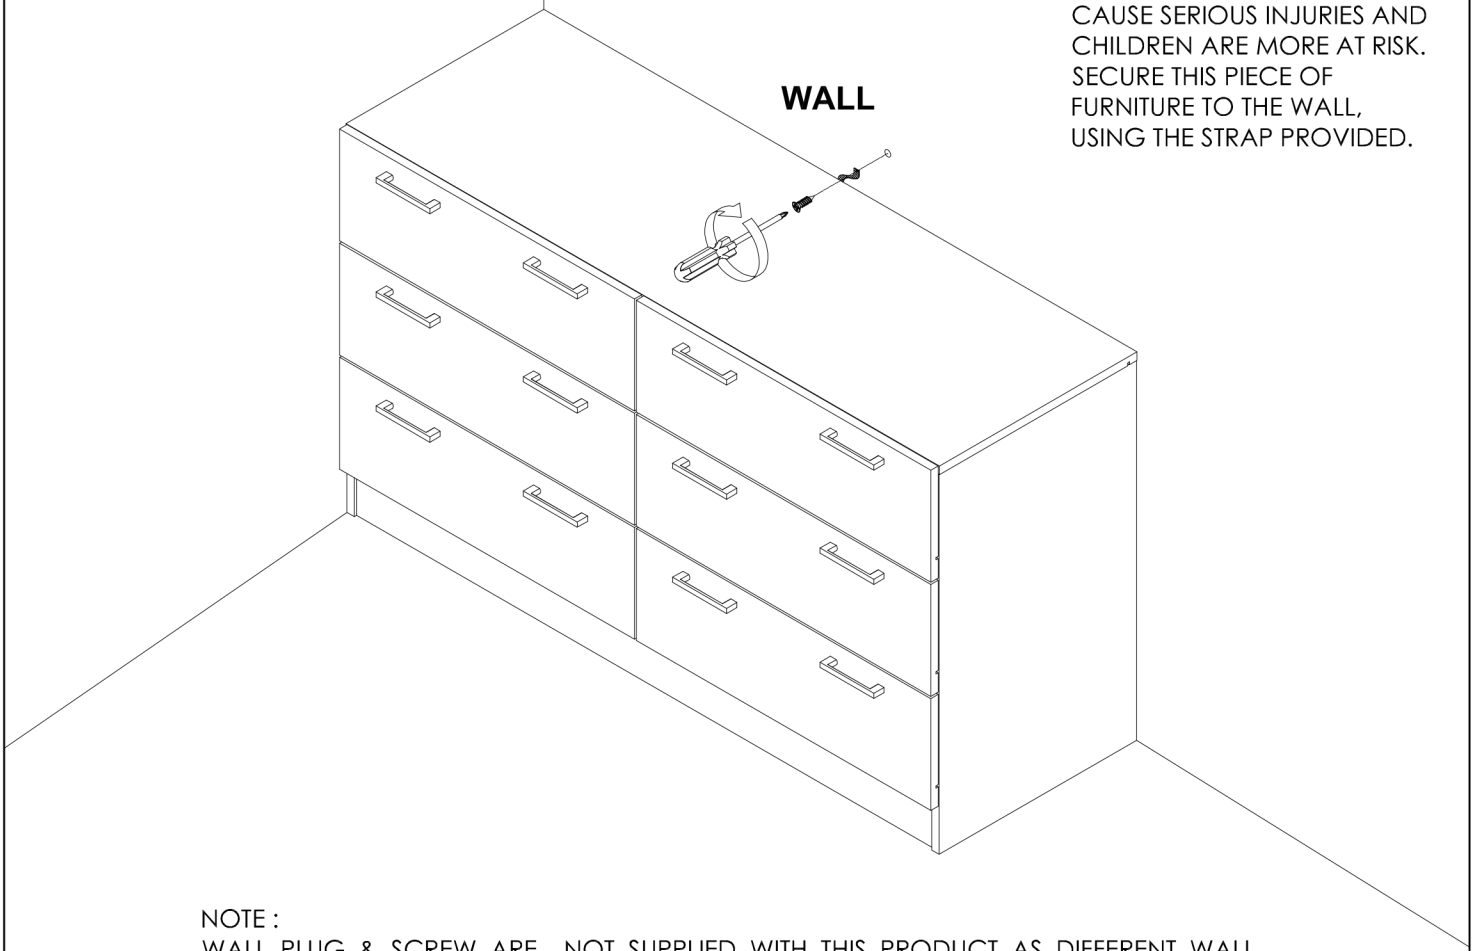

NOTE :
WALL PLUG & SCREW ARE NOT SUPPLIED WITH THIS PRODUCT AS DIFFERENT WALL MATERIALS REQUIRE DIFFERENT TYPES OF FIXING HARDWARE & YOU MUST USE SUITABLE FIXING HARDWARE FOR TYPE OF WALL YOU INTEND TO MOUNT THIS PRODUCT TO WALL.