


# Bathroom Utility Cabinet 2 colour handle option

**1.0hr**

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY

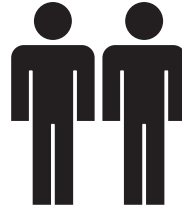


FLOOR AREA  
1M x 2M




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS



POZI SCREWDRIVER

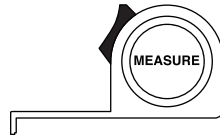


MEASURING TAPE

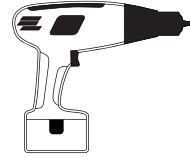

DRILL

## ASSEMBLED DIMENSIONS

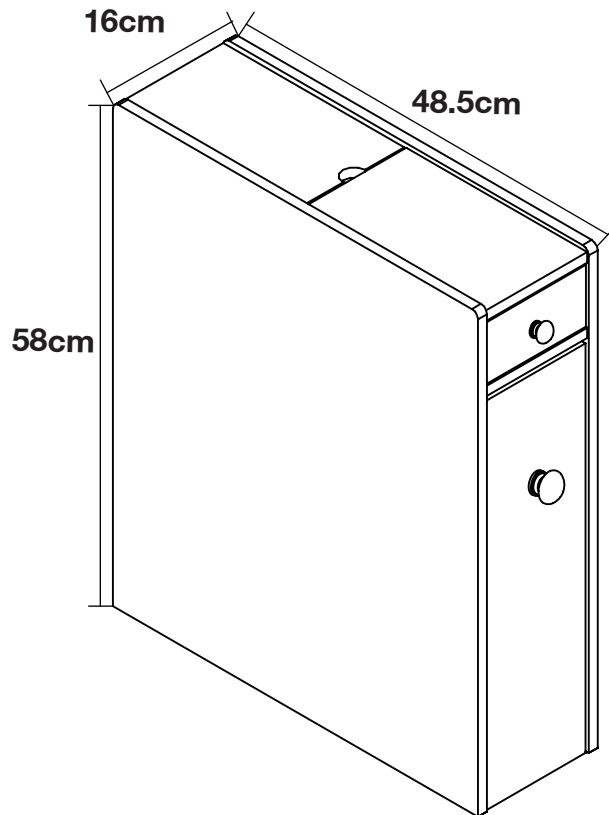

# Bathroom Utility Cabinet 2 colour handle option

## Tips before you start:


1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

## Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (eg. Hot drinks) directly on to the surface.
- Please do not drag and pull your furniture.

# Bathroom Utility Cabinet 2 colour handle option


## HARDWARE LIST

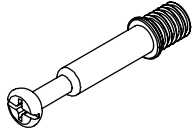

14 x A  
Quickfit Screw




14 x B  
Cam Lock




15 x C  
Wooden Dowel  
6x30mm



30 x D  
Screw  
3x25mm



2 x E  
Bolt  
4x16mm



2 x F  
Hinge Pin



2 x G  
Handle



3 x H  
Castor




6 x I  
Screw

## PARTS LIST


1   1PC	2   1PC	3   1PC	4   1PC	5   1PC
6   1PC	7   1PC	8   1PC	9   1PC	10   1PC
11   1PC	12   1PC	13   1PC	14   1PC	15   1PC
16   1PC	17   1PC	18   2PCS	19   1PC	20   2PCS
21   1PC	22   1PC			

# Bathroom Utility Cabinet 2 colour handle option

## STEP 1

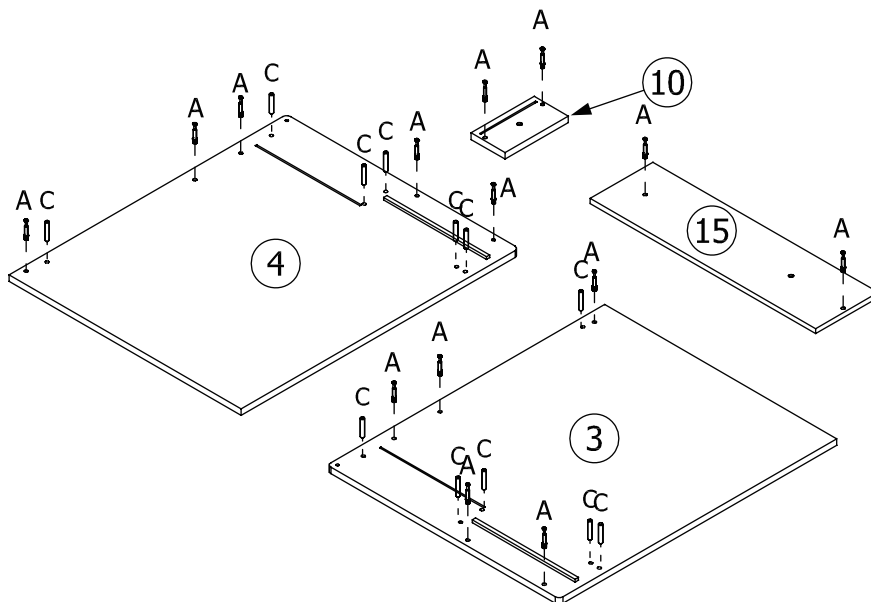


## STEP 2

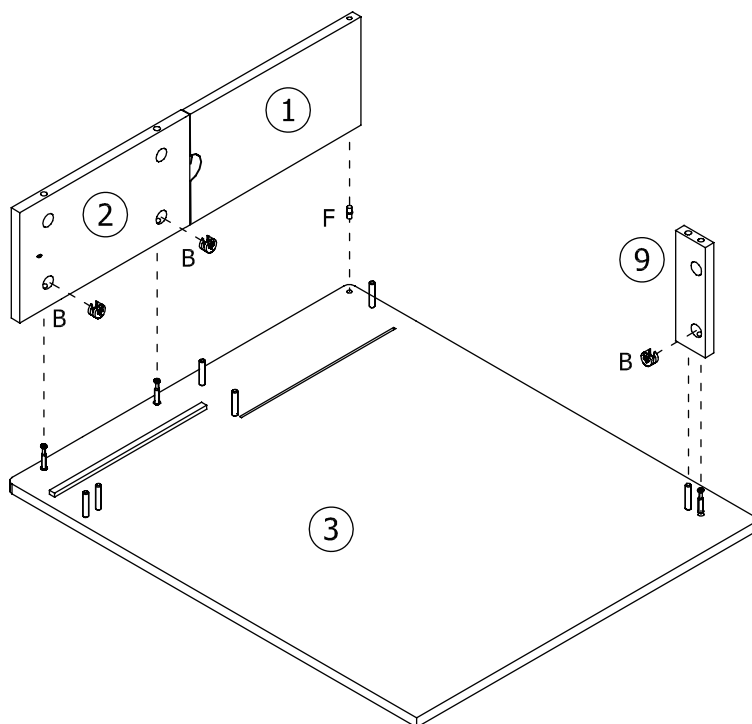


# Bathroom Utility Cabinet 2 colour handle option

## STEP 3

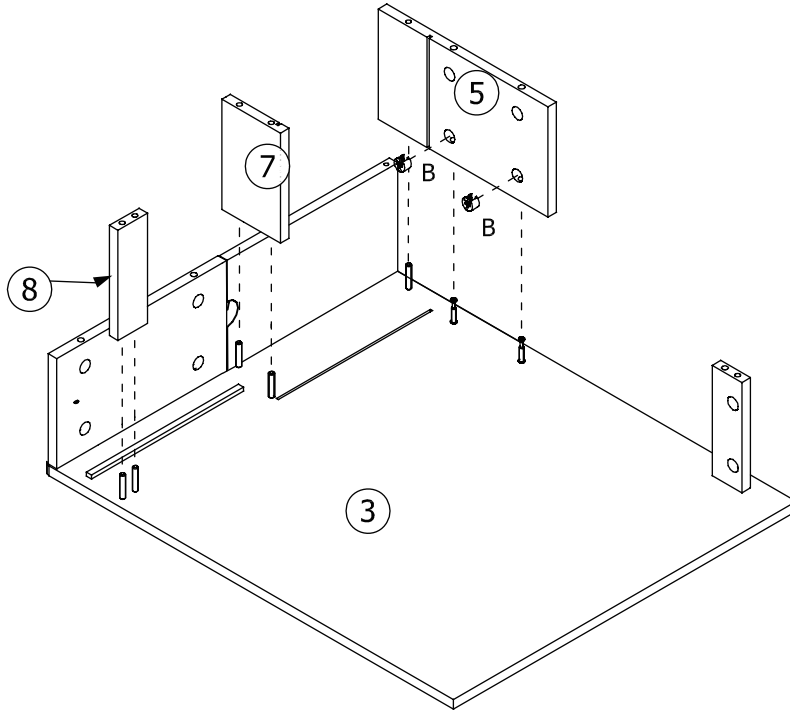


## STEP 4

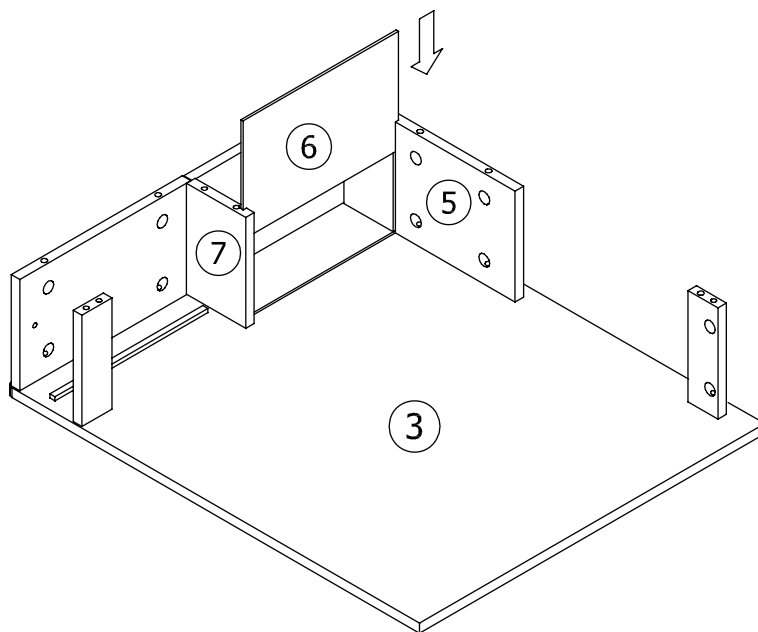


# Bathroom Utility Cabinet 2 colour handle option

## STEP 5

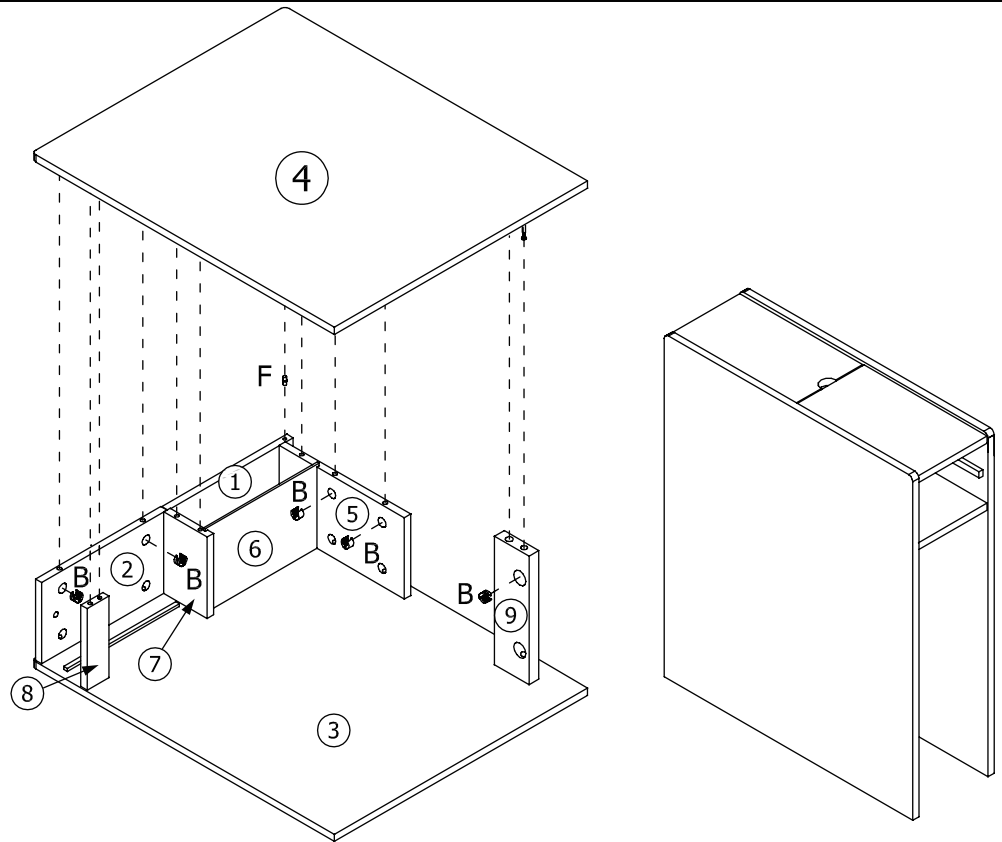


## STEP 6

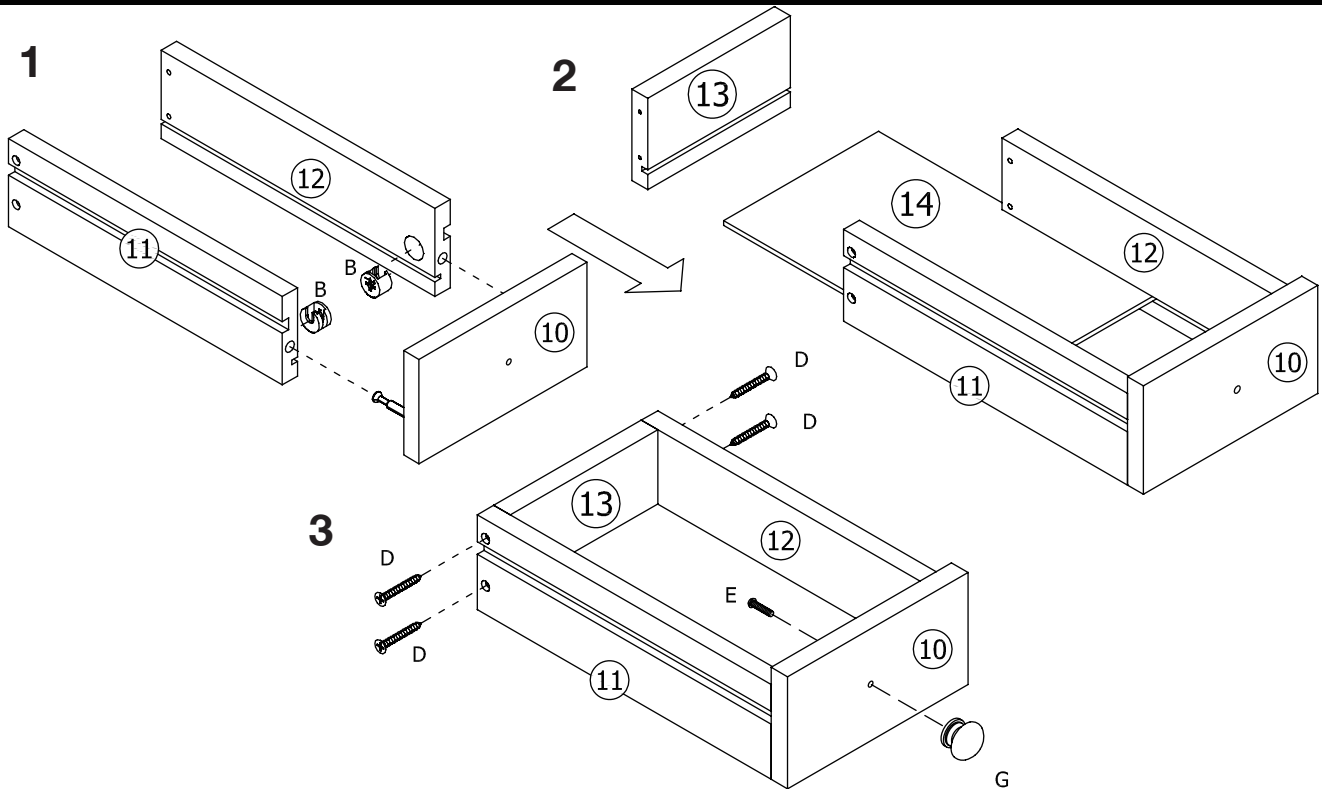


# Bathroom Utility Cabinet 2 colour handle option

## STEP 7

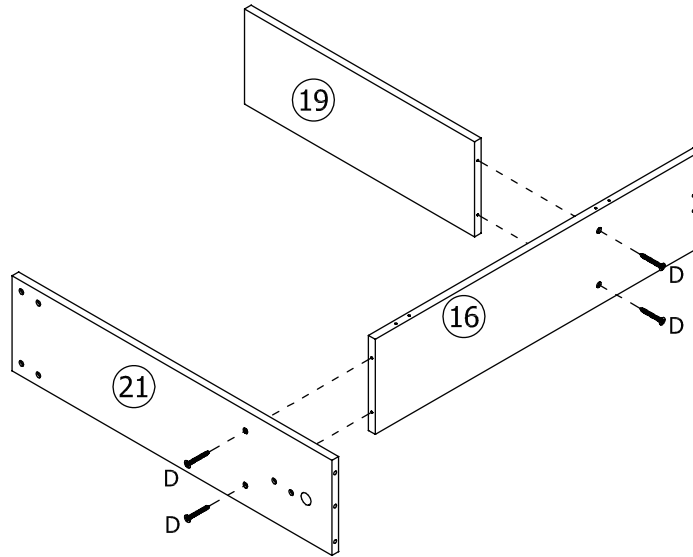


## STEP 8

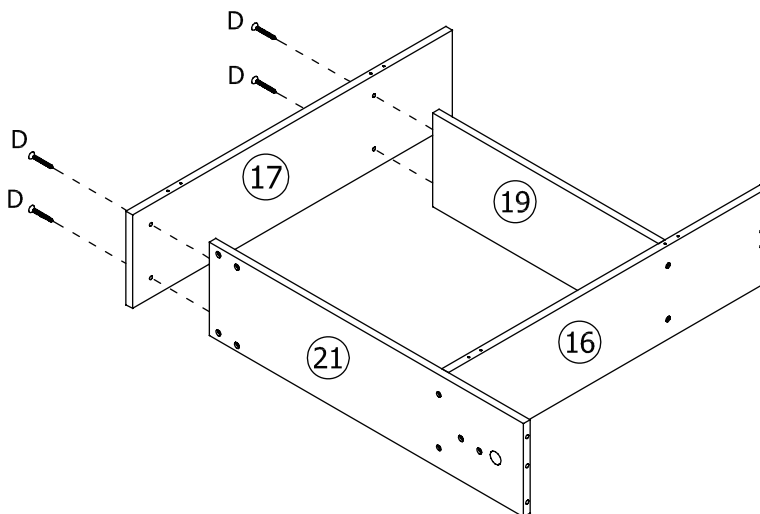


# Bathroom Utility Cabinet 2 colour handle option

## STEP 9

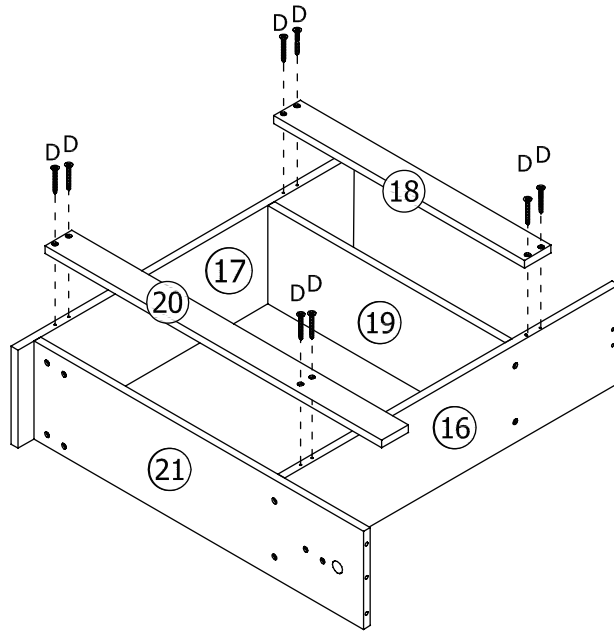


## STEP 10

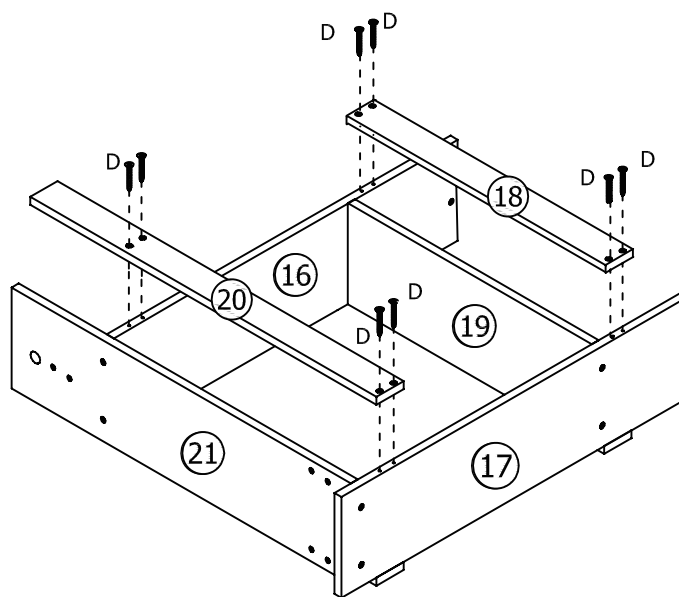


# Bathroom Utility Cabinet 2 colour handle option

## STEP 11

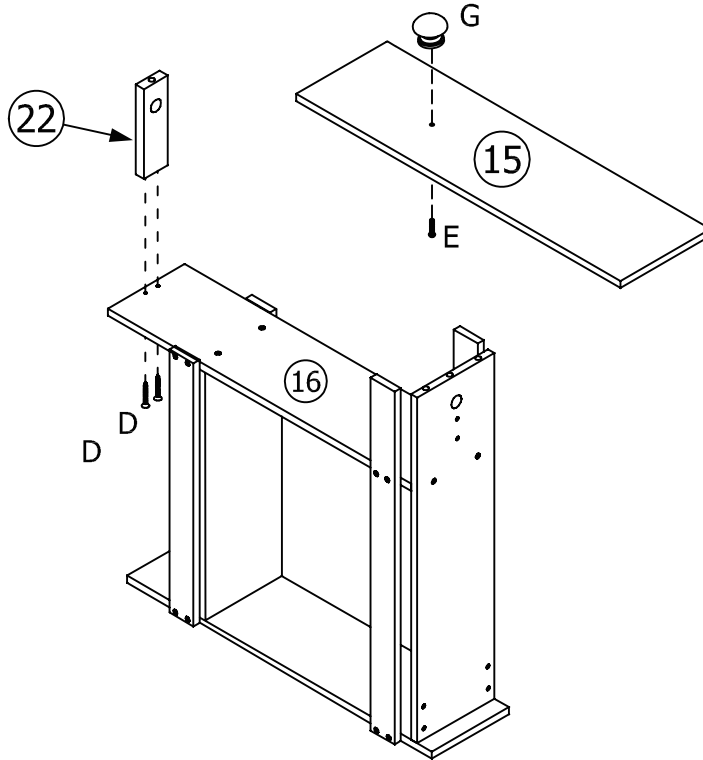


## STEP 12

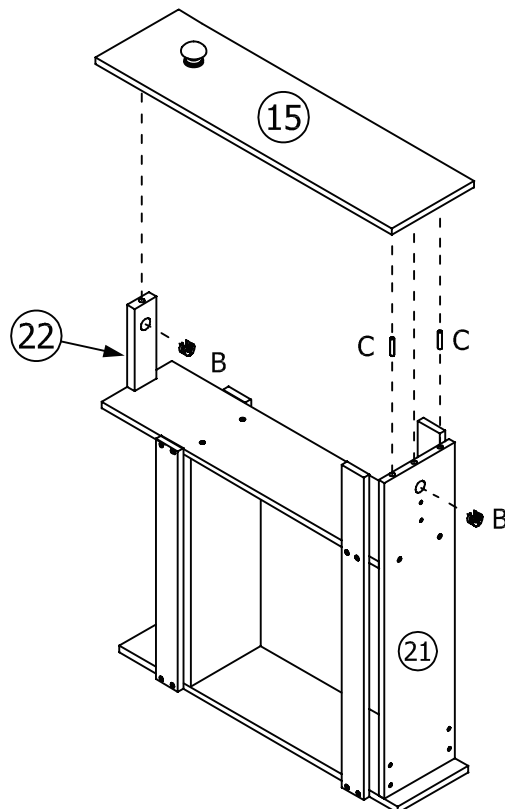

# Bathroom Utility Cabinet 2 colour handle option

## STEP 13

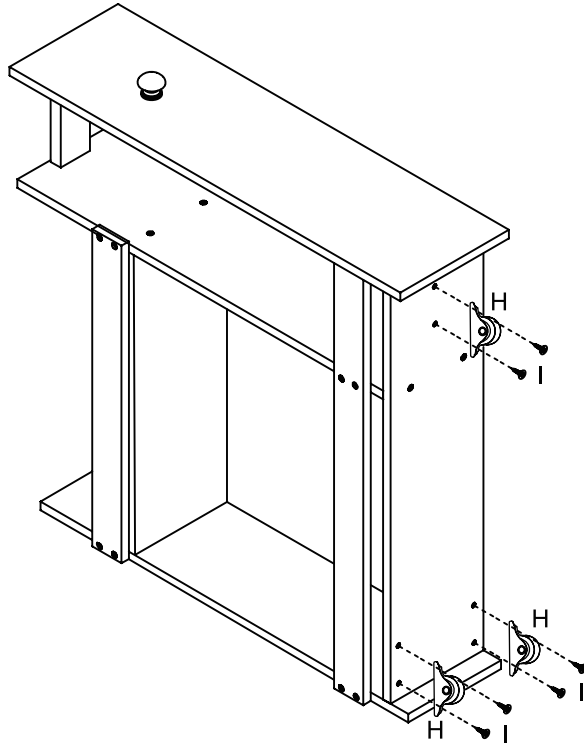

## STEP 14

