

MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493


1.0 HR

APPROXIMATE ASSEMBLY TIME




**2 PERSON
ASSEMBLY**

**FLOOR AREA
2.0M X 2.0M**

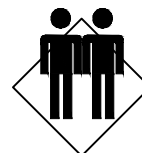


REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS




POZI SCREWDRIVER



HAMMER




MEASURING TAPE

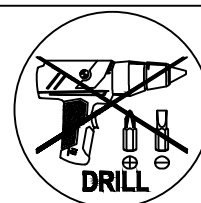

DRILL

ASSEMBLED DIMENSIONS

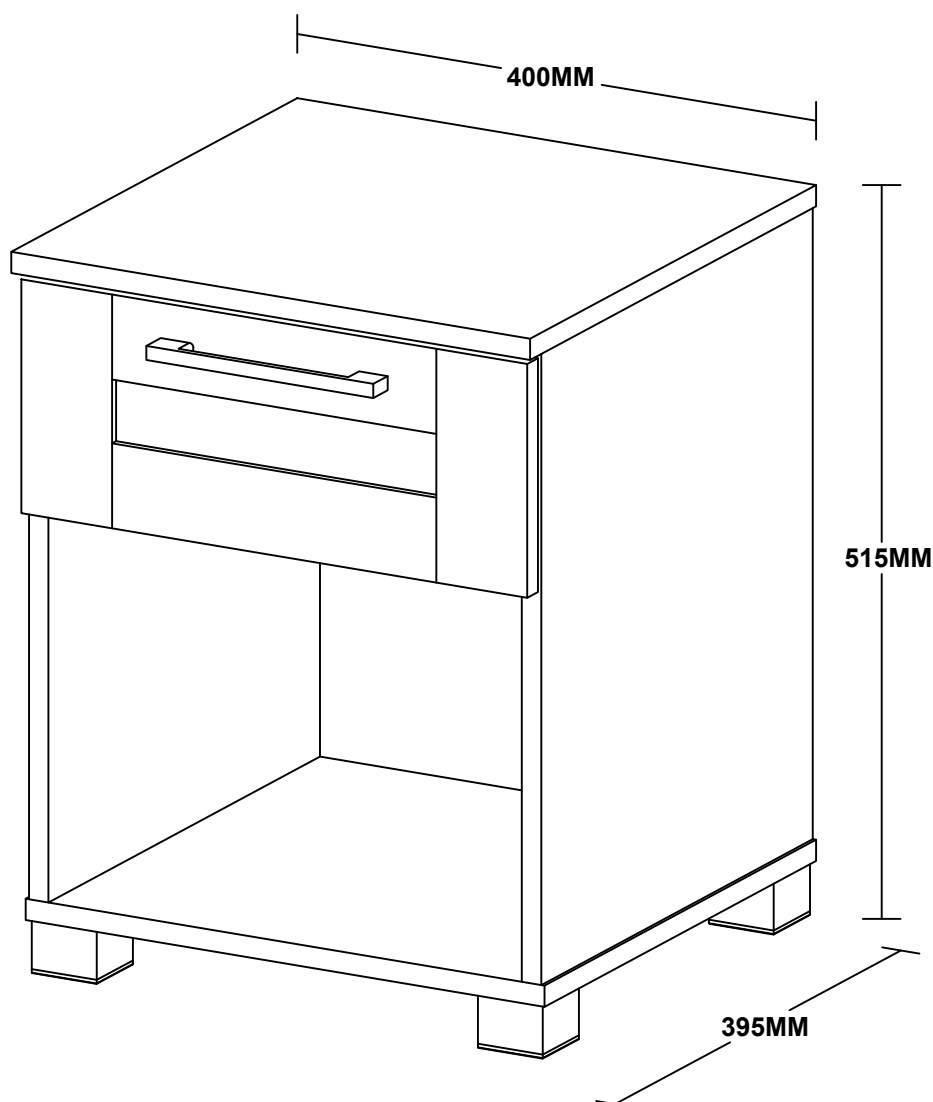

MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493

Important :

Please read these instructions carefully before use and keep for future reference.

- This product is intended for domestic use only and is not designed for commercial use.
- DO NOT assemble / use this item if any components are missing or damaged. Please contact the retailer straight away.
- DO NOT attempt to modify your item as this will void your warranty. Please call the retailer for required parts.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.

Please refer to separate Warranty Certificate for full warranty details and information.

Tips before you start :

- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493

Assembly Tips:

1. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assembly your product safely.
2. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
3. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
4. During assembly please take care not to over-tighter, any fittings, as this may damage the product.
5. Always place the product on a flat, steady and stable surface.
6. Do not stand on the product. Do not use the product as a stepladder.
7. This product is intended for indoor, household use only as it is non industrial product.
8. Use of power tools is NOT recommended for assembling this product as over-tightening may occur and damage the product.
9. Due to the laminated finish of this item and the materials used to construct it, when first opening the carton and assembling a slight smell may be noticeable. This will dissipate over a short period of time. Please contact the retailer you purchased this item from if you have any concerns.
10. Please use caution and care when lifting the product to avoid personal injury and / or damage.

Care and Maintenance of your Furniture




- ☒ Please periodically check all fittings and re-tighten as necessary.
- ☒ To clean your item, please use a damp cloth and wipe clean. Never use harsh chemicals or strong detergents as this could damage the finish of your product.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot / cold item (e.g. hot drinks) directly on to the surface.
- ☒ Do not pull or drag your item. Ensure its evenly supported and lifted while moving it.
- ☒ Avoid placing sharp objects on the surface as this may scratch the surface. It is recommended to use trivets or coasters under flowerpots, vases cups etc to avoid damage to your item.

MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493



Tips before you start :

QUICKFIT

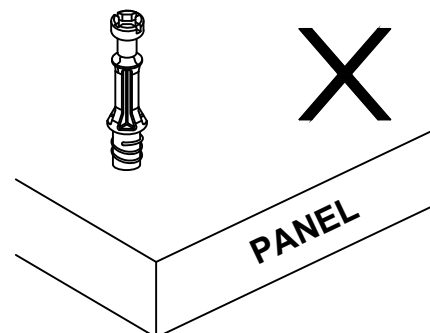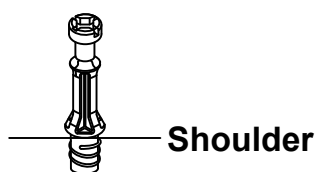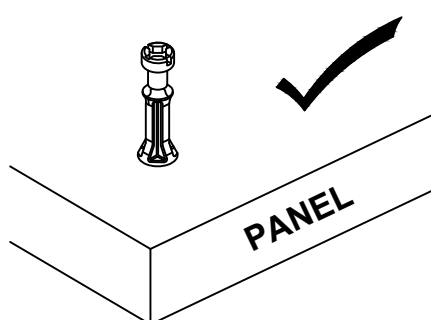

Tighten quickfit until shoulder is flush with panel . Do not overtighten or undertighten.


CAM LOCK

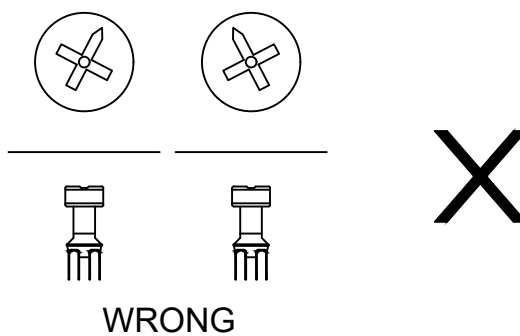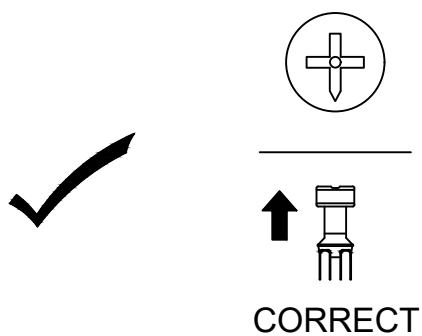

When fitting cam lock , ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the center of the cam lock when the two panels are joined .

Cam lock should be inserted before quickfit

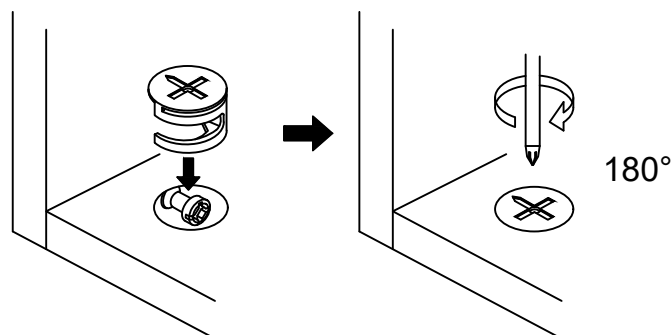


Turn cam lock clockwise to tighten.

MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493

PART LIST:

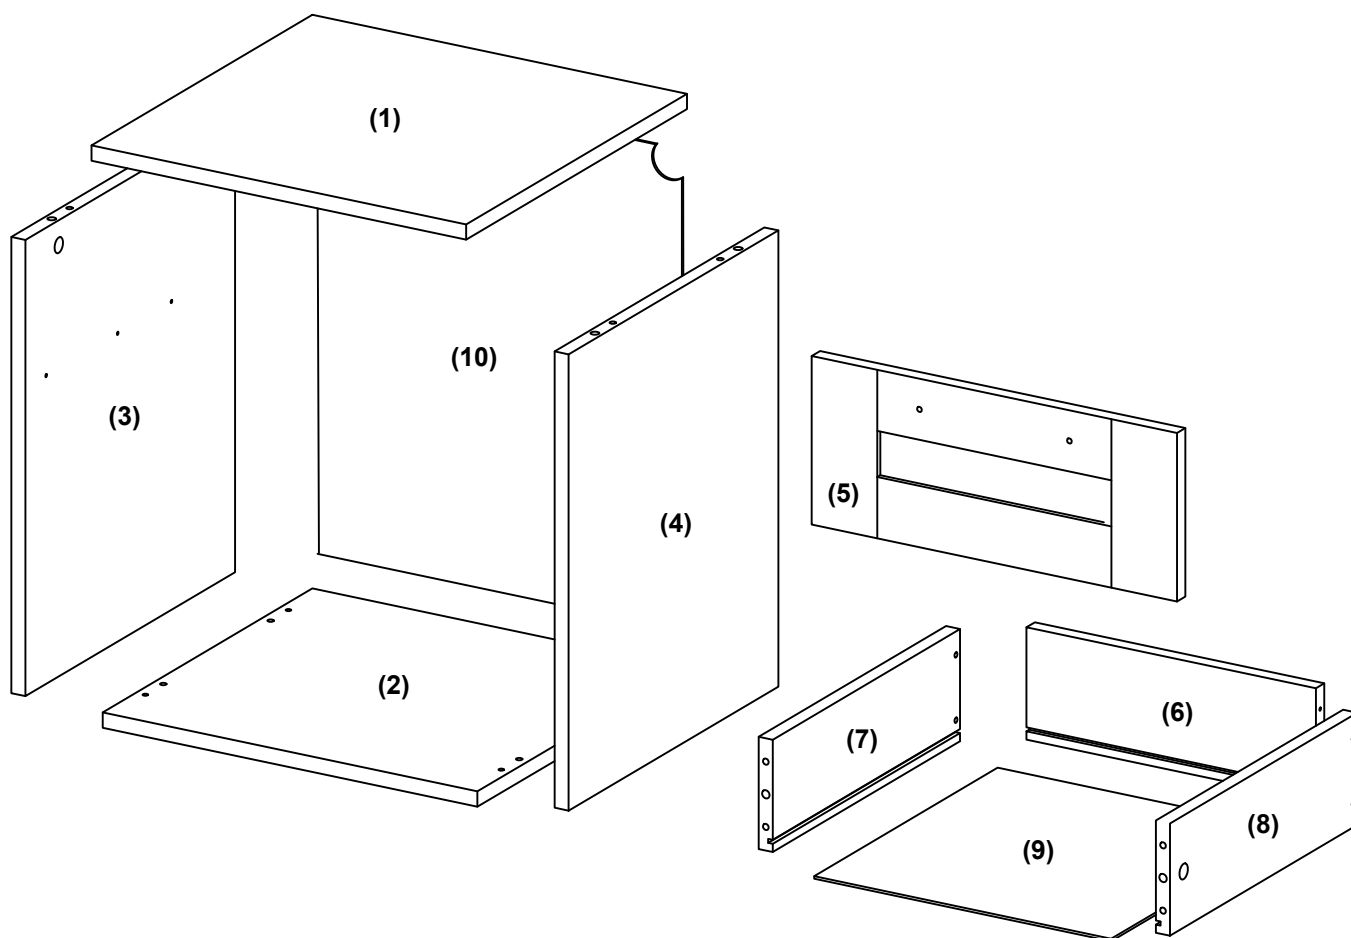

NO.	PART NAME	QTY
1	TOP PANEL	1
2	BOTTOM PANEL	1
3	SIDE PANEL (LEFT)	1
4	SIDE PANEL (RIGHT)	1
5	DRAWER (TOP)	1


NO.	PART NAME	QTY
6	DRAWER BACK PANEL	1
7	DRAWER SIDE PANEL (LEFT)	1
8	DRAWER SIDE PANEL (RIGHT)	1
9	DRAWER BOTTOM PANEL	1
10	BACK PANEL	1

MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493

HARDAWRE LIST

A x6




CAM BOLT

B x6




CAM NUT

C x12




DOWEL Ø6 x 25mm

D x4



C/B SCREW M4 x 45mm

E x4




PVC SQ.LEG

F x16




C/B SCREW M3.5 x 16mm

G1 x1 PAIR




G2 x1 PAIR




14" DRAWER SLIDE

H x14




C/B SCREW M3.5 x 12mm

I x1




PVC HANDLE

J x2




C/B SCREW M4 x 30mm

K x4



C/B SCREW M4 x 38mm

L x12



NAIL

M x2



L-BRACKET

Tips before you start :


- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.

MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493


STEP 1

Insert the Dowel (C) into the designated hole as shown.

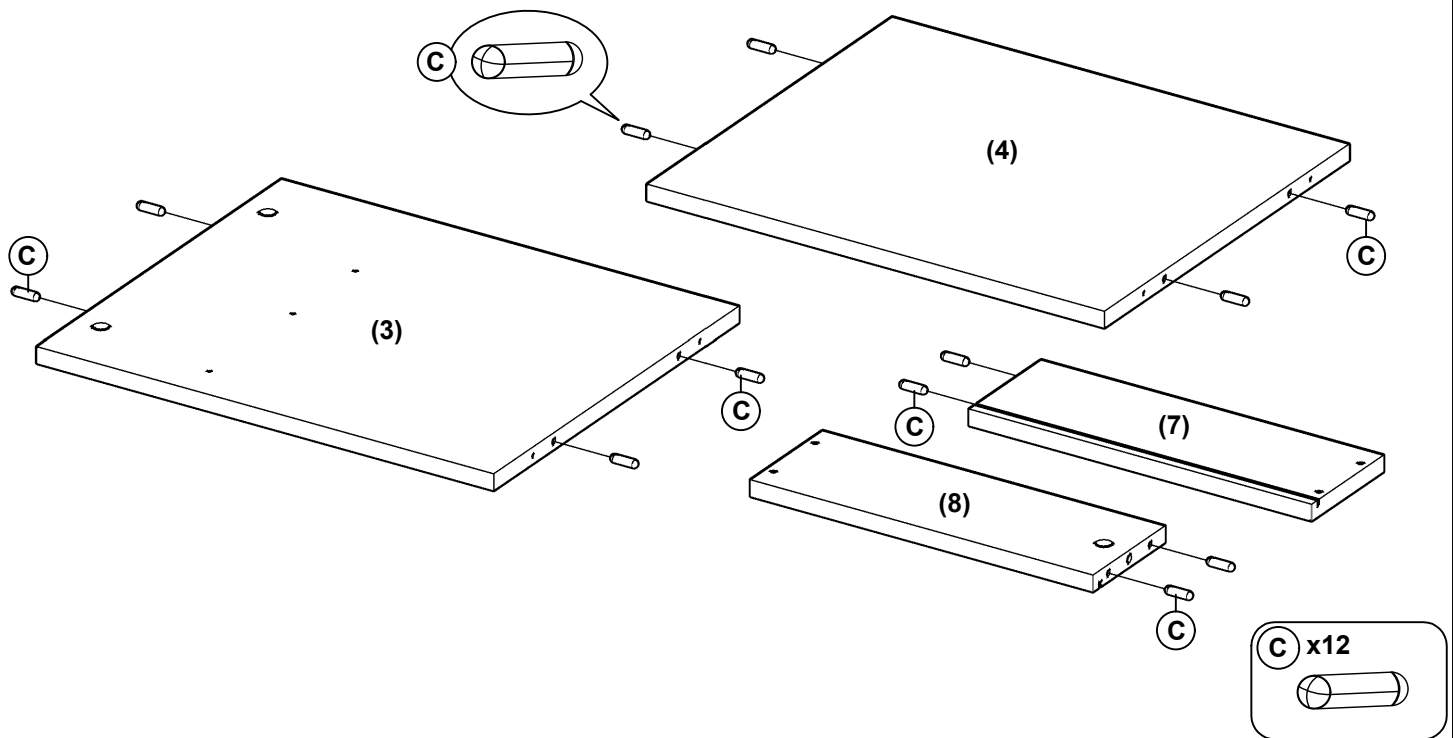

STEP 2

Insert the Cam bolt (A) into the designated hole as shown.

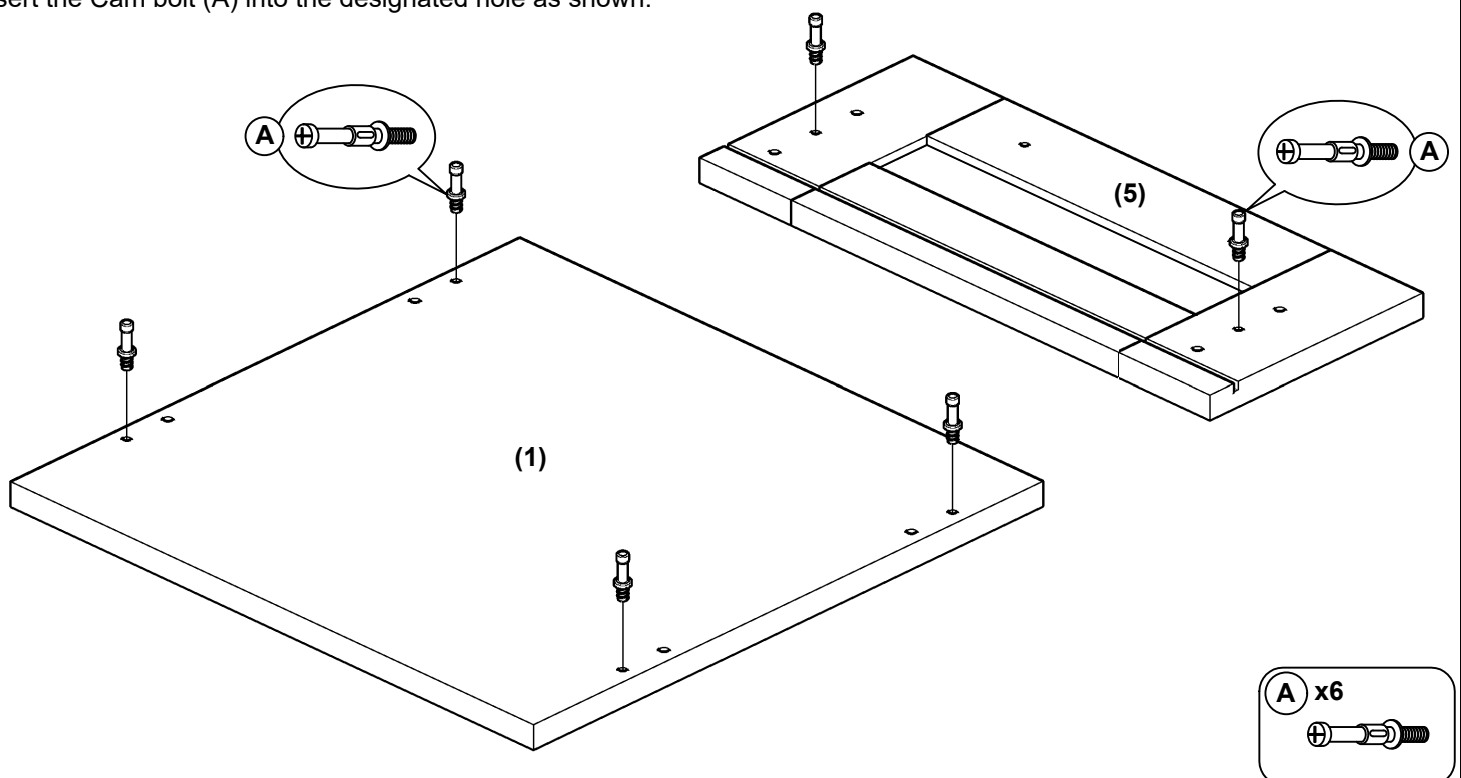


MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493


STEP 3

As shown in the picture, remove the (E) leg cover to expose the screw hole, align it with the No. 2 panel hole and fix it with the screw (F), and then reinstall the removed leg cover.

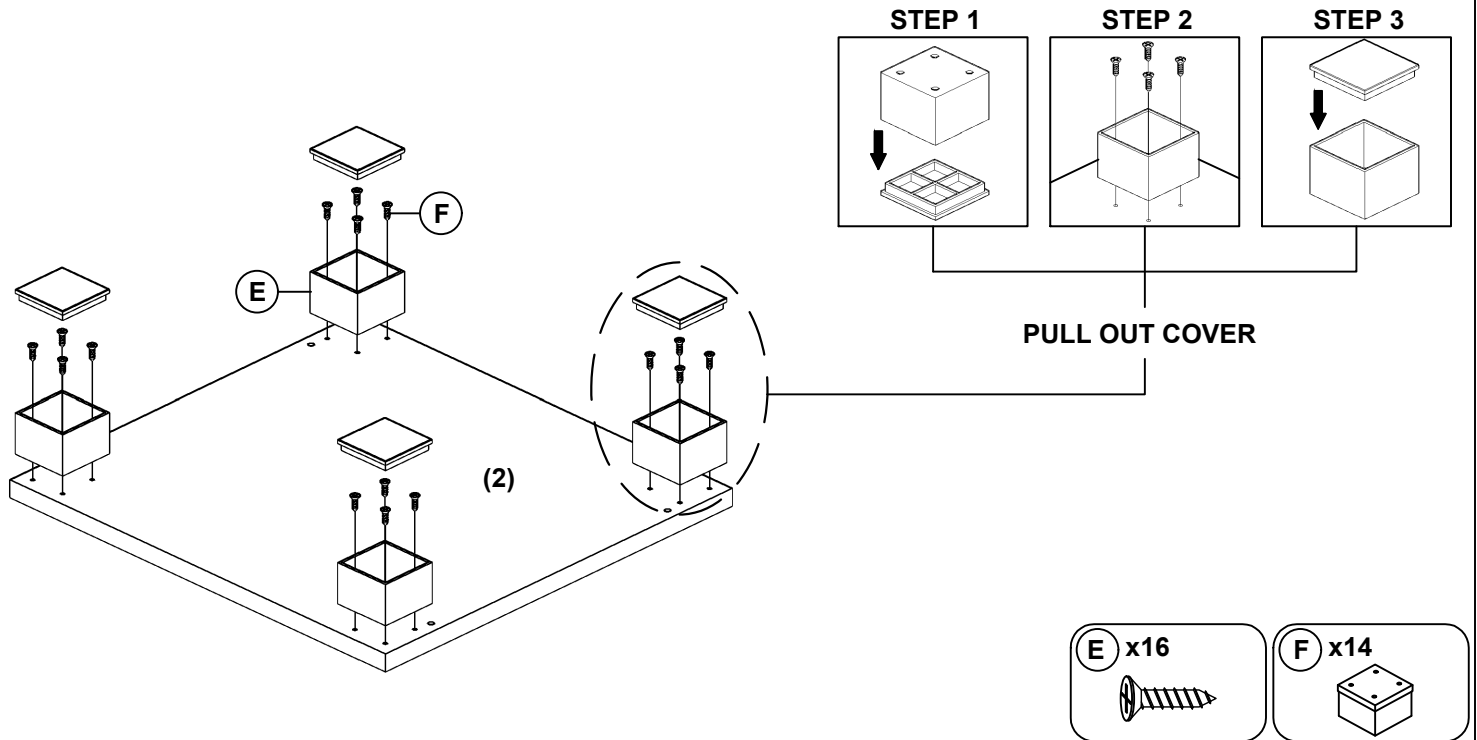

STEP 4

Make sure the holes in the drawer slides (G1) line up with the holes shown in the picture and are positioned correctly, then tighten the screws (A).

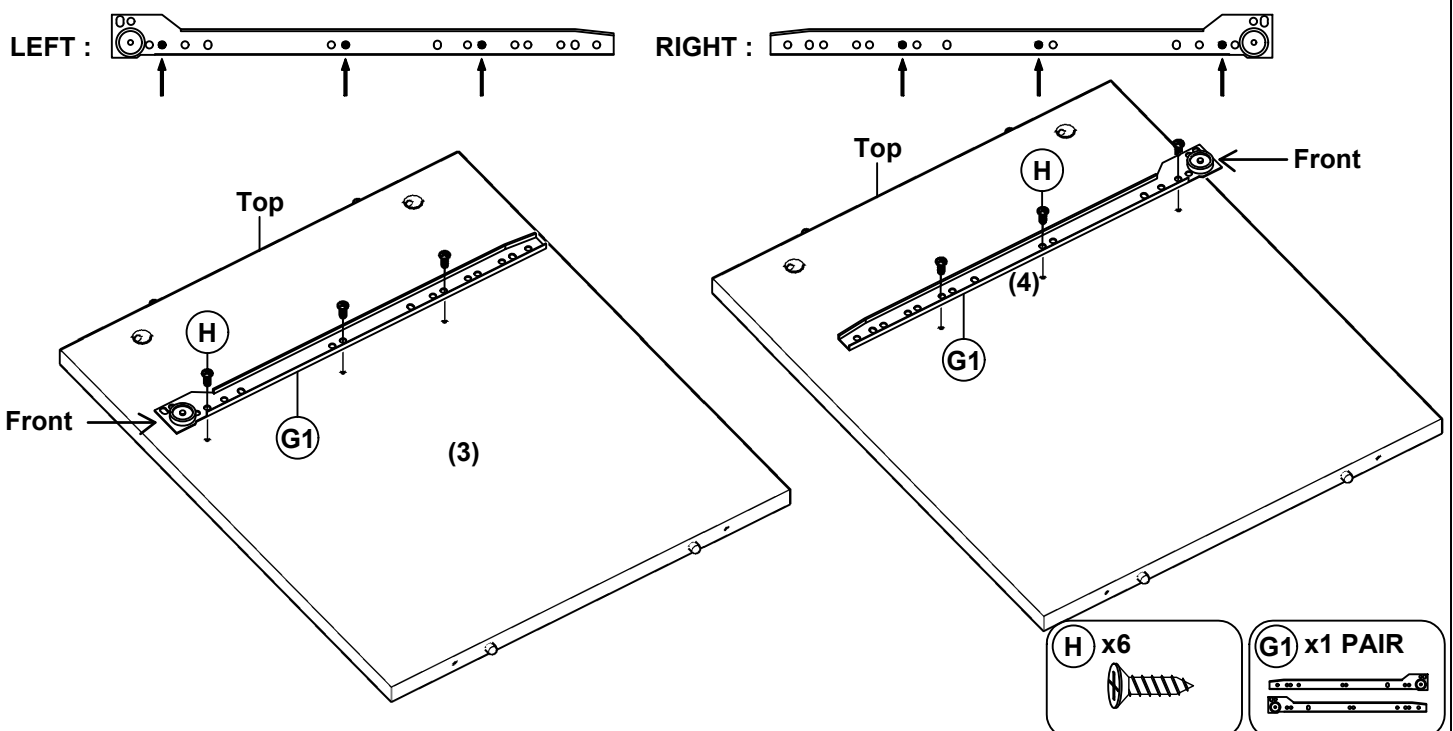


MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493


STEP 5

As shown in the picture, align panels 7 and 8 with the positioning holes on panel (5), insert and fix, then put the cam nut (B) into the designated hole and tighten 180°.

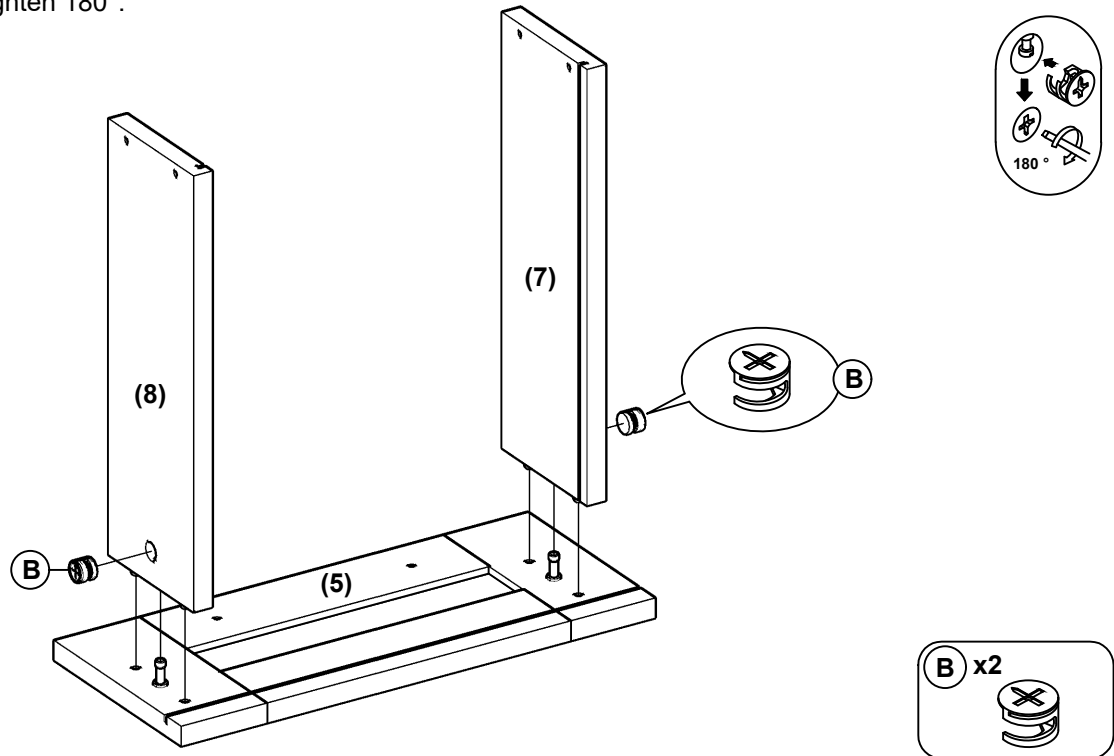

STEP 6

Align panel No.9 with the slot and insert.


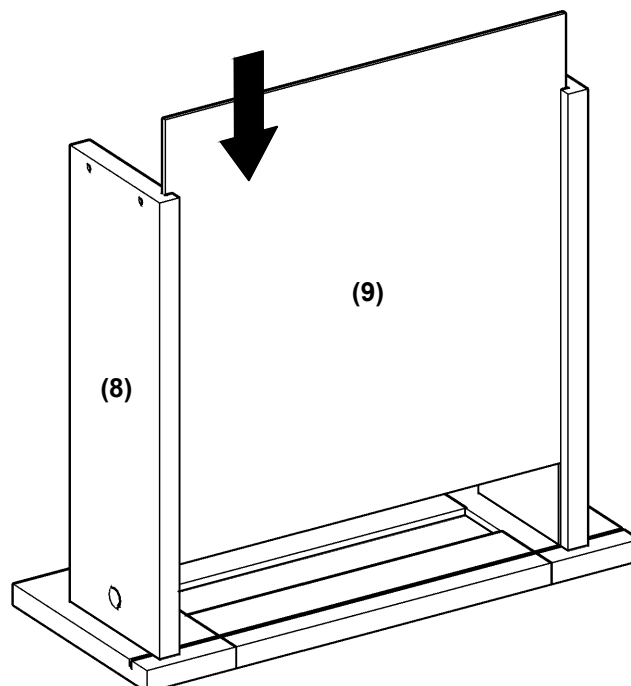


MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493




STEP 7

As shown in Figure 6, 7, 8 fix and tighten the panel with screws (K).

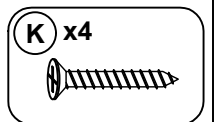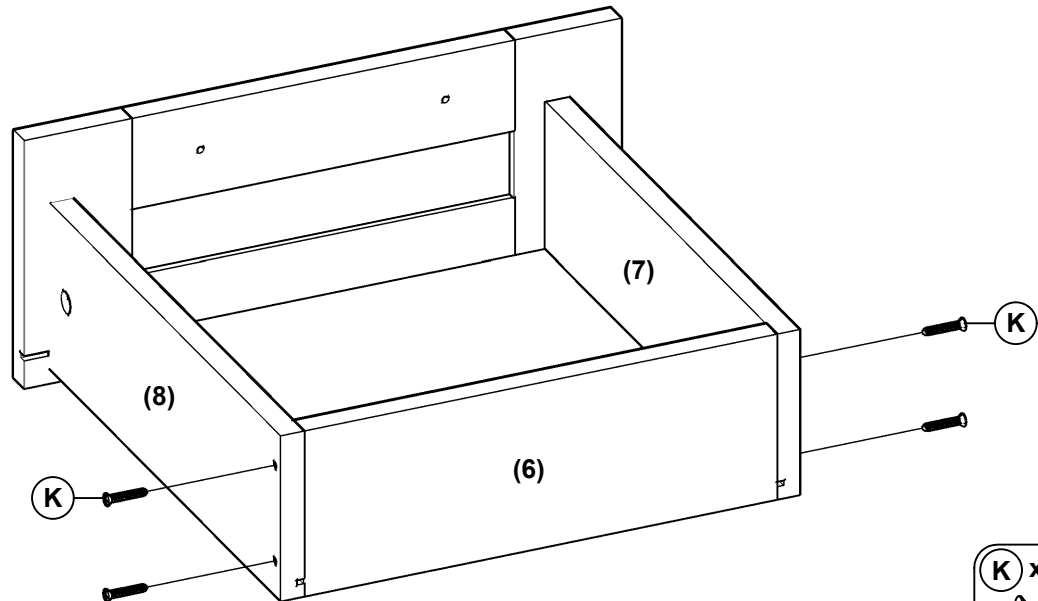

STEP 8

Secure handle (I) to panel 5 using screws (J).

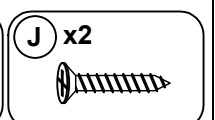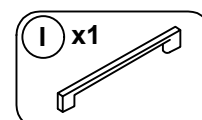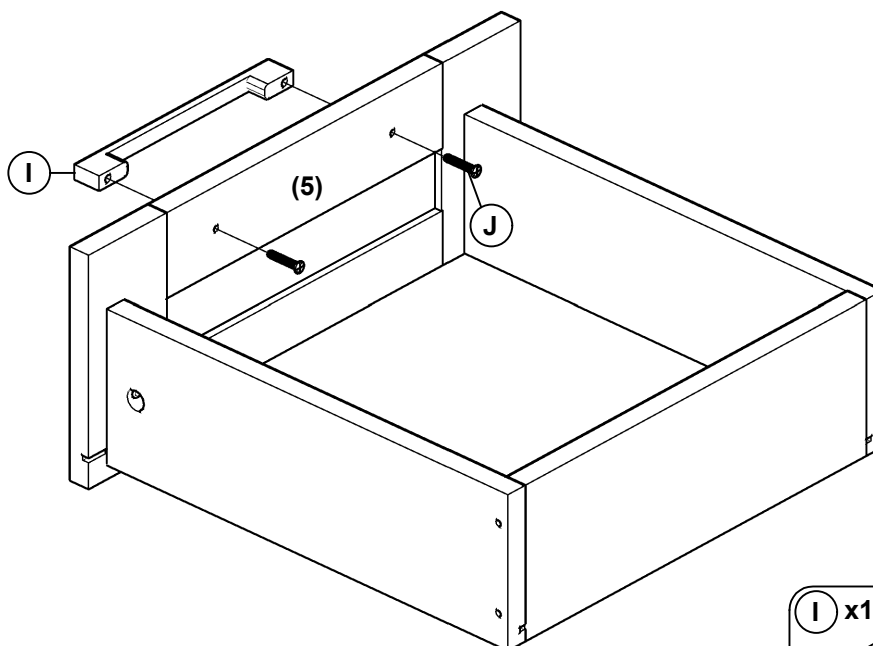


MONTREAL TABLE BEDSIDE 1 DRAWER


ITEM CODE : 61493

STEP 9


Secure the drawer slides (G2) to the bottom of panels 7, 8 with screws (H) as shown.

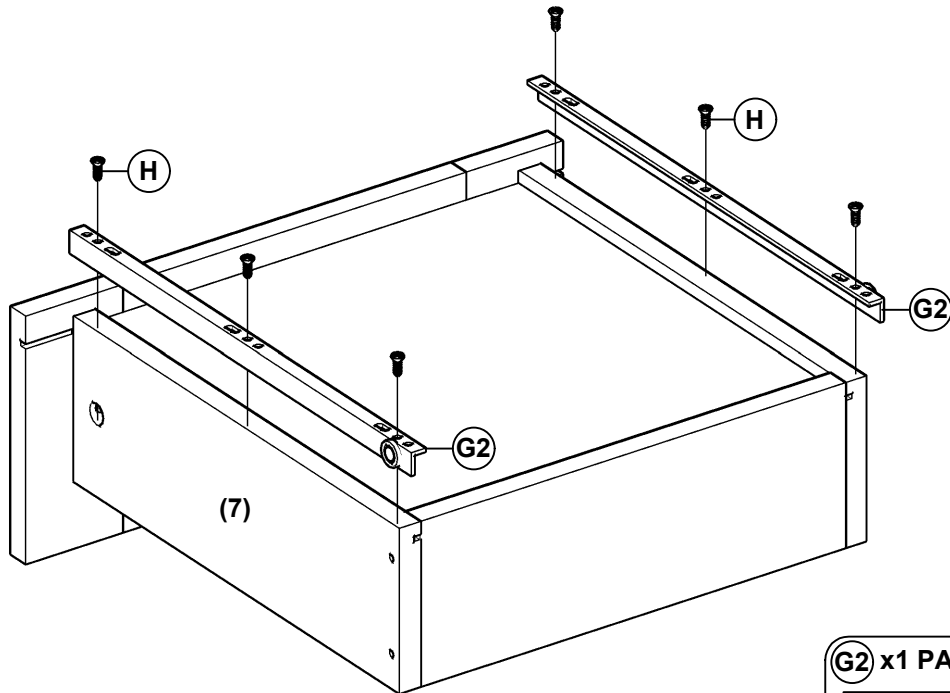

G2 x1 PAIR




H x6



STEP 10

As shown in the picture, align the hardware at the bottom of No. 3&4 board with the positioning holes on the top of No. 2 boards to install, and then fix it with screws (D).

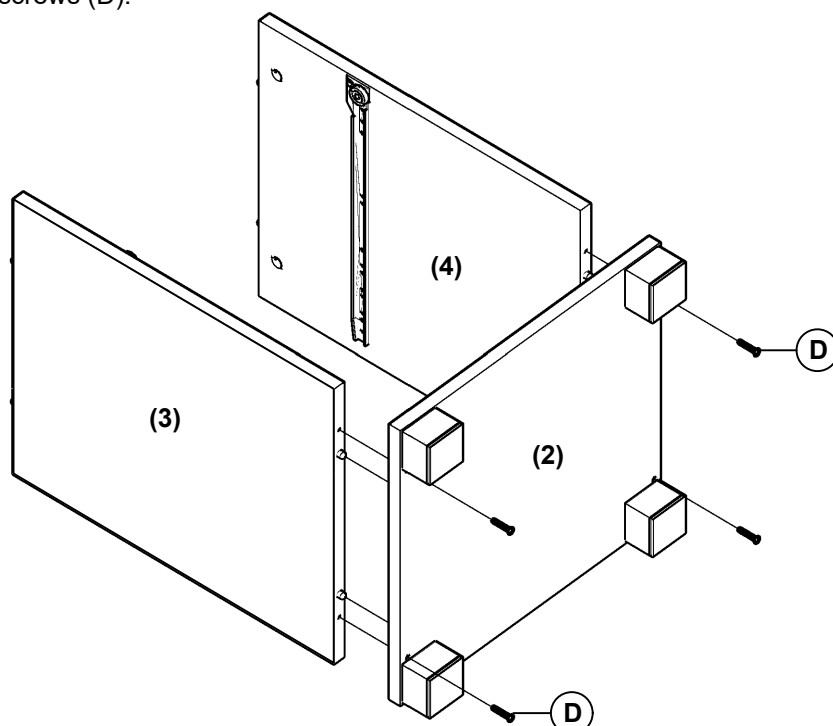

D x4






MONTREAL TABLE BEDSIDE 1 DRAWER

ITEM CODE : 61493


STEP 11

Assemble by aligning the bottom hardware of panel 1 with the designated holes in the top of panels 3 and 4 as shown. Place cam nut (B) into designated hole and tighten 180°.

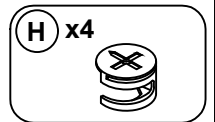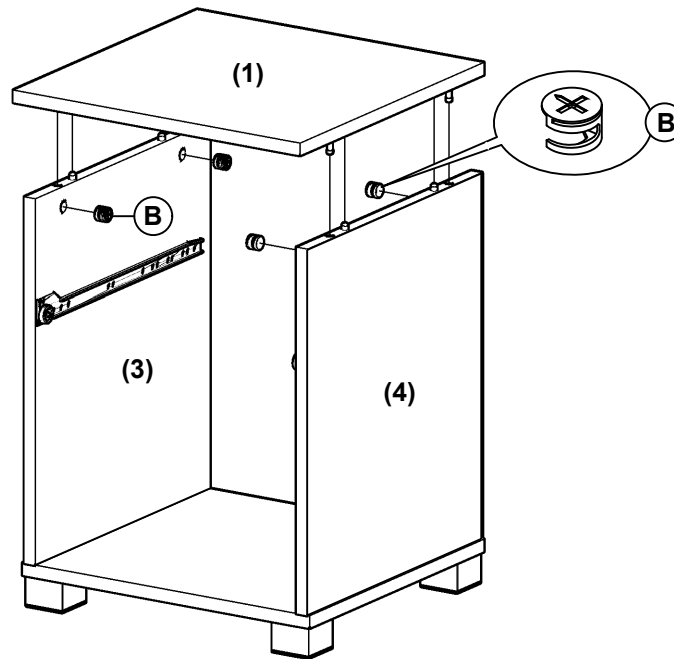


STEP 12

(L) Nail the No. 10 backing board to the back of the cabinet as shown.

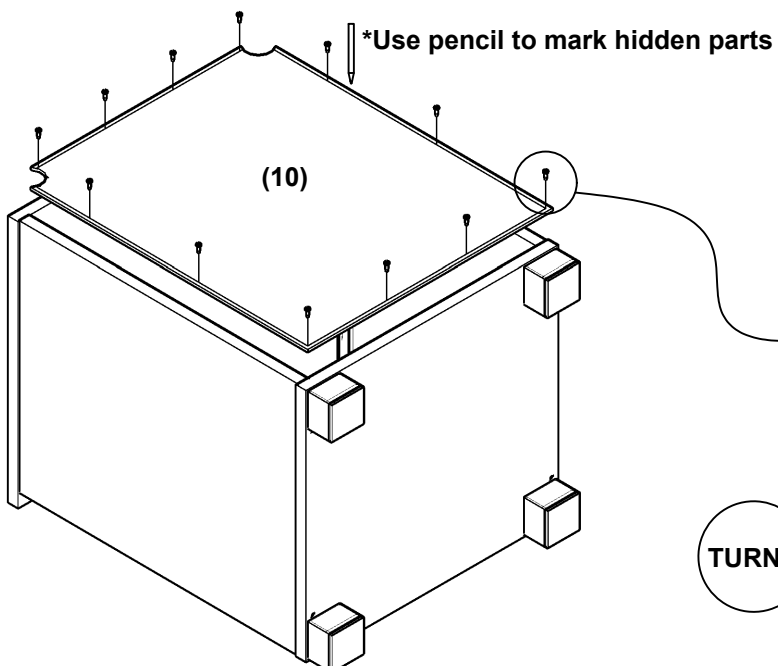

TURN BACK

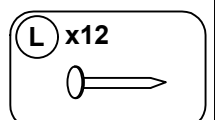

MONTREAL TABLE BEDSIDE 1 DRAWER


ITEM CODE : 61493

STEP 13

Bracket Fixing



The horizontal arms of the brackets are to be secured to the underside of shelf so that it is out of sight when the cabinet is installed into position.

- After assembling the unit place it against the wall where it will be permanently positioned.
- Working from inside the cabinet place the bracket through the pre-cut hole in the rear wall of the cabinet as shown in diagram.
- Use a pencil to mark through the screw hole in the bracket, where the bracket has to be attached to the wall.
- Move the cabinet away from the wall and secure the bracket to the wall at the marked position using a wall anchor suited to your wall surface.
- With the wall brackets in position, move the cabinet back to the wall allowing the horizontal arm of the bracket to enter into the cabinet through the pre-cut holes in the back wall of the cabinet.
- Then using the screw supplied, secure the horizontal arm of the brackets to the underside of the shelf.

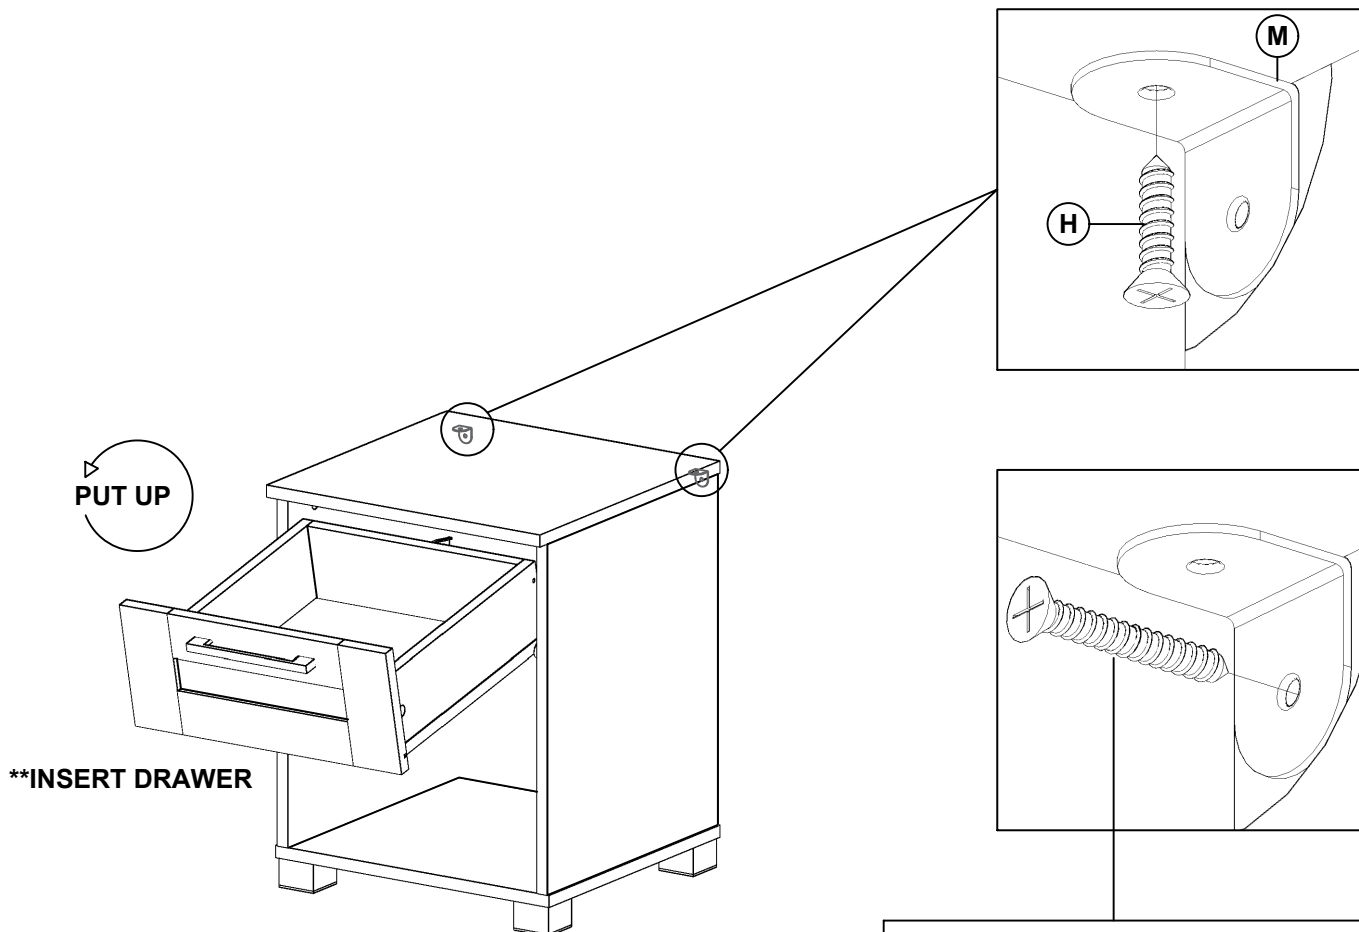

****INSERT DRAWER**

Screw used to attach to wall anchor is not provided. Purchase wall anchor and screw suited to the type of wall surface that the bracket is to be secured to.

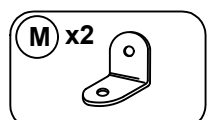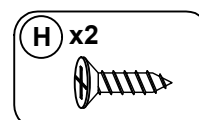

Wall Mounting & Fixing Guide

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.




Tips & Tricks

Make sure that the hardware used is suitable for supporting your unit.
Please consult a qualified tradesperson if unsure.

- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- ☑ Take extra care when drilling high walls, ceiling and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid splitting or cracking.
- ☑ Ensure that wall plugs are well fitted and are a tight fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

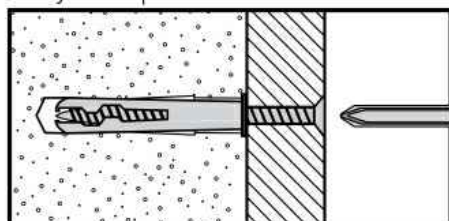


1. General Purpose Wall Plug

Generally, aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

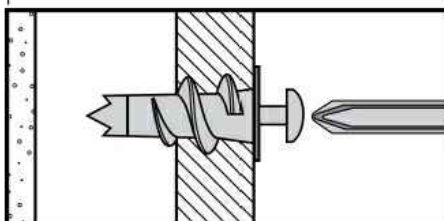


2. Plasterboard Wall Plug

For use when attaching light loads onto plasterboard partitions.

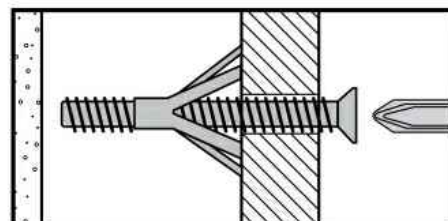


3. Cavity Fixing Wall Plug

For use with plasterboard partitions or hollow wooden doors.

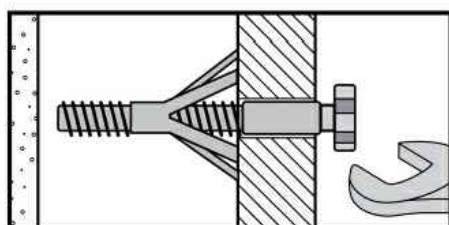


4. Cavity Fixing Heavy Duty Wall Plug

For use when fitting or supporting heavy loads such as shelving and wall cabinets.

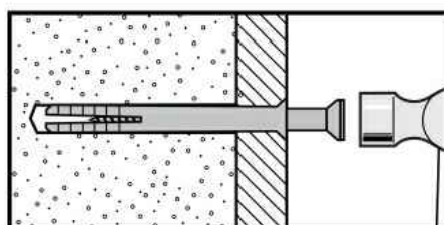

5. Hammer Fixing Wall Plug

For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to

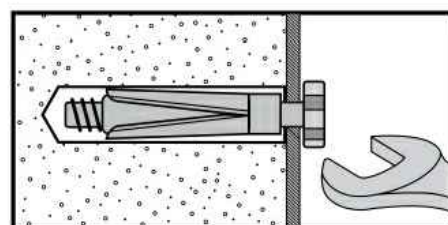

6. Shield Anchor Wall Plug Heavy Loads

For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.



Warranty Certificate

Congratulations! You have made an excellent choice of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience defects due to manufacturing faults, **Meubilair Direct Imports** will provide you with a warranty against defects as follows:

Warranty

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

Normal Wear and Tear

This warranty does not cover normal wear and tear to the products or parts.

Exclusions

This warranty does not cover:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturers' operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- Any damage caused by improper power input or improper cable connection.

MEUBILAIR DIRECT IMPORTS PTY LTD

Customer Service

Email: cs@meubilair.com.au

Address: Unit 4, 16 Hickeys Road, Penrith, NSW, 2750

Opening hours: 9am to 4pm (Monday – Friday)

Contact Number: (02) 4701 5363

When making a return, please ensure the product is properly packaged, so as to ensure that no damage occurs to the product during transit. Please provide the original or a copy of the proof of purchase. Also please make sure you have included an explanation of the problem. Please note that the costs of making a warranty claim, including any return postage, will be covered by the supplier identified above. Please note upon receiving your warranty claim, the supplier will send, via the post or email, a repair and refurbished goods or parts notice. Please provide your email address and advise the supplier, if you wish to obtain a repair and refurbished goods or parts notice via email.

AFTER SALES SUPPORT

EMAIL : cs@meubilair.com.au

Product code: 61493





Warranty Certificate

PRODUCT NAME: Montreal Table Bedside 1 Drawer Sonoma Oak

BRAND NAME:

PRODUCT CODE: 61493

NAME

ADDRESS

EMAIL

DAYTIME TEL NO

DATE OF PURCHASE

SERIAL NUMBER

We recommend that you attach a photocopy of your receipt, showing the date of purchase, to this Warranty certificate and **keep for your reference.**

In the event of a product fault, please email the Customer Service team. Please ensure that you include the product details (as shown on the card) at hand so that we are able to respond as quickly and efficiently as possible.

MEUBILAIR DIRECT IMPORTS PTY LTD

Customer Service

Email: cs@meubilair.com.au

Address: Unit 4, 16 Hickeys Road, Penrith, NSW, 2750

Opening hours: 9am to 4pm (Monday – Friday)

Contact Number: (02) 4701 5363

AFTER SALES SUPPORT

EMAIL : cs@meubilair.com.au

Product code: 61493

