

# Austin Side Table

1hr

APPROXIMATE ASSEMBLY TIME


1 PERSON ASSEMBLY



FLOOR AREA  
1M x 1M



REQUIRED ASSEMBLY SPACE

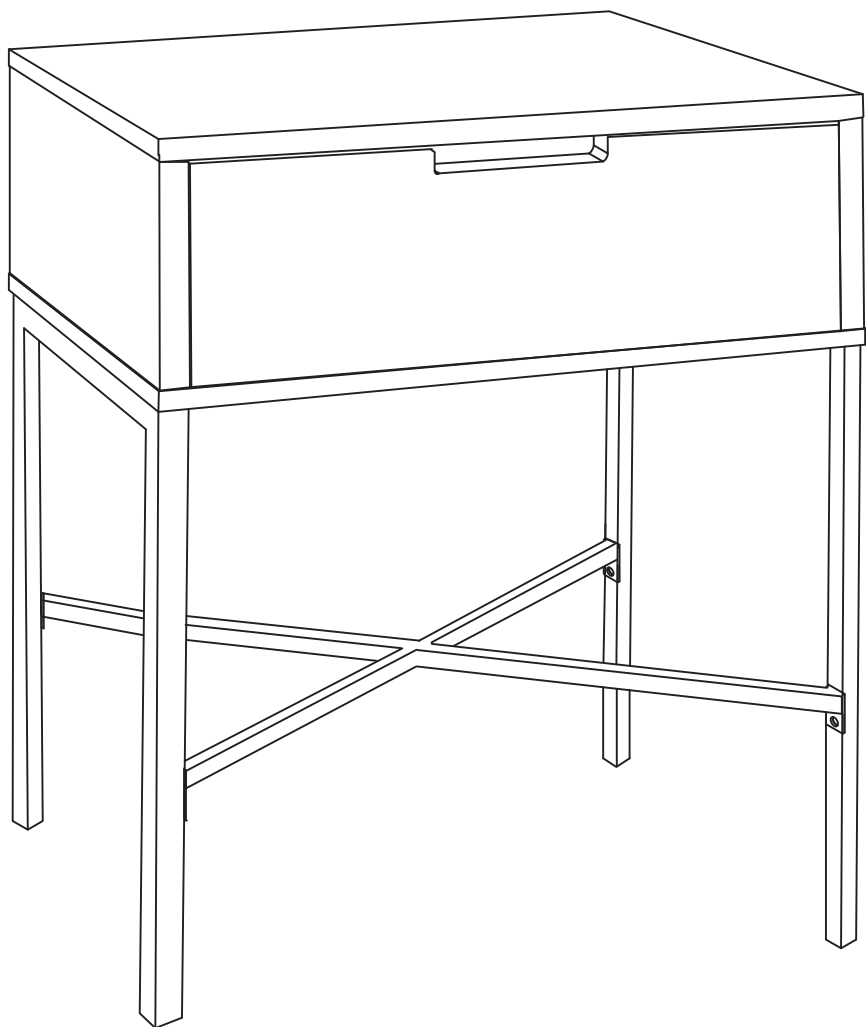

# Austin Side Table

## Tips before you start:

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.


## Care and Maintenance of your Furniture

- ☒ Please periodically check all fittings and re-tighten as necessary.
- ☒ To clean your item, please use a damp cloth and wipe clean.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☒ Please do not drag and pull your furniture.

# Austin Side Table


**Tips before you start:**

## QUICKFIT

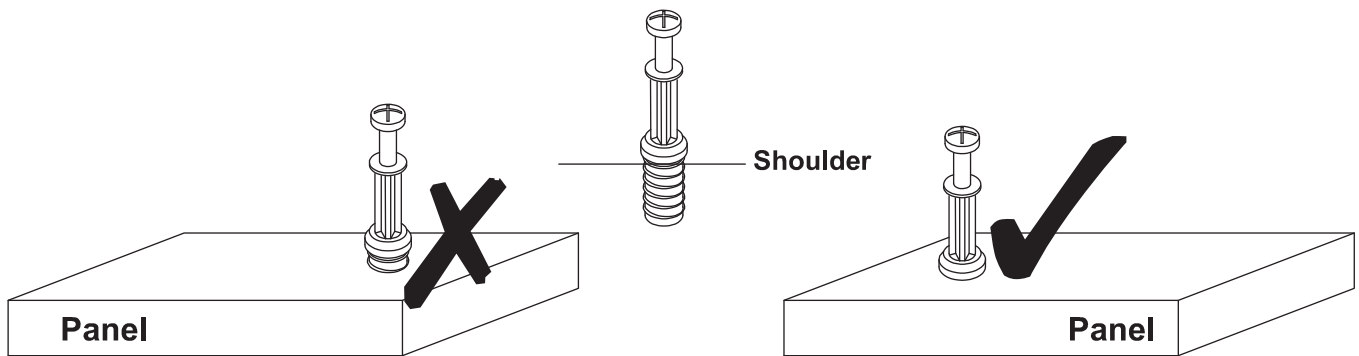

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

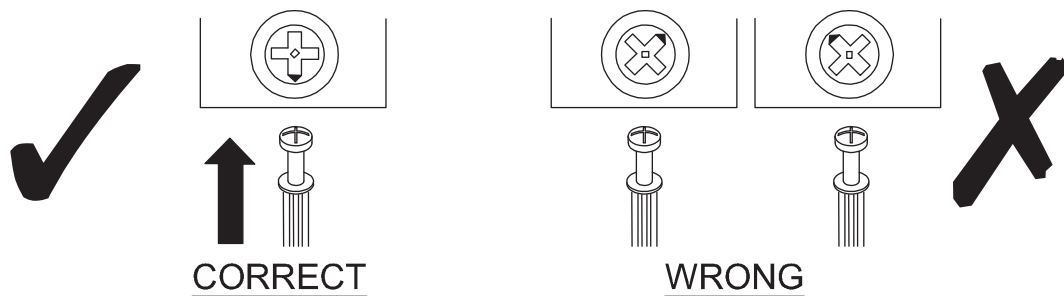

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.



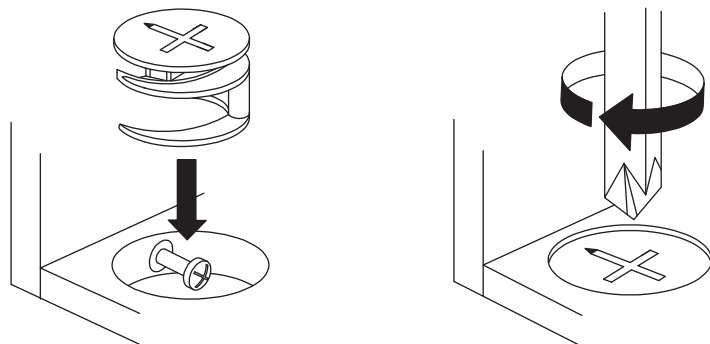










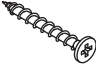

**Cam lock should be inserted before quickfit.**















Turn cam lock clockwise to tighten.

# Austin Side Table

## HARDWARE LIST

							
8 x A Quickfit Screw	8 x B Cam Lock	4 x C Screw 4 x 30mm	8 x D Wooden Dowel	1 x E Outer Drawer Runner	1 x F Outer Drawer Runner	1 x G Inner Drawer Runner	1 x H Inner Drawer Runner
							
4 x I Screw 5 x 45mm	12 x J Screw 3.5 x 12mm	4 x K Bolt 6 x 10mm	1 x L Allen Key	6 x M Screw 4 x 25mm	4 x N Screw 3 x 14mm	4 x O Wedge	

## PARTS LIST

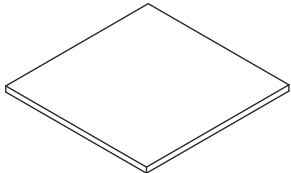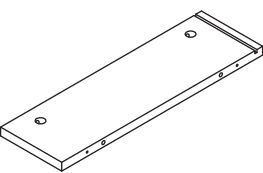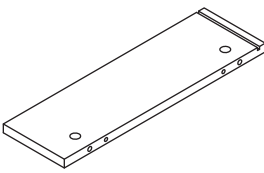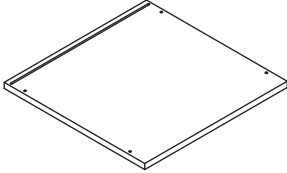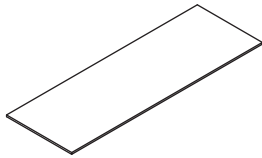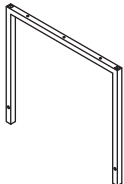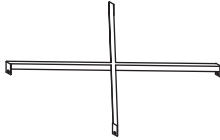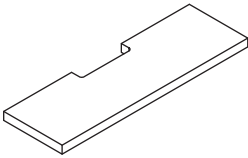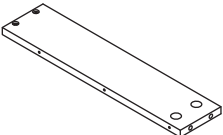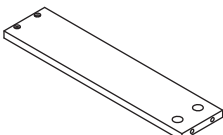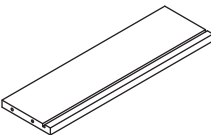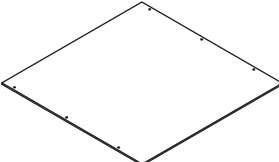
			
1   1 PC	2   1 PC	3   1 PC	4   1 PC
			
5   1 PC	6   2 PCS	7   1 PC	8   1 PC
			
9   1 PC	10   1 PC	11   1 PC	12   1 PC

# Austin Side Table

## STEP 1


### 1.1

Fix parts 9 and 10 to part 11 using screws (C).

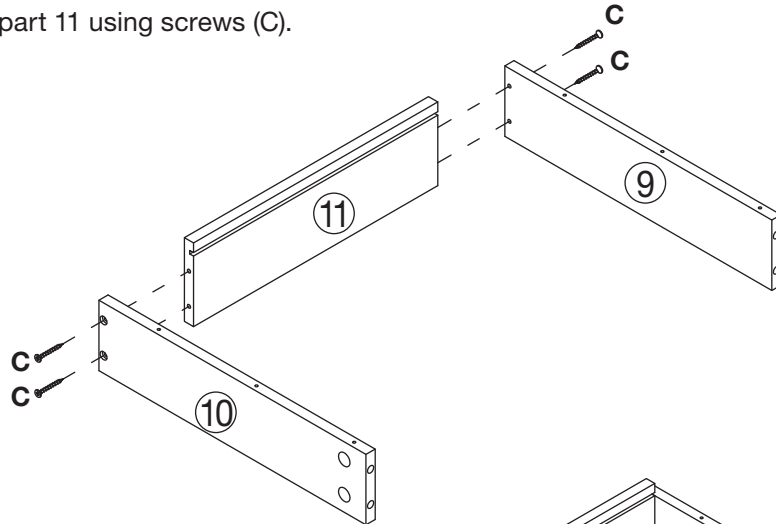



### 1.2

Slide part 12 on top of parts 9, 10 and into grooves of part 11.

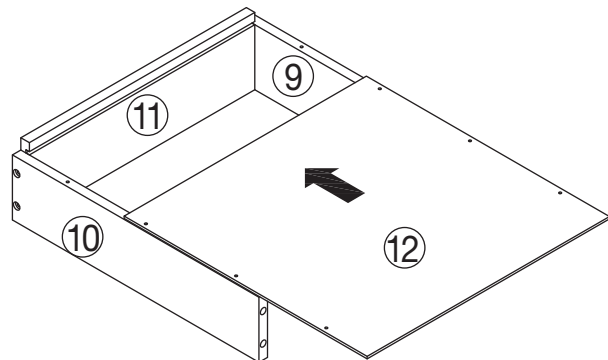


### 1.3

Insert quickfit screws (A) to part 8.

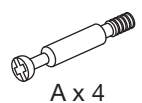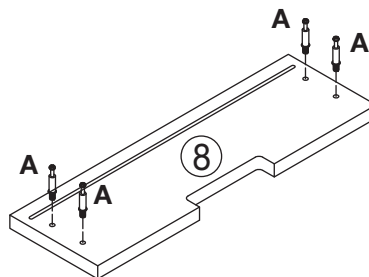

### 1.4

Insert cam locks (B) to parts 9 and 10. Fit part 8 to assembled drawer, as shown. Turn cam lock clockwise to tighten.


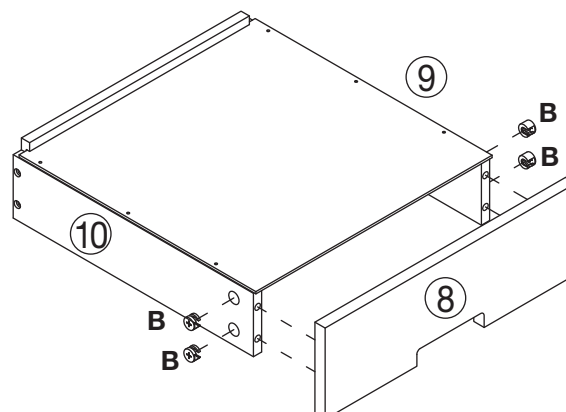


# Austin Side Table


## STEP 1

1.5


Fix inner drawer runners (J) and (K) to underside of drawer using screws (I).

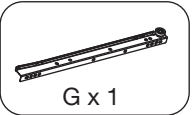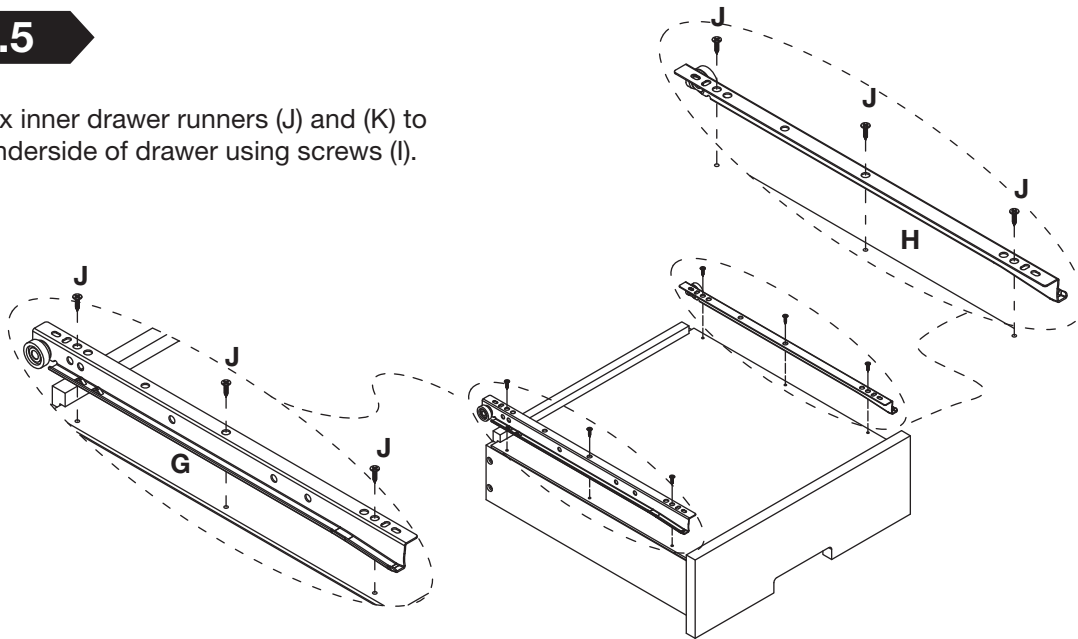

G x 1

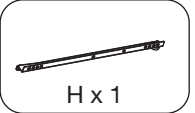



H x 1

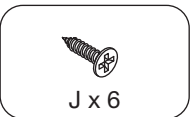


J x 6

## STEP 2


Insert quickfit screws (A) to part 1.  
Fix outer drawer runner (E) and (F) to parts 2 and 3 using screws J.

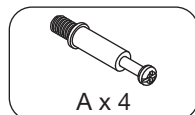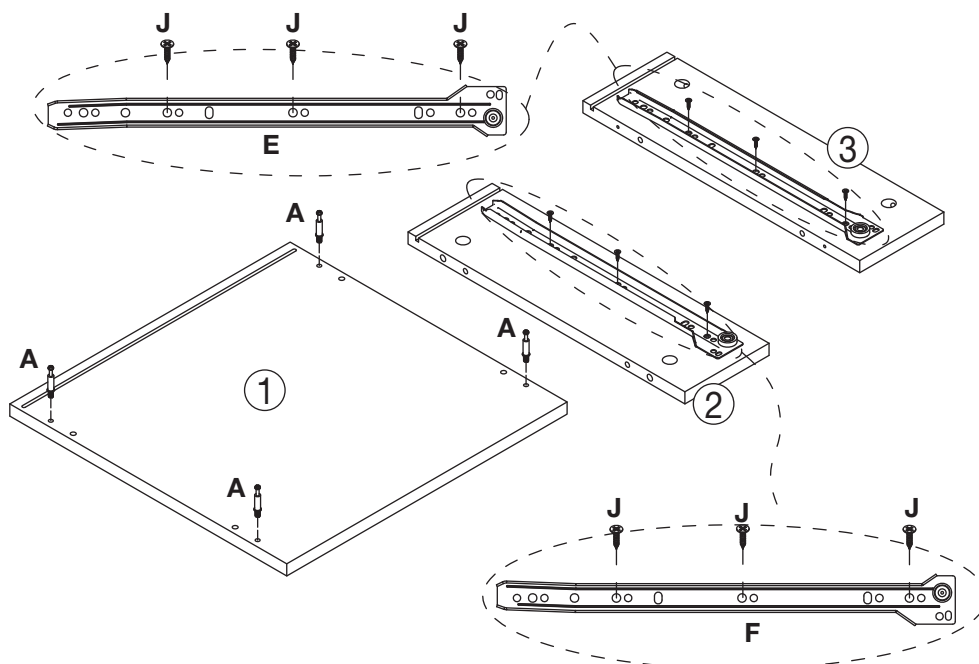


A x 4

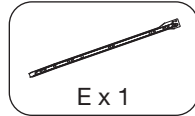

E x 1

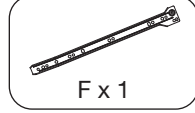

F x 1

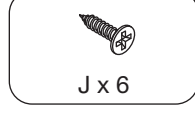


J x 6

# Austin Side Table


## STEP 3

Insert cam locks (B) to parts 2 and 3.  
Insert wooden dowels (D) into parts 2 and 3.  
Fit parts 2 and 3 into bottom panel 1.  
Turn cam locks clockwise to tighten.

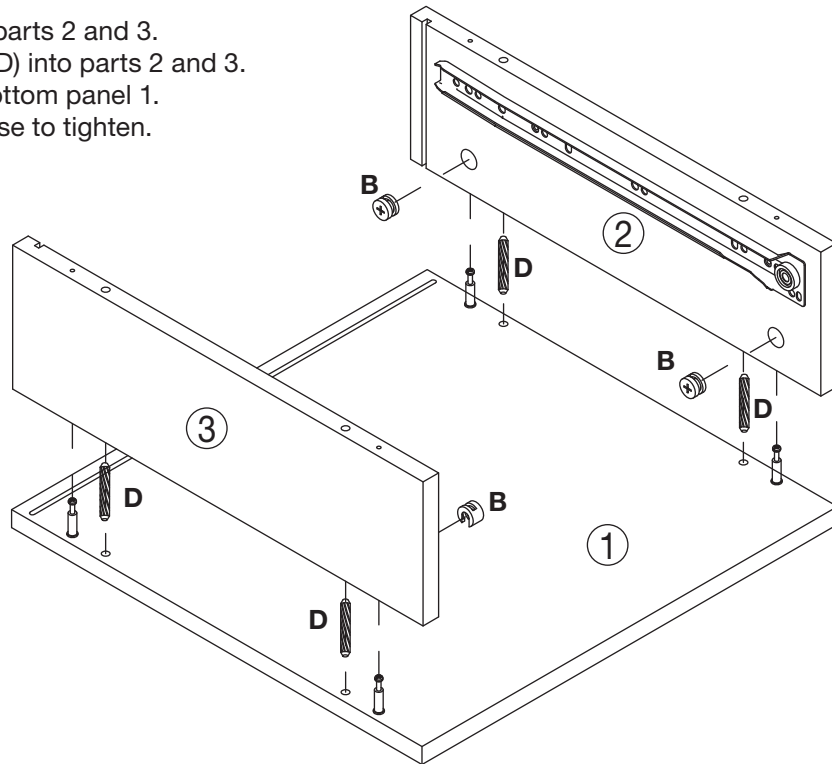

## STEP 4


Slide part 5 in between grooves of parts 2 and 3.

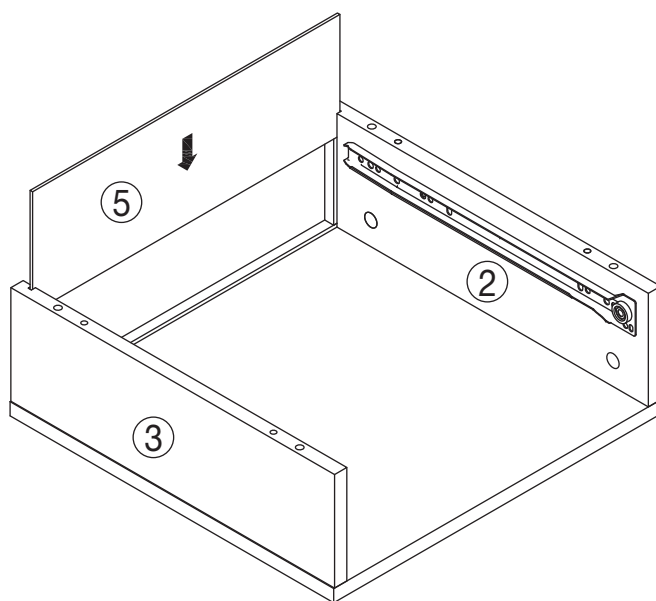

# Austin Side Table

## STEP 5

Insert wooden dowels (D) into parts 2 and 3.  
Fit top panel 4 into parts 2 and 3 and secure  
using screws (I).

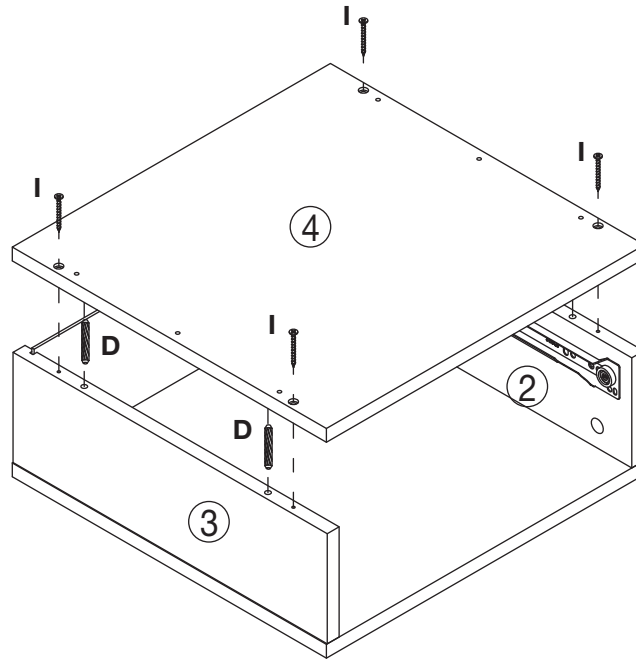


D x 4



I x 4

## STEP 6

Fix legs 6 to leg frame 7 together using bolts (K) and allen key (L).

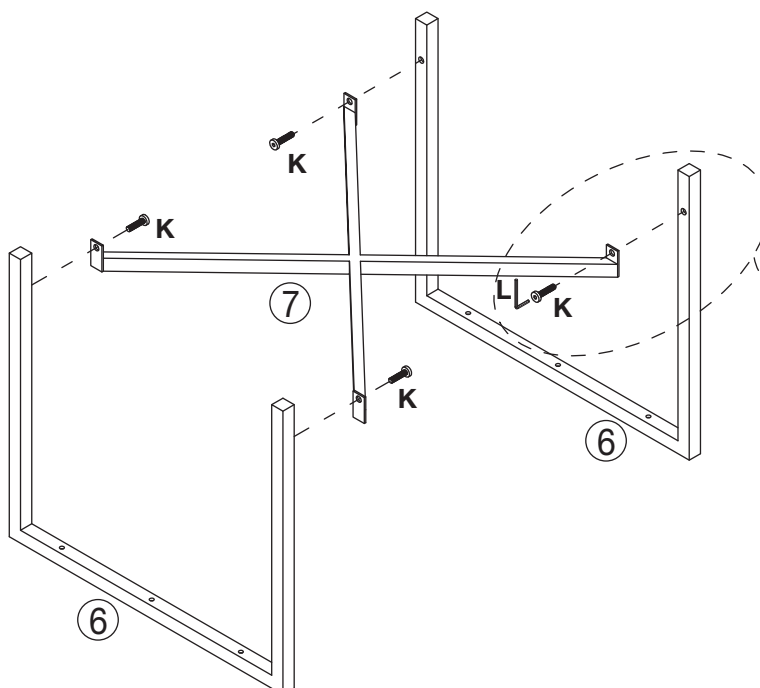

K x 4




L x 1



# Austin Side Table

## STEP 7


Fix assembled legs to underside of assembled unit using screws (M).

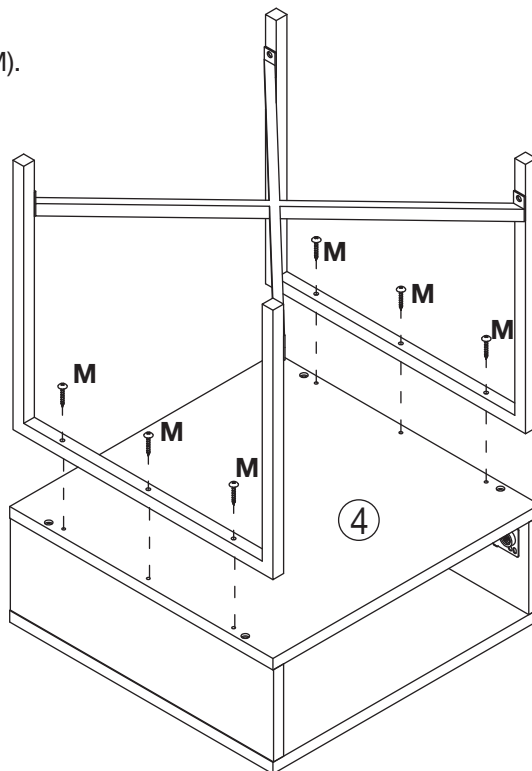

M x 6

## STEP 8


Secure wedges (O) to rear of assembled unit using screws N.

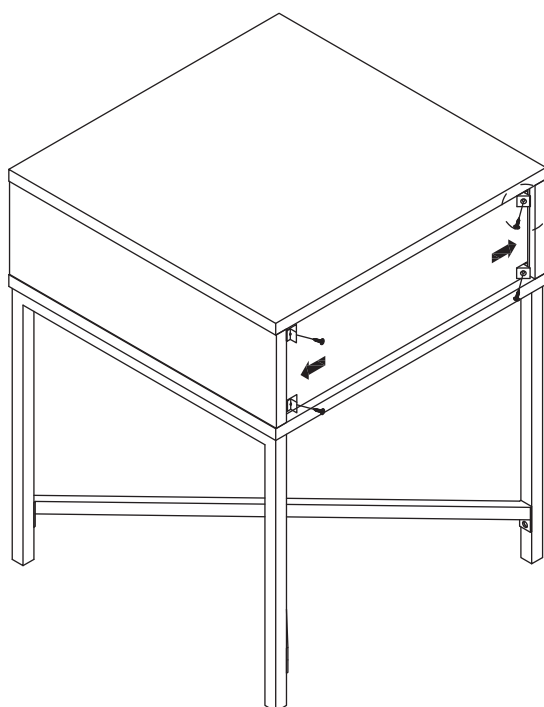

N x 4




O x 4

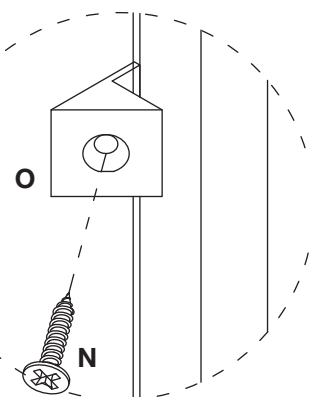

# Austin Side Table


## STEP 9

Insert assembled drawer (step 1)  
into assembled unit.

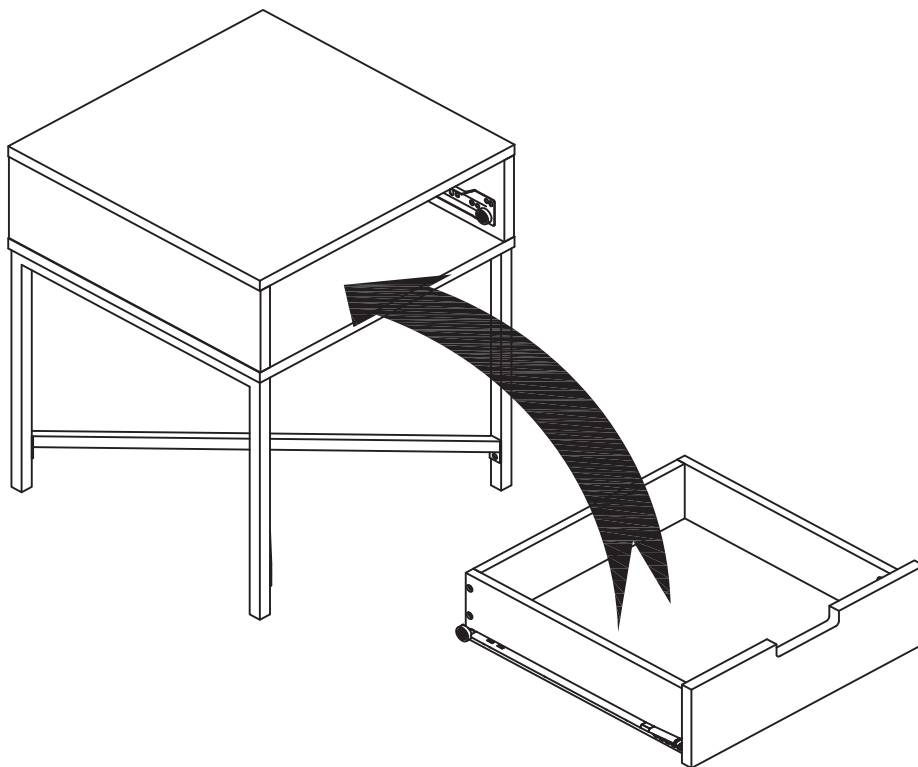

## STEP 10

Your bedside table is ready for use.

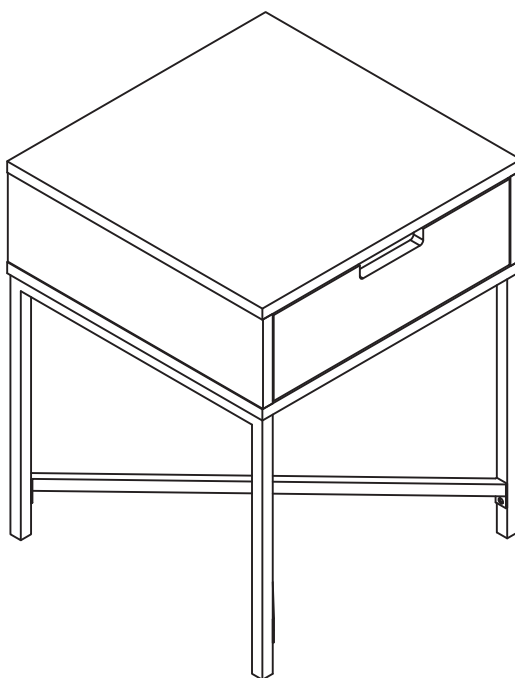

Maximum recommended weight is 10kg on top and 5kg for the drawer.