


# SHOE STORAGE BENCH 2 DOORS

## ASSEMBLY INSTRUCTIONS

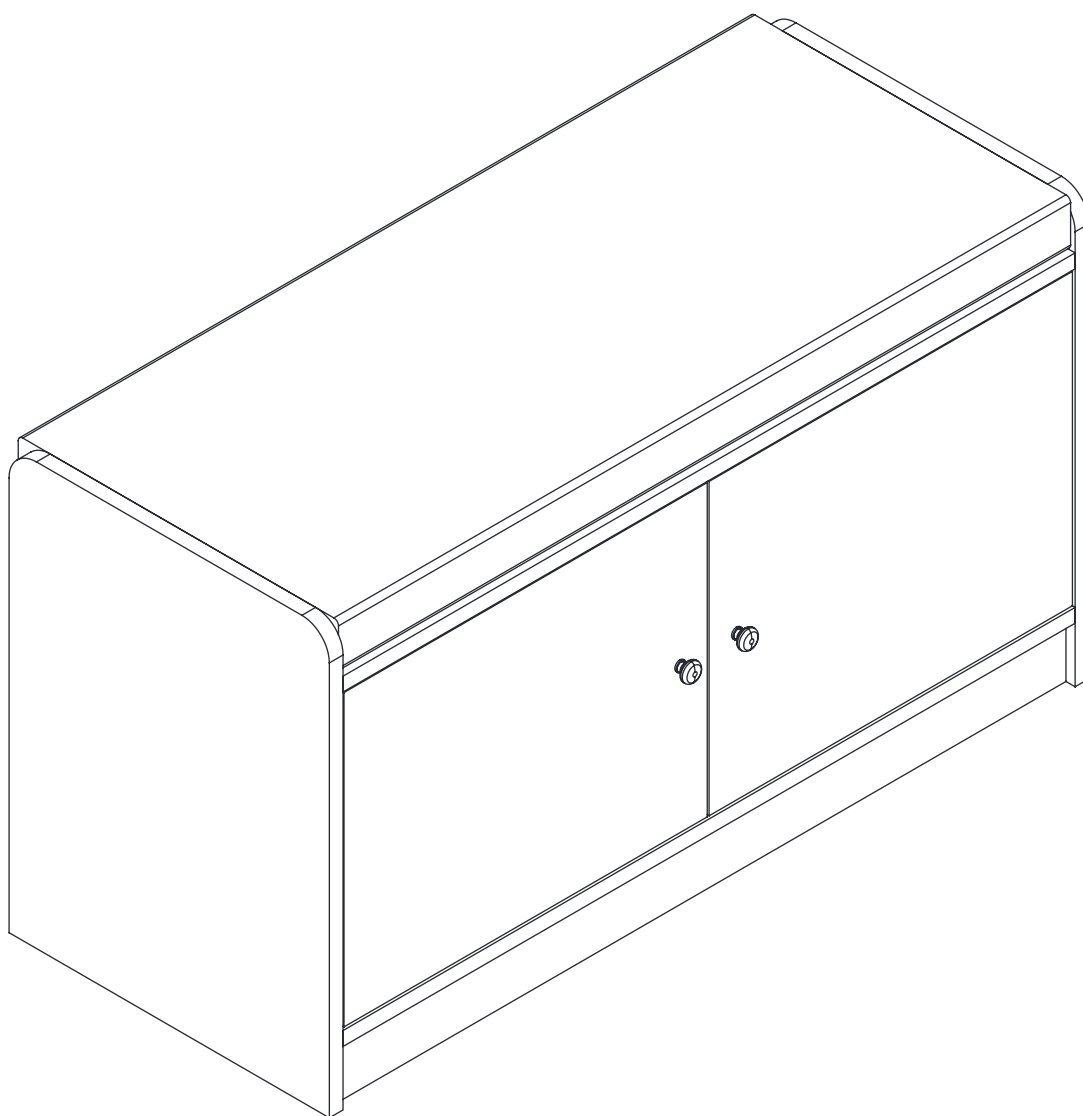


# TIPS BEFORE YOU START

---

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.


## CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.

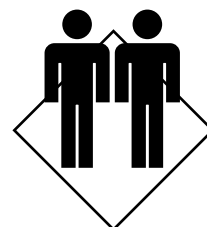

## ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 2 x adults required
- ✓ 2m x 2m assembly space required
- ✓ 2 hour assembly time approx.



# USING CAM LOCK AND QUICKFIT


## QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

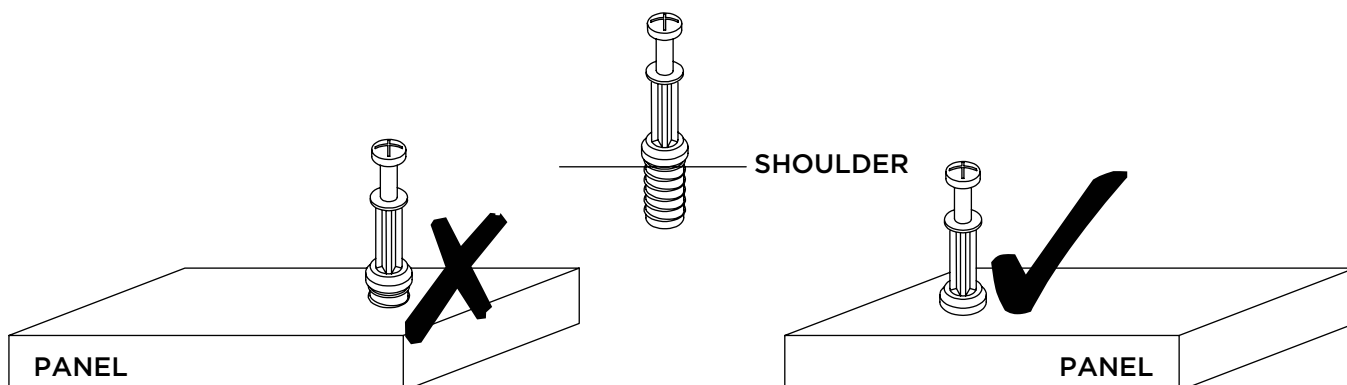


## CAM LOCK


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

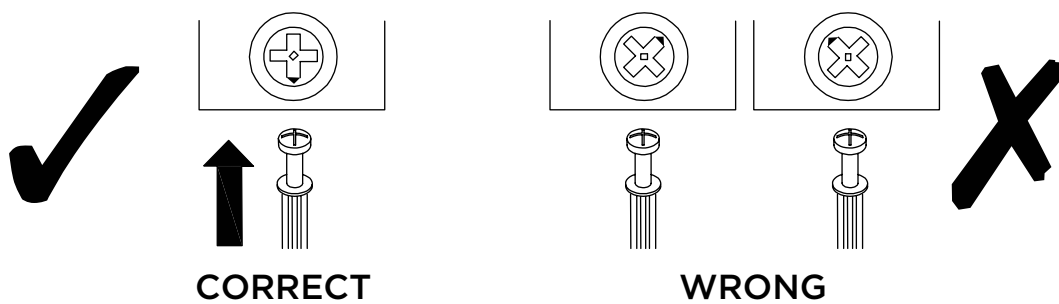

Quickfit head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.

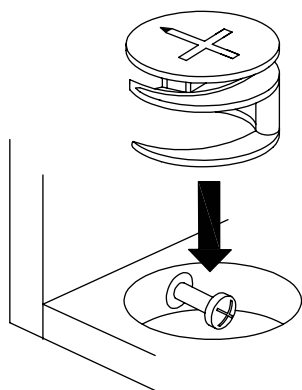


Turn cam lock clockwise to tighten.

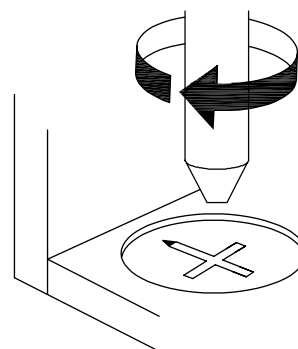

# HARDWARE LIST


---

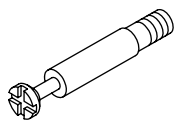


20 x A  
Quickfit Screw




20 x B  
Cam Lock

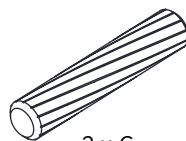


2 x C  
Long Wooden Dowel



4 x D  
Screw




24 x E  
Wooden Dowel




4 x F  
Screw



6 x G  
Screw




4 x H  
Wedge



4 x I  
Screw




24 x J  
Screw

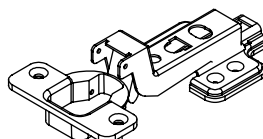

4 x K  
Hinge



2 x L  
Handle




2 x M  
Bolt




6 x N  
Pad

# PARTS LIST


---

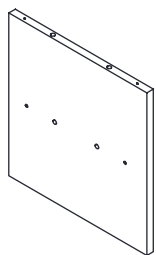


**1**  
1 PC

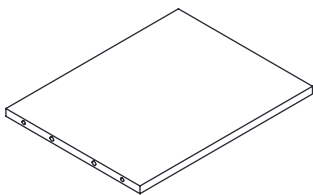


**2**  
2 PCS

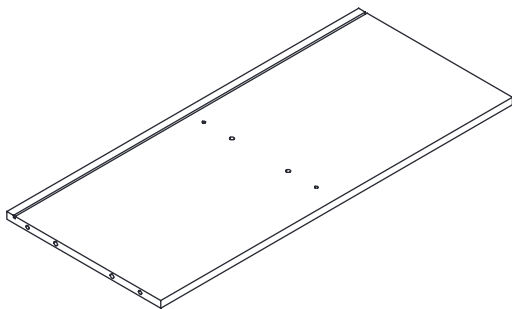


**3**  
1 PC

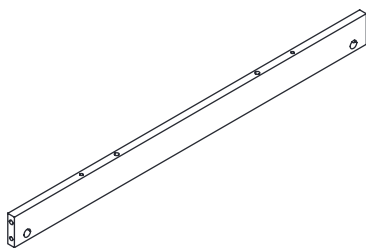


**4**  
2 PCS

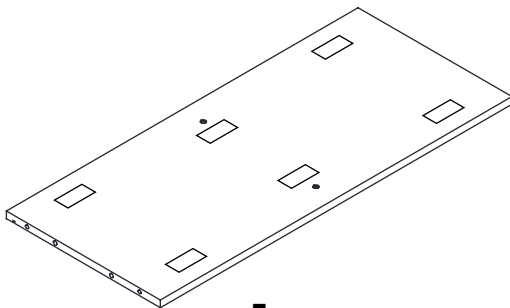


**5**  
1 PC

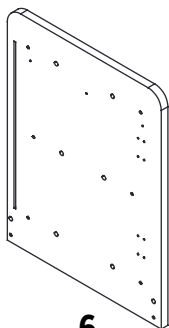


**6**  
1 PC




**7**  
2 PCS

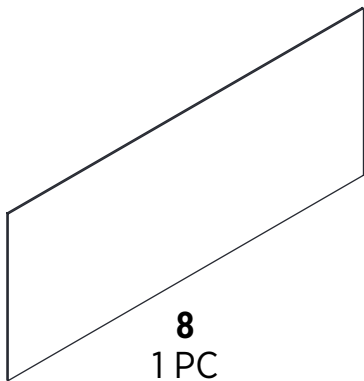


**8**  
1 PC

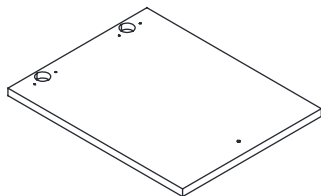

**9**  
2 PCS

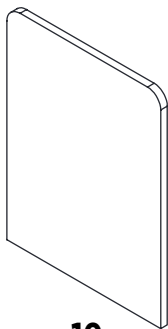

**10**  
1 PC


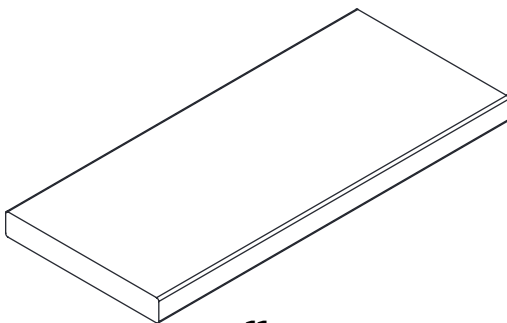


**11**  
1 PC

# ASSEMBLY INSTRUCTIONS

## STEP 1

Insert quickfit screws (A) to part 1, as shown.

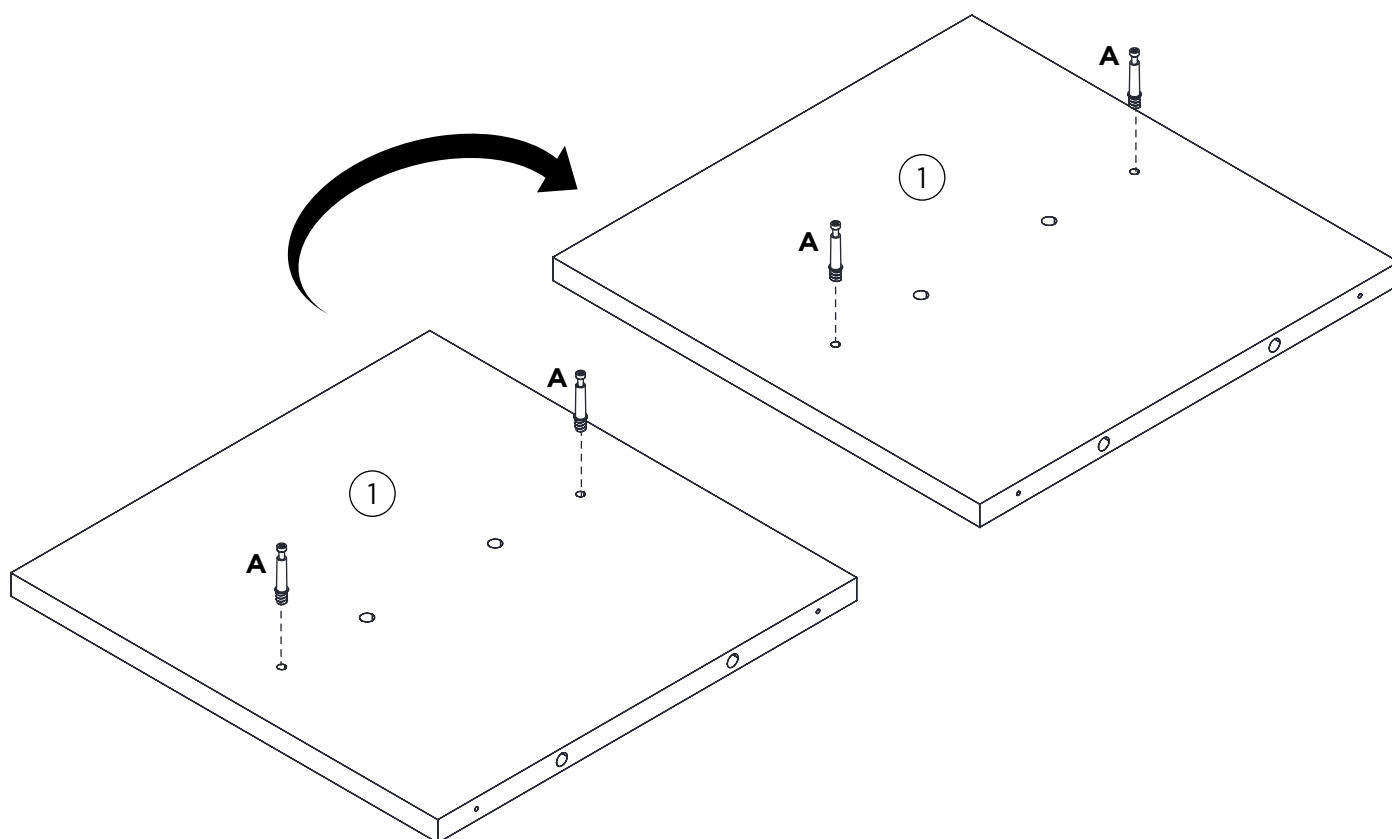

# ASSEMBLY INSTRUCTIONS

## STEP 2




Insert cam locks (B) to parts 2.

Insert long wooden dowels (C) to part 1.

Attach parts 2 to part 1, as shown.

Turn cam locks clockwise to tighten.

**Please note: long wooden dowels (C) protrude part 1 into parts 2.**

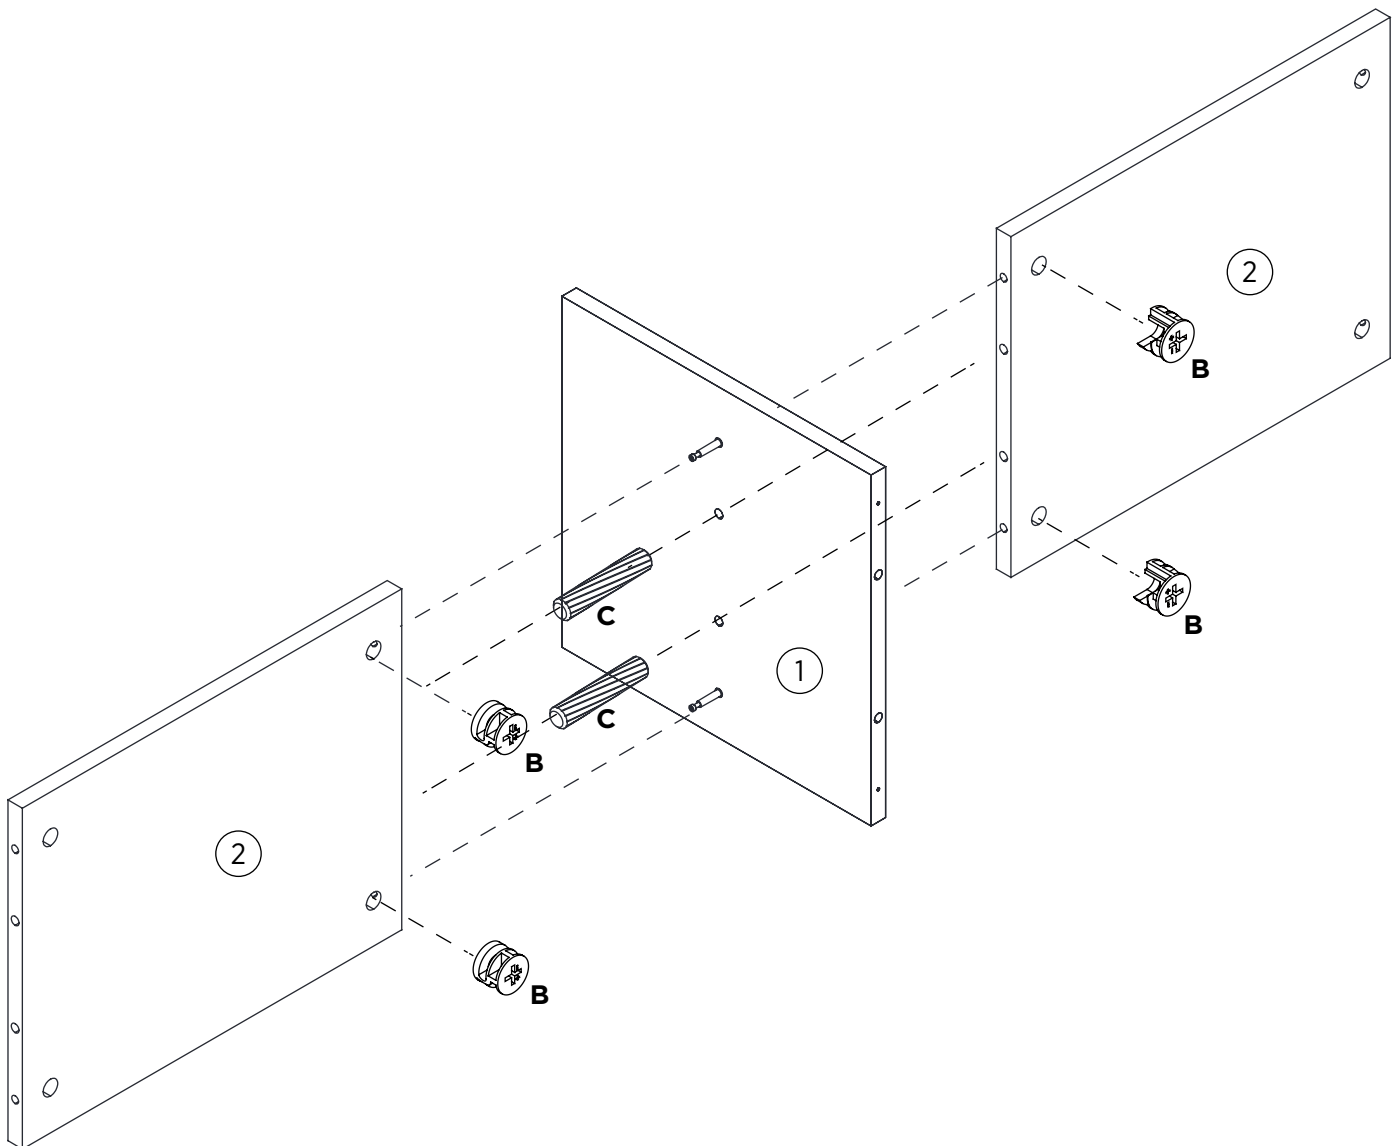




# ASSEMBLY INSTRUCTIONS

## STEP 3

Insert wooden dowels (E) to part 3.

Fix parts 4 to part 3 using screws (D), as shown.

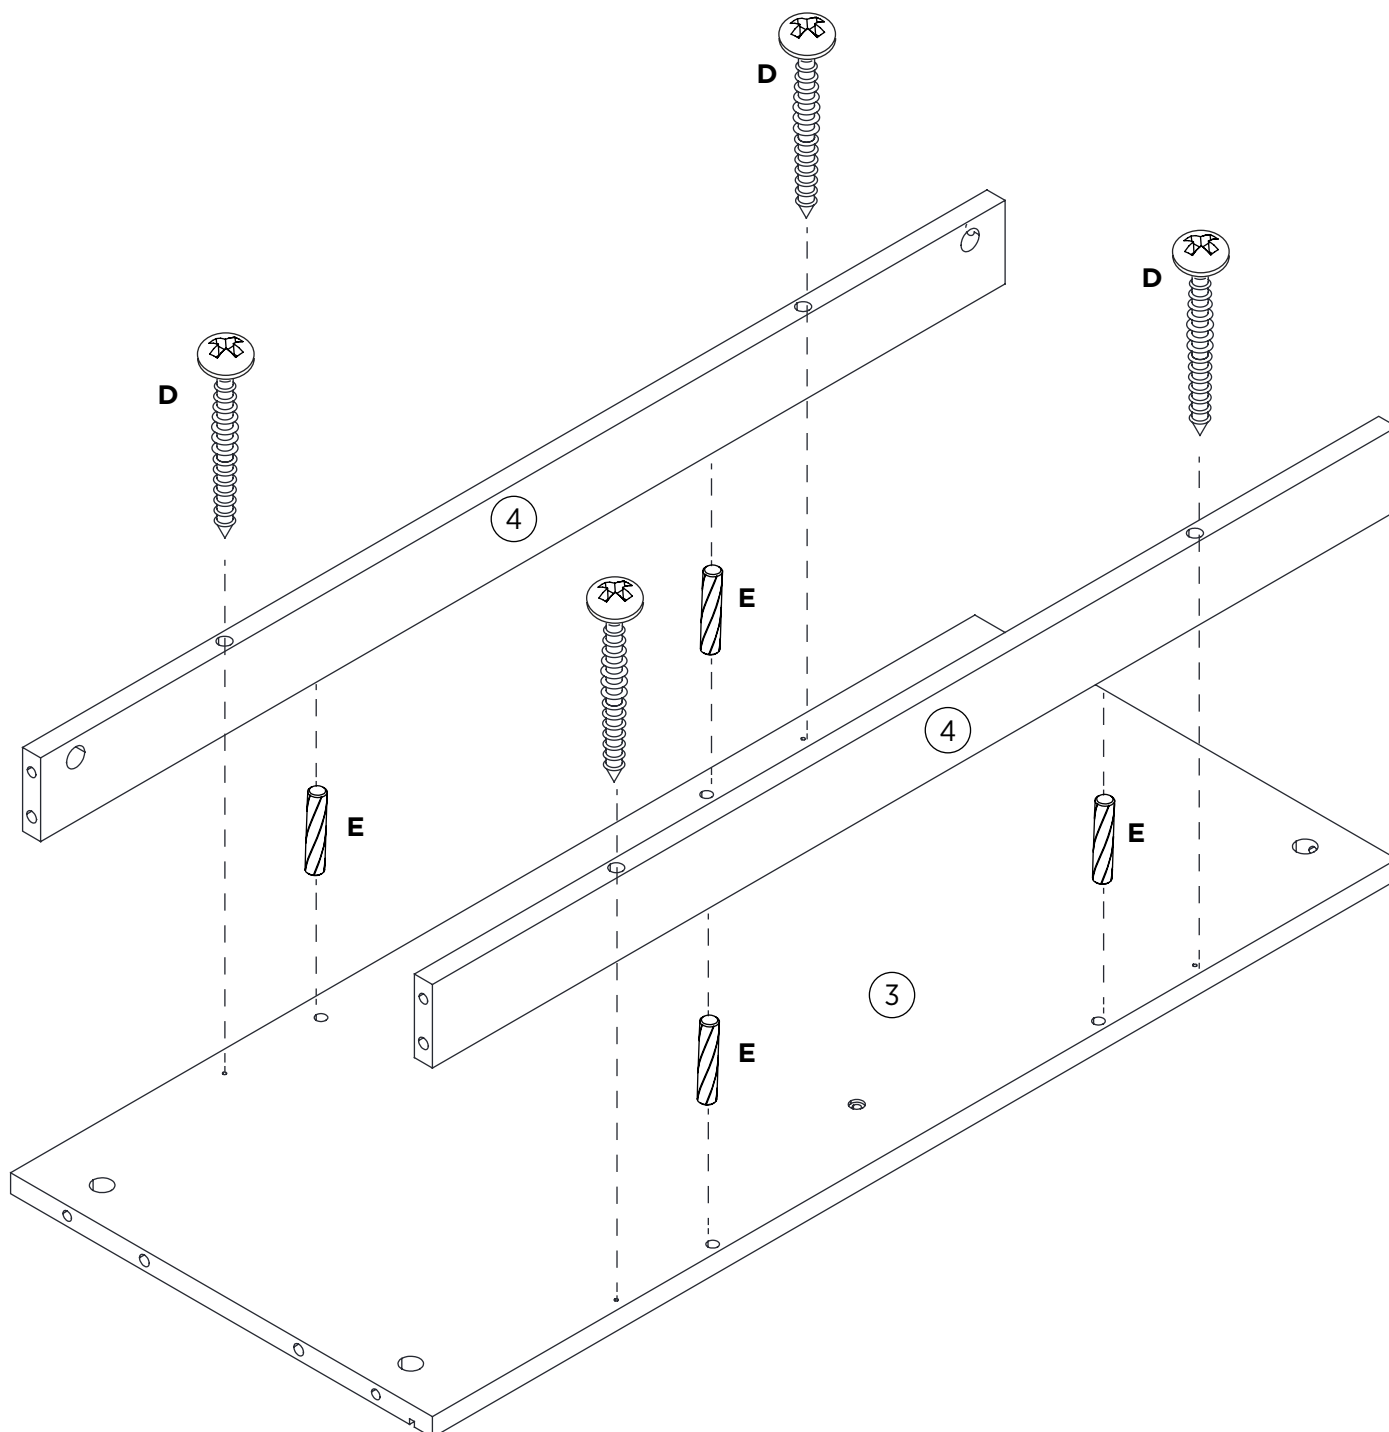






# ASSEMBLY INSTRUCTIONS

## STEP 4

Insert wooden dowels (E) to part 1.

Fix parts 5 and 3 to part 1 using screws (F), as shown.

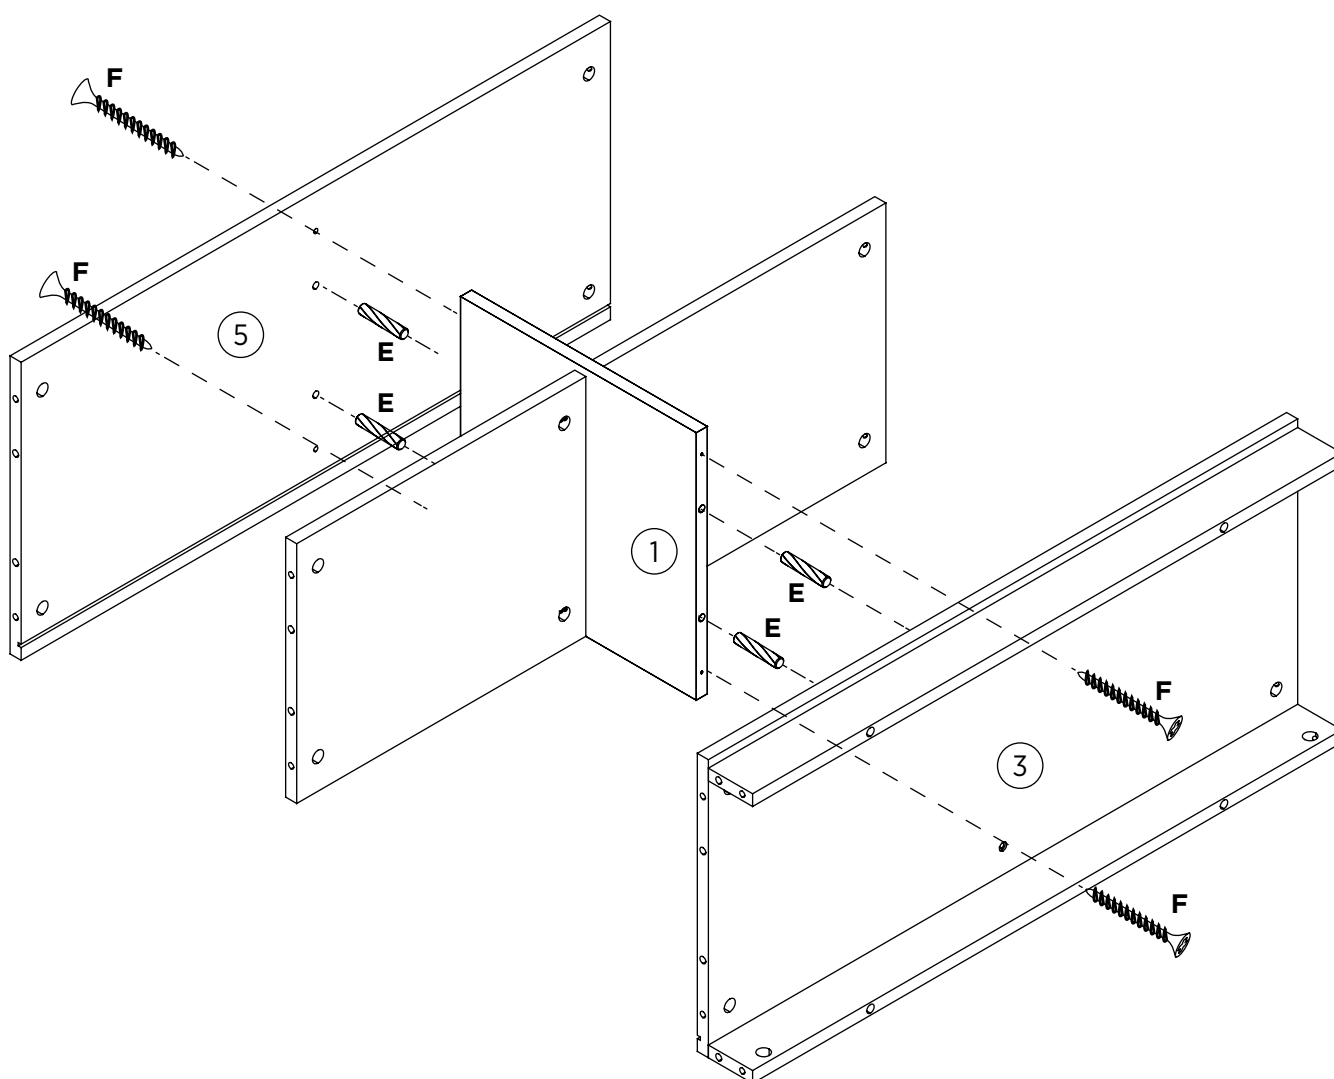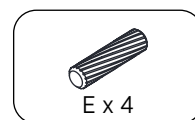

# ASSEMBLY INSTRUCTIONS

## STEP 5

Insert quickfit screws (A) to parts 6 and 10.


Fix parts 7 to parts 6 and 10 using screws (G), as shown.



A x 16



G x 6

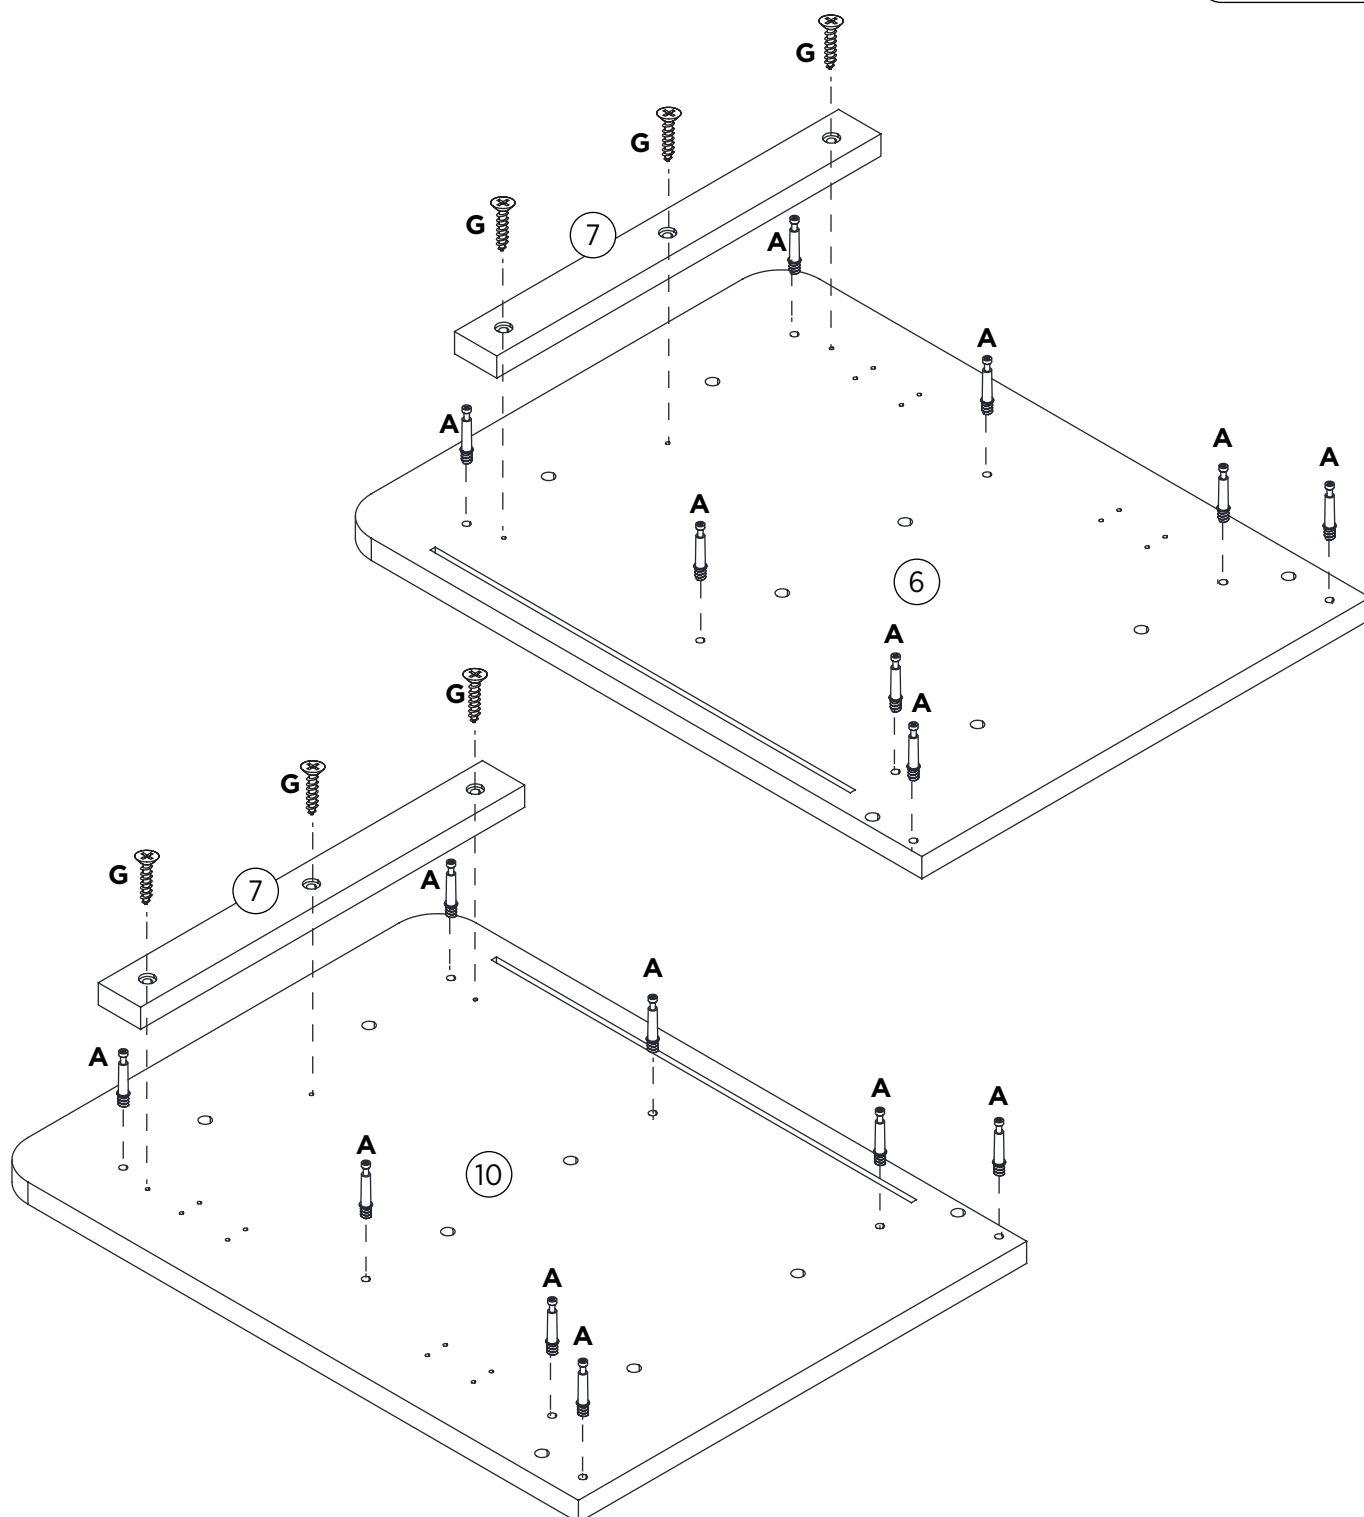

# ASSEMBLY INSTRUCTIONS



## STEP 6

Insert cam locks (B) and wooden dowels (E) to parts 2, 3, 4 and 5.

Attach part 6 to parts 2, 3, 4 and 5.

Turn cam locks clockwise to tighten.

Insert part 8 into grooves between parts 3, 5 and 6, as shown.

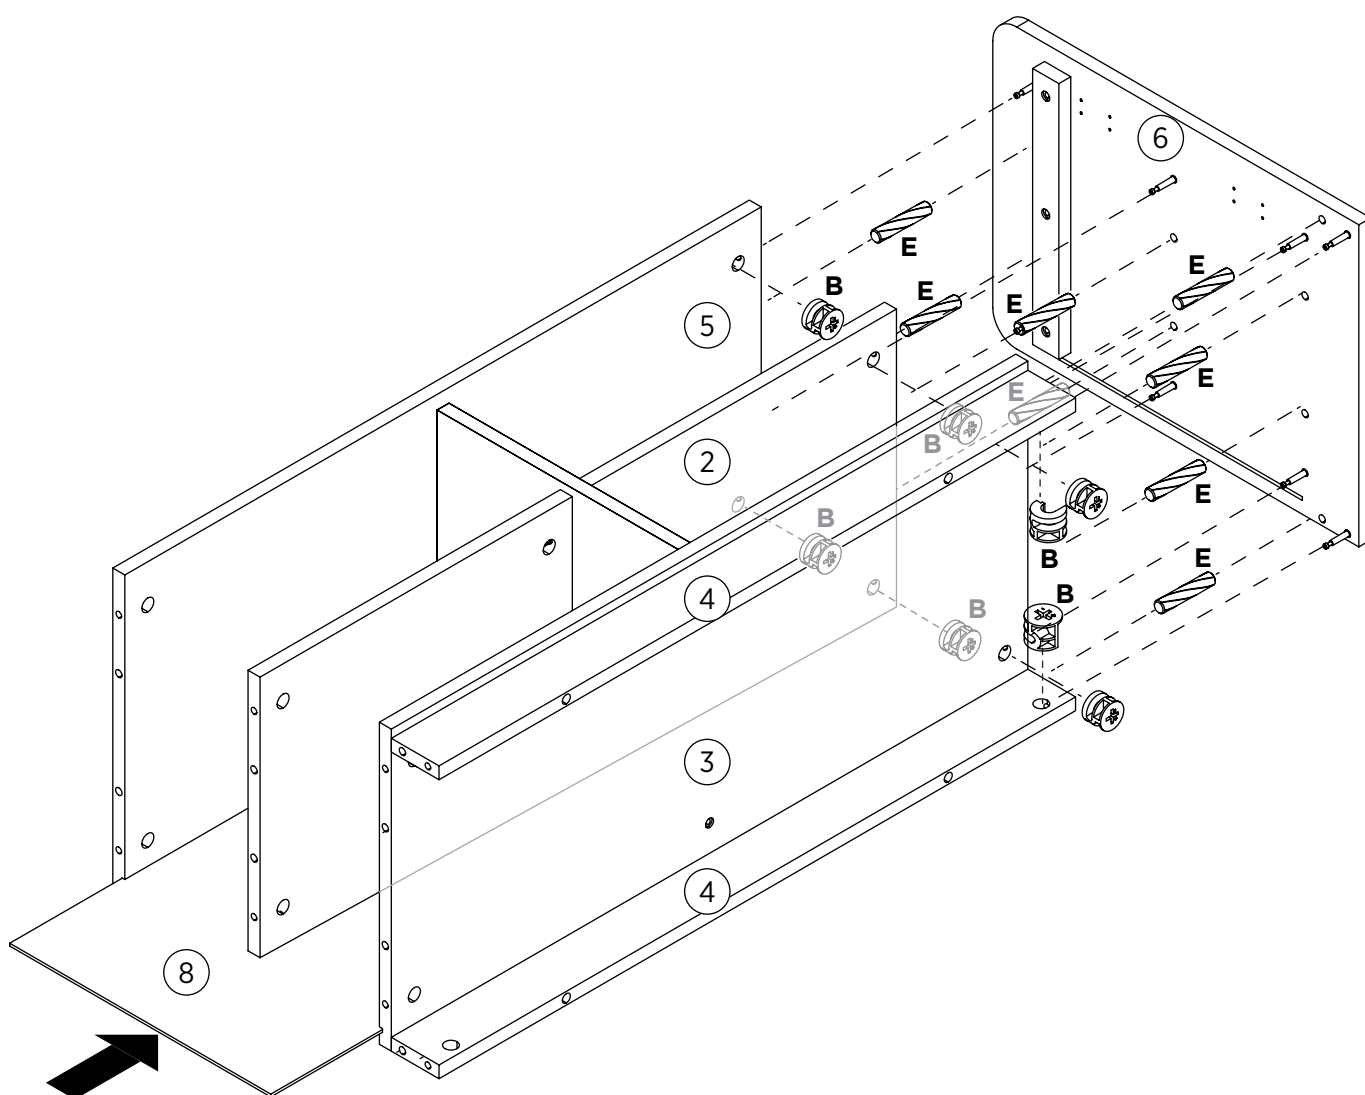

# ASSEMBLY INSTRUCTIONS




## STEP 7

Insert cam locks (B) and wooden dowels (E) to parts 2, 3, 4 and 5.

Attach part 10 to parts 2, 3, 4 and 5.

Turn cam locks clockwise to tighten.







Attach pads (N) to parts 4, 6 and 10, as shown.

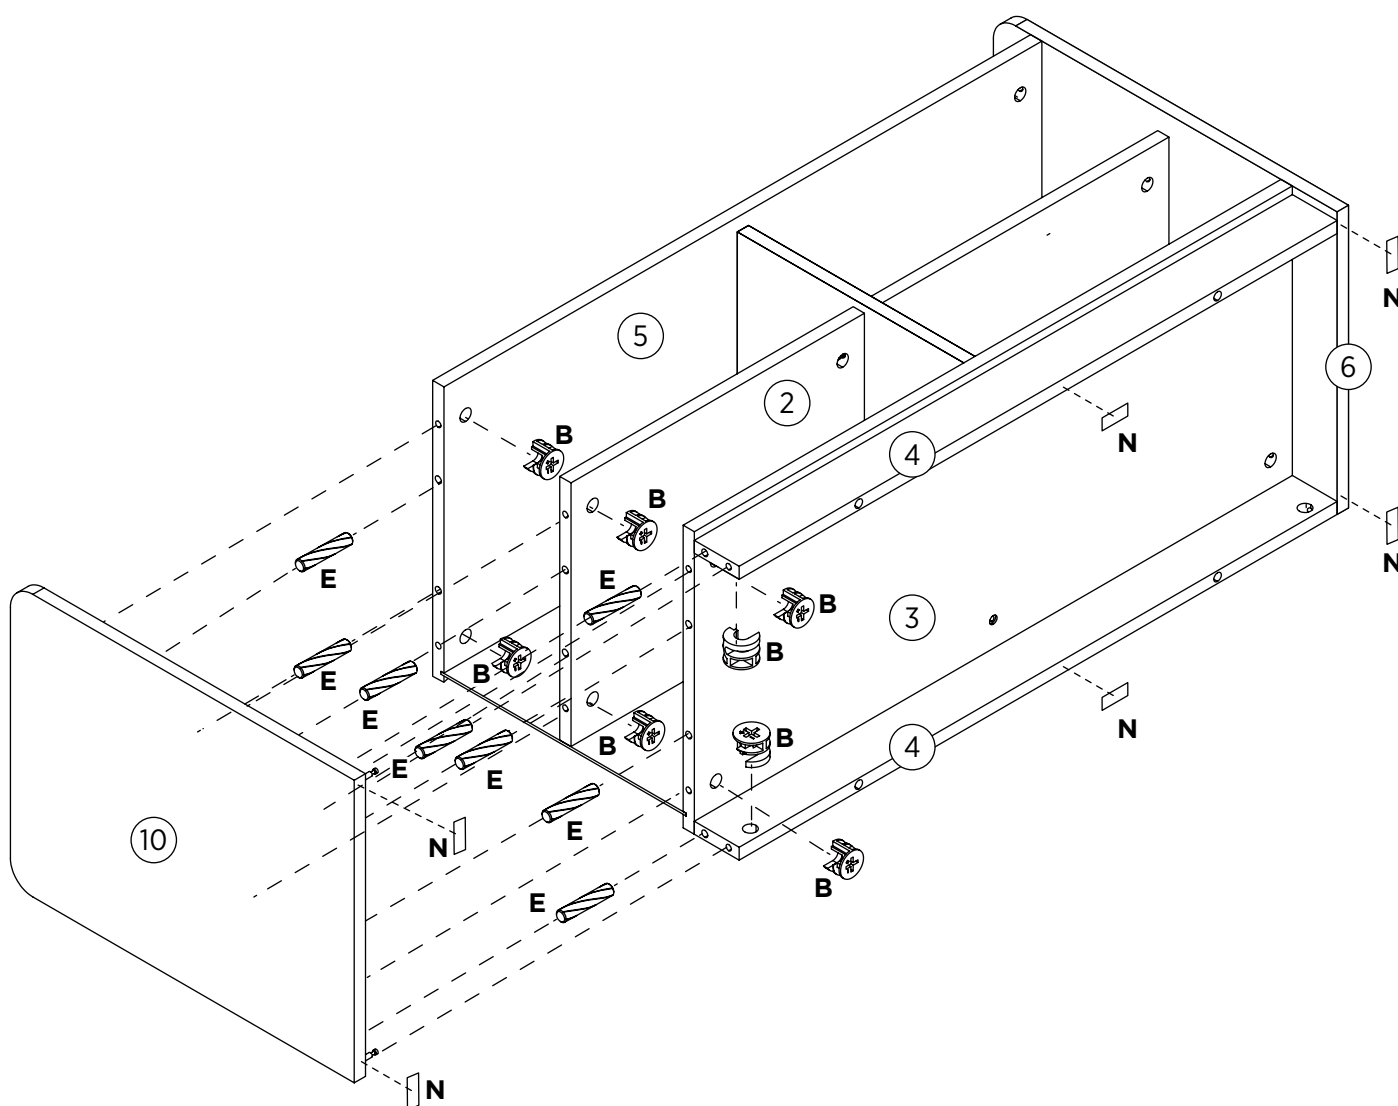

# ASSEMBLY INSTRUCTIONS

## STEP 8

To secure part 8, fix wedges (H) using screws (I), as shown.

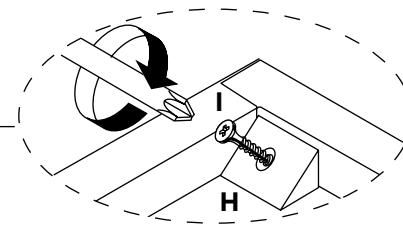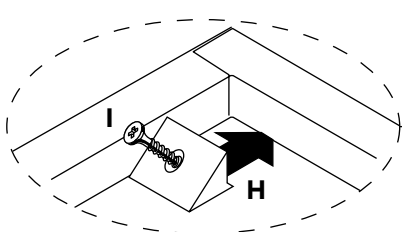
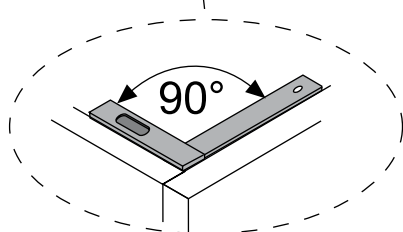
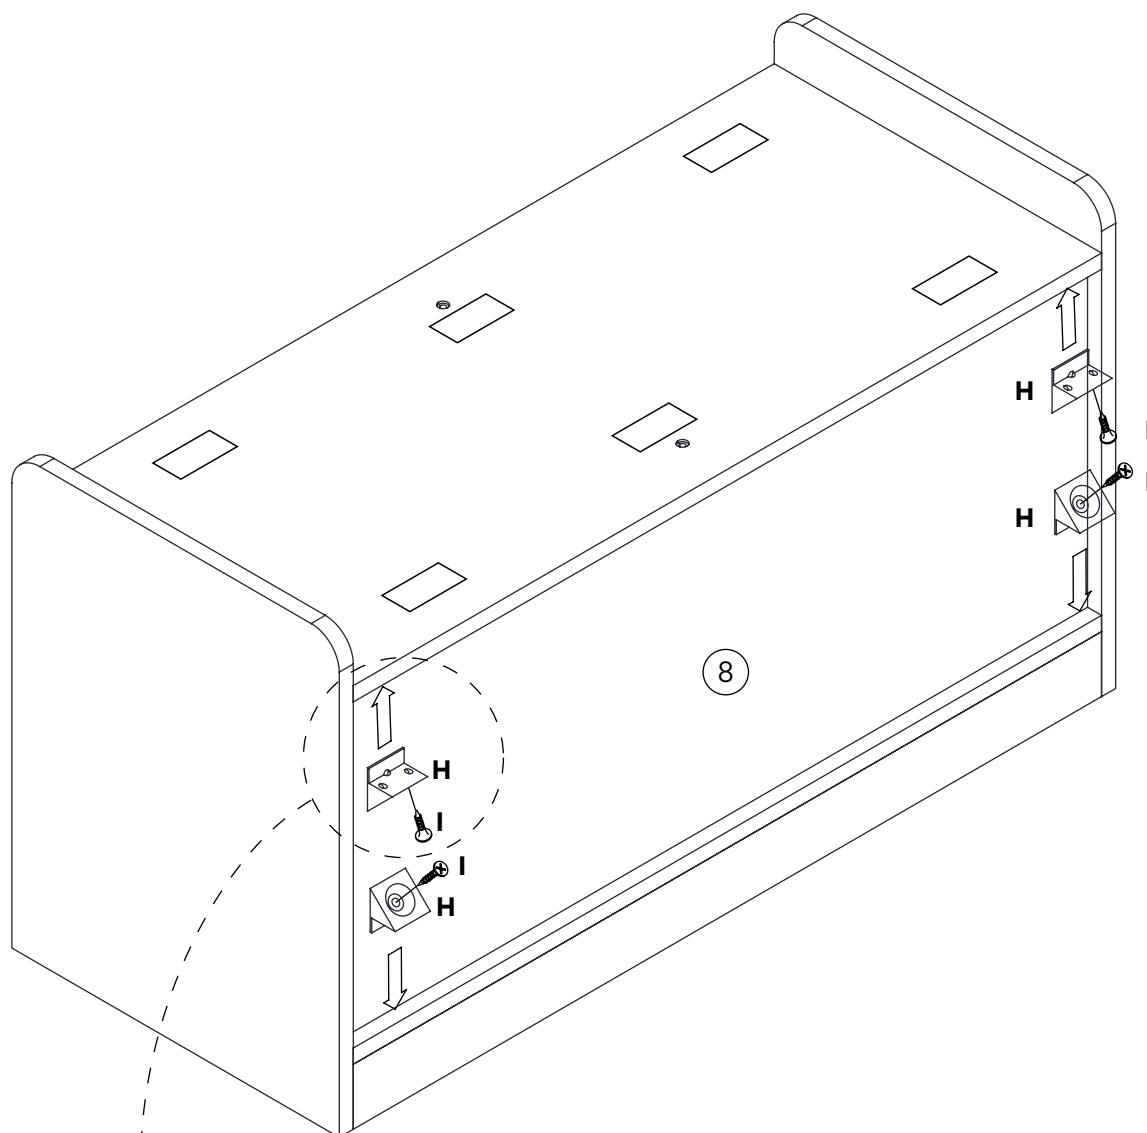

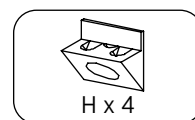


# ASSEMBLY INSTRUCTIONS

## STEP 9

Fix hinges (K) to parts 9 using screws (J).

Fix handles (L) to parts 9 using bolts (M), as shown.

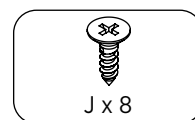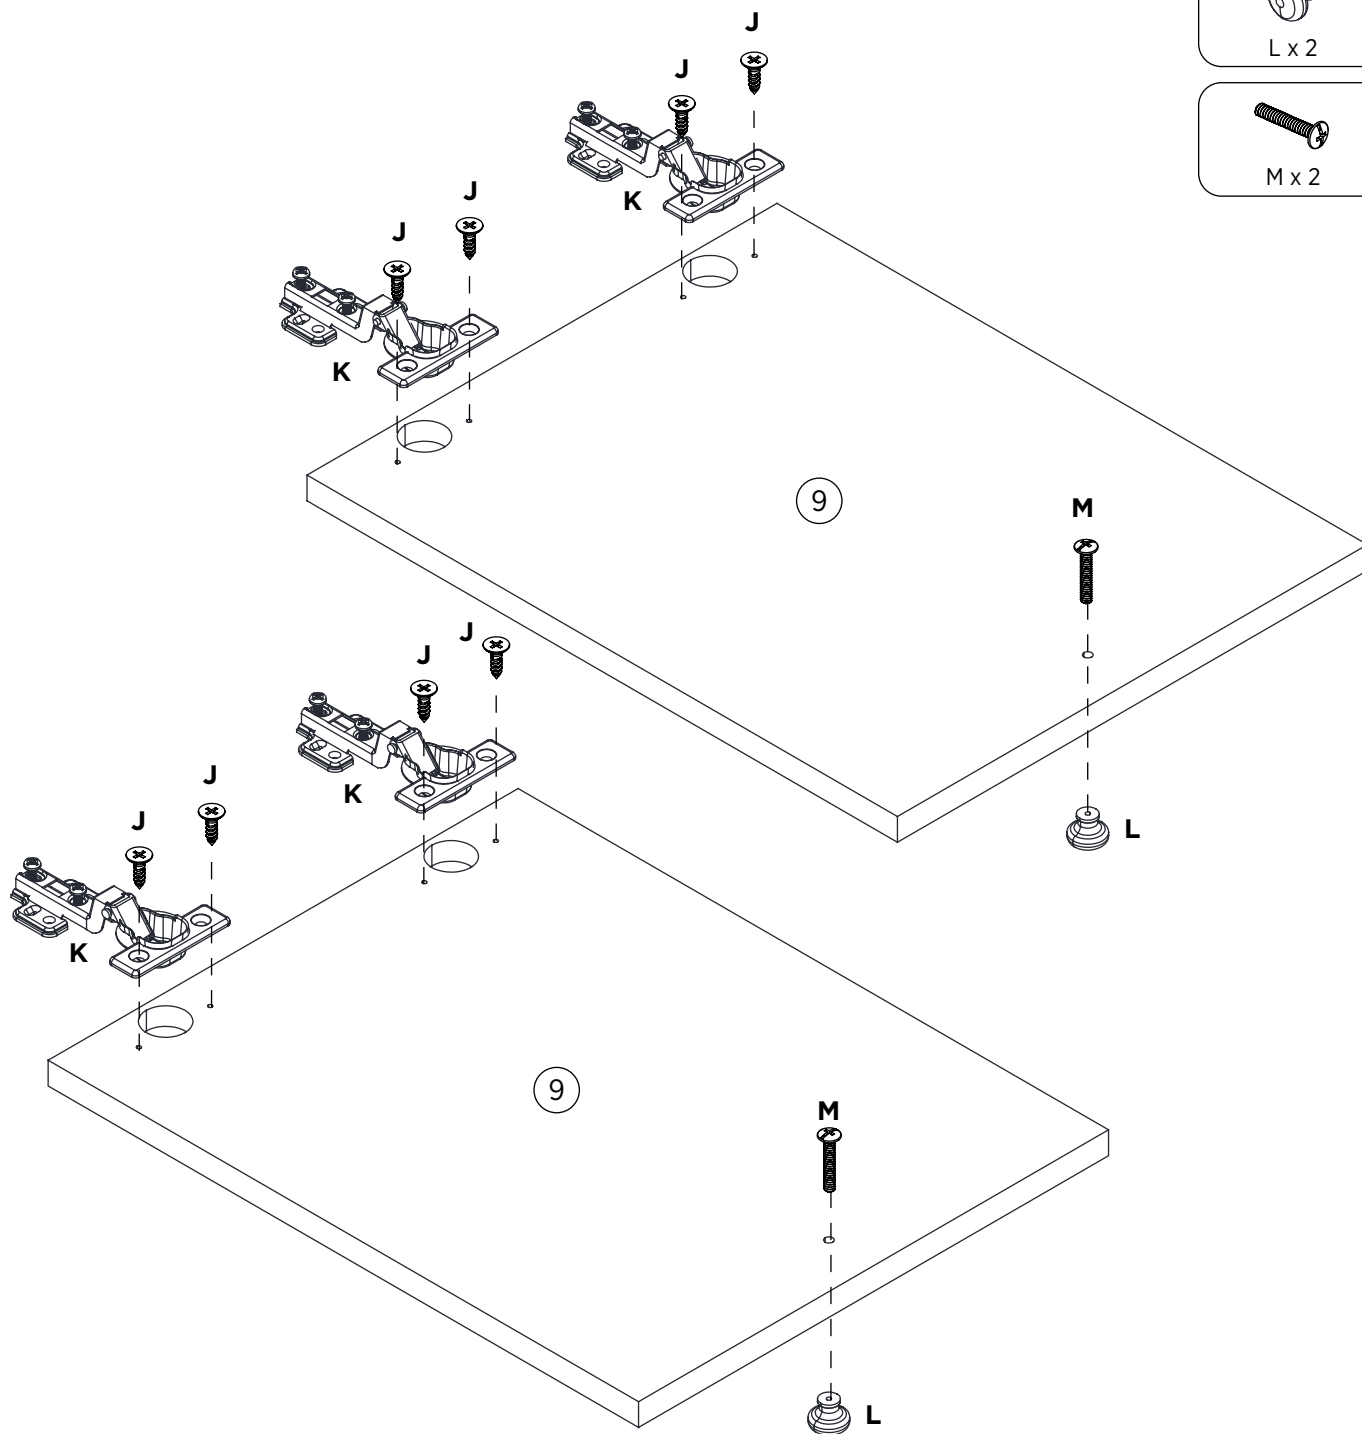


# ASSEMBLY INSTRUCTIONS

## STEP 10


Fix parts 9 to assembled unit using screws (J).

Attach part 11 to assembled unit, as shown.

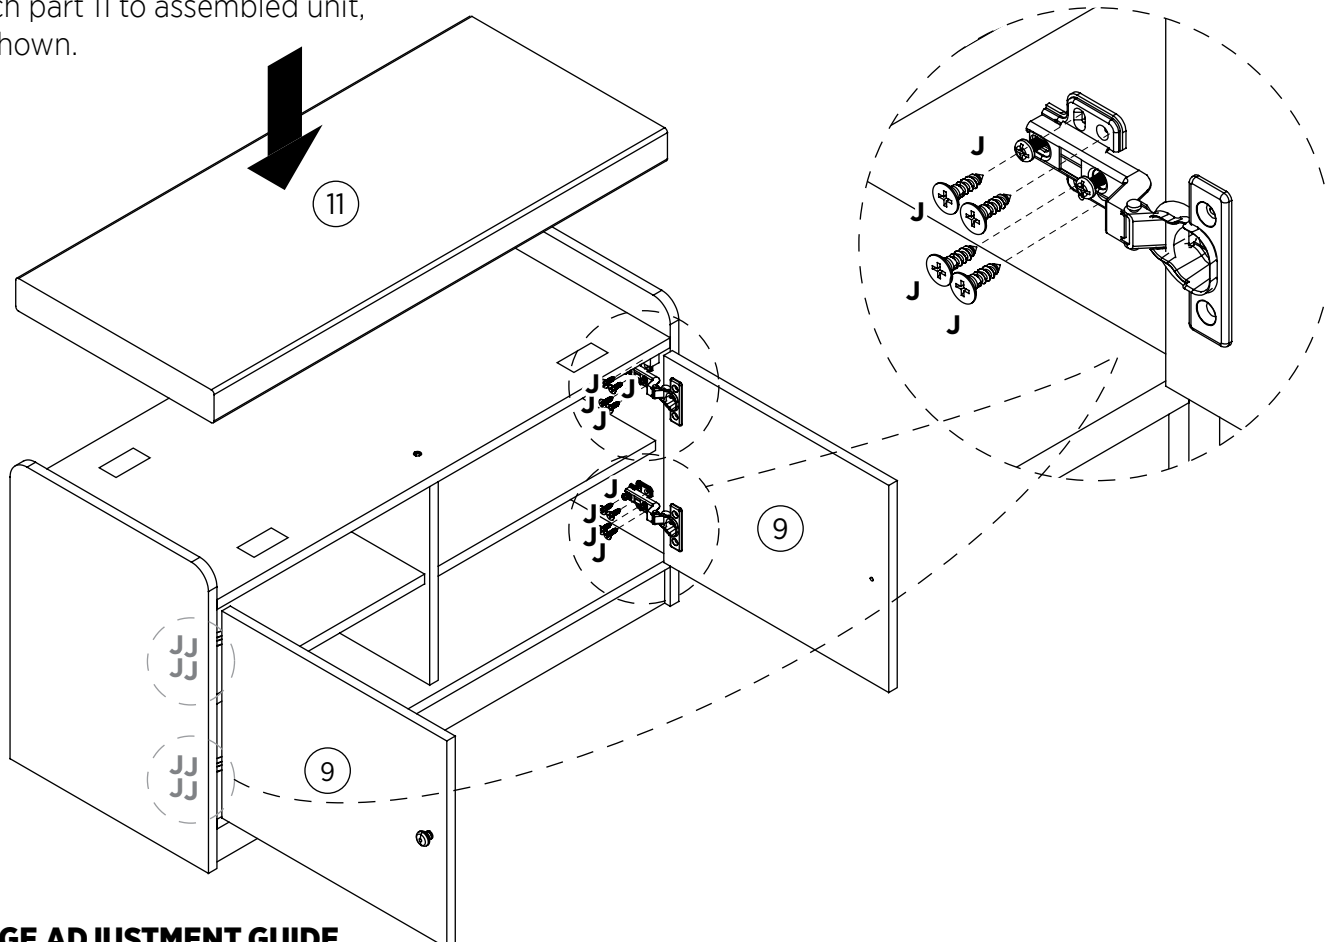


### HINGE ADJUSTMENT GUIDE


It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

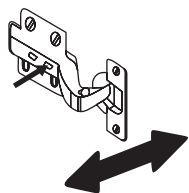

To adjust the door **laterally** adjust the screw as shown by turning clockwise or anti-clockwise.

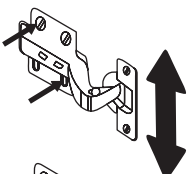

To adjust the door **vertically** loosen the screw as shown and move up and down as needed.

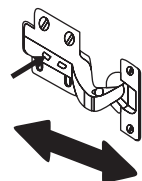

To adjust the **gap** from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

# ASSEMBLY INSTRUCTIONS

---

## STEP 11

**Maximum recommended weight is 150kg for seat and 5kg for shelf.**

Your shoe storage bench 2 doors is ready for use.

