

# SIDEBOARD

1.5hr

APPROXIMATE ASSEMBLY TIME


2 PERSON ASSEMBLY



FLOOR AREA  
3M x 2M



REQUIRED ASSEMBLY SPACE

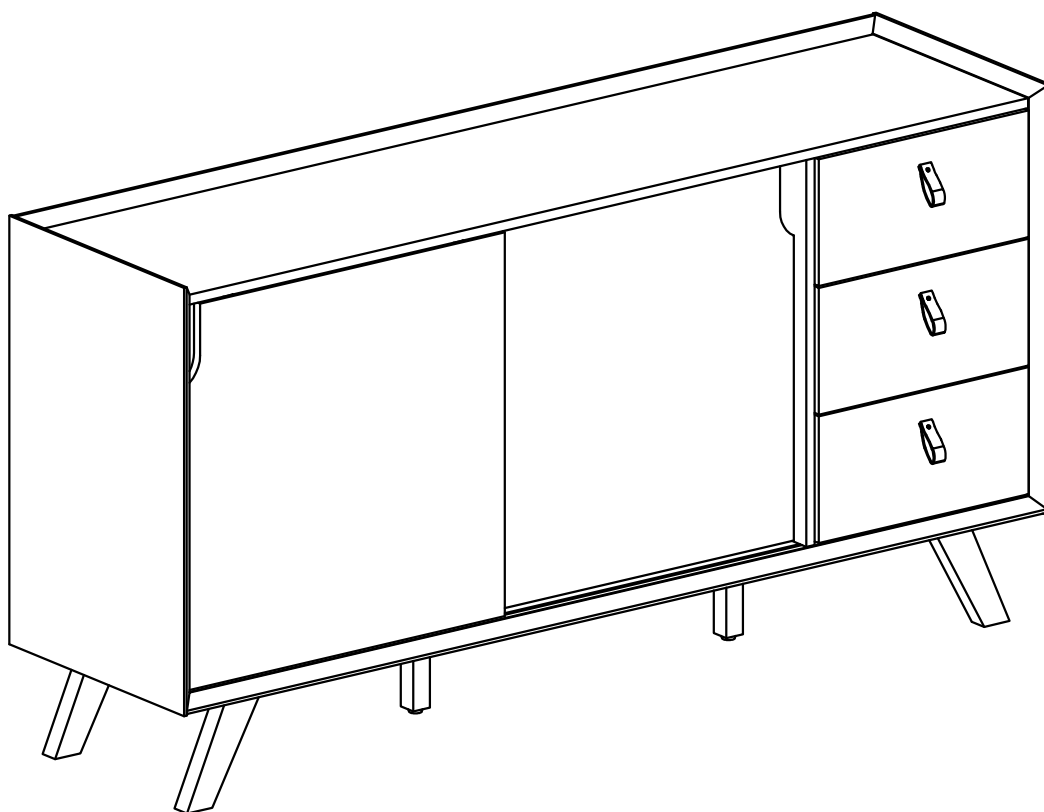

# SIDEBOARD

## **Tips before you start:**

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.


## **Care and Maintenance of your Furniture**

- ☒ Please periodically check all fittings and re-tighten as necessary.
- ☒ To clean your item, please use a damp cloth and wipe clean.
- ☒ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☒ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☒ Please do not drag and pull your furniture.

# SIDEBOARD


Tips before you start:

## QUICKFIT

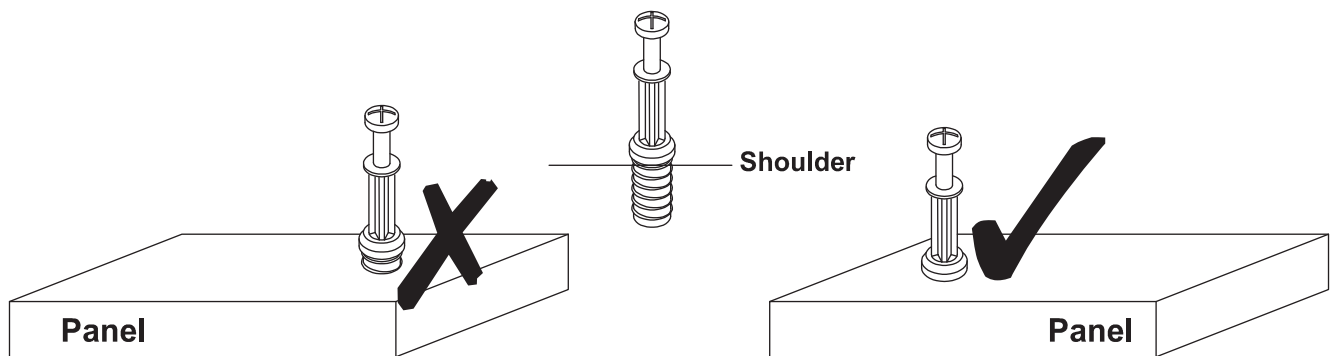

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

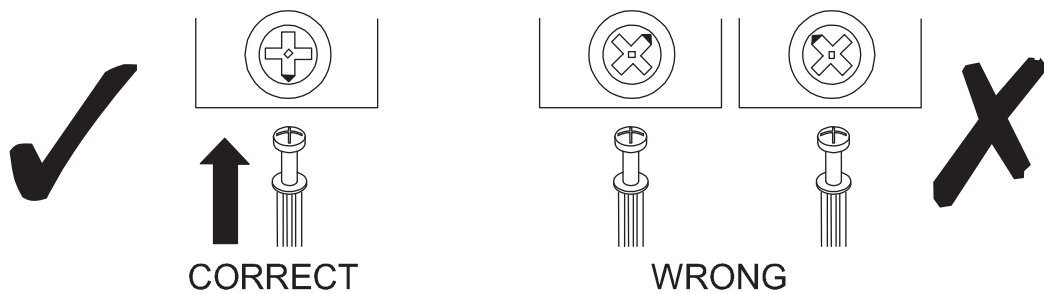

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.




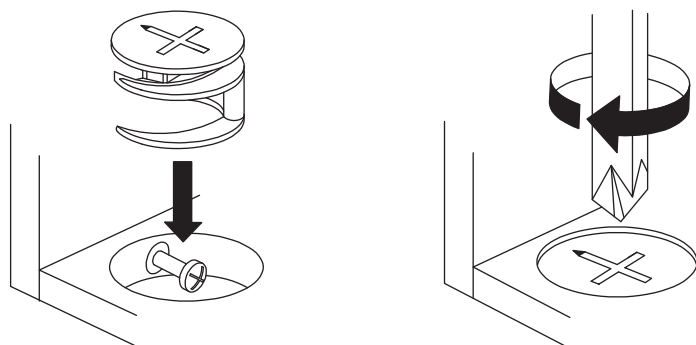




















**Cam lock should be inserted before quickfit.**




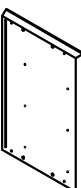
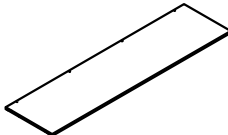
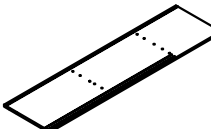
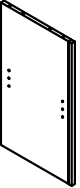
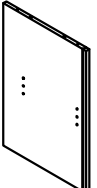
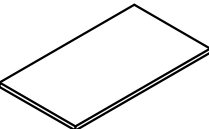
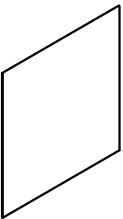
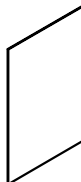

Turn cam lock clockwise to tighten.

# SIDEBOARD

## HARDWARE LIST




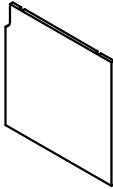
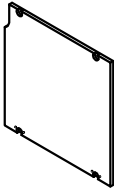
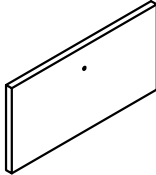
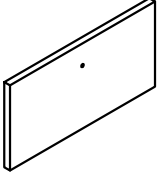
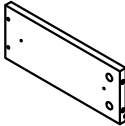
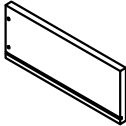
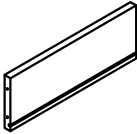
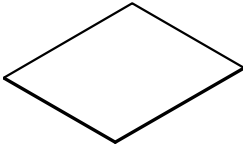
							
24 x A Quickfit Screw	24 x B Cam Lock	6 x C Broken head screw	16 x D Wooden Dowel	8 x E Shelf plug	16 x F Screw	54 x G Screw	12 x H Screw
							
4 x I Screw	12 x J Screw	1 x K Allen Key	3 x L Handle	3 x M Screw	24 x N Hole strickers	6 x O Slide	6 x P Slide
							
4 x Q Connecing plate	4 x R EVA pad	4 x S Bottom magnetic catch	4 x T Top magnetic catch	4 x U Rail	12 x V Wedge	2 x W Adjusting foot	2 x X Safty strip

## PARTS LIST




									
1	1 PC	2	1 PC	3	1 PC	4	1 PC	5	1 PC
									
6	1 PC	7	2 PCS	8	2 PCS	9	1 PC	10	1 PC

# SIDEBOARD

## PARTS LIST

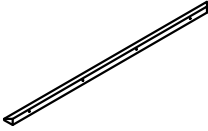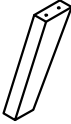
				
111 PC	124 PCS	132 PCS	142 PCS	152 PCS
				
162 PCS	171 PC	183 PCS	193 PCS	203 PCS
				
213 PCS				

## STEP 1

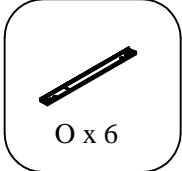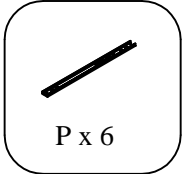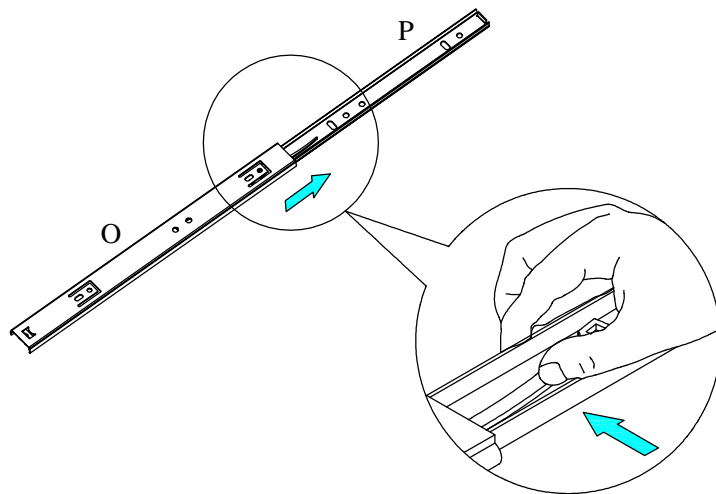


# SIDEBORD

## STEP 2

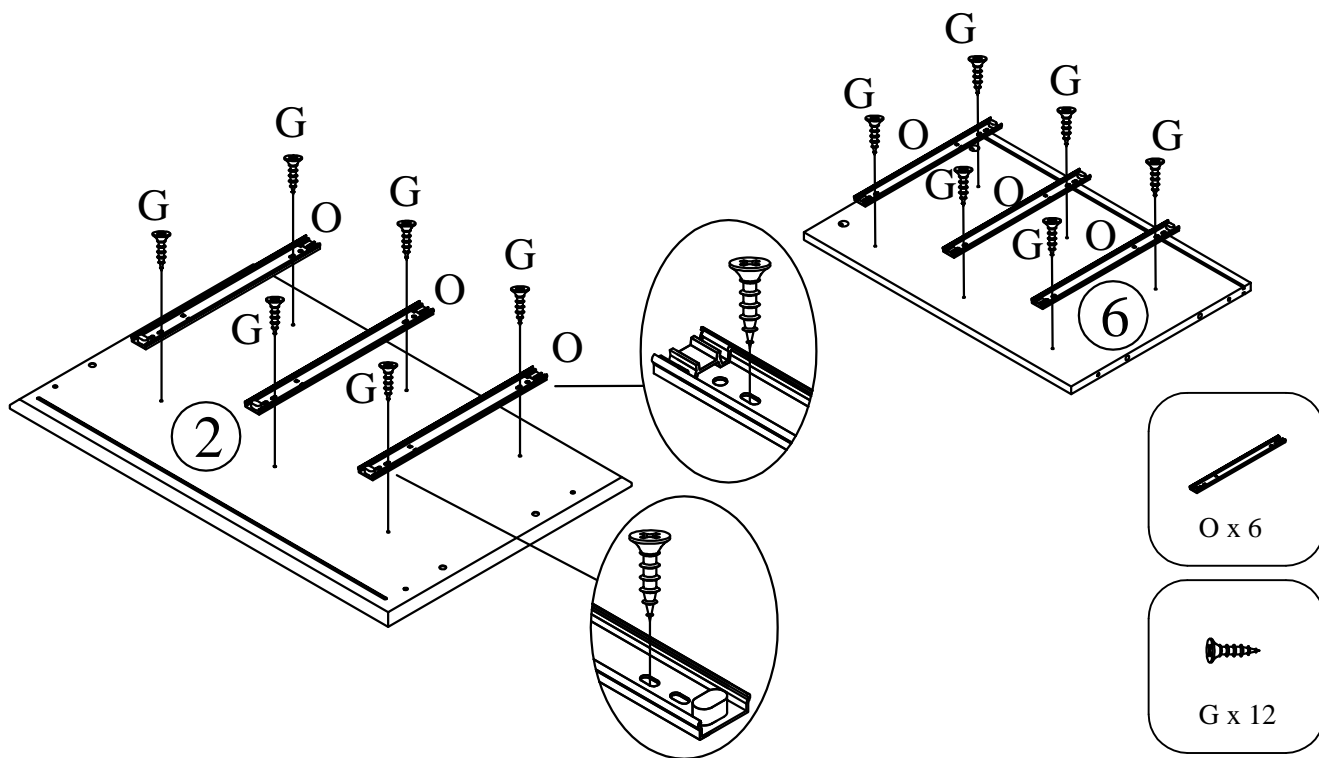


## STEP 3

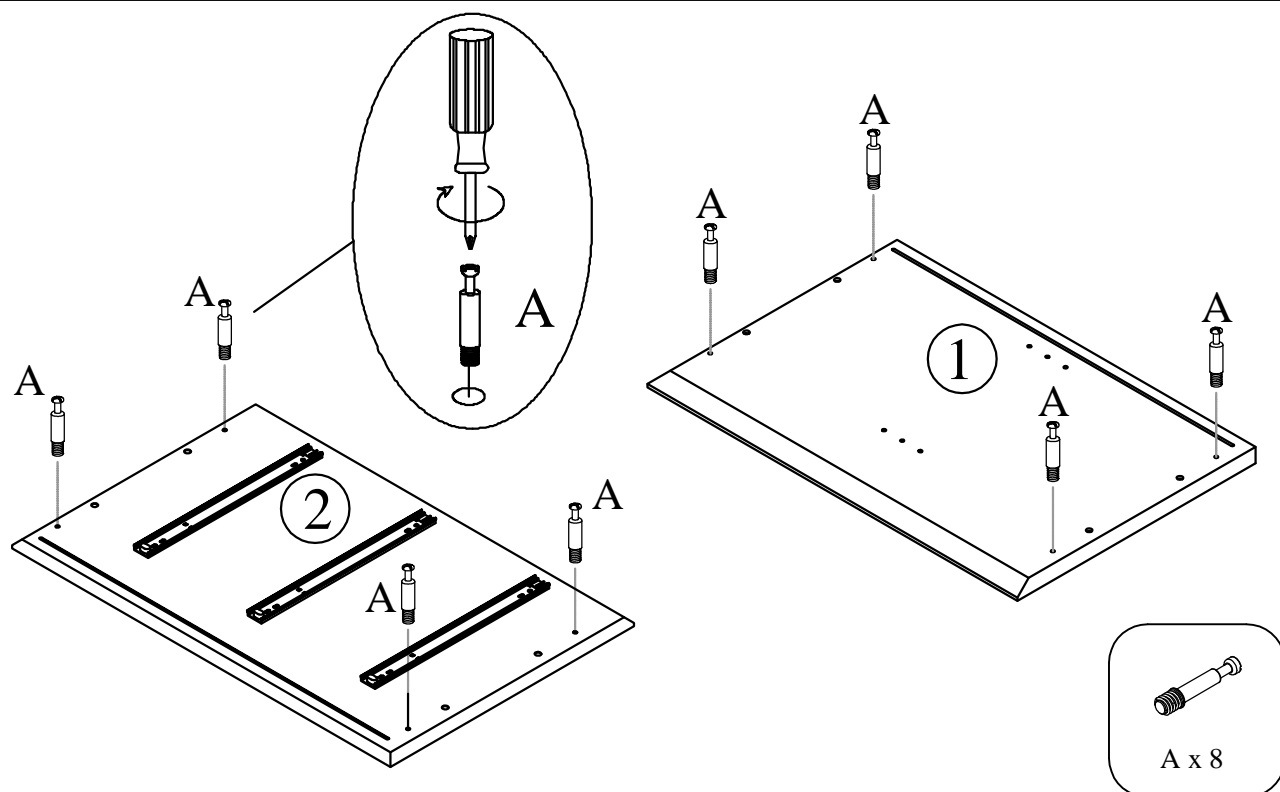


# SIDEBORD

## STEP 4

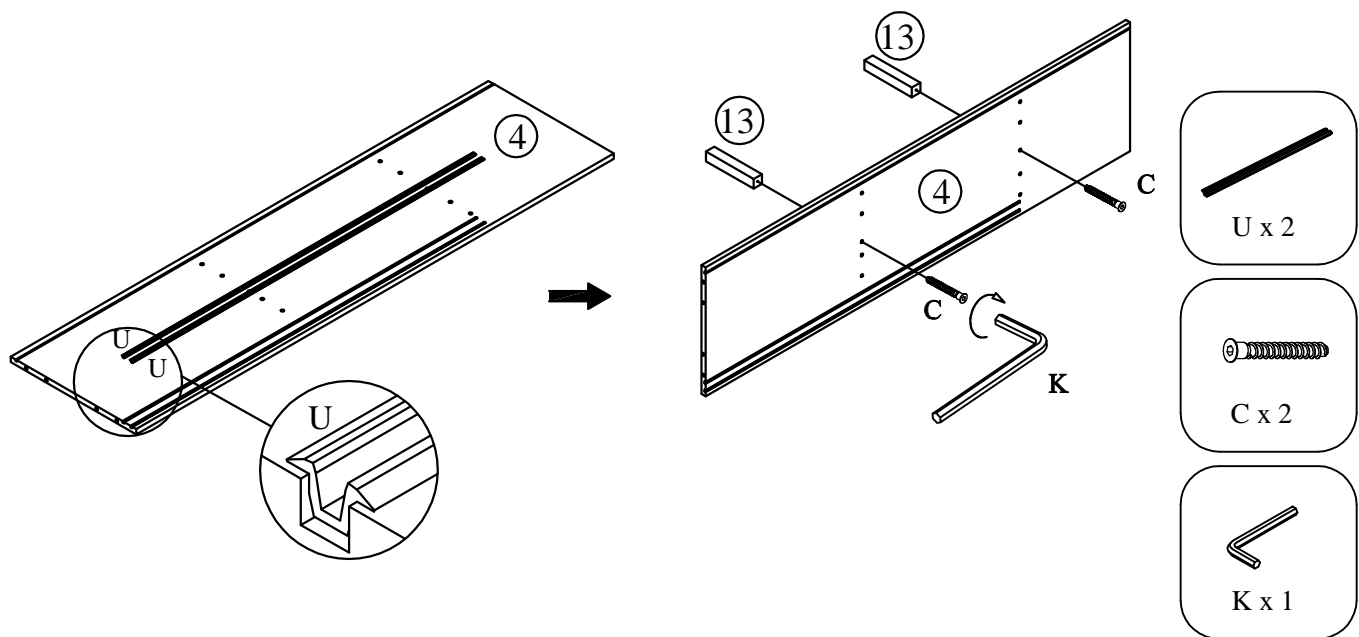


## STEP 5

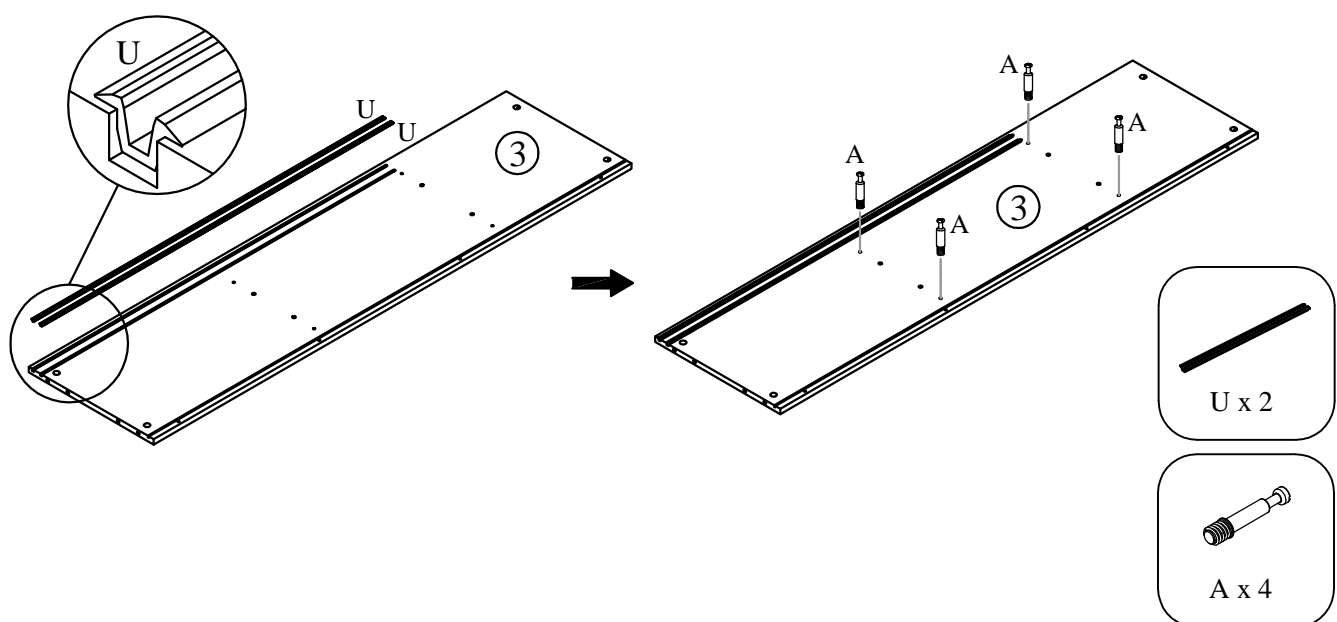

# SIDEBORD

## STEP 6

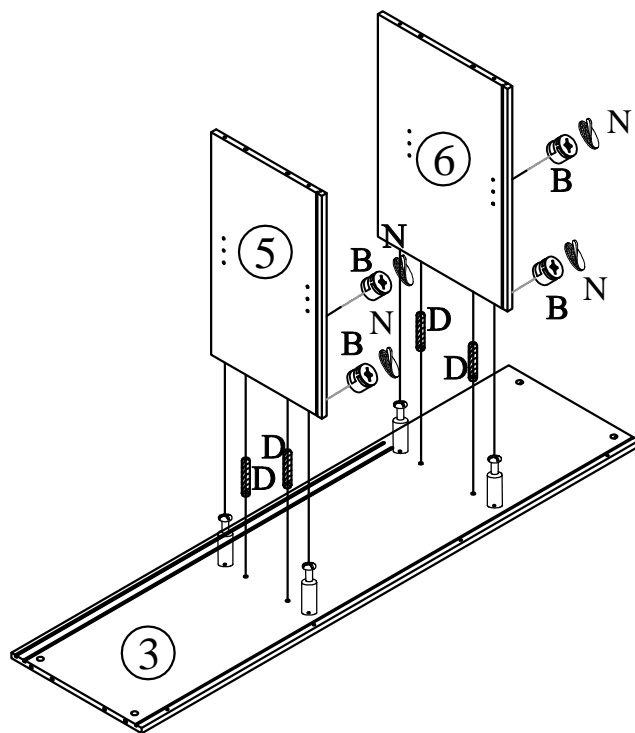

B x 4




D x 4



N x 4


## STEP 7

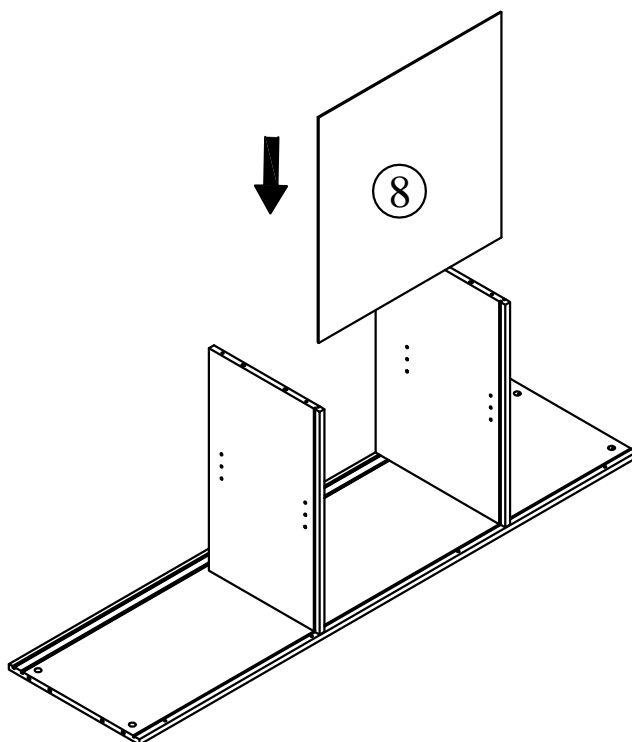



# SIDEBOARD

## STEP 8

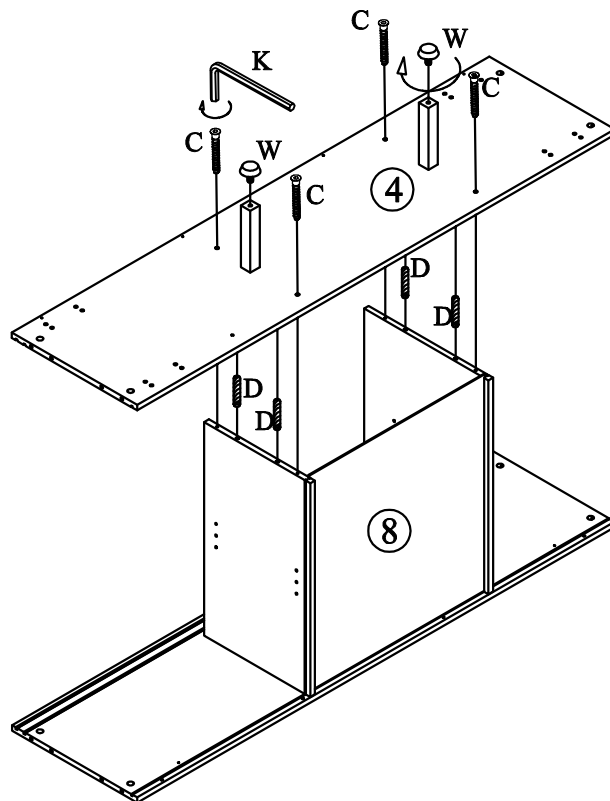

W x 2



C x 4




D x 4




K x 1

## STEP 9

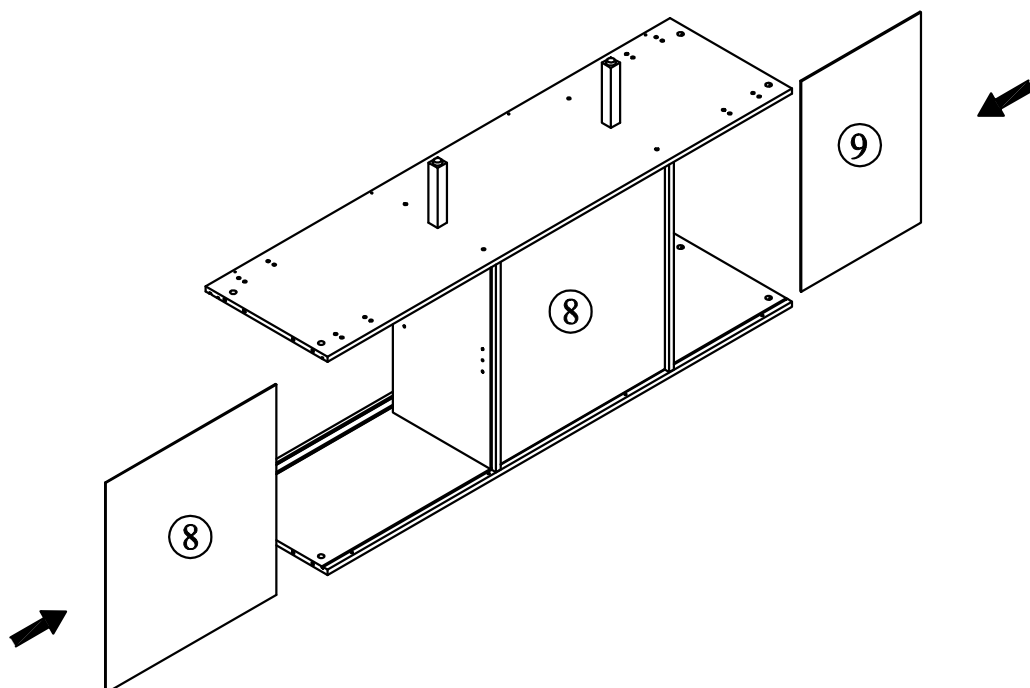

# SIDEBORD

## STEP 10

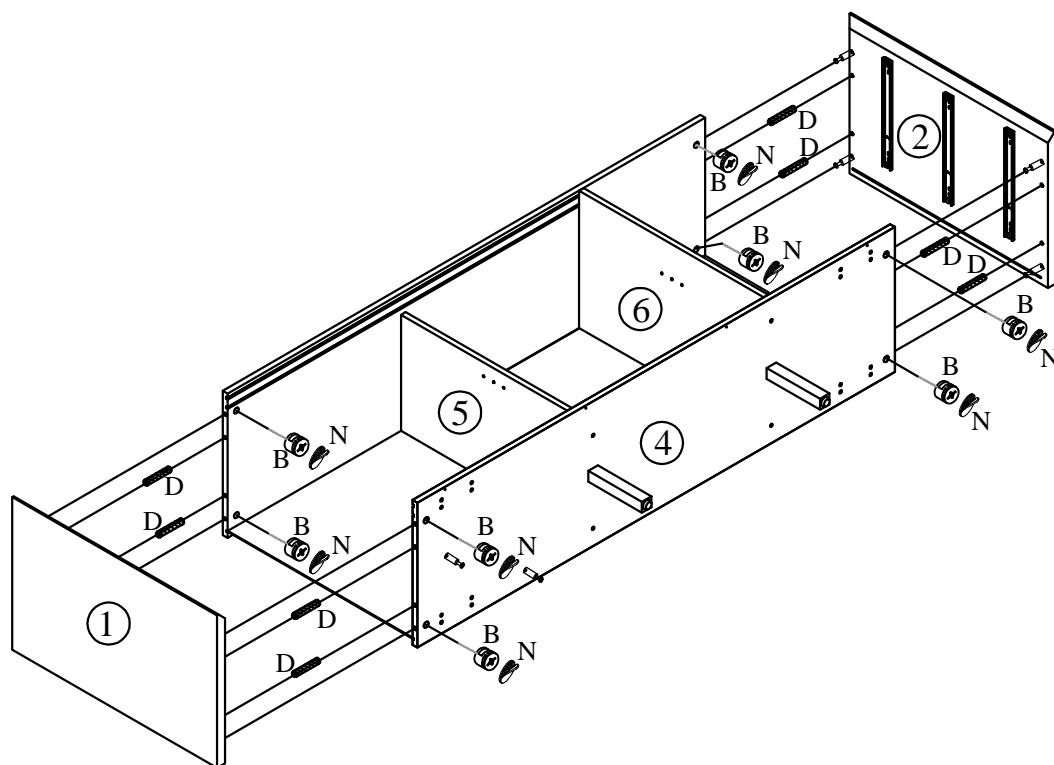

B x 8




D x 8



N x 8



## STEP 11

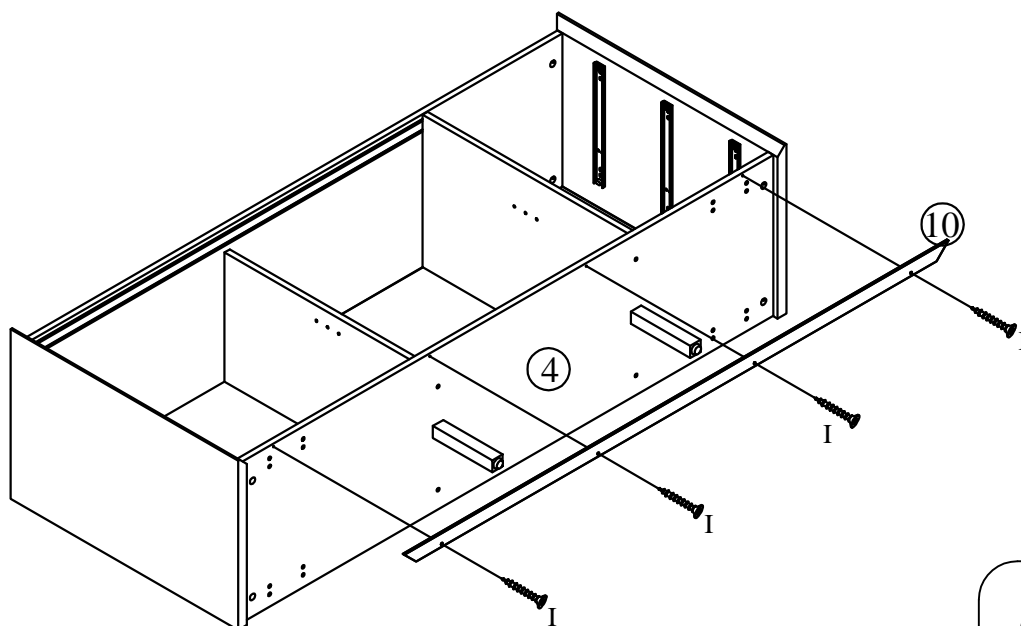


I x 4

# SIDEBOARD

## STEP 12

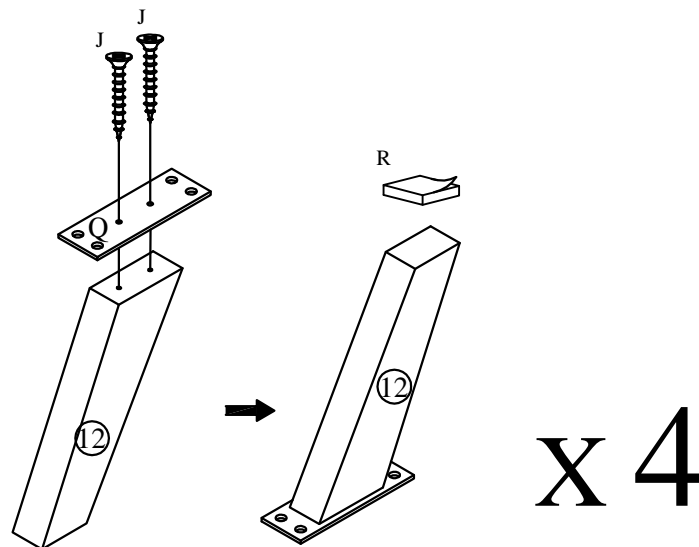

J x 8





Q x 4



R x 4

## STEP 13

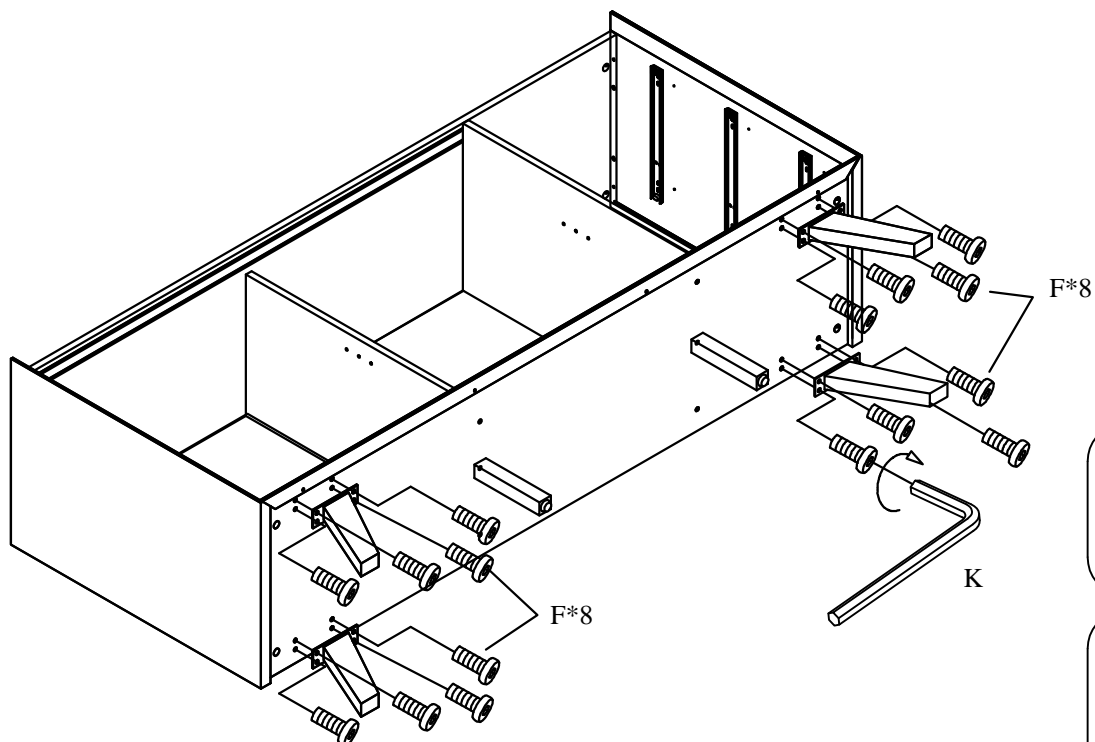


F x 16



K x 1


# SIDEBOARD

## STEP 14

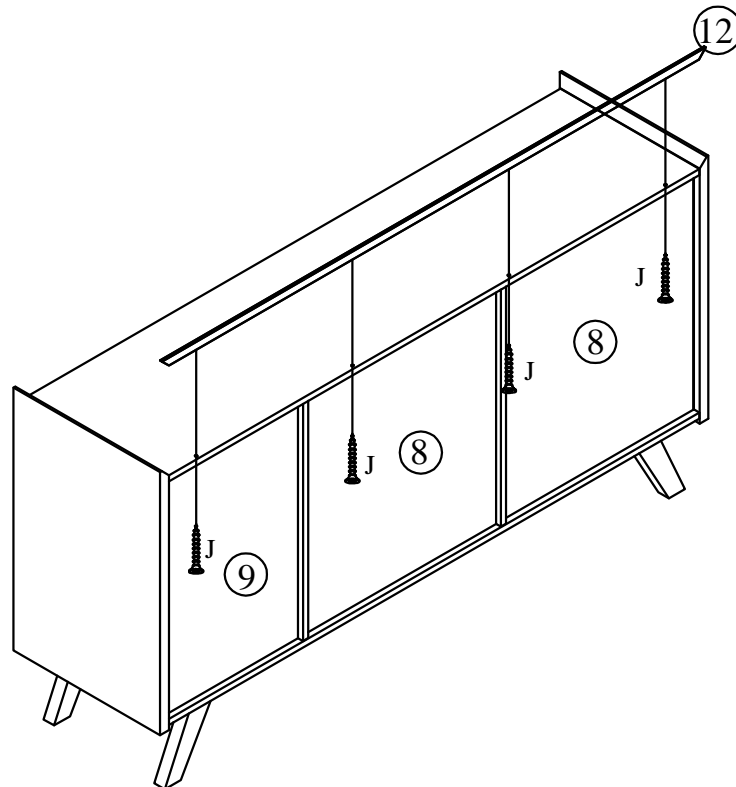

J x 4

## STEP 15

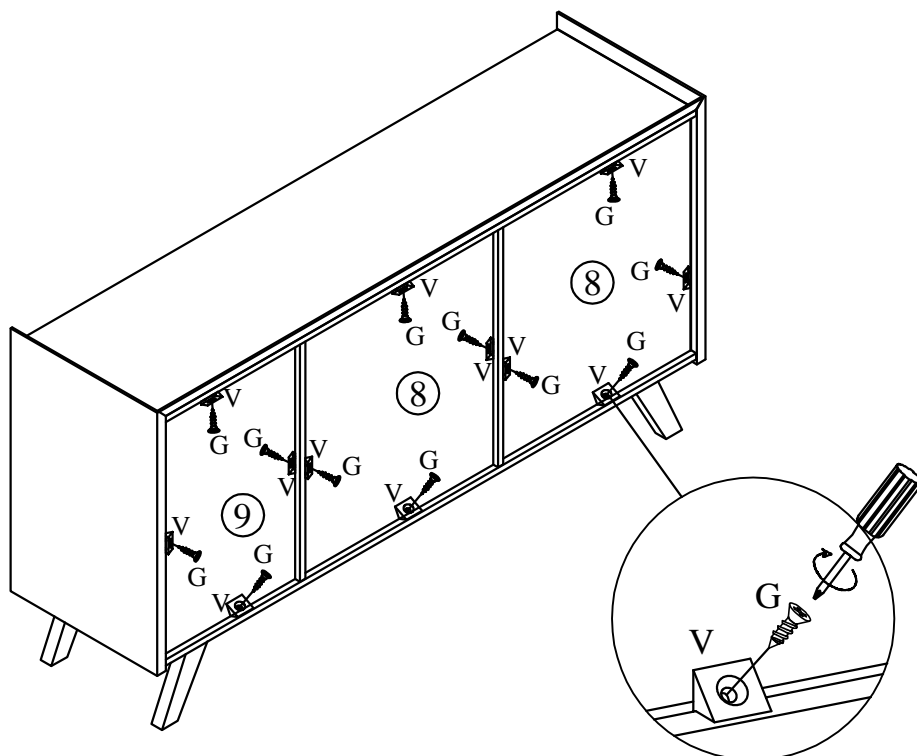


G x 12



V x 12

# SIDEBOARD

## STEP 16

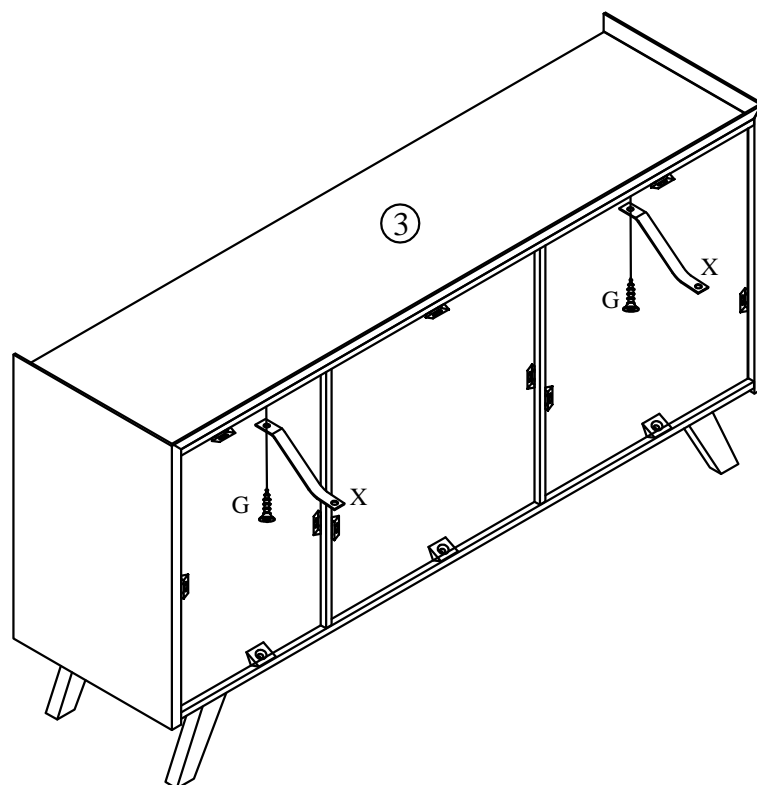


G x 2




X x 2

## STEP 17

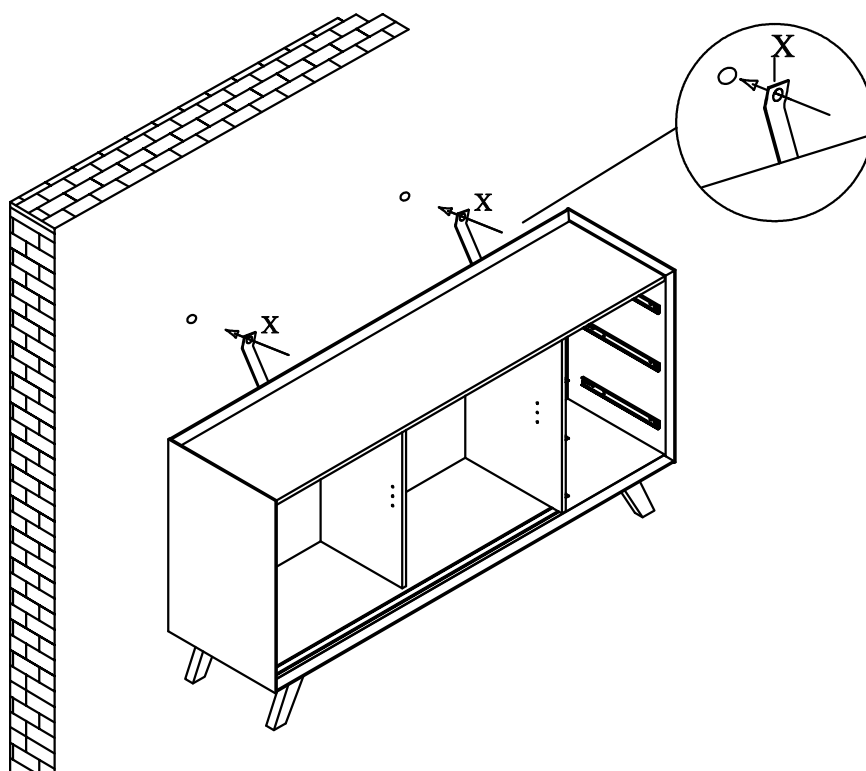

# SIDEBOARD

## STEP 18

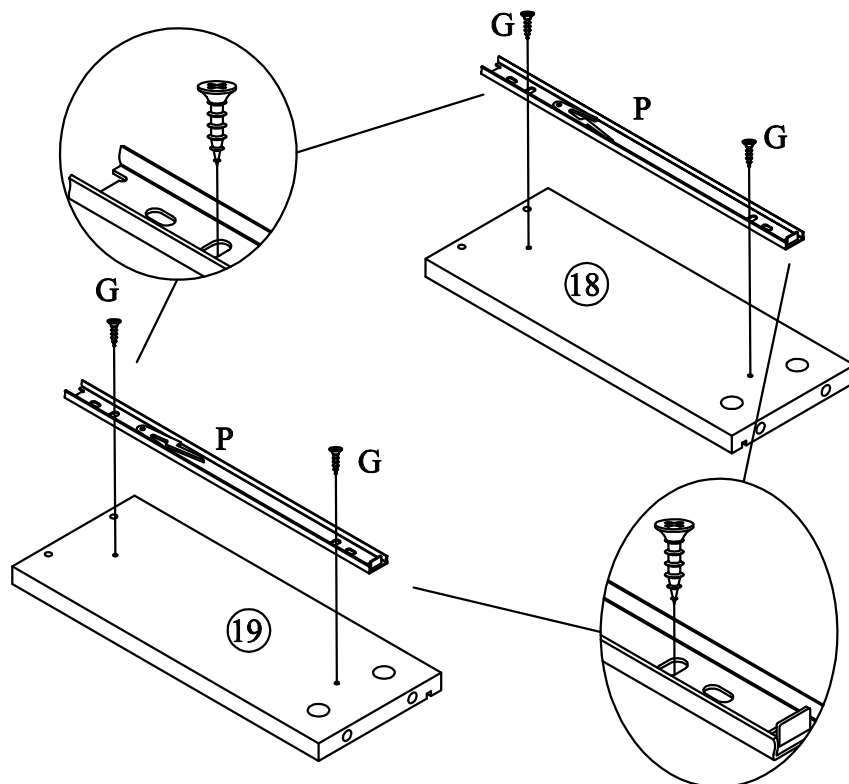

x 3




P x 6



G x 12

## STEP 19

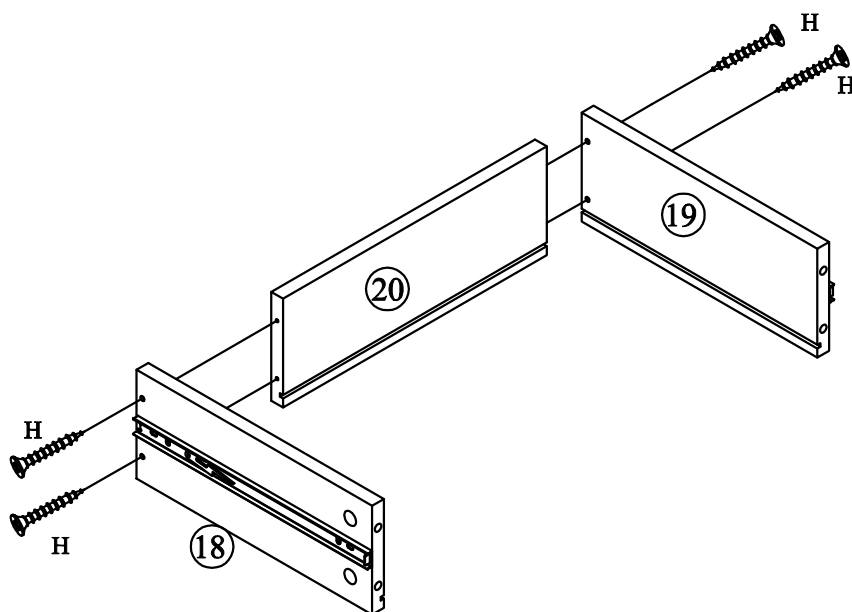


x 3



H x 12


# SIDEBOARD

## STEP 20

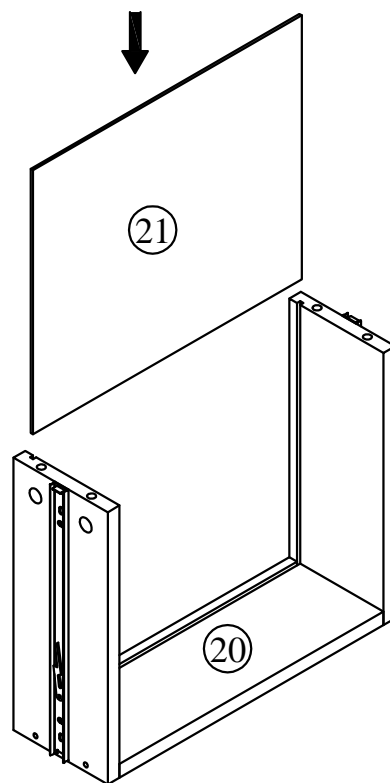


x 3

## STEP 21

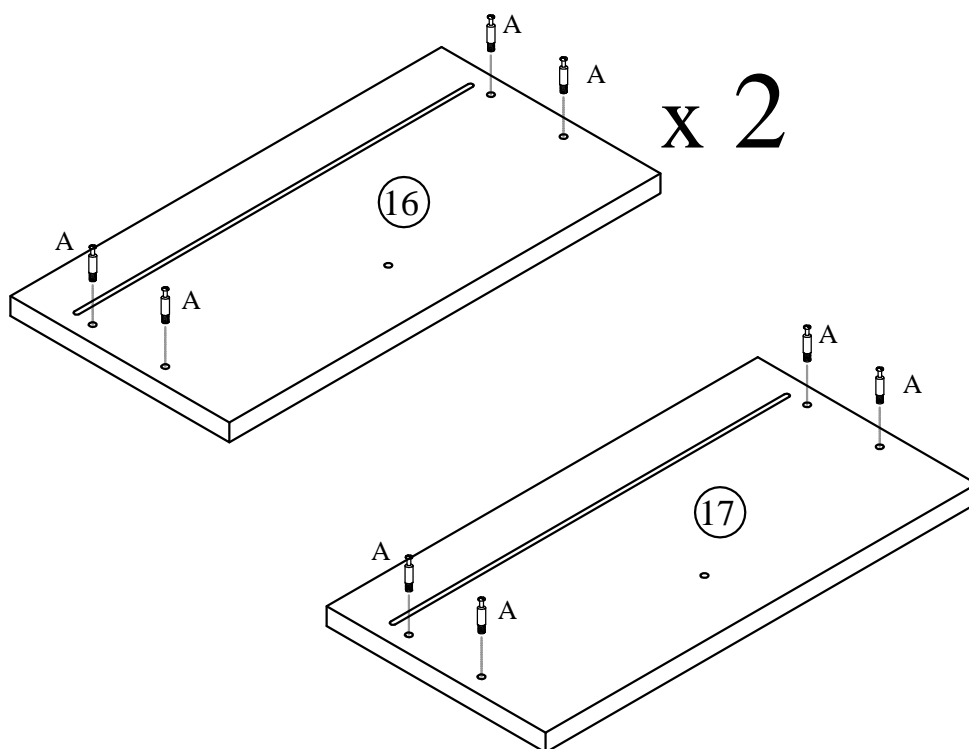


# SIDEBOARD

## STEP 22

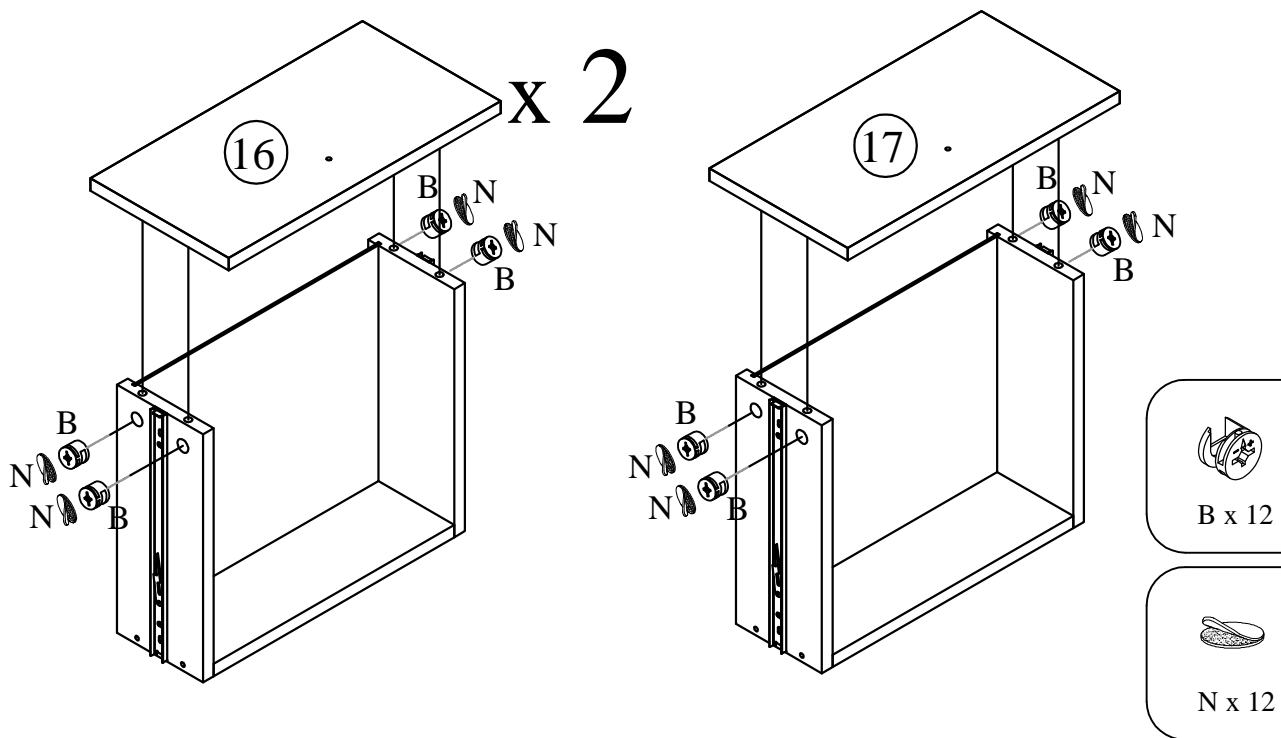


## STEP 23

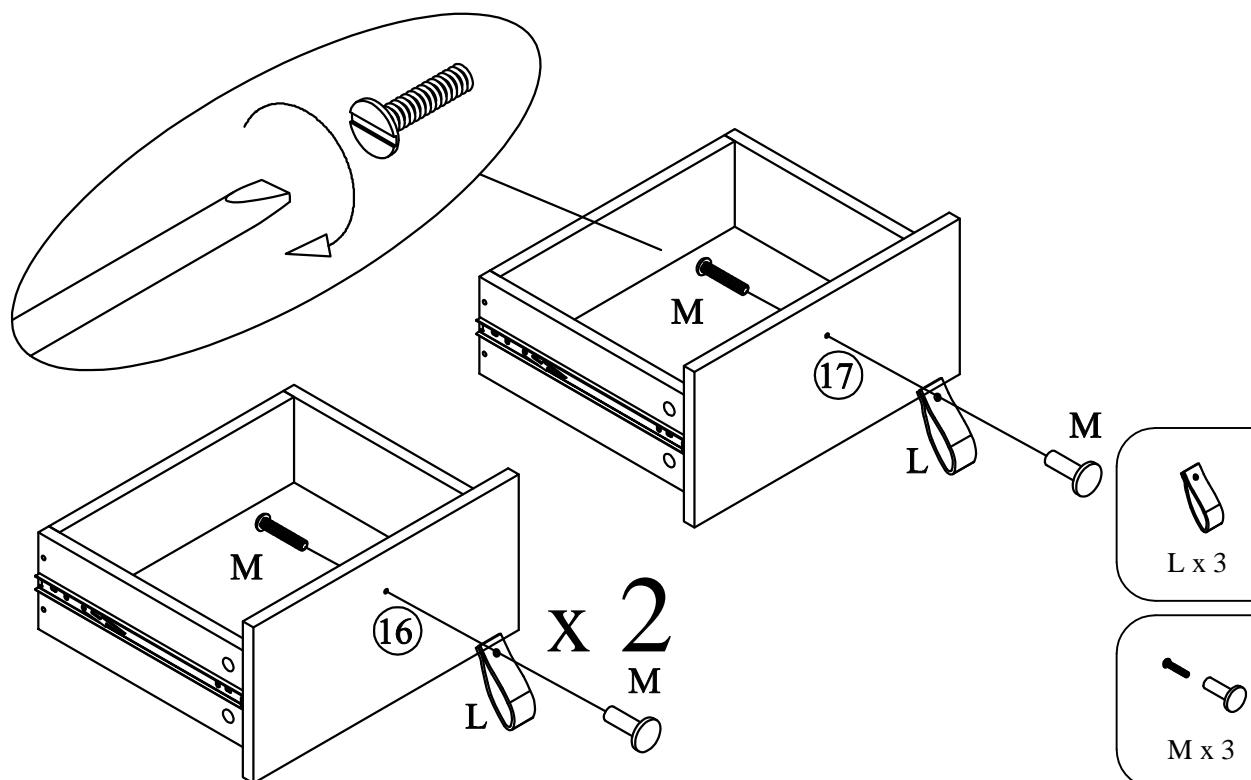




# SIDEBOARD

## STEP 24

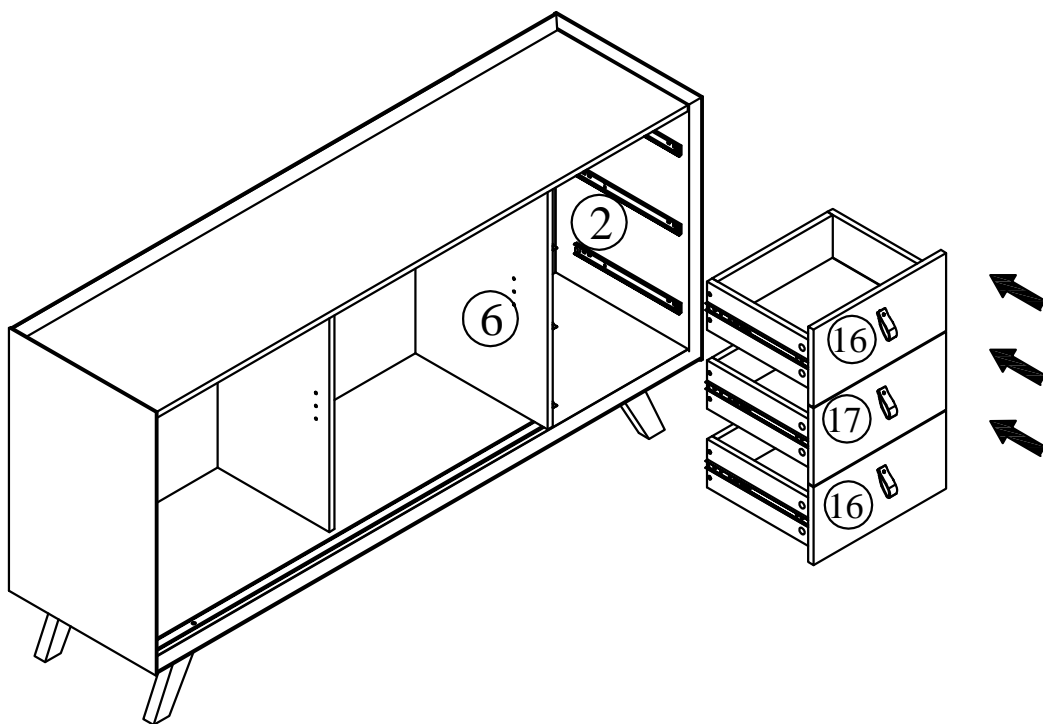


## STEP 25

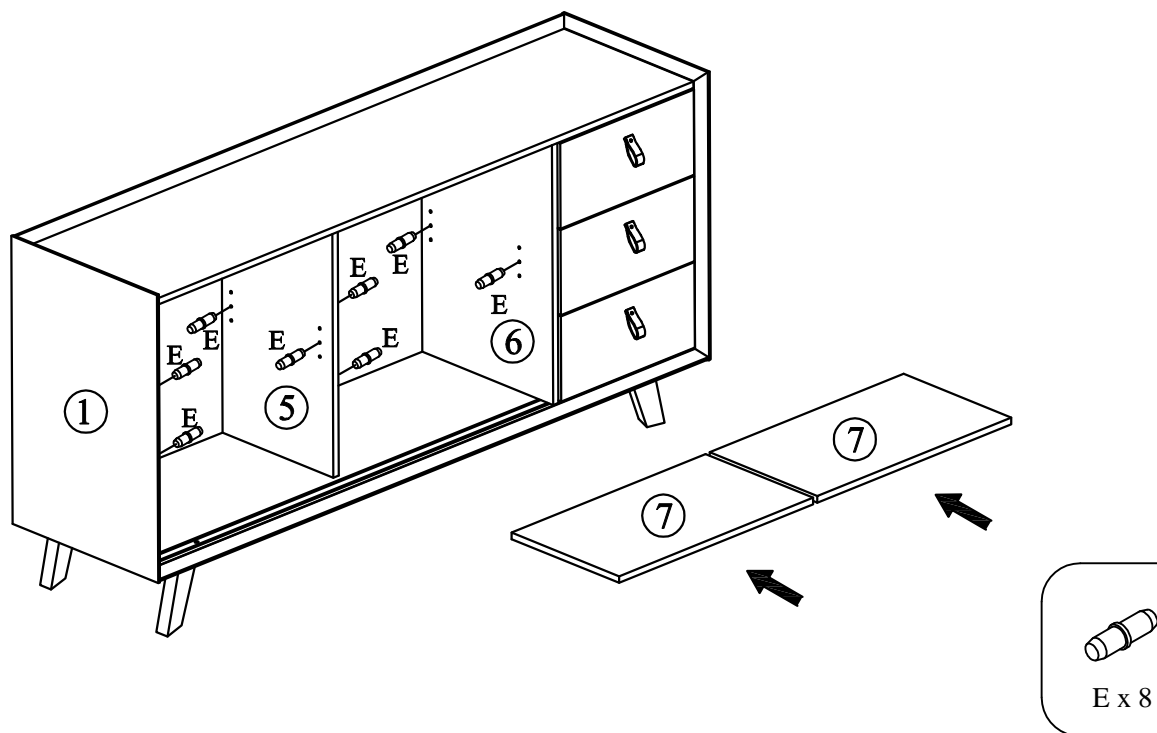


# SIDEBOARD

## STEP 26

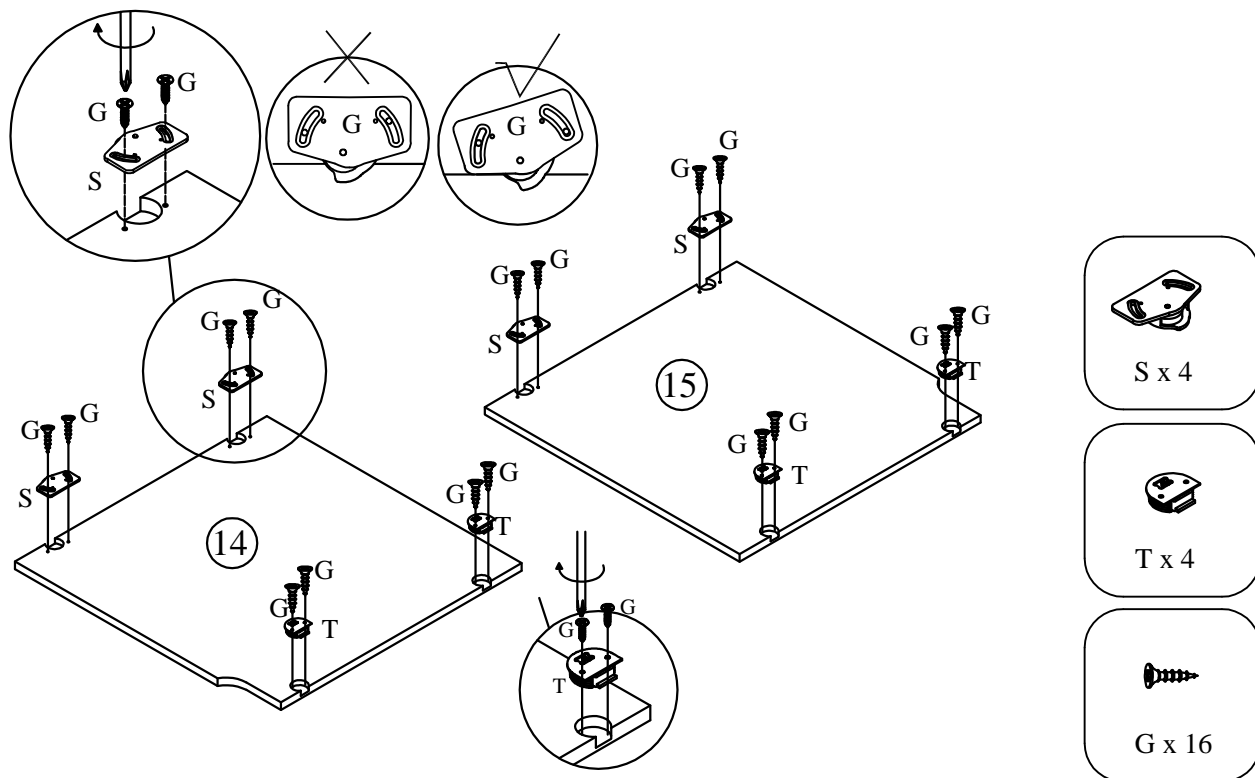


## STEP 27

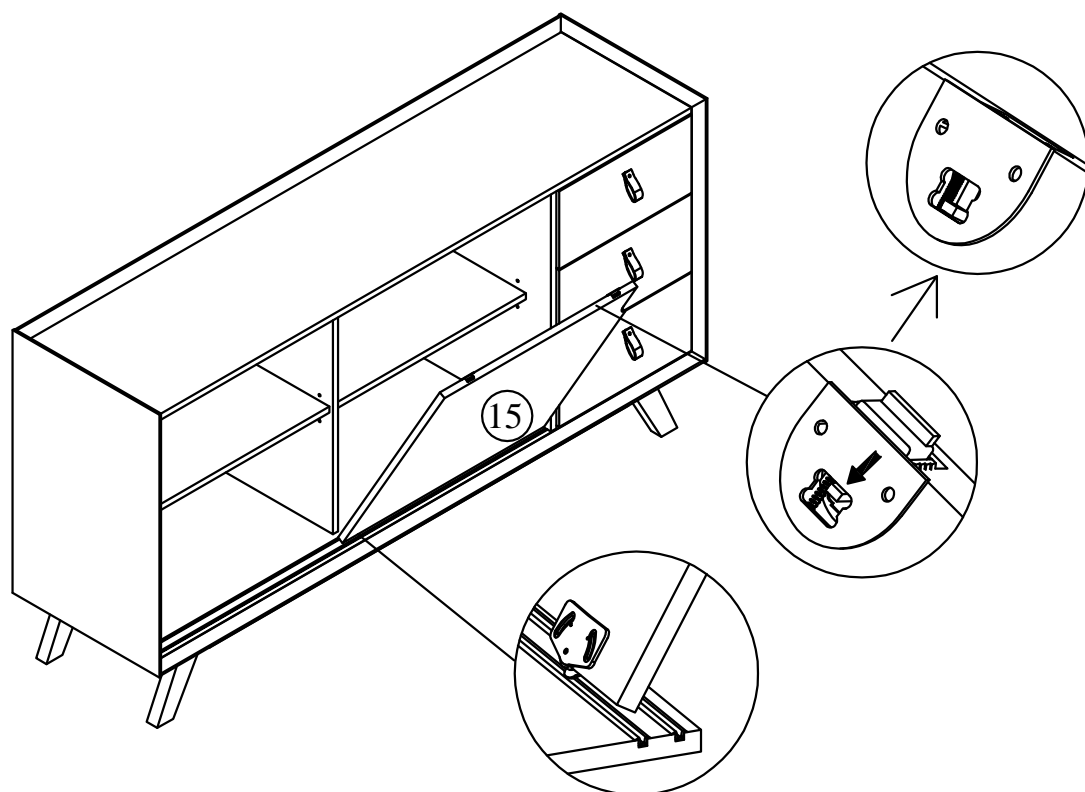

# SIDEBOARD

## STEP 28

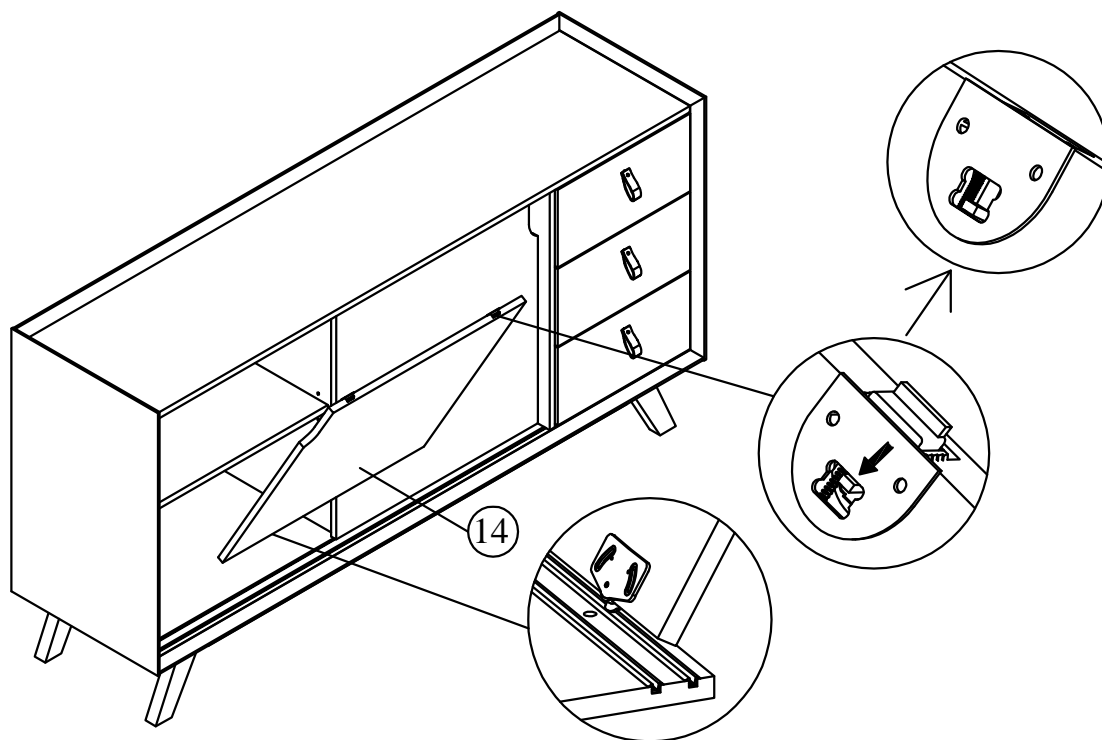

## STEP 29

