


# COFFEE TABLE WITH DOOR

## ASSEMBLY INSTRUCTIONS

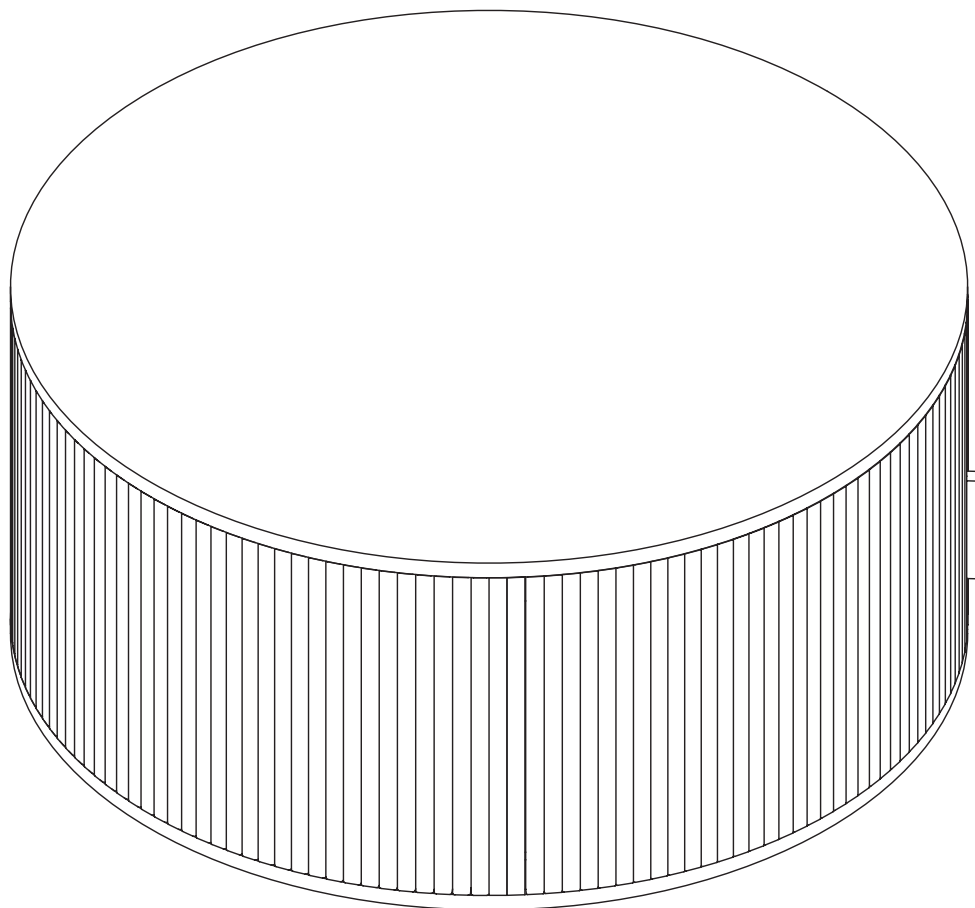

# TIPS BEFORE YOU START

---


1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

## CARE AND MAINTENANCE OF YOUR FURNITURE

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ To clean glass, please use glass cleaner.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag or pull your furniture.

## ASSEMBLY REQUIREMENTS


- ✓ Equipment: phillips head screwdriver, flat head screwdriver
- ✓ 1 x adults required
- ✓ 1m x 1.5m assembly space required
- ✓ 1 hour assembly time approx.



# USING CAM LOCK AND QUICKFIT


## QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

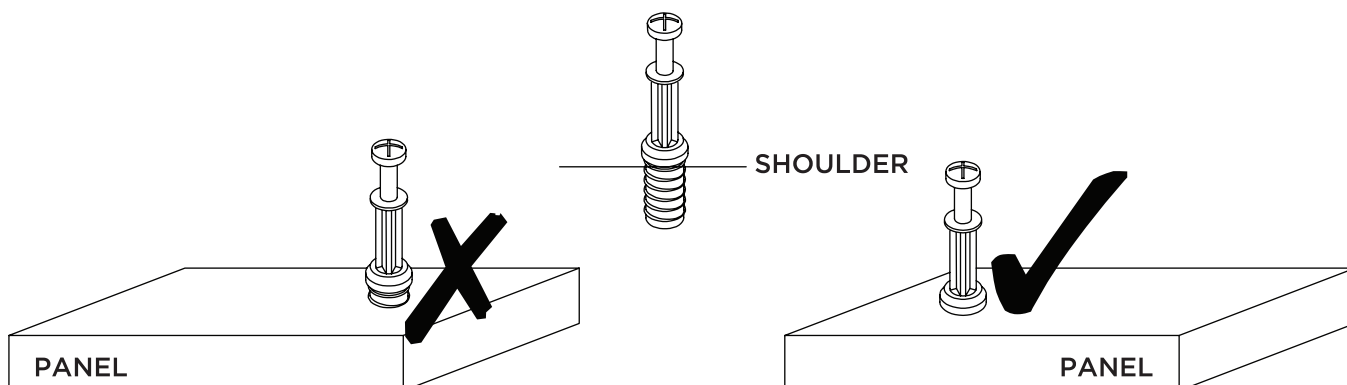


## CAM LOCK


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

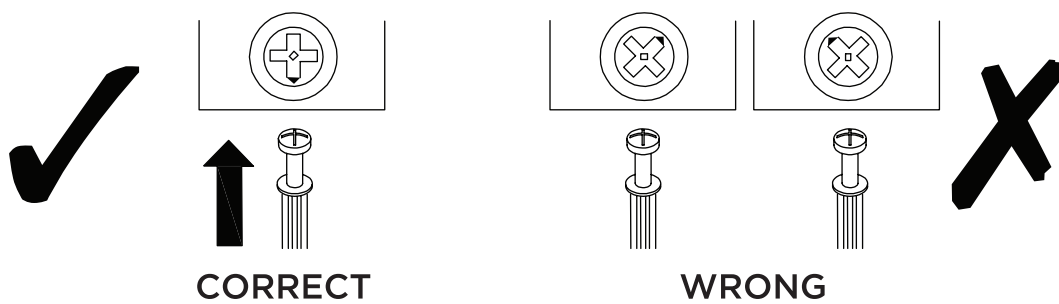

Quickfit head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.

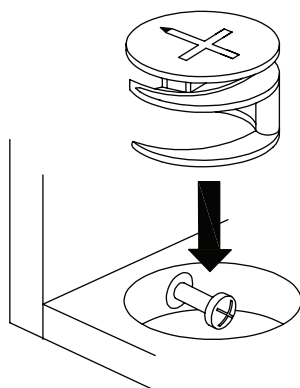


Turn cam lock clockwise to tighten.

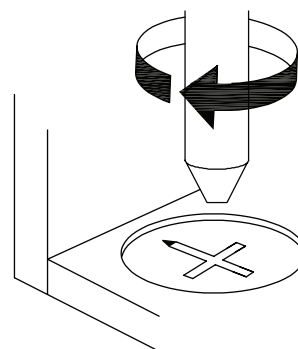

# HARDWARE LIST


---

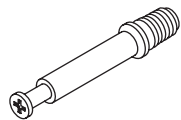


6 x A  
Quickfit Screw




6 x B  
Cam Lock




12 x C  
Wooden Dowel

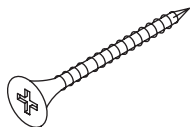


14 x D  
Screw




2 x E  
Screw

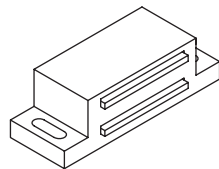


1 x F  
Magnet




10 x G  
Screw

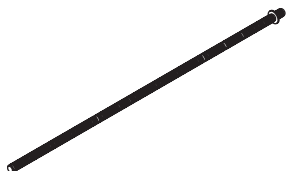


1 x H  
Rebar Bolt

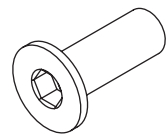

1 x I  
Bolt

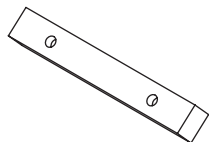


1 x J  
Handle




1 x K  
Bracket




2 x L  
Screw



6 x M  
Screw

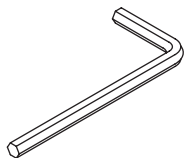

1 x O  
Allen Key

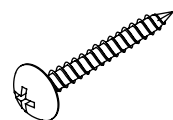


2 x P  
Screw




1 x Q  
Washer

# PARTS LIST


---

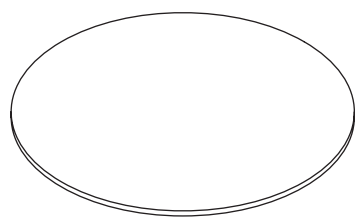

**1**  
1 PC

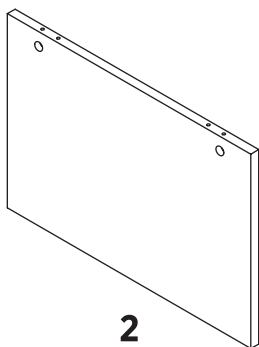

**2**  
1 PC

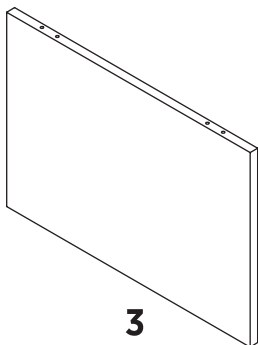


**3**  
1 PC




**4**  
1 PC




**5**  
1 PC

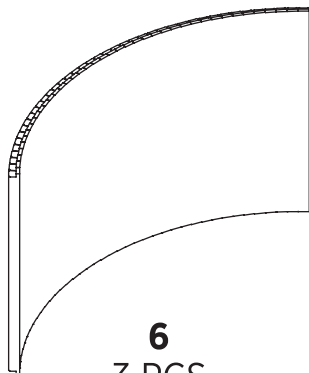

**6**  
3 PCS

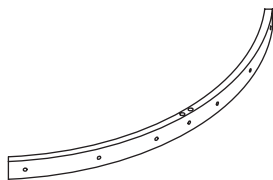

**7**  
1 PC

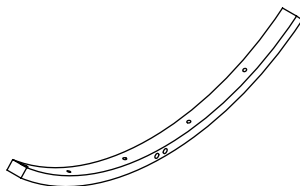

**8**  
1 PC




**9**  
1 PC




**10**  
1 PC



**11**  
1 PC

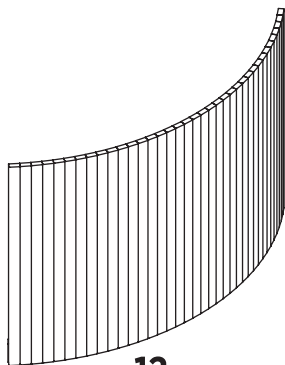

**12**  
1 PC

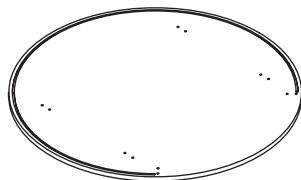




**13**  
1 PC

# ASSEMBLY INSTRUCTIONS

## STEP 1

Insert quickfit screws (A) to part 1.

Fix magnet (F) to part 1 using screws (E), as shown.

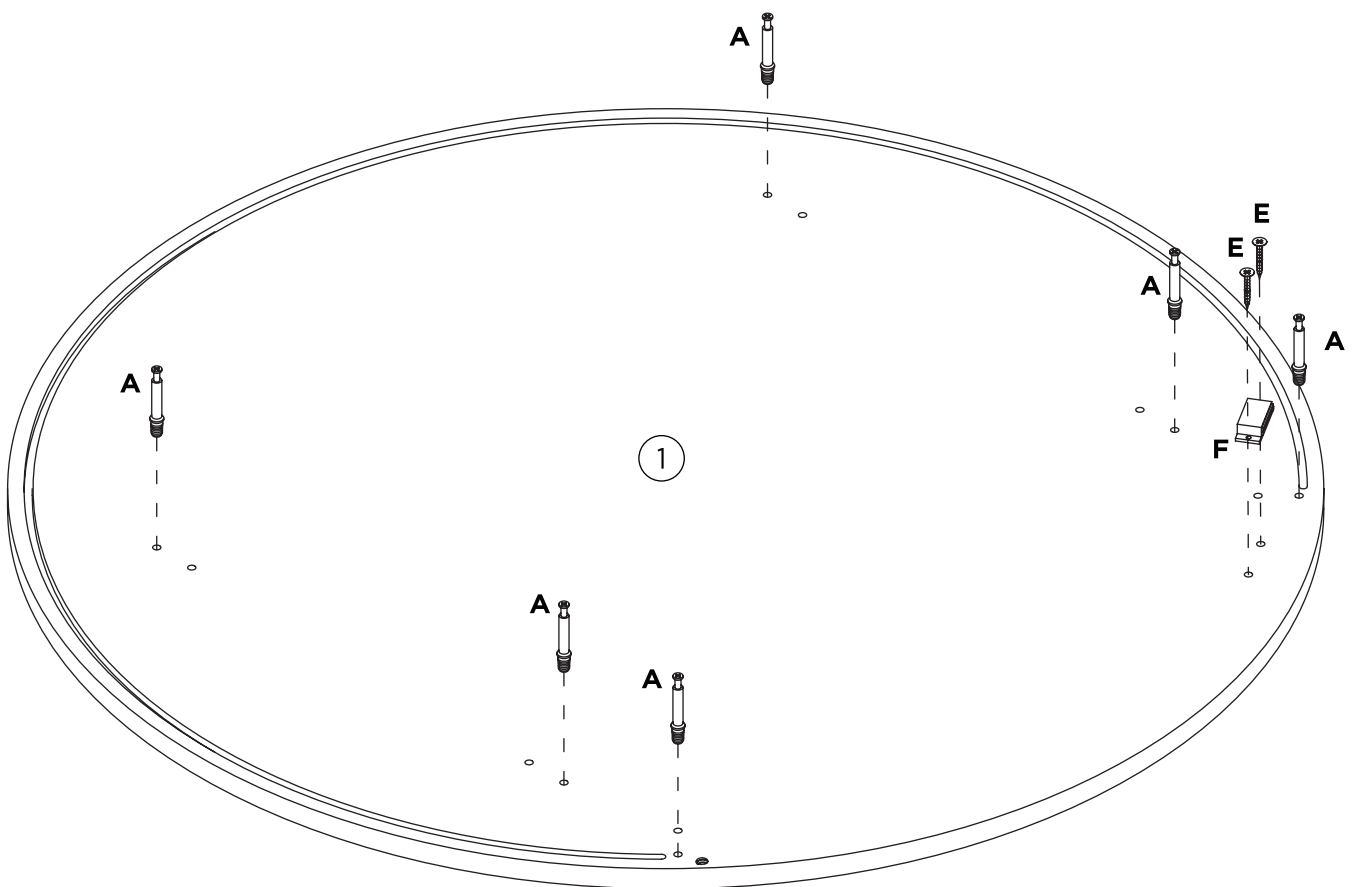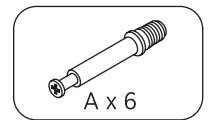



# ASSEMBLY INSTRUCTIONS

## STEP 2

Insert wooden dowels (C) and cam locks (B) to parts 2, 3, 4 and 5.

Attach part 1 to parts 2, 3, 4 and 5.



Turn cam locks clockwise to tighten.

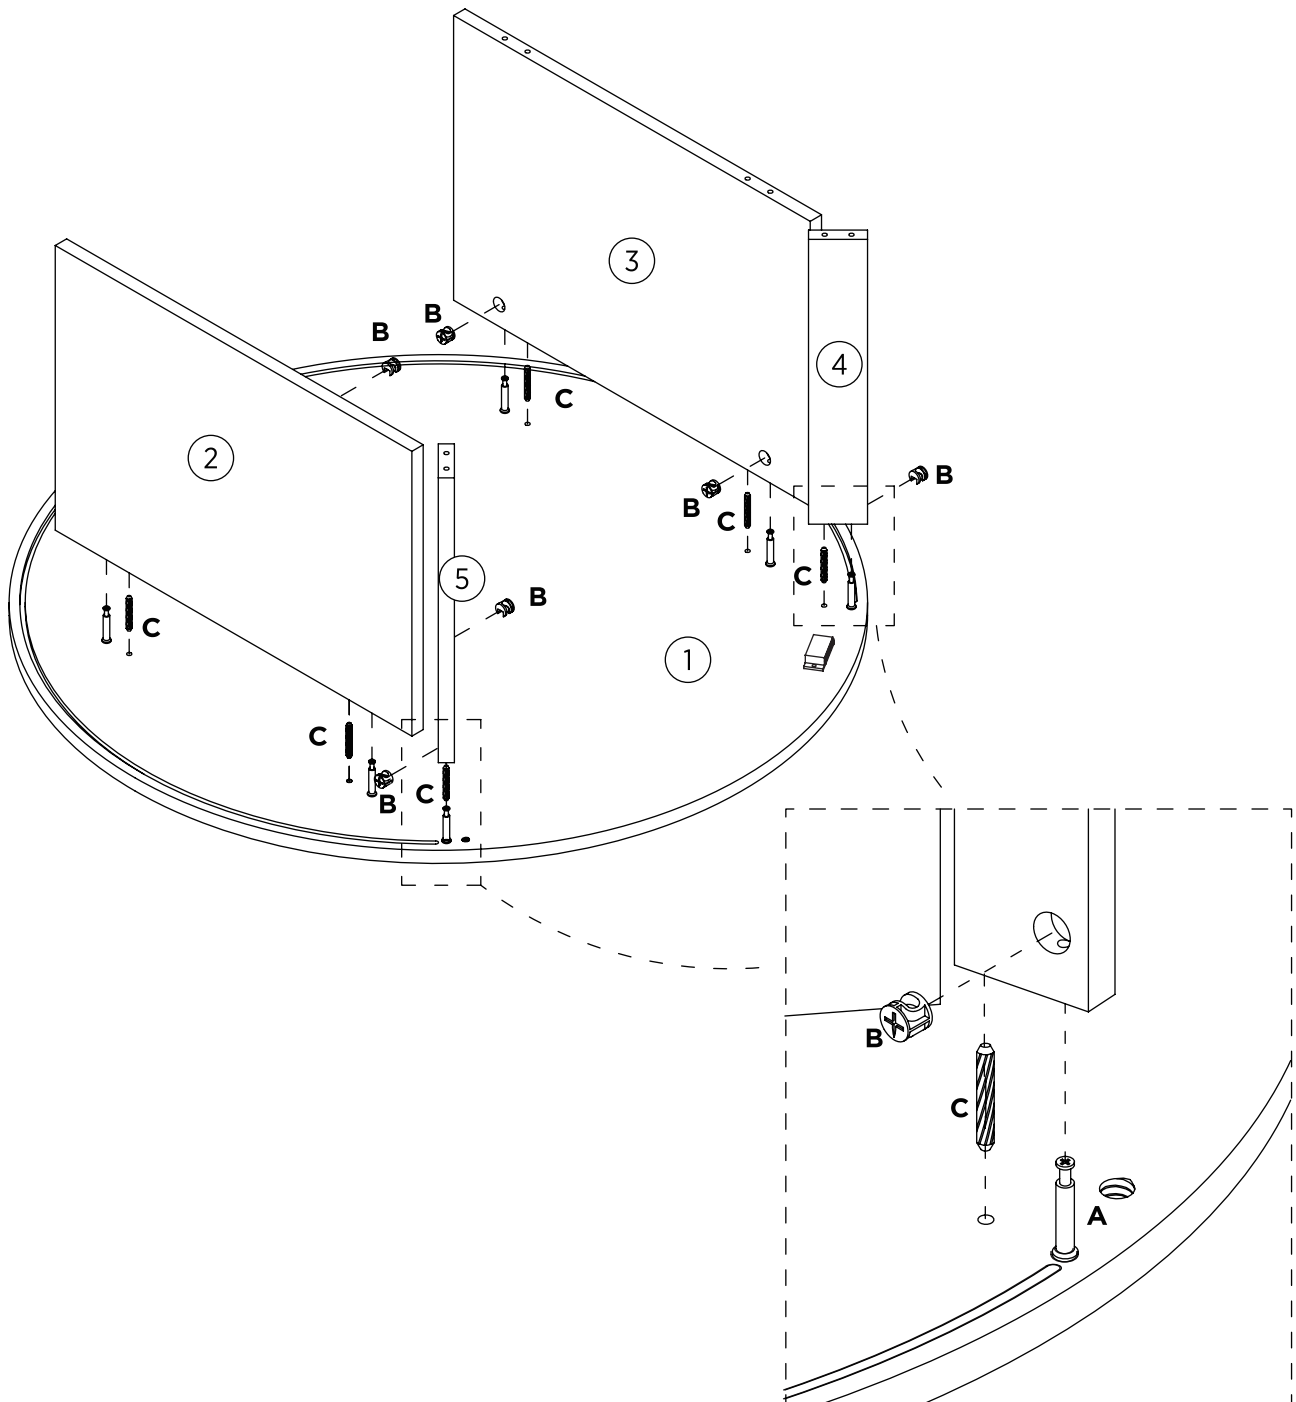

# ASSEMBLY INSTRUCTIONS

## STEP 3

Insert rebar bolt (H) to part 1, as shown.

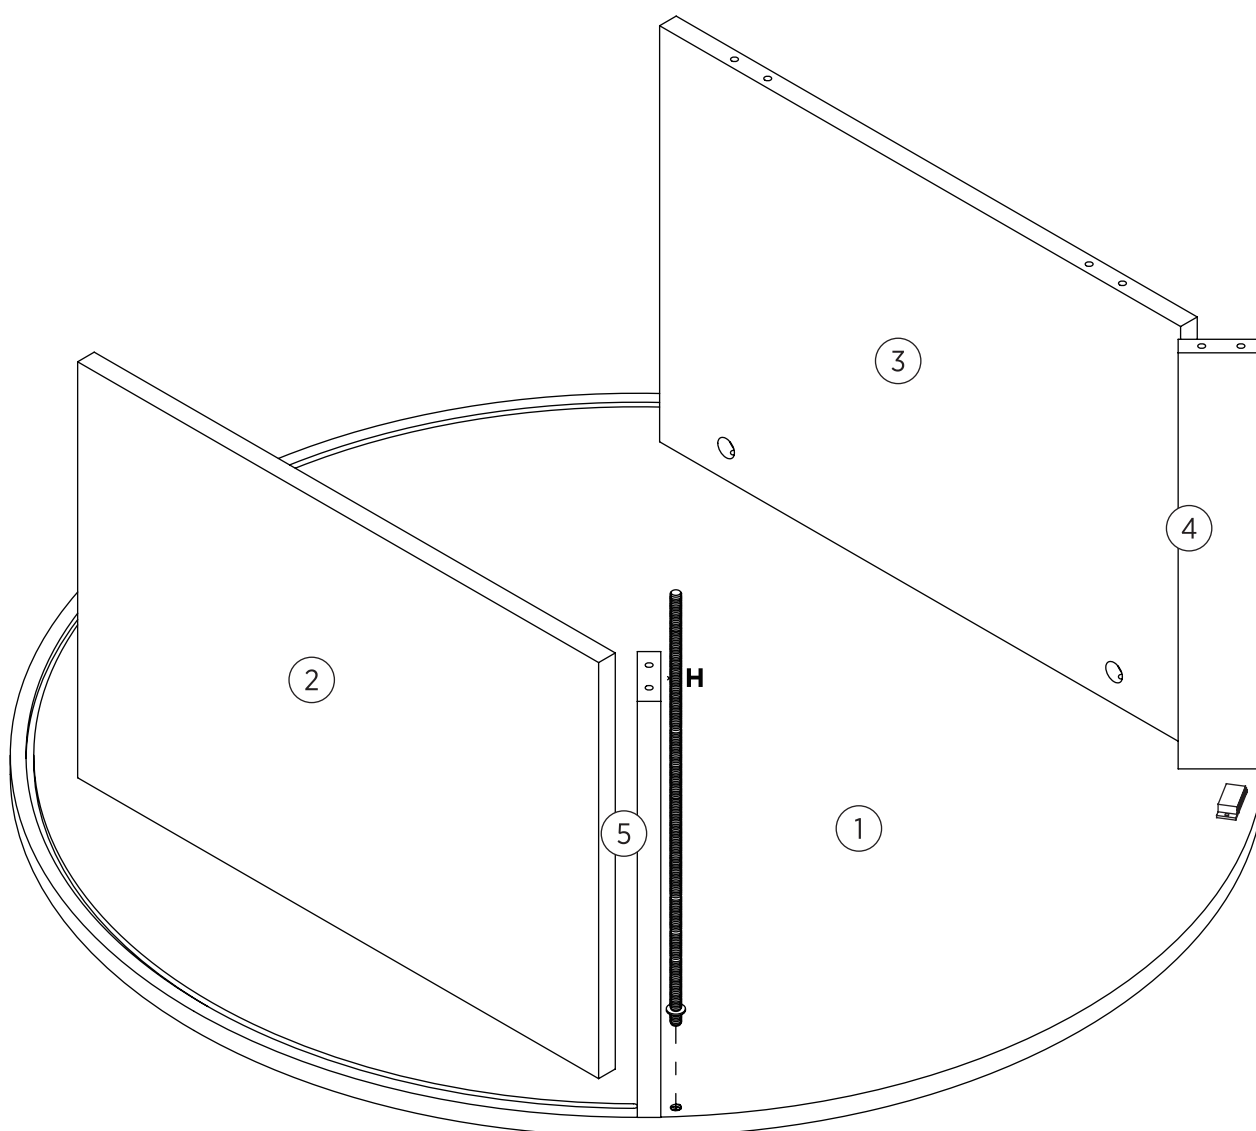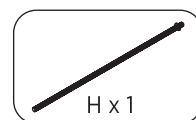




# ASSEMBLY INSTRUCTIONS

---

## STEP 4



Insert parts 6 into groove on part 1, as shown.

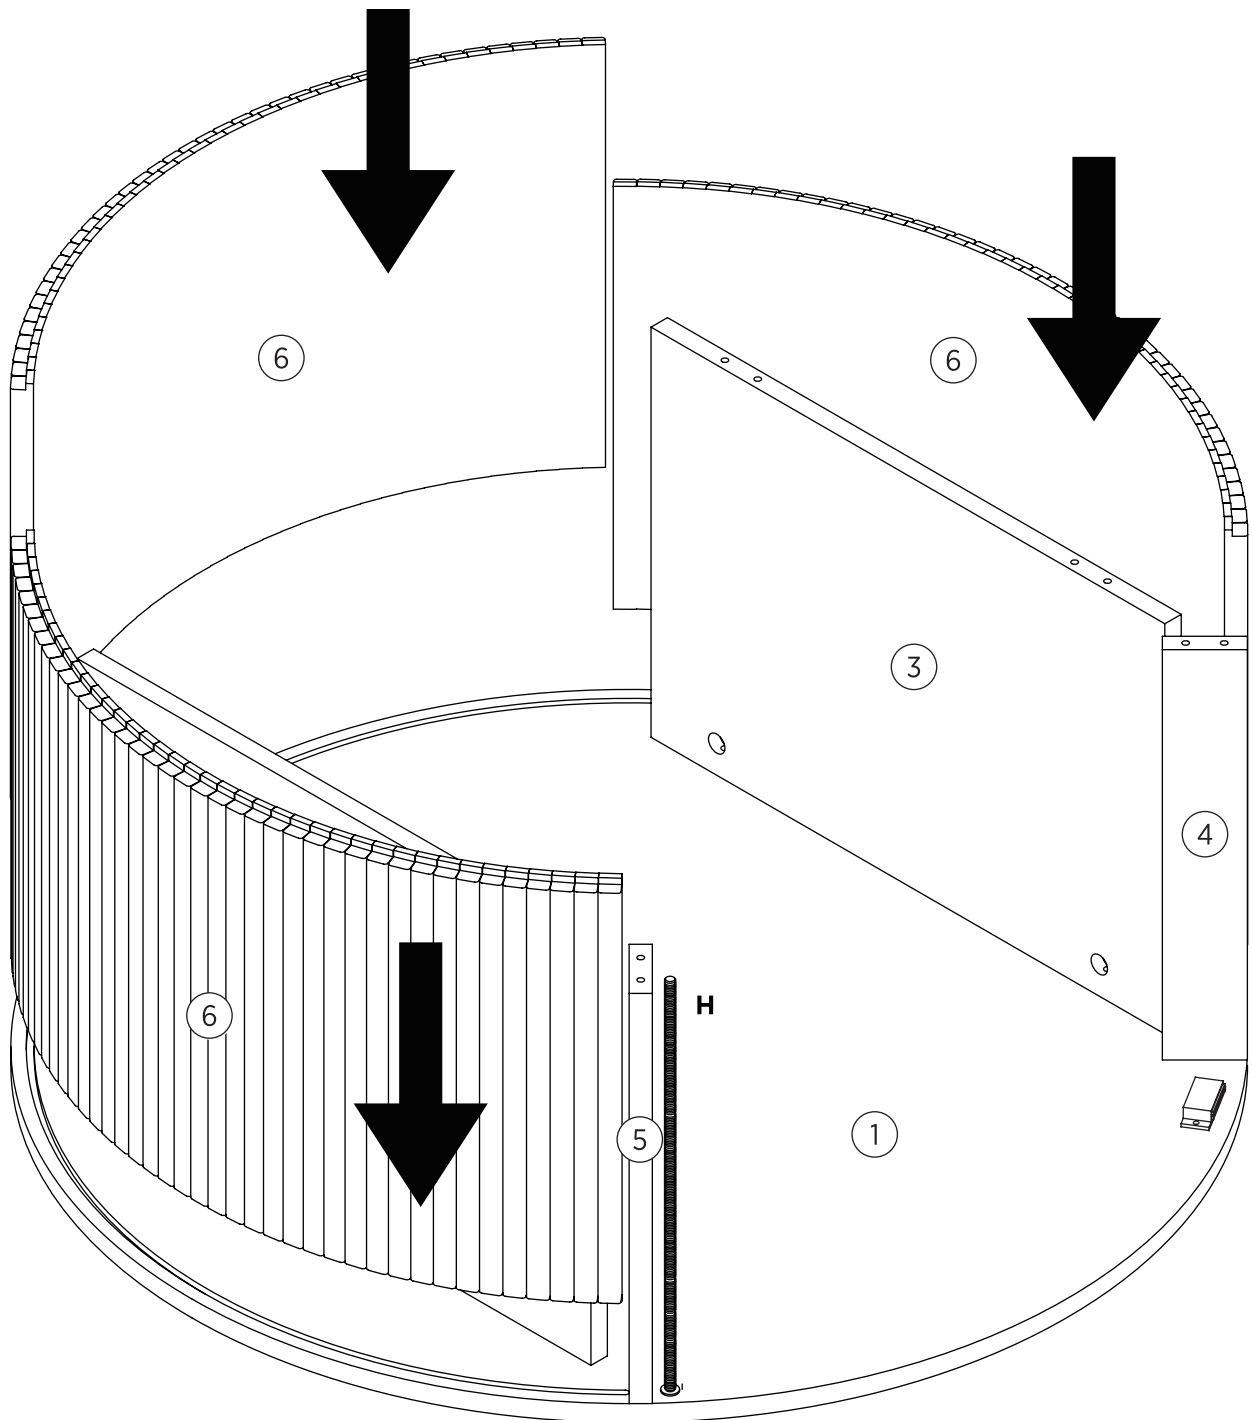

# ASSEMBLY INSTRUCTIONS

## STEP 5

Fix part 9 to parts 7 and 8 using screws (D), as shown.

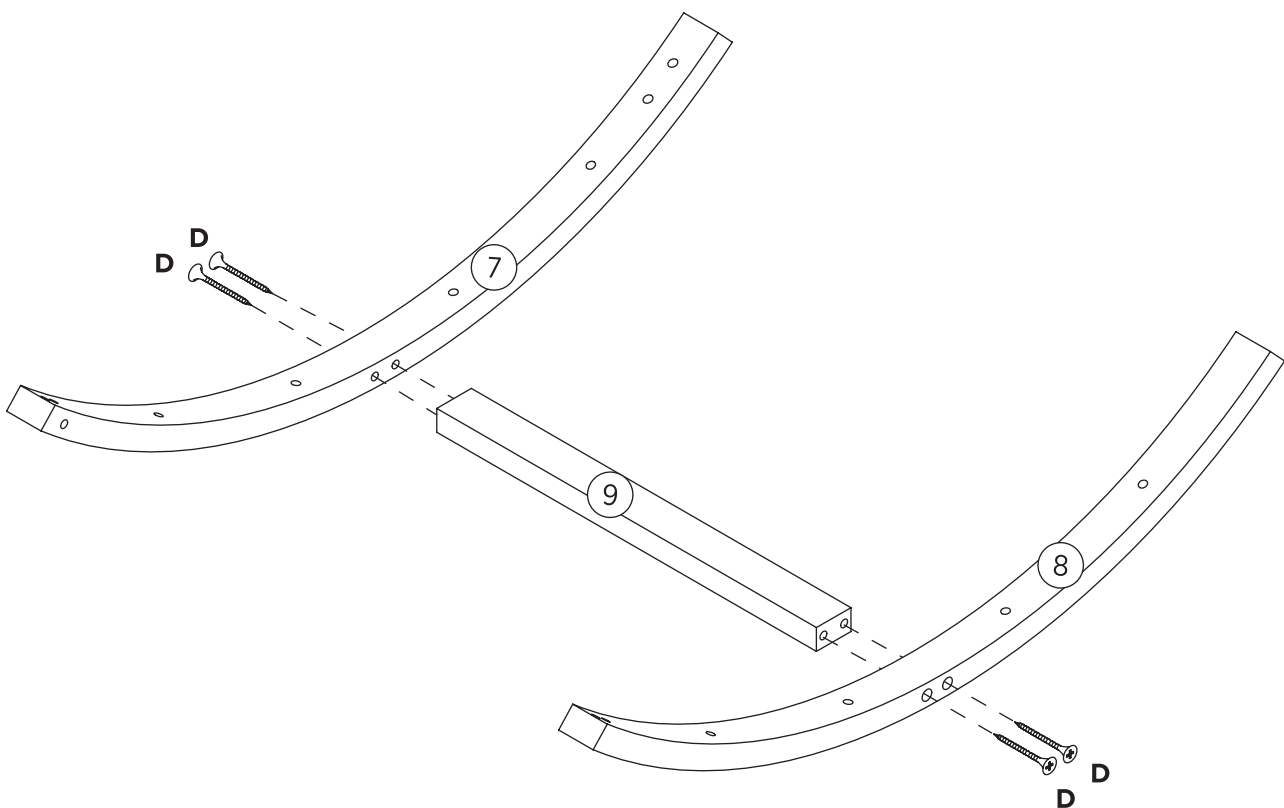



# ASSEMBLY INSTRUCTIONS

## STEP 6

Fix part 10 to parts 7 and 8 using screws (M).



Fix part 11 to parts 7 and 8 using screws (D), as shown.

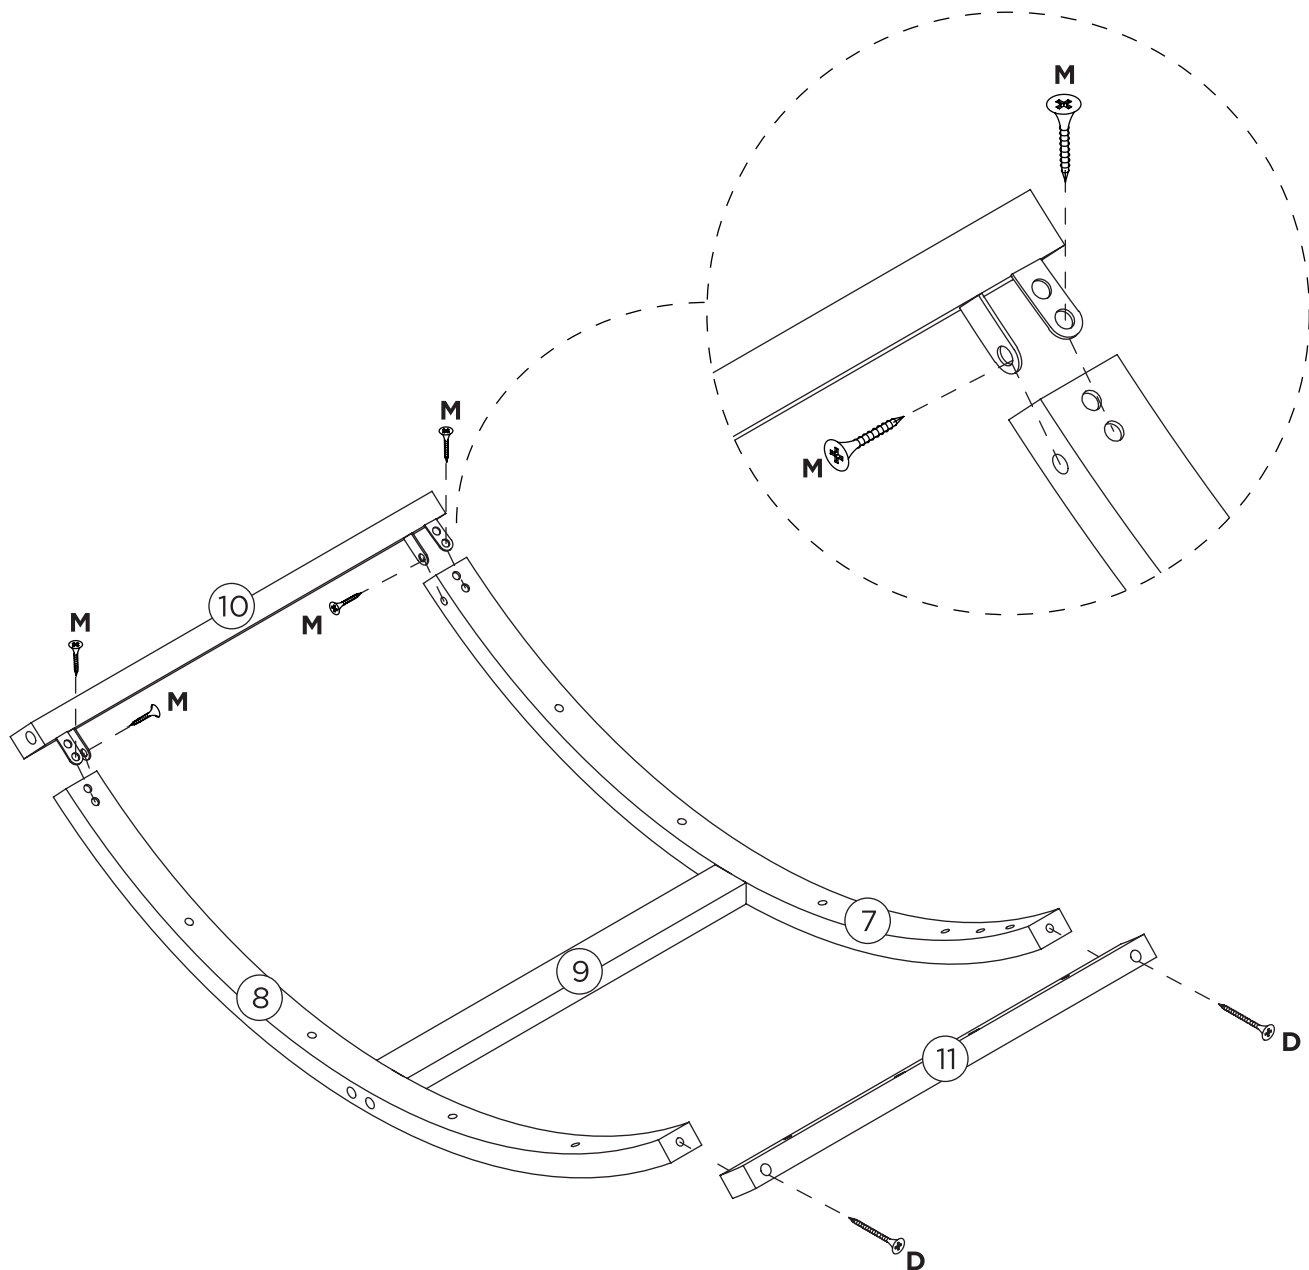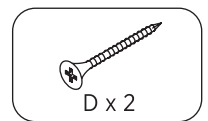

# ASSEMBLY INSTRUCTIONS

## STEP 7




Fix part 12 to assembled unit using screws (G) and (P), as shown.

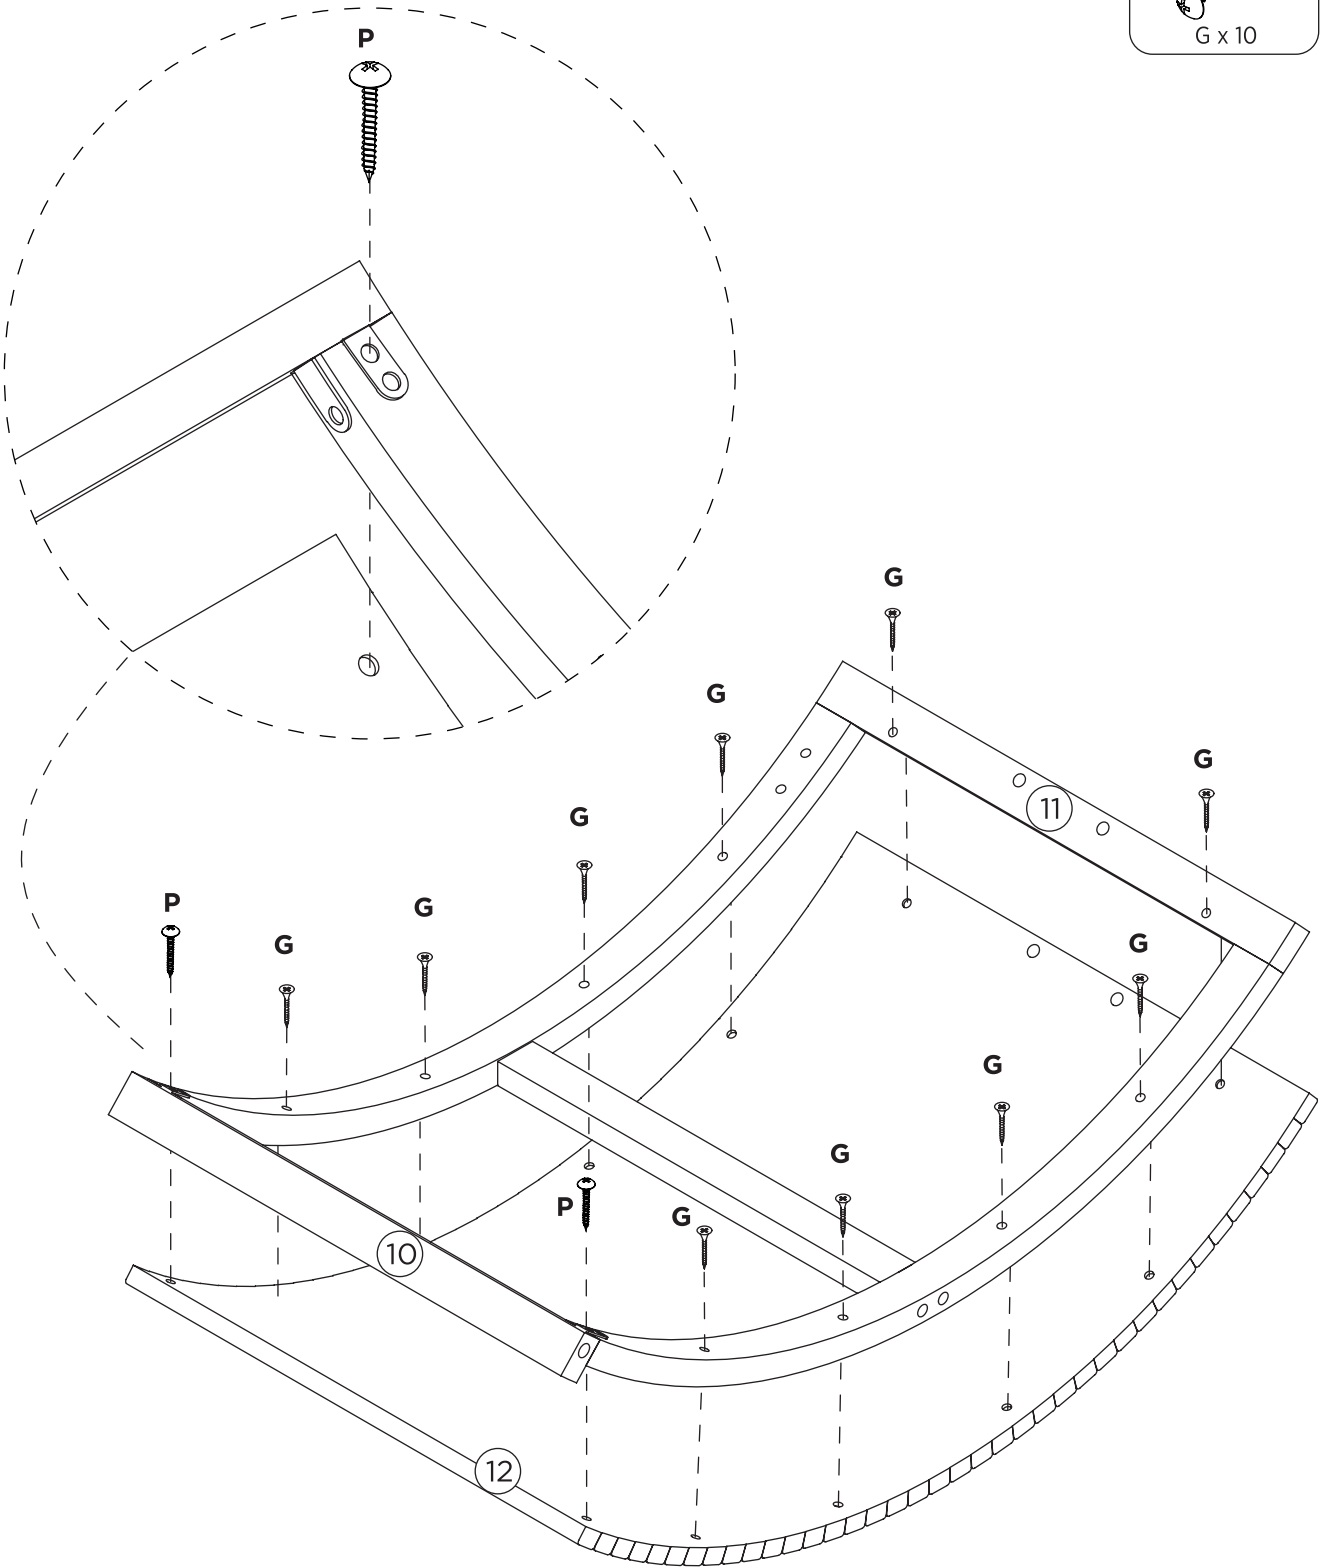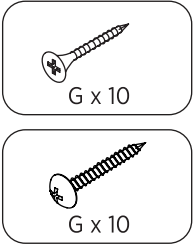

# ASSEMBLY INSTRUCTIONS

## STEP 8



Fix handle (J) to part 11 using screws (D), as shown.

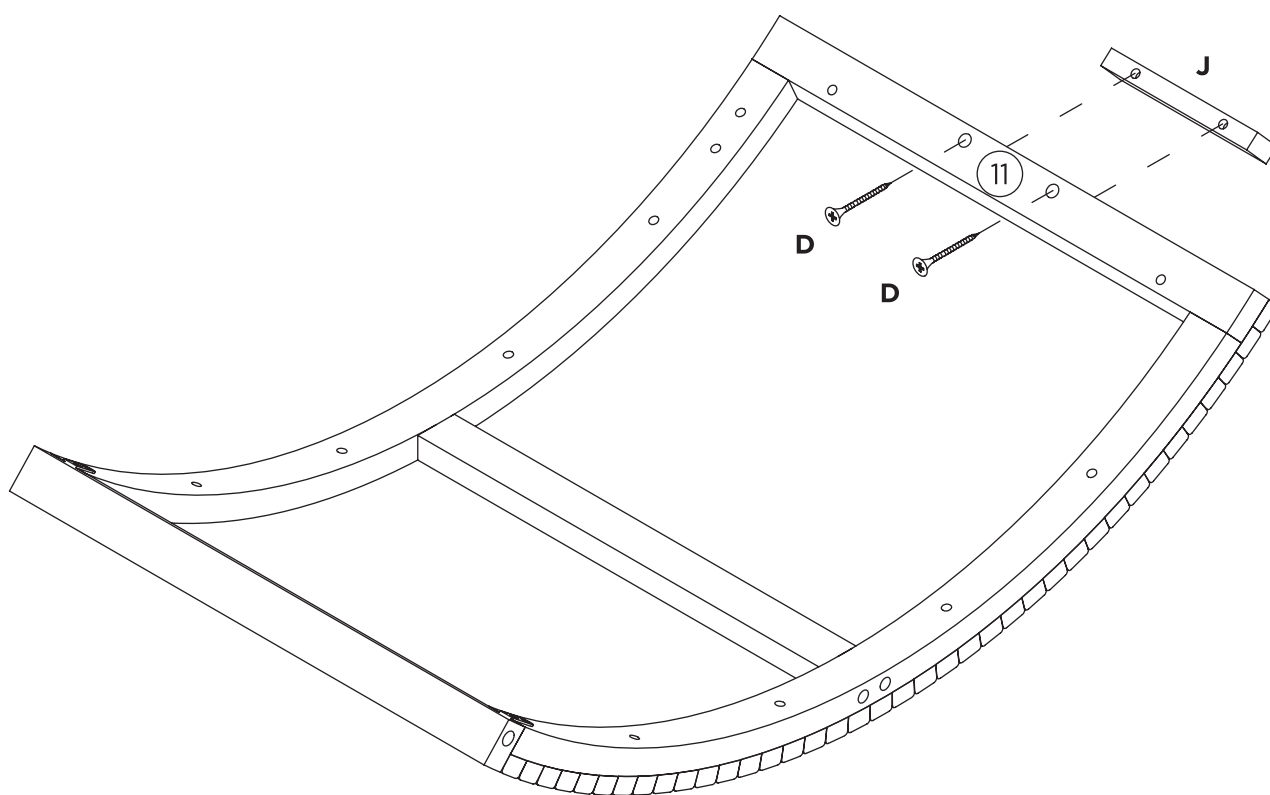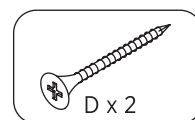

# ASSEMBLY INSTRUCTIONS

## STEP 9


Attach bracket (K) to part 7 using screws (L), as shown.

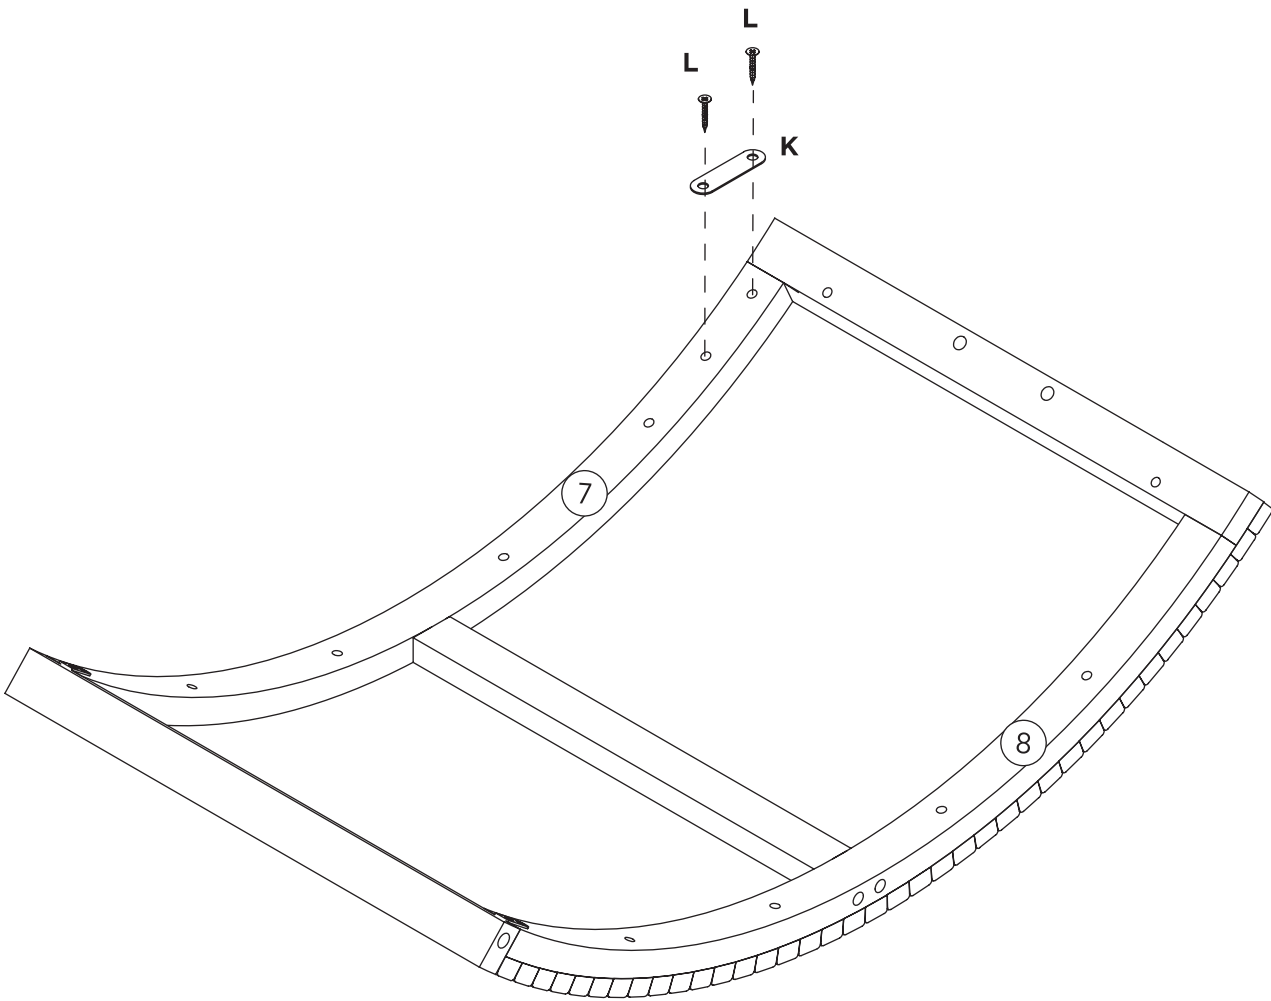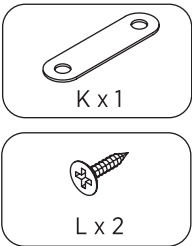

# ASSEMBLY INSTRUCTIONS

## STEP 10

Insert part 10 to rebar bolt (H), as shown.

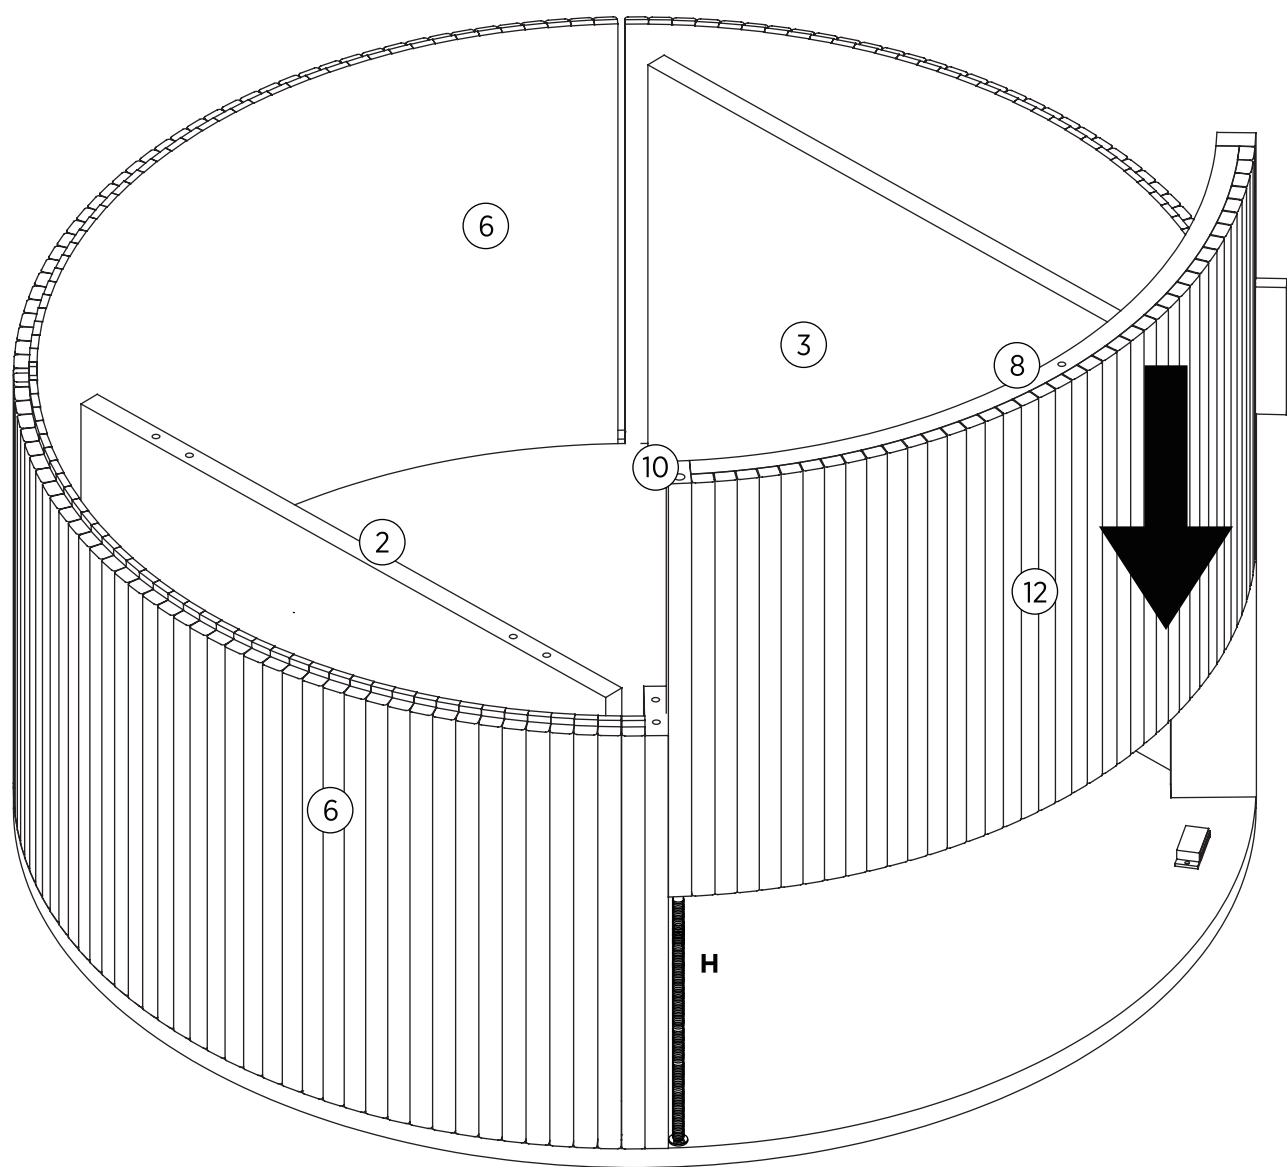







# ASSEMBLY INSTRUCTIONS

## STEP 11

Insert wooden dowels (C) to parts 2, 3, 4 and 5.

Fix part 13 to parts 2, 3, 4 and 5 using screws (D).

Secure part 13 and rebar bolt (H) using washer (Q), bolt (I) tighten with allen key (O), as shown.

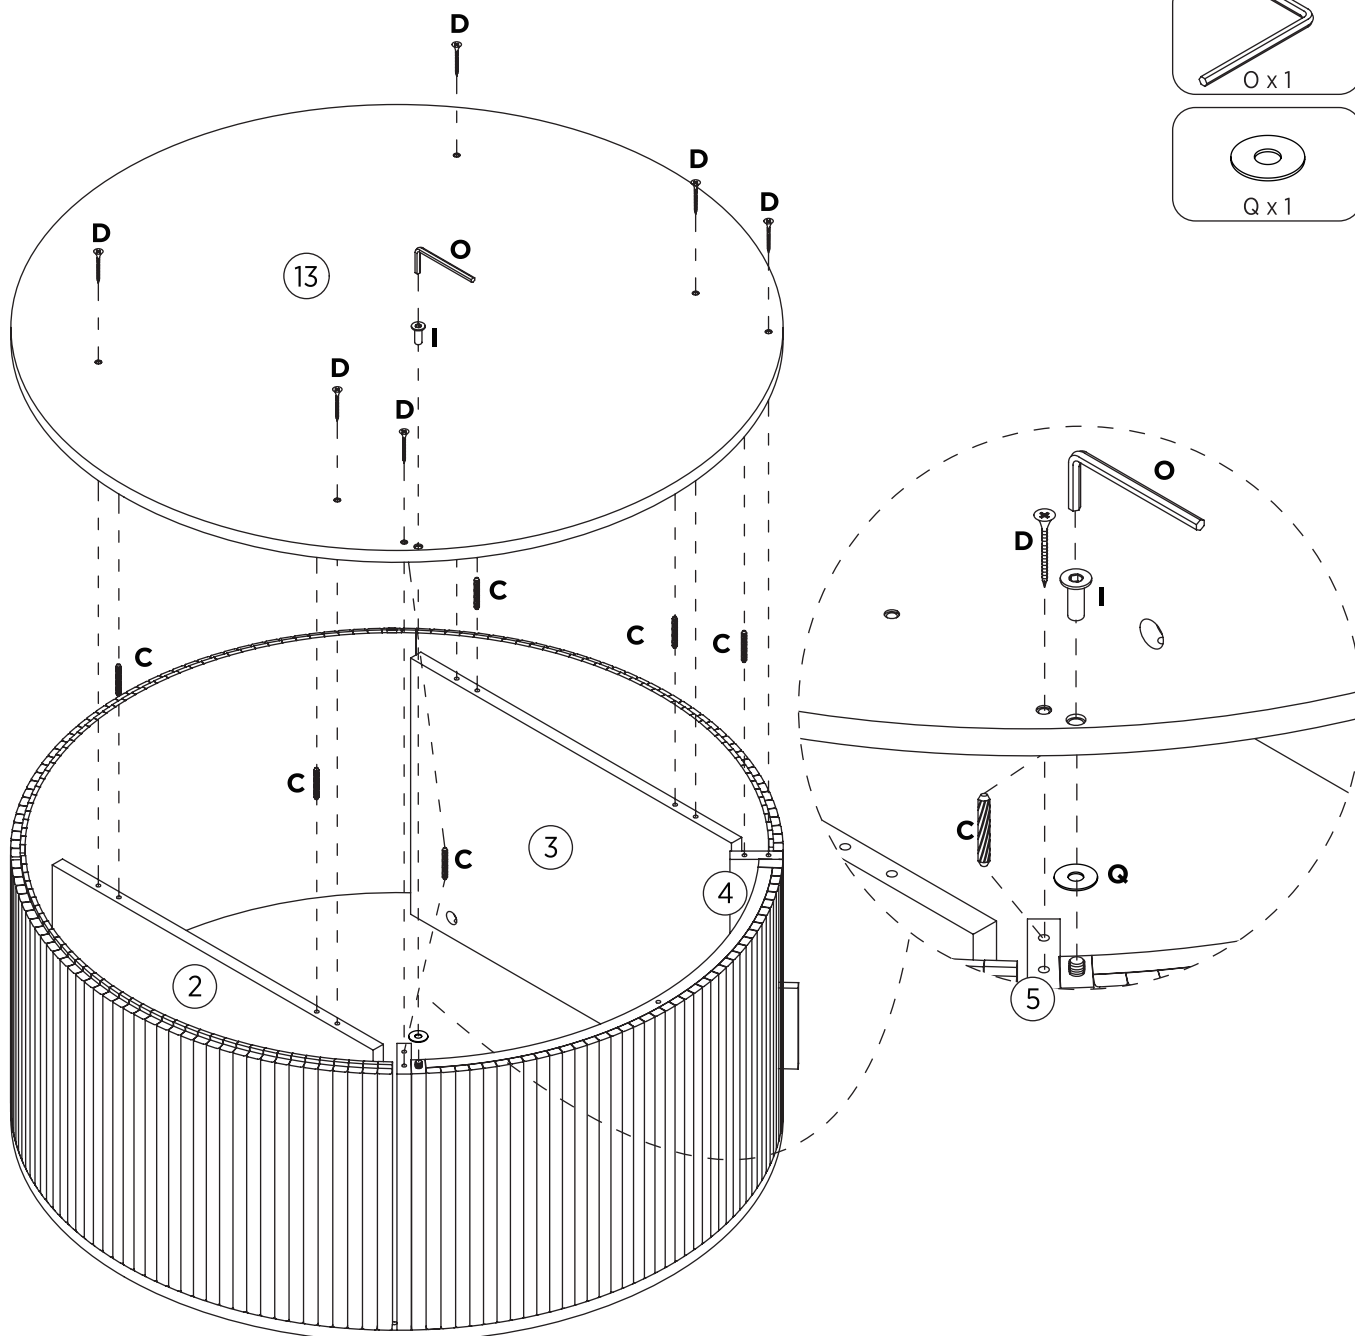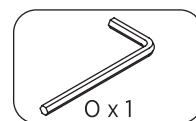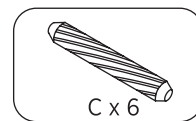



# ASSEMBLY INSTRUCTIONS

---

## STEP 12

**Maximum recommended weight is 20 kg on top, 10 kg inside storage.**

Your coffee table is ready for use.

