
KODU®

QUEEN BED WITH HEADBOARD AND BEDSIDES

ASSEMBLY INSTRUCTIONS

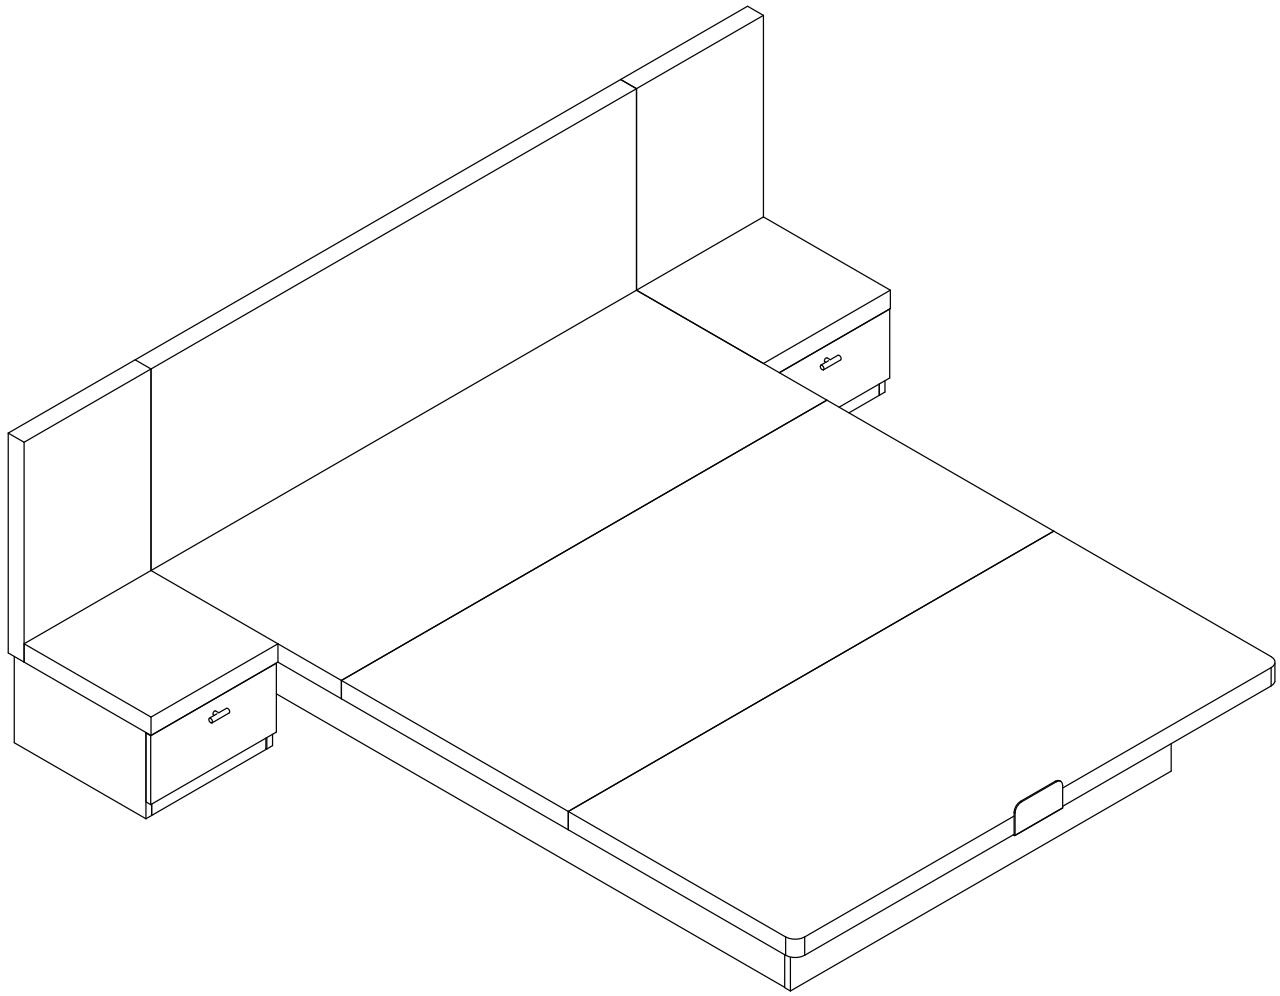

TIPS BEFORE YOU START


1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Do not use power tools.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

CARE AND MAINTENANCE OF YOUR FURNITURE

- ☑ Please periodically check all fittings and re-tighten as necessary.
- ☑ To clean your item, please use a damp cloth and wipe clean.
- ☑ To clean glass, please use glass cleaner.
- ☑ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ☑ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ☑ Please do not drag or pull your furniture.

ASSEMBLY REQUIREMENTS


- ☑ Equipment: phillips head screwdriver, flat head screwdriver
- ☑ 2 x adults required
- ☑ 2.5m x 2.5m assembly space required
- ☑ 1 - 1.5 hour assembly time approx.

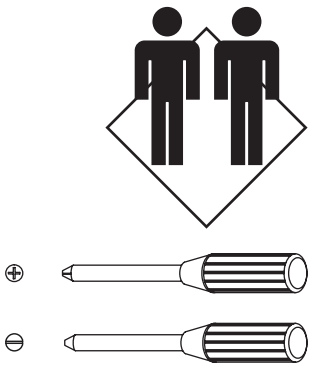

USING CAM LOCK AND QUICKFIT


QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

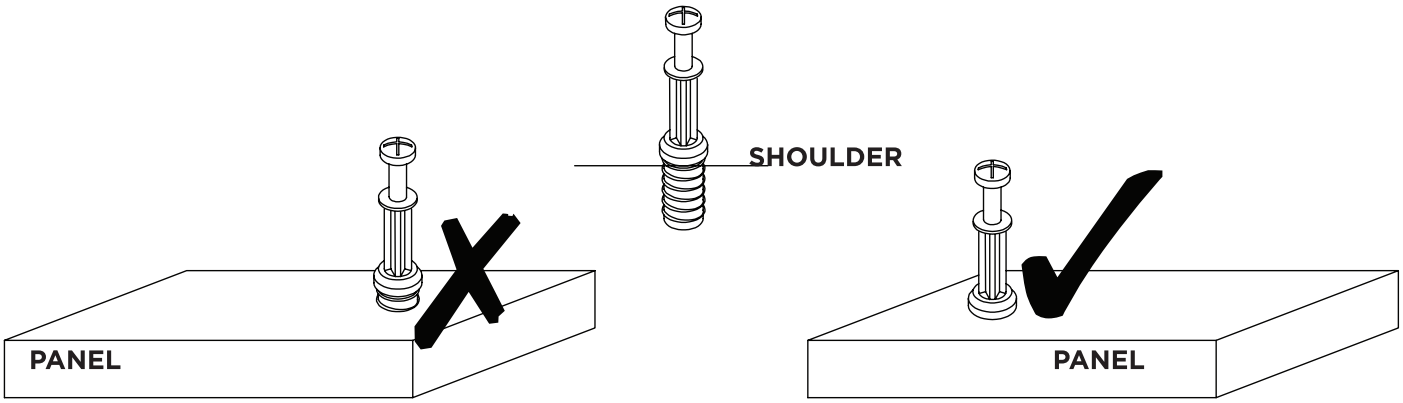


CAM LOCK

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

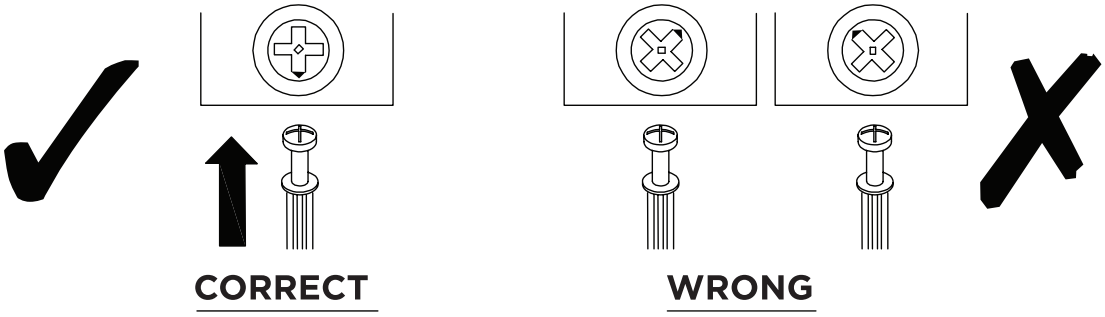


Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

Turn cam lock clockwise to tighten.

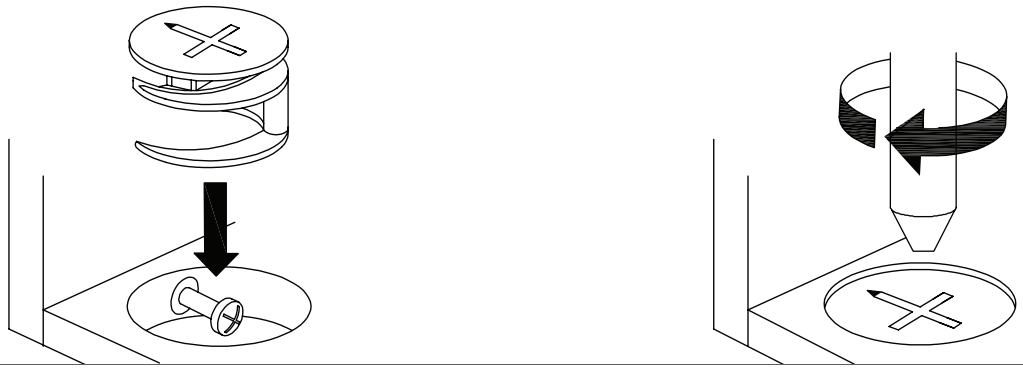


HARDWARE LIST

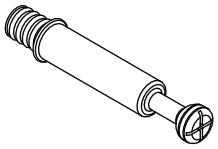

56 x A
Quickfit Screw




56 x B
Cam Lock

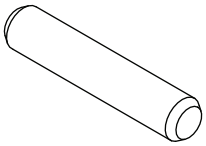


51 x C
Wooden Dowel




56 x D
Sticker

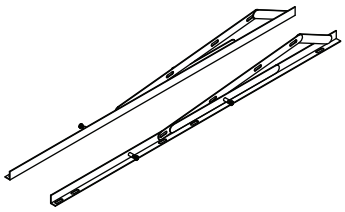


2 x E
Lift Up
Mechanism




18 x F
Bolt

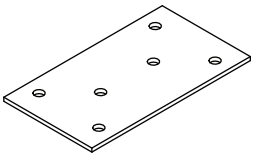


9 x G
Iron Plate




8 x H
Washer




3 x I
Small Pad

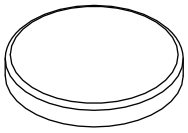


20 x J
Big Pad




18 x K
Screw

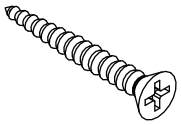


24 x L
Screw




2 x M
Bolt

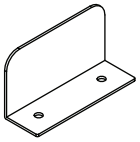

1 x N
Angle Iron

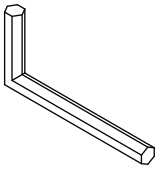


2 x O
Allen Key

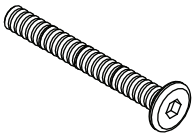

8 x P
Bolt


HARDWARE LIST

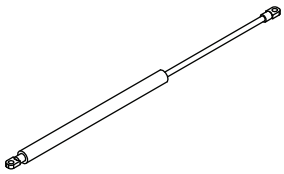


2 x Q
Pneumatic Rod




4 x R
Nut




24 x S
Screw




8 x T
Screw

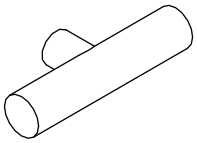

2 x U
Handle




2 x V
Screw

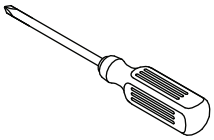


1 x W
Screwdriver


PARTS LIST

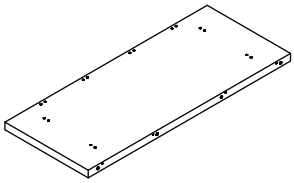


1
1 PC

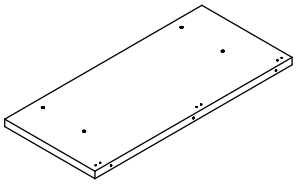


2
1 PC

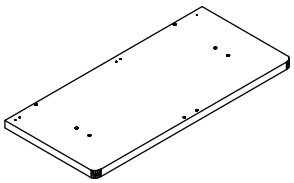


3
1 PC

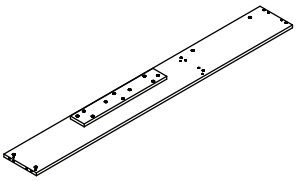


4
1 PC

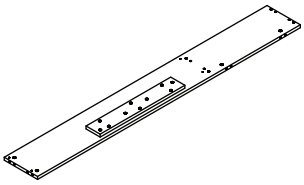


5
1 PC

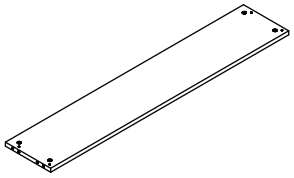


6
1 PC

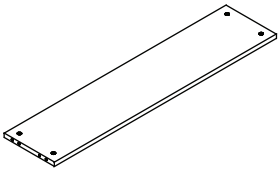


7
1 PC

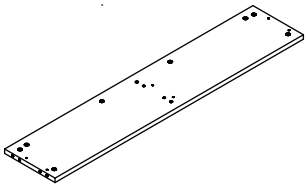


8
1 PC

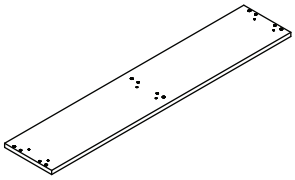


9
1 PC

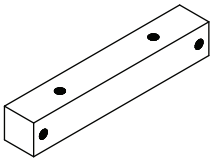

10
6 PCS

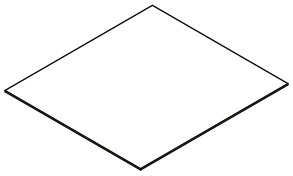


11
4 PCS

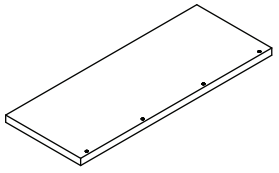


12
1 PC


PARTS LIST

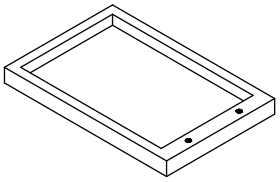


13
2 PCS

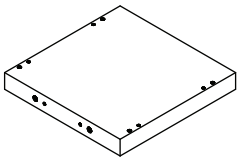


14
2 PCS

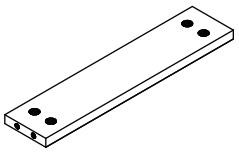


15
2 PCS

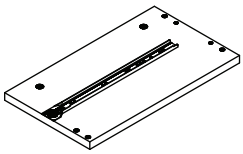


16
2 PCS

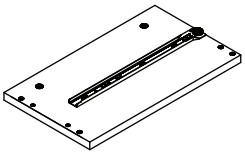


17
2 PCS

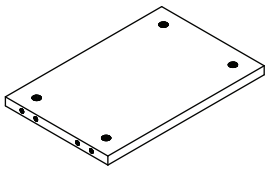


18
2 PCS

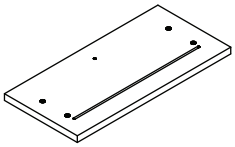


19
2 PCS

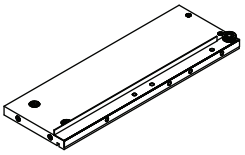


20
2 PCS

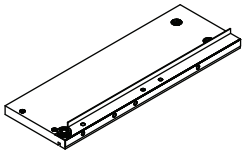

21
2 PCS

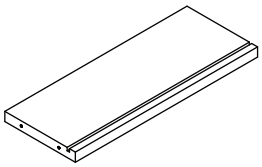


22
2 PCS

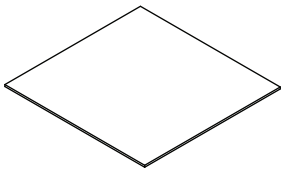


23
2 PCS

STEP 1


Fix quickfit screws **A** to part **5**.

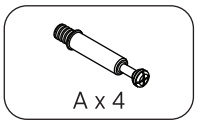


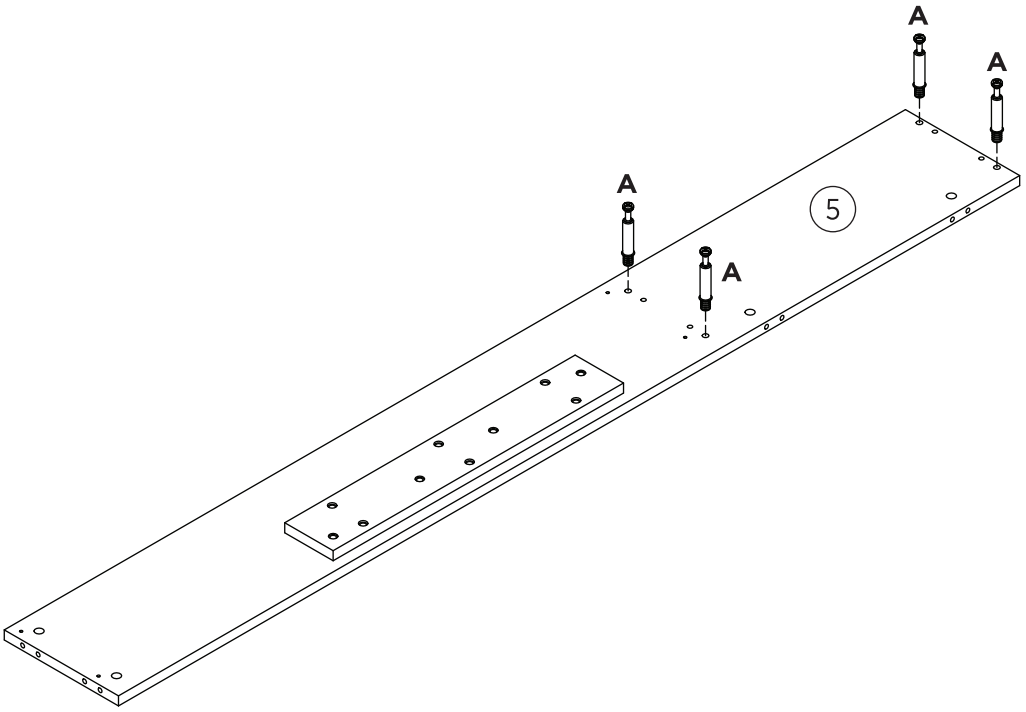

STEP 2

Fix quickfit screws **A** to part **8**.

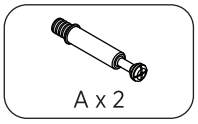

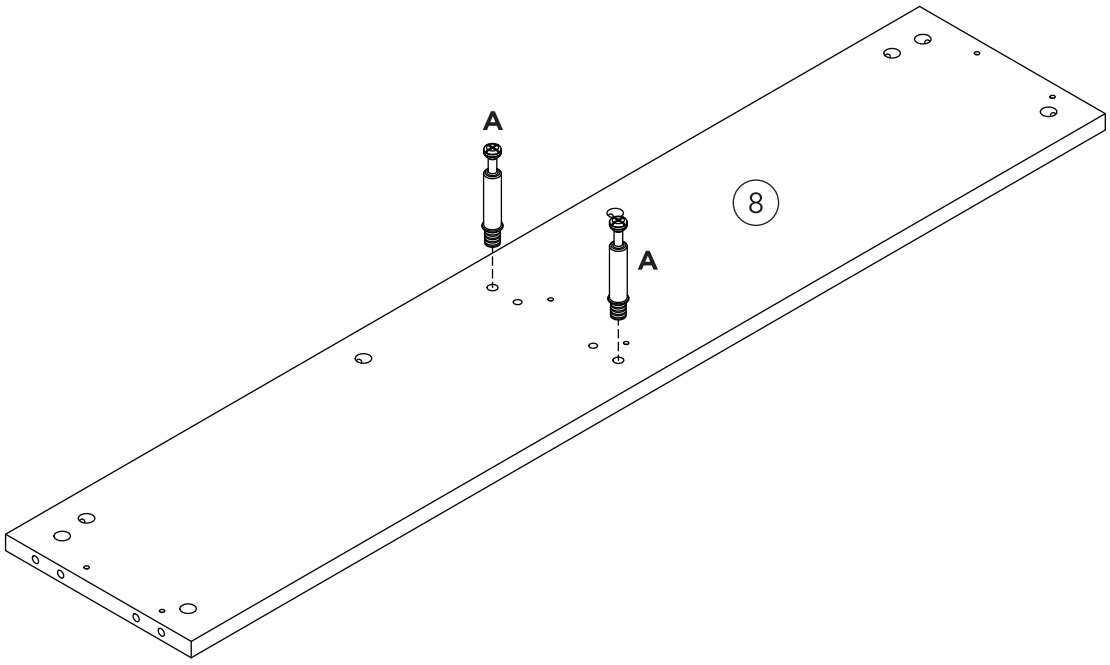



STEP 3


Insert wooden dowels **C** to parts **7** and **8**.

Attach parts **7** and **8** to part **5** using cam locks **B**.

Turn cam locks clockwise to tighten.

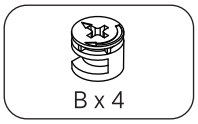

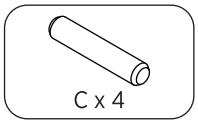


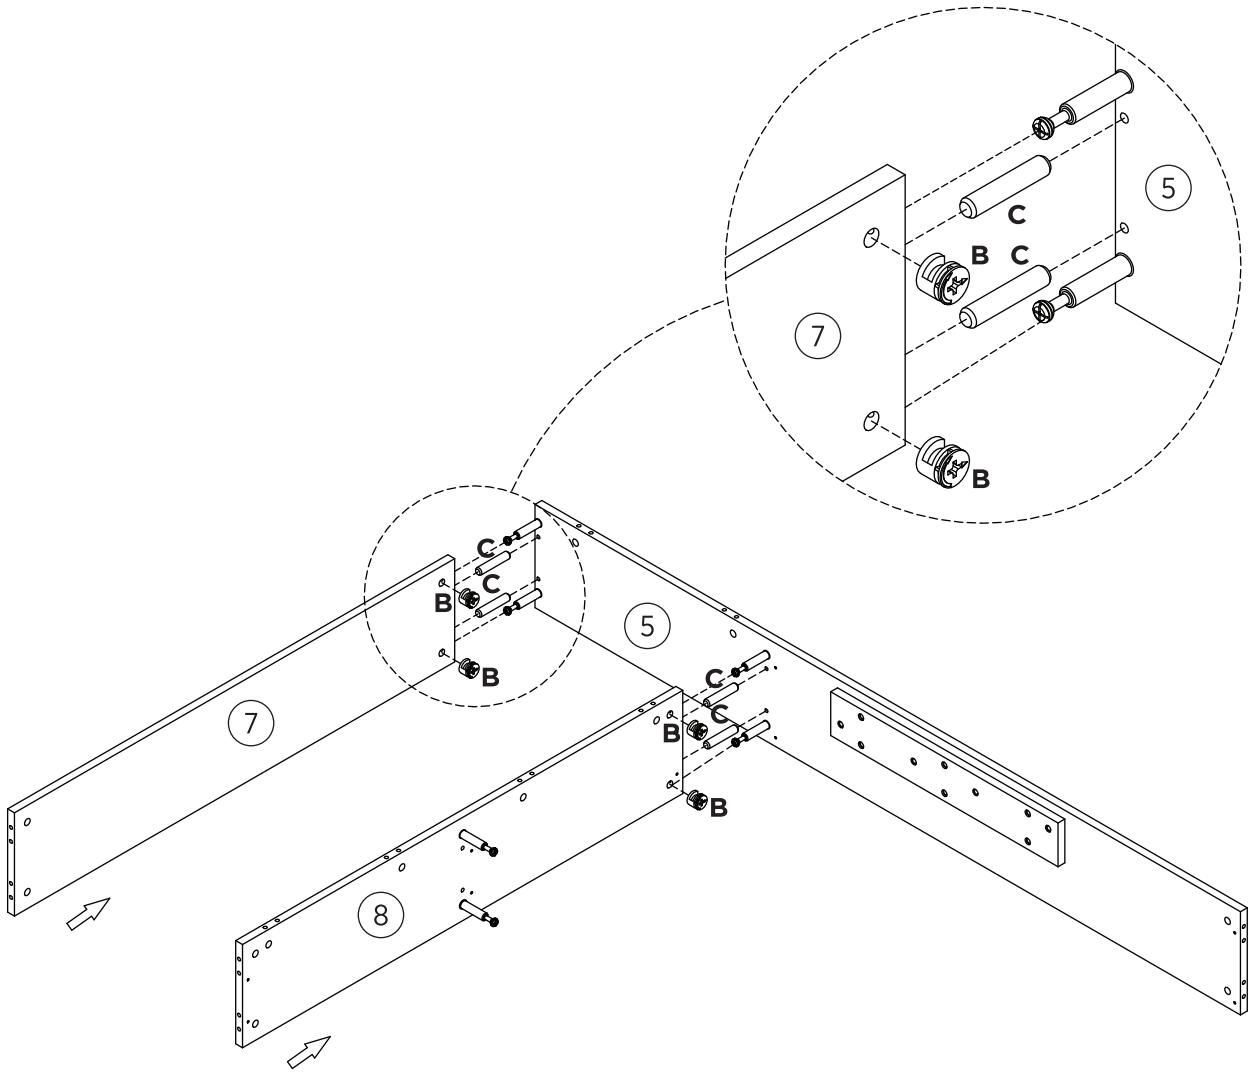


AFTER SALES SUPPORT
1300 777 137

STEP 4


Fix quickfit screws **A** to part **4**.

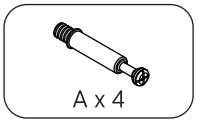


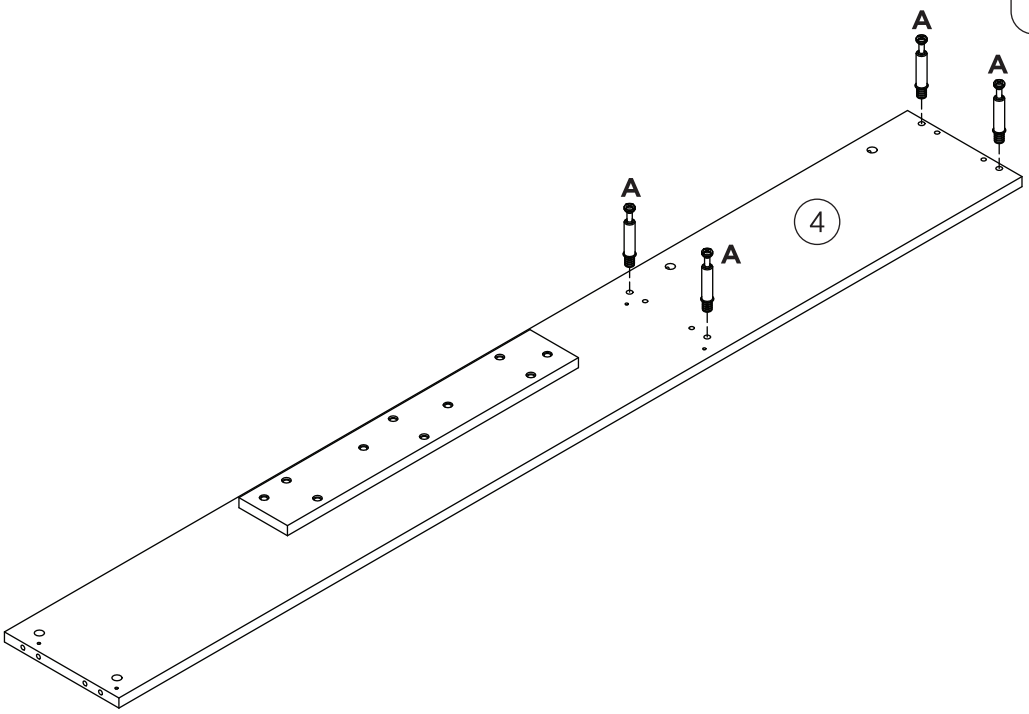

STEP 5

Fix quickfit screws **A** to part **9**.

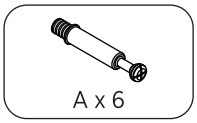

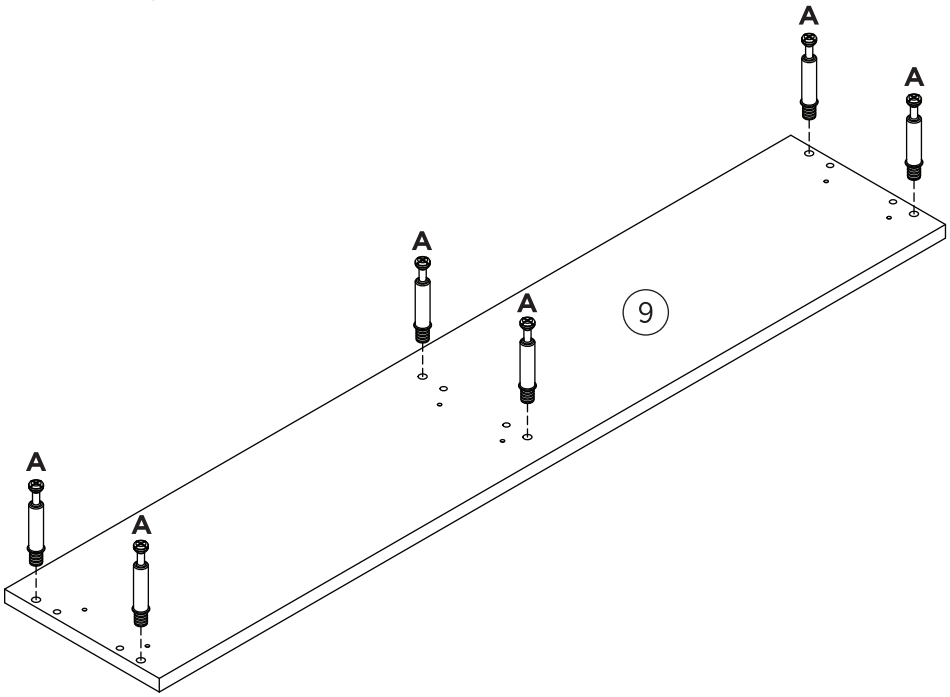



STEP 6


Insert wooden dowels **C** to parts **7** and **8**.

Attach part **4** to parts **7** and **8** using cam locks **B**.

Turn cam locks clockwise to tighten.

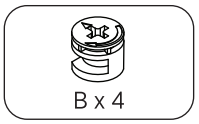

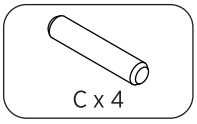

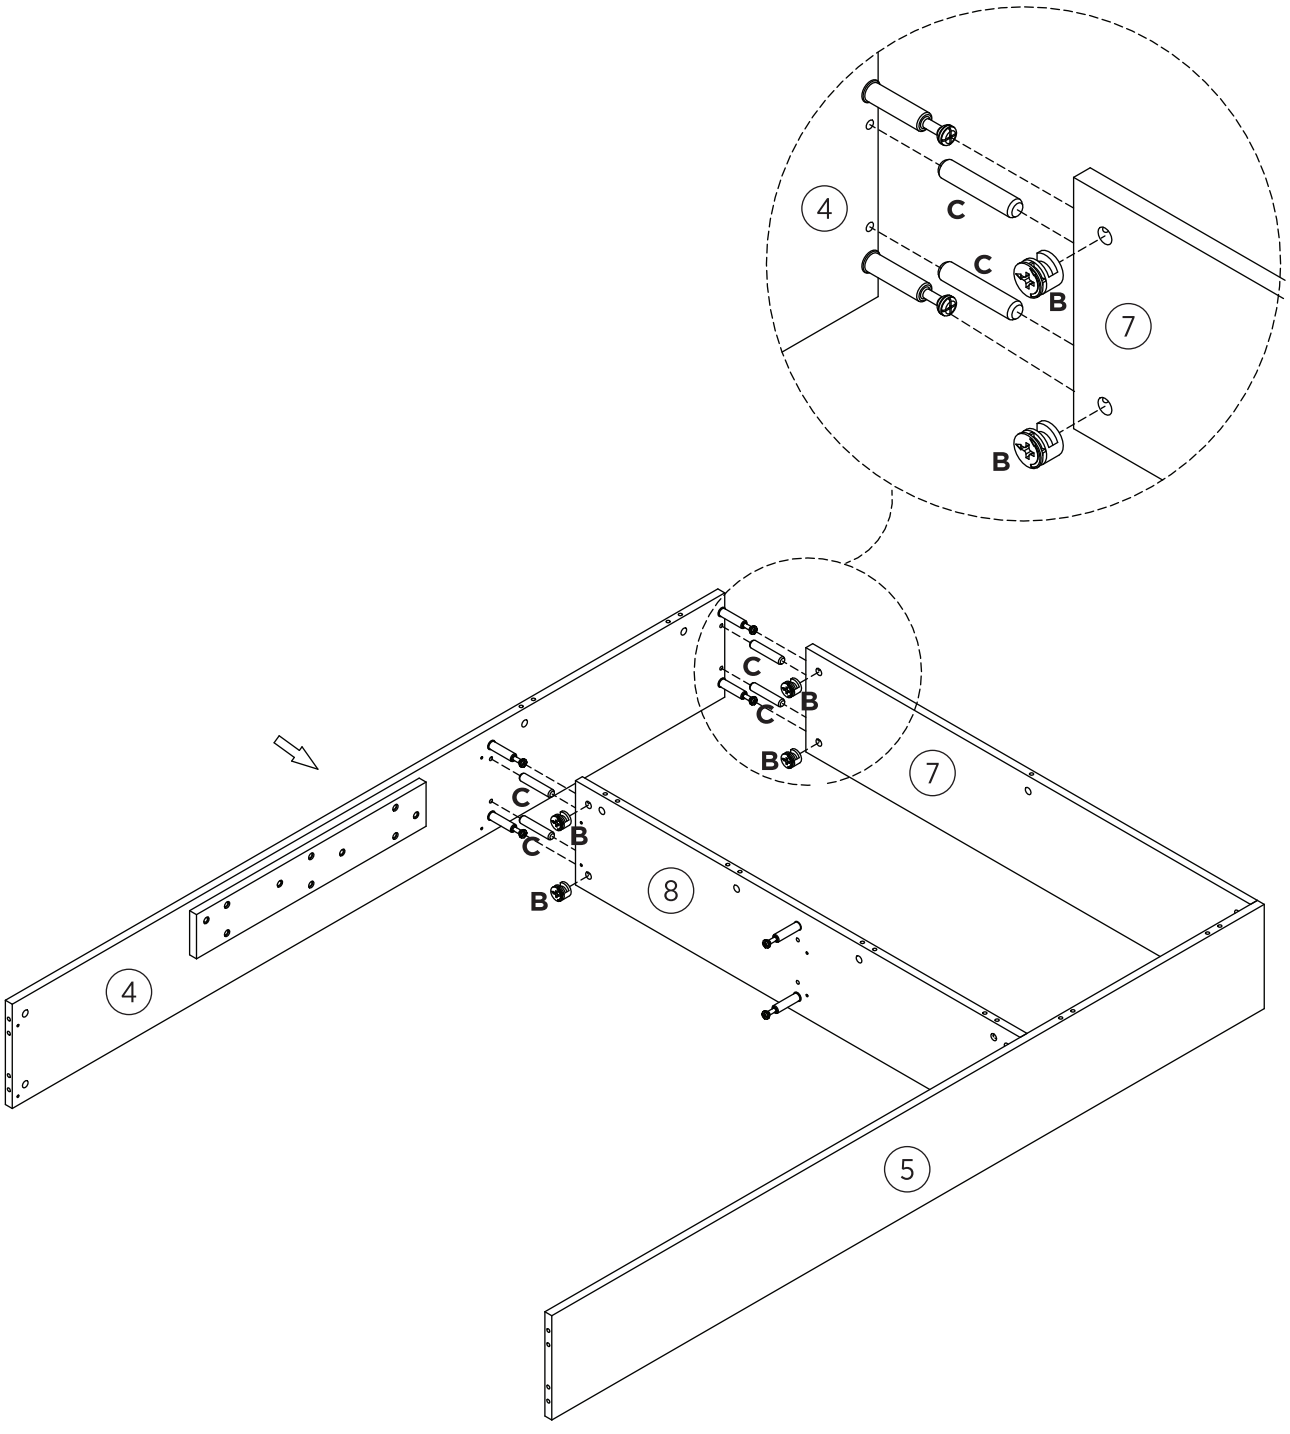



STEP 7

Insert wooden dowels **C** to part **6**.

Attach parts **6** to part **8** using cam locks **B**.

Turn cam locks clockwise to tighten.

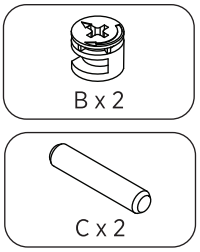

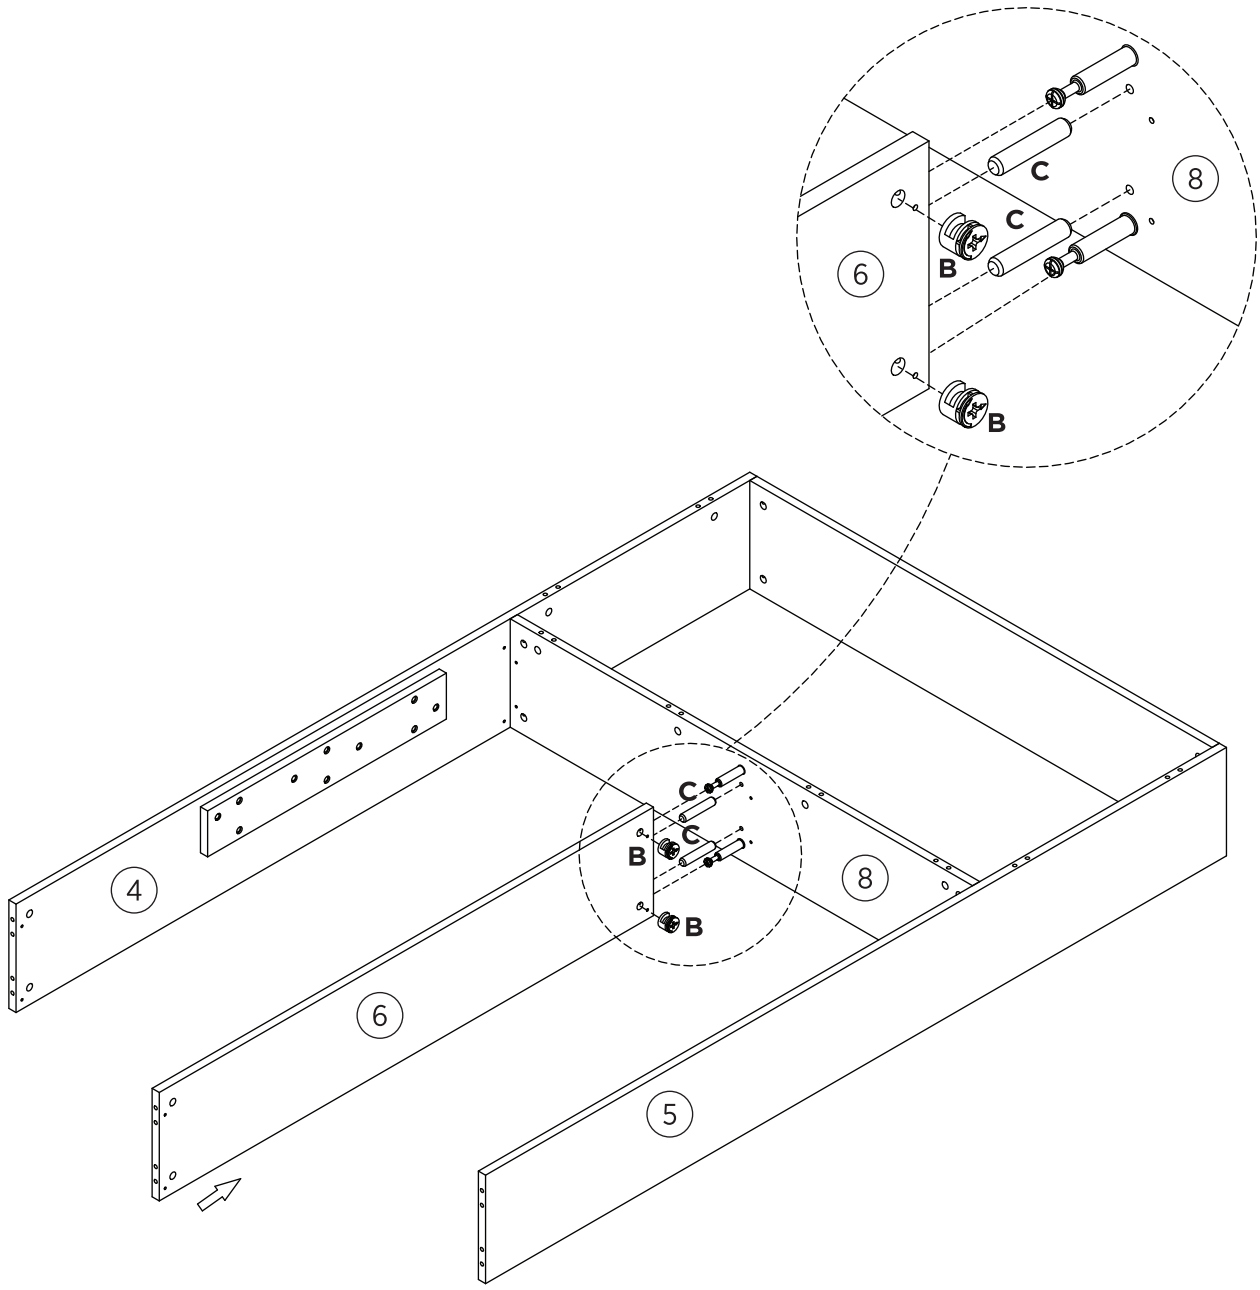



STEP 8


Insert wooden dowels **C** to parts **4**, **5** and **6**.

Attach part **9** to parts **4**, **5** and **6** using cam locks **B**.

Turn cam locks clockwise to tighten.

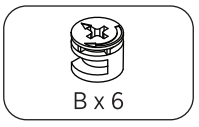

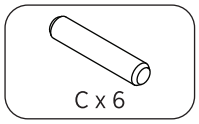


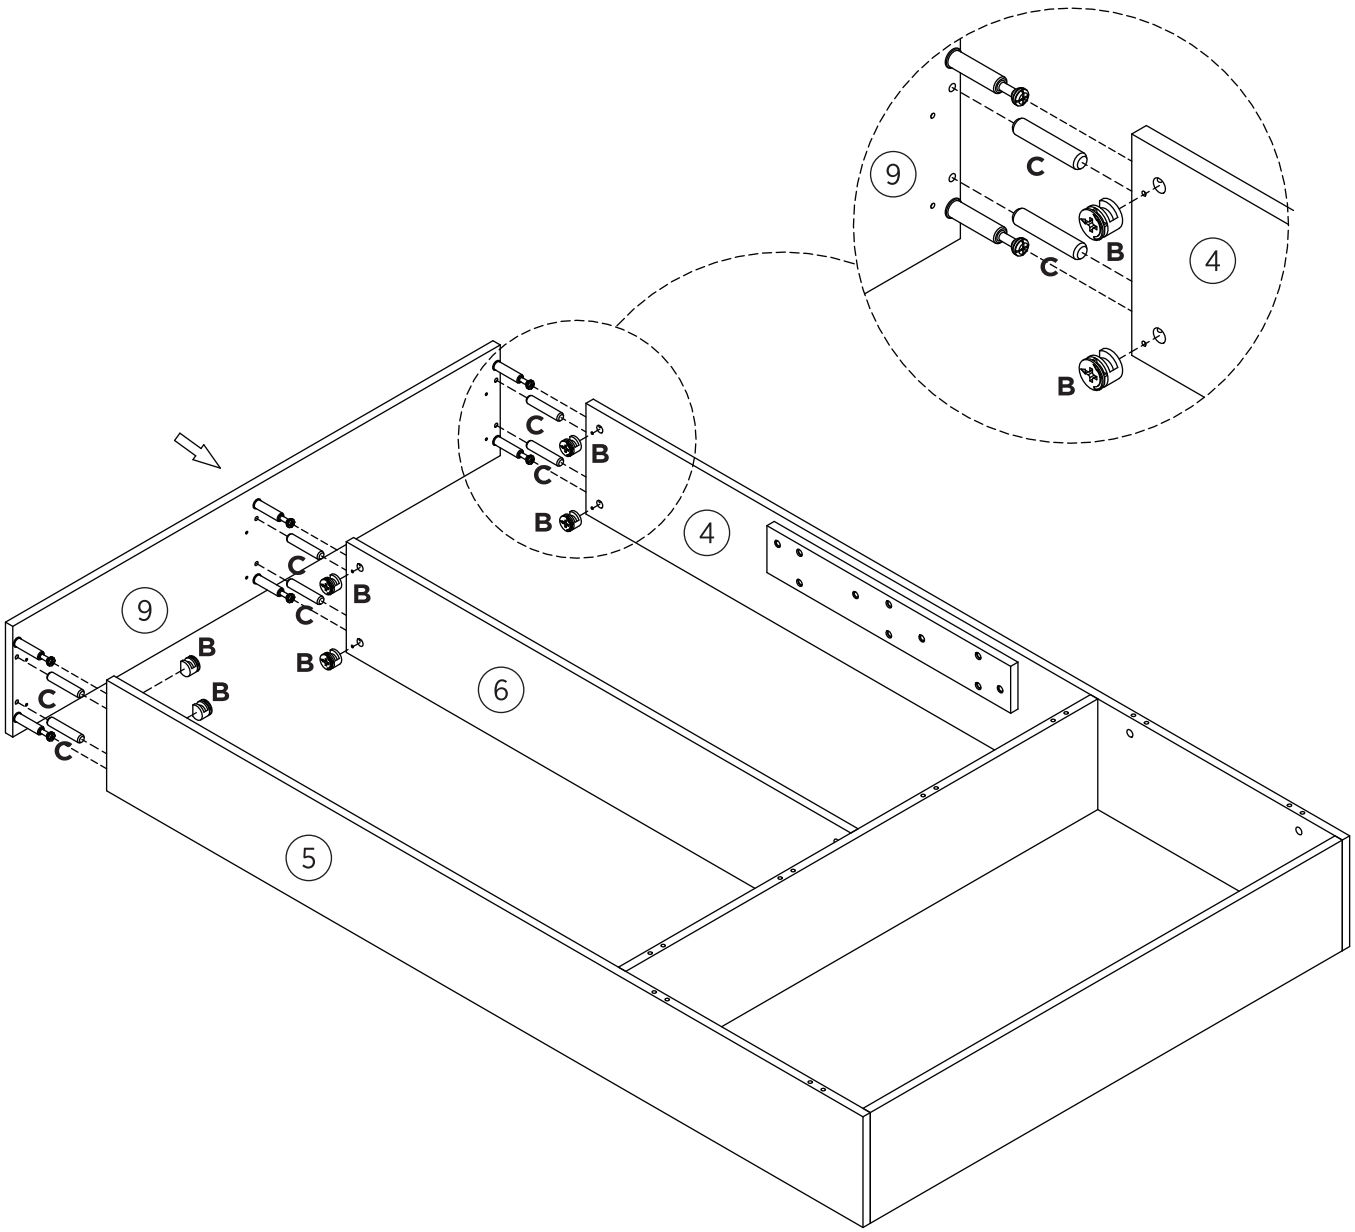


AFTER SALES SUPPORT
1300 777 137


STEP 9

Fix quickfit screws **A** to part **1.**

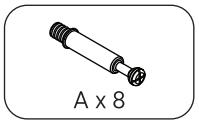

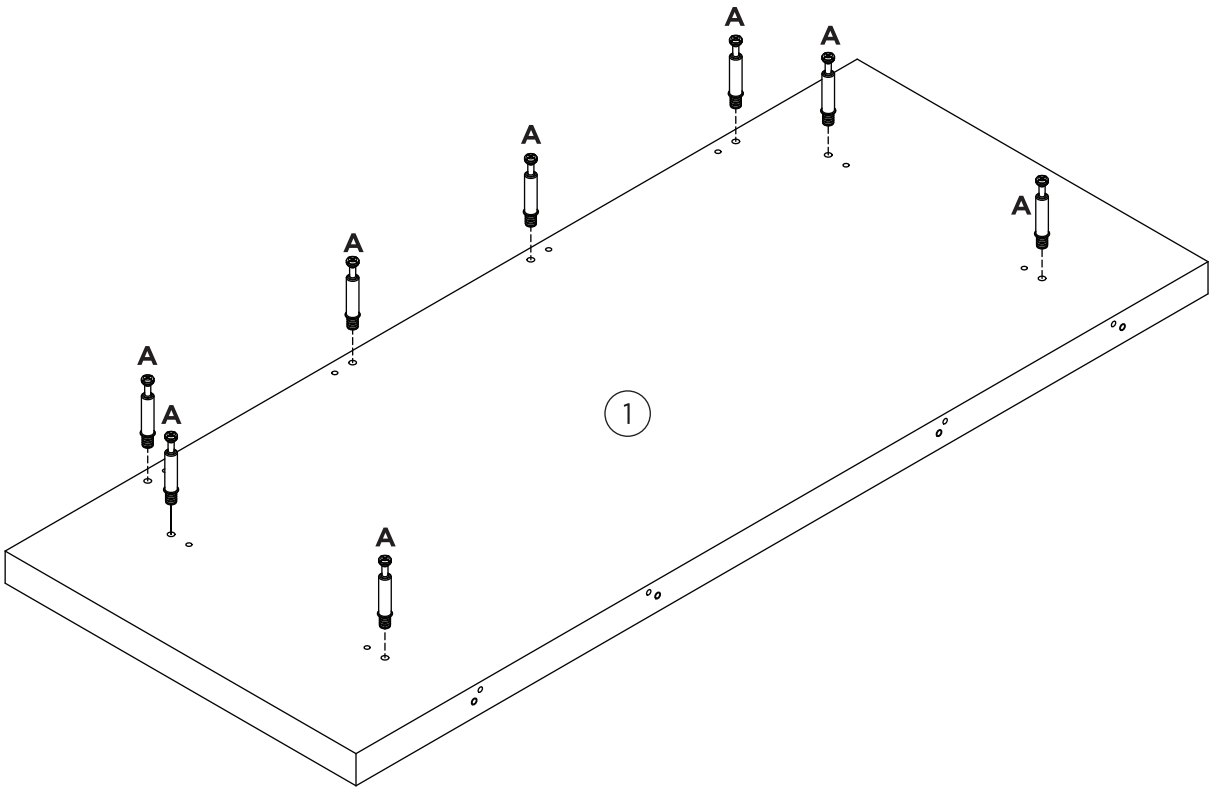

STEP 10

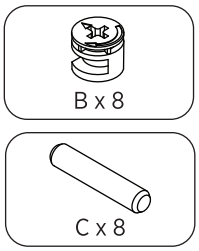


Flip the assembled unit of parts **4**, **5**, **6**, **7**, **8** and **9**.

Insert wooden dowels **C** to part **1**,


Attach part **1** to parts **4**, **5**, **7** and **8** using cam locks **B**.


Turn cam locks clockwise to tighten.

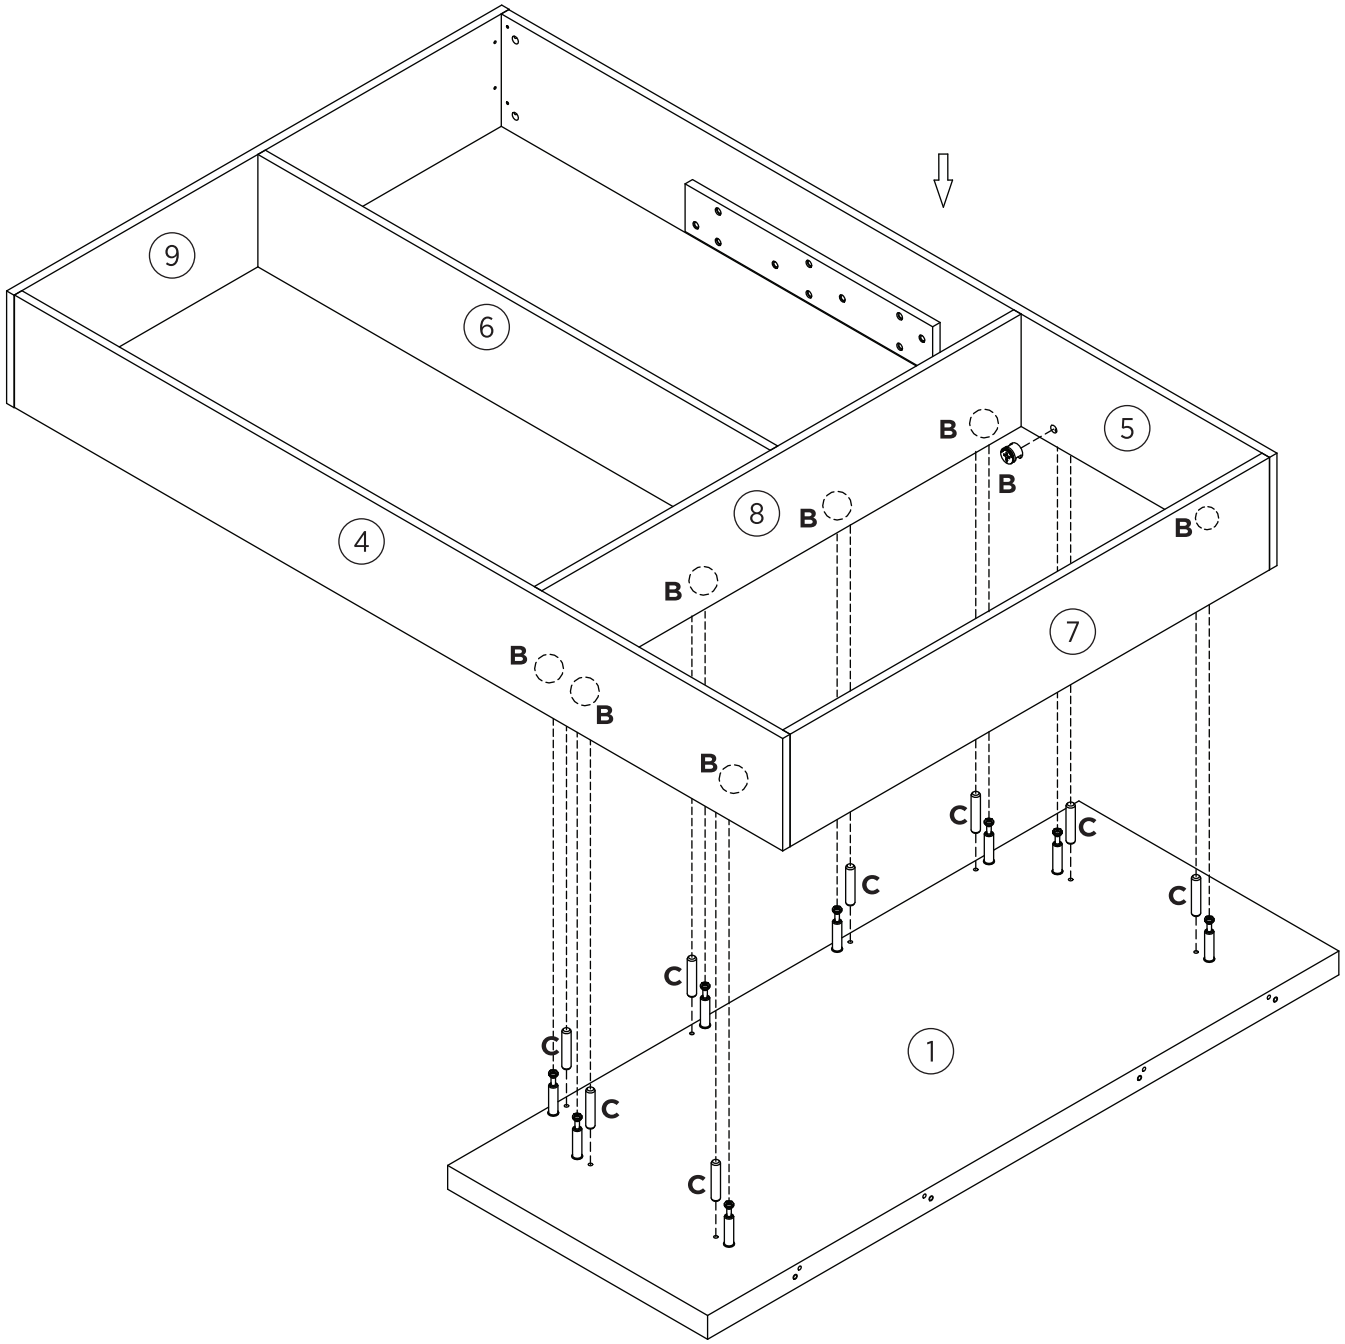

STEP 11


Attach stickers **D** to all cam locks **B** to conceal them.

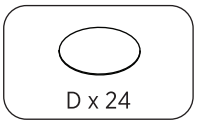


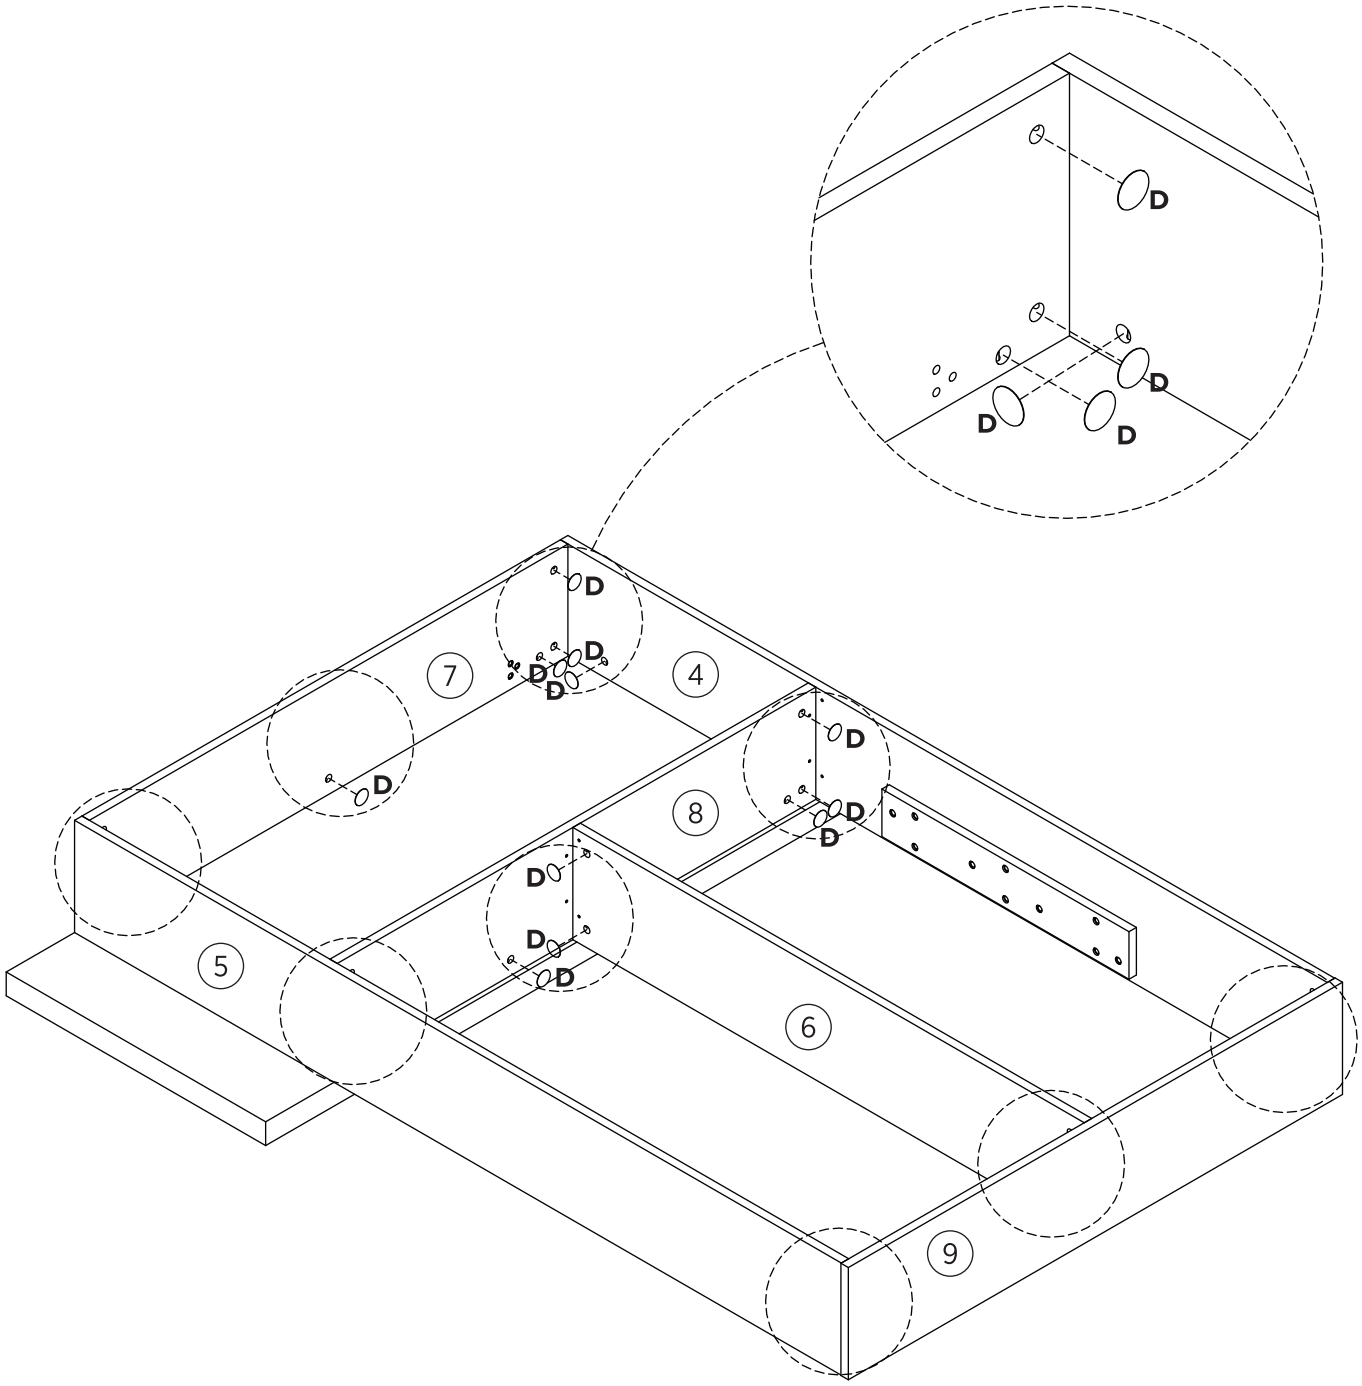

STEP 12

Align the wooden corner bracket with the position holes using screws **L** to tighten.

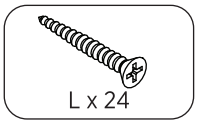


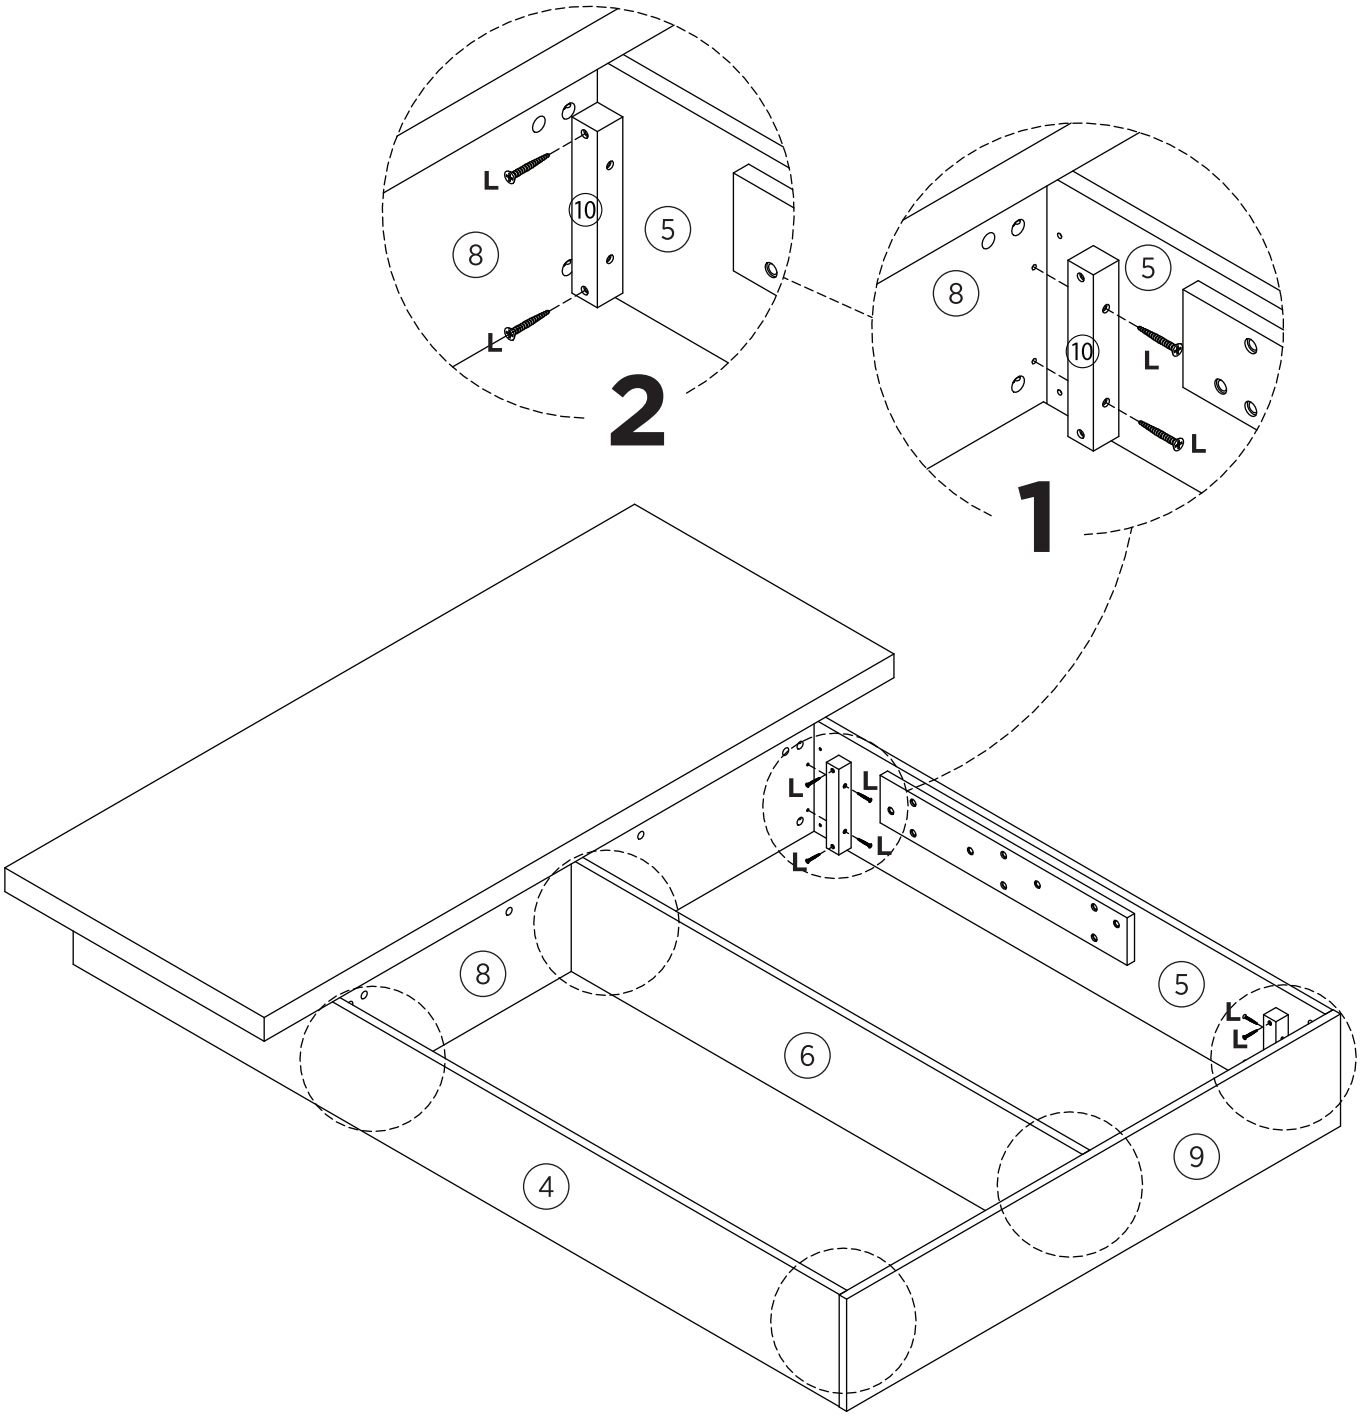



STEP 13


Lift up mechanism **E** include two parts: the left and right.

Align the pneumatic rods **Q** to mechanisms **E** using nuts **R** to tighten.

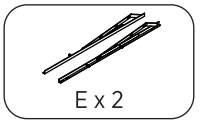

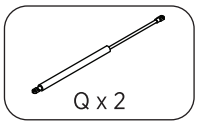


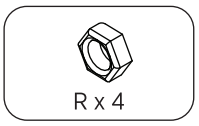


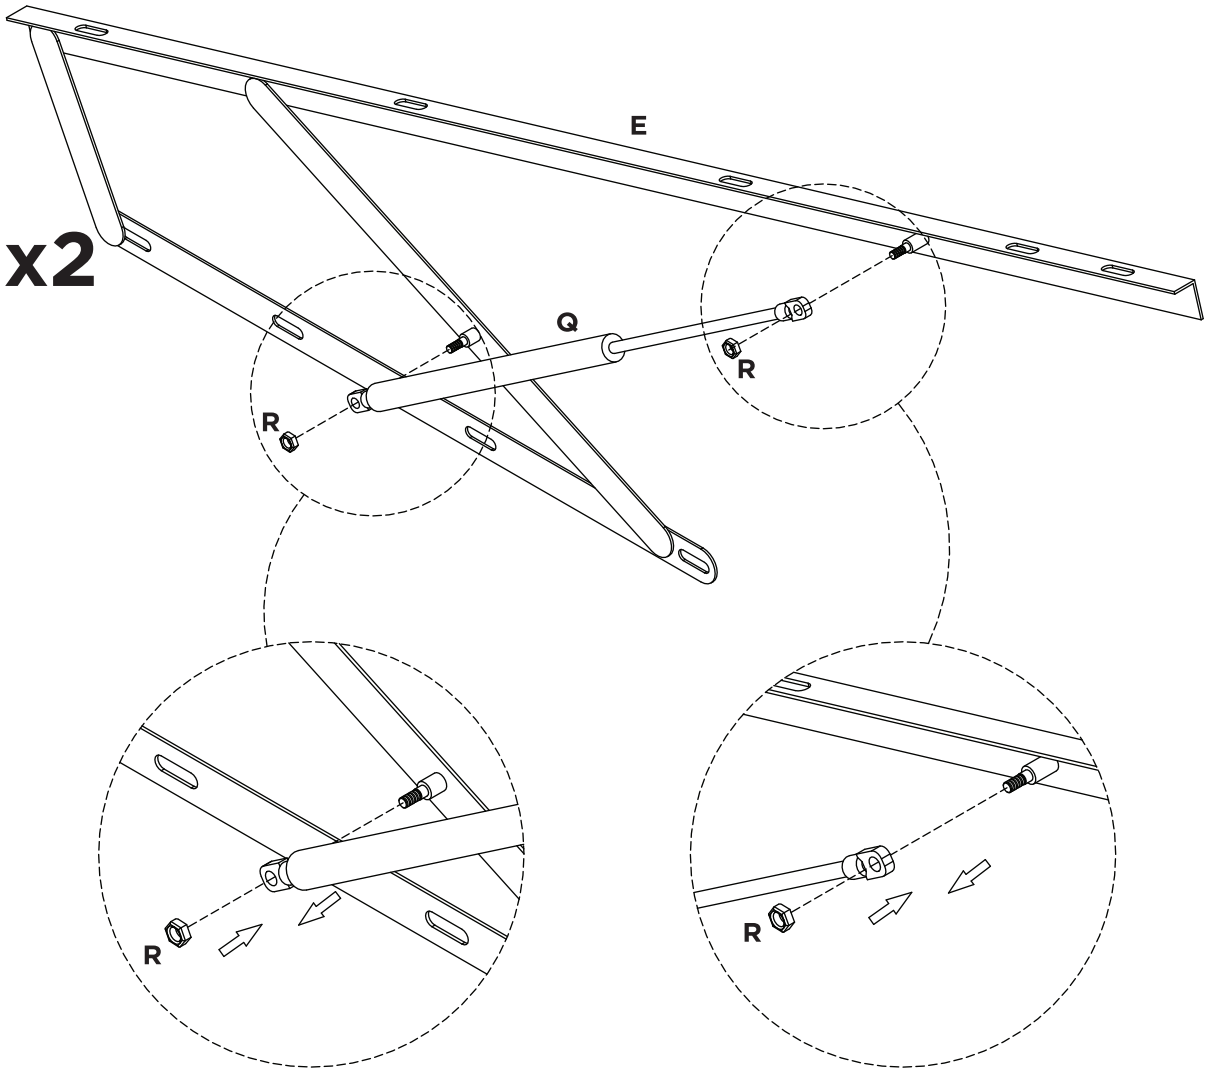

STEP 14


Fix the lift up mechanisms **E** to parts **4**, **5** using bolts **F**, washer **H** and allen key **O**.

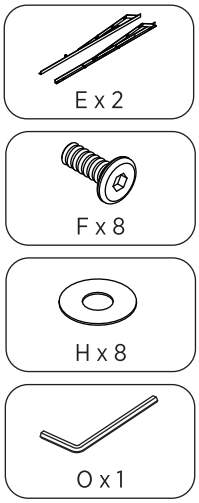


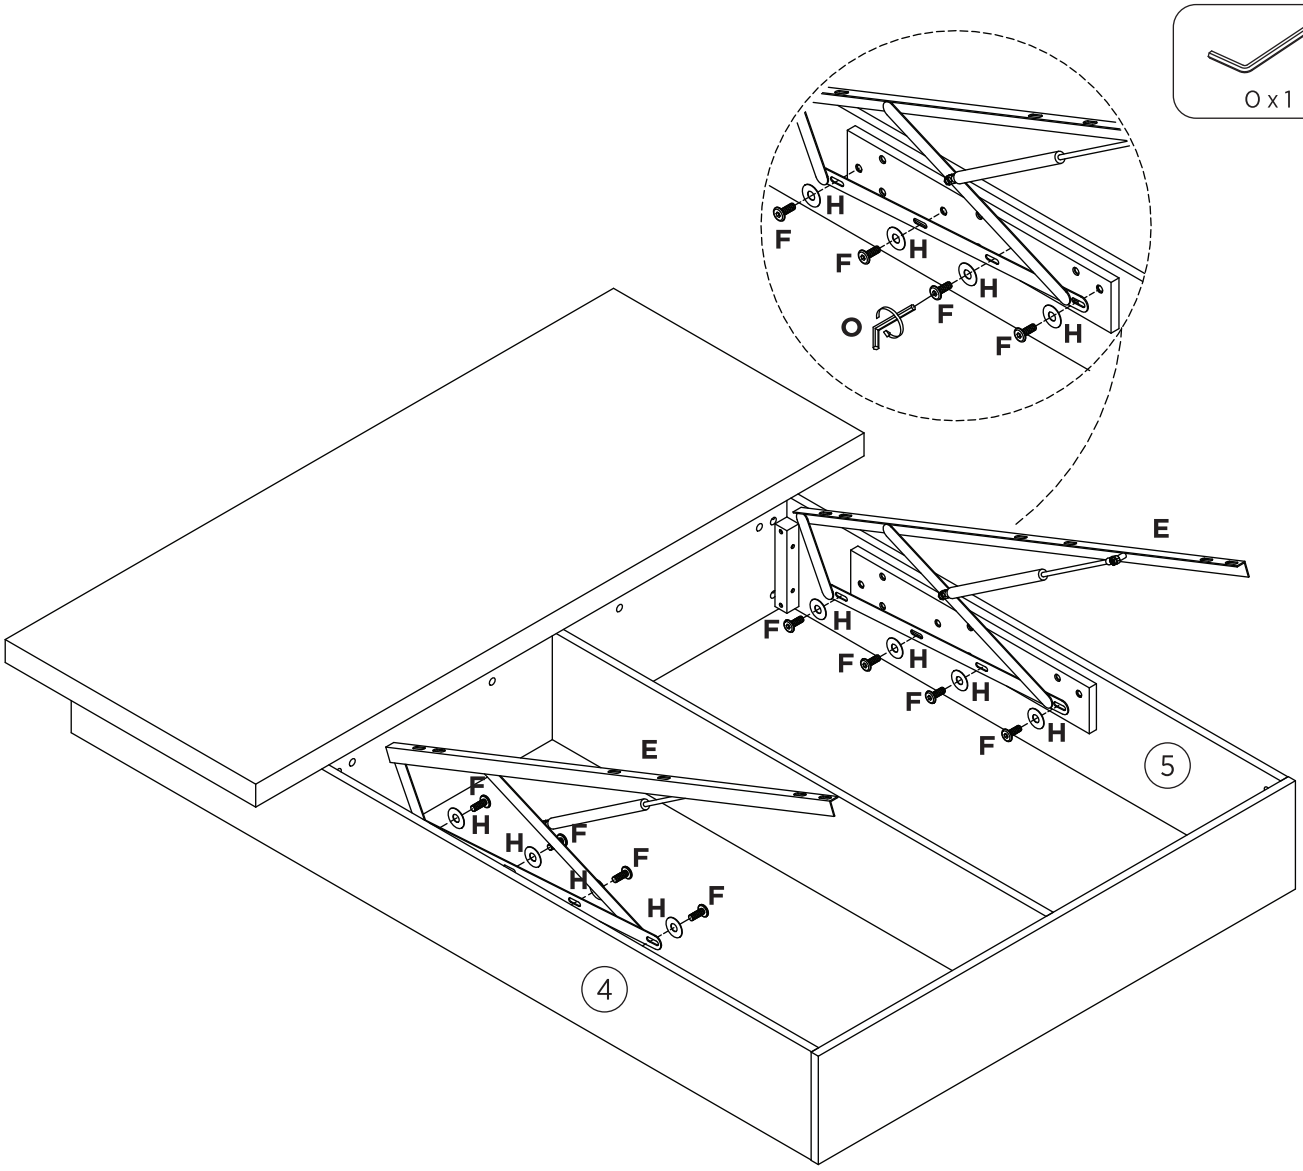

STEP 15


Fix the metal sheet of the lift up mechanisms **E** to part **2** using bolts **F** and allen key **O**.

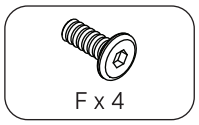


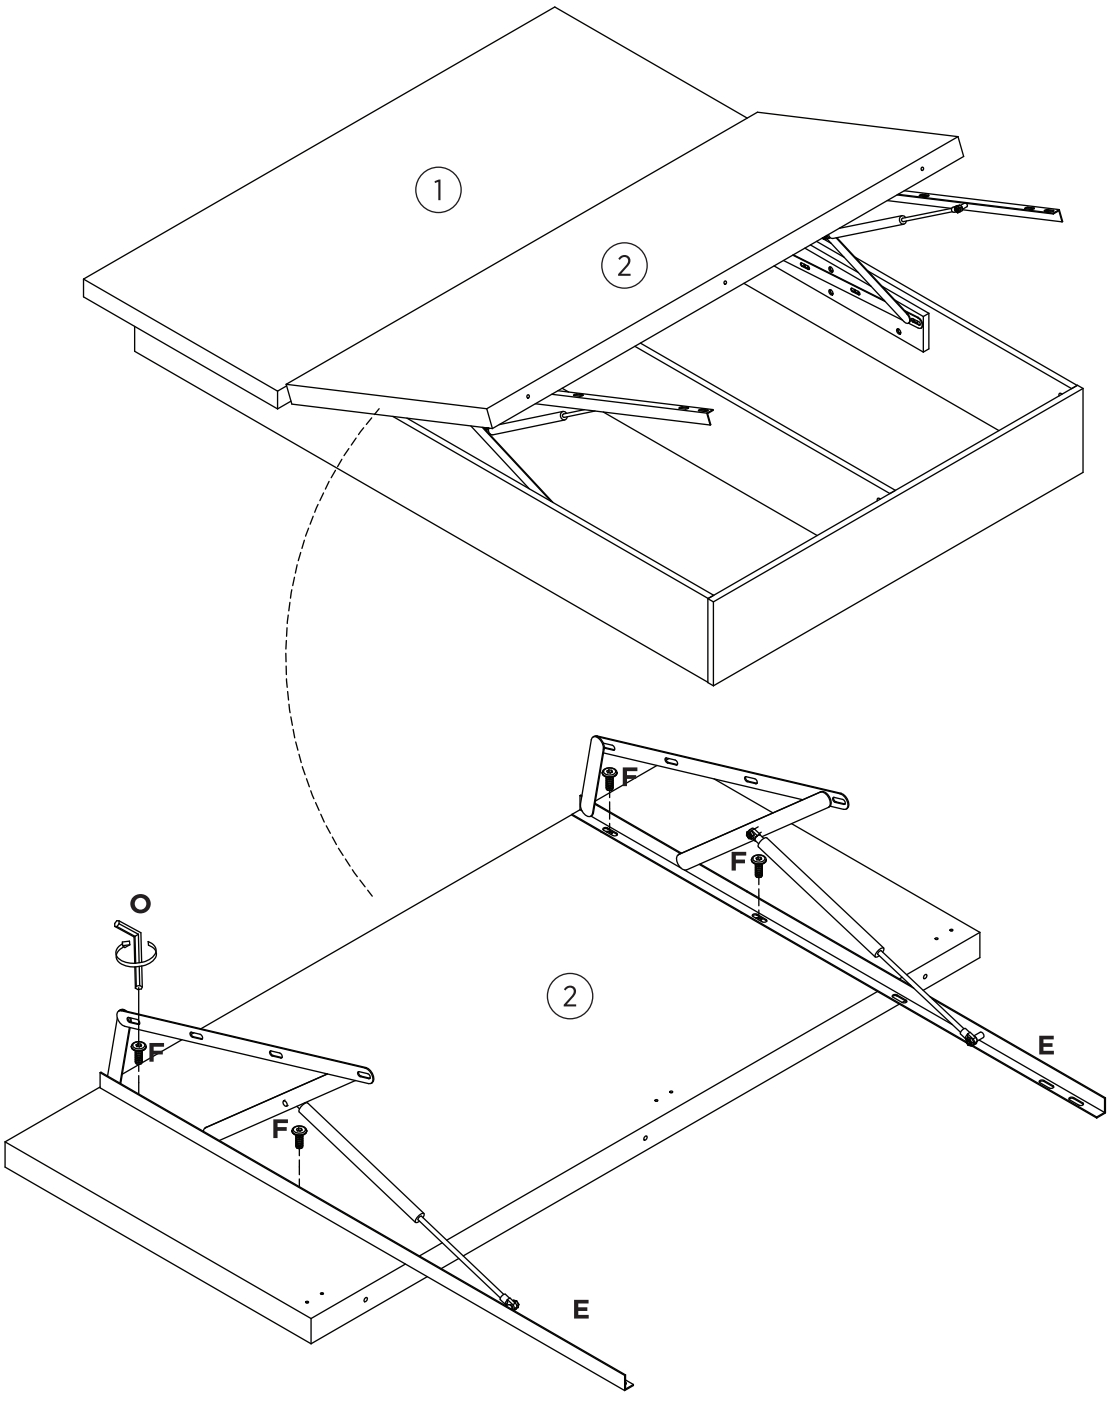

STEP 16

Attach part **3** to part **2** using wooden dowels **C**.

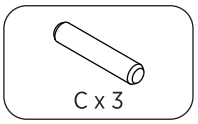


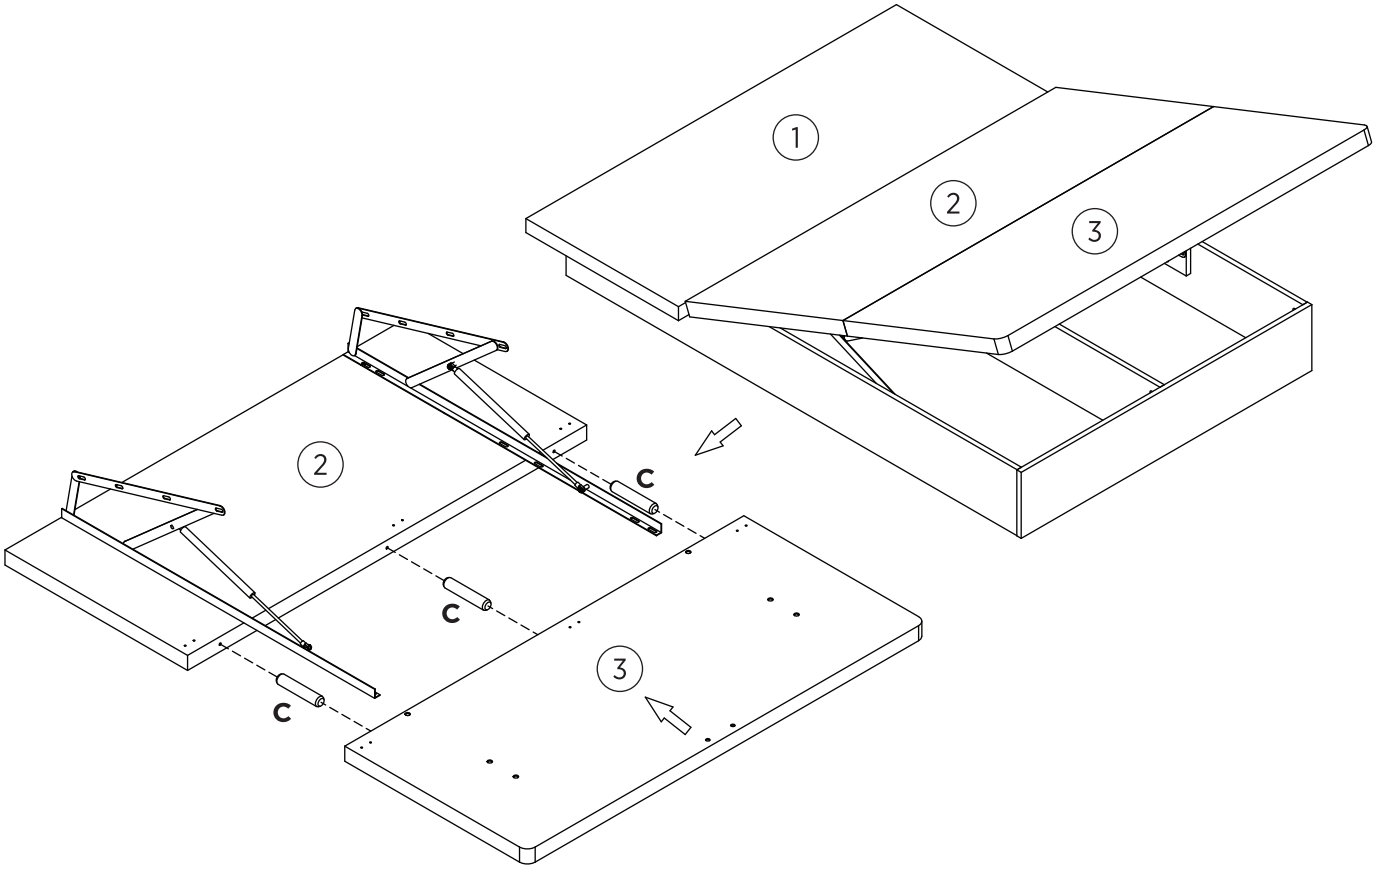


STEP 17

Fix metal sheet of the mechanisms **E** to part **3** using bolts **F** and allen key **O**.

Fix metal plate **G** to parts **2** and **3** using screws **K**.

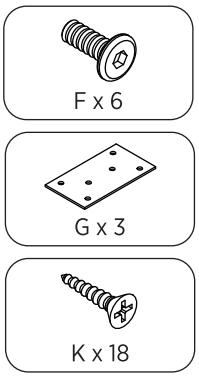


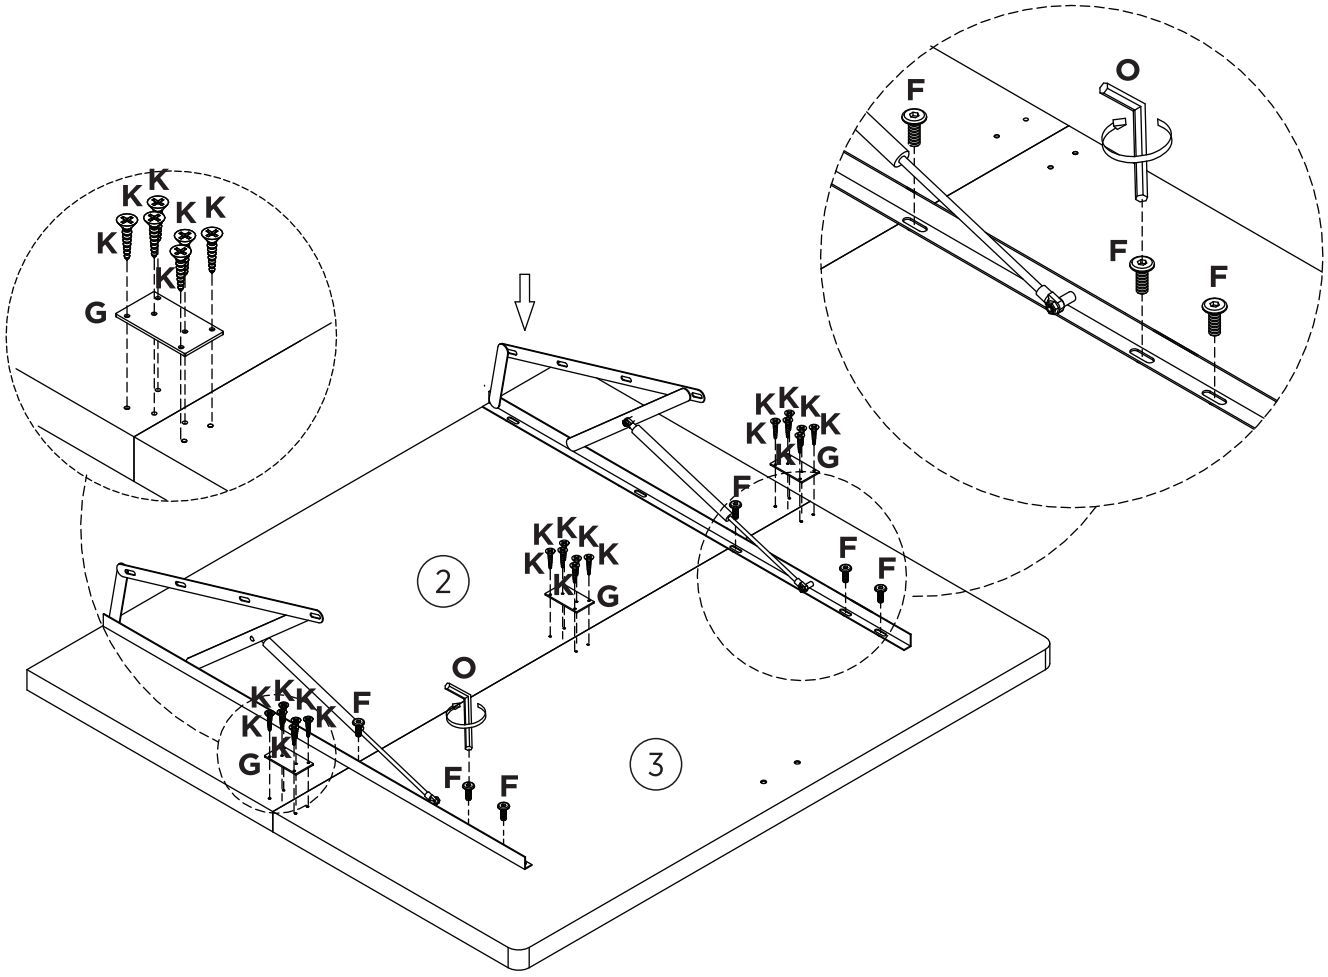


STEP 18

Fix angle iron **N** to part **3** using bolts **M**.


Paste small pads **I** on part **9**.

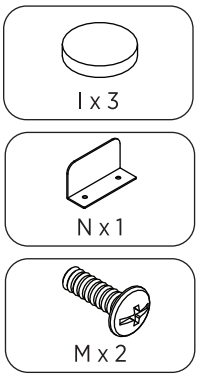


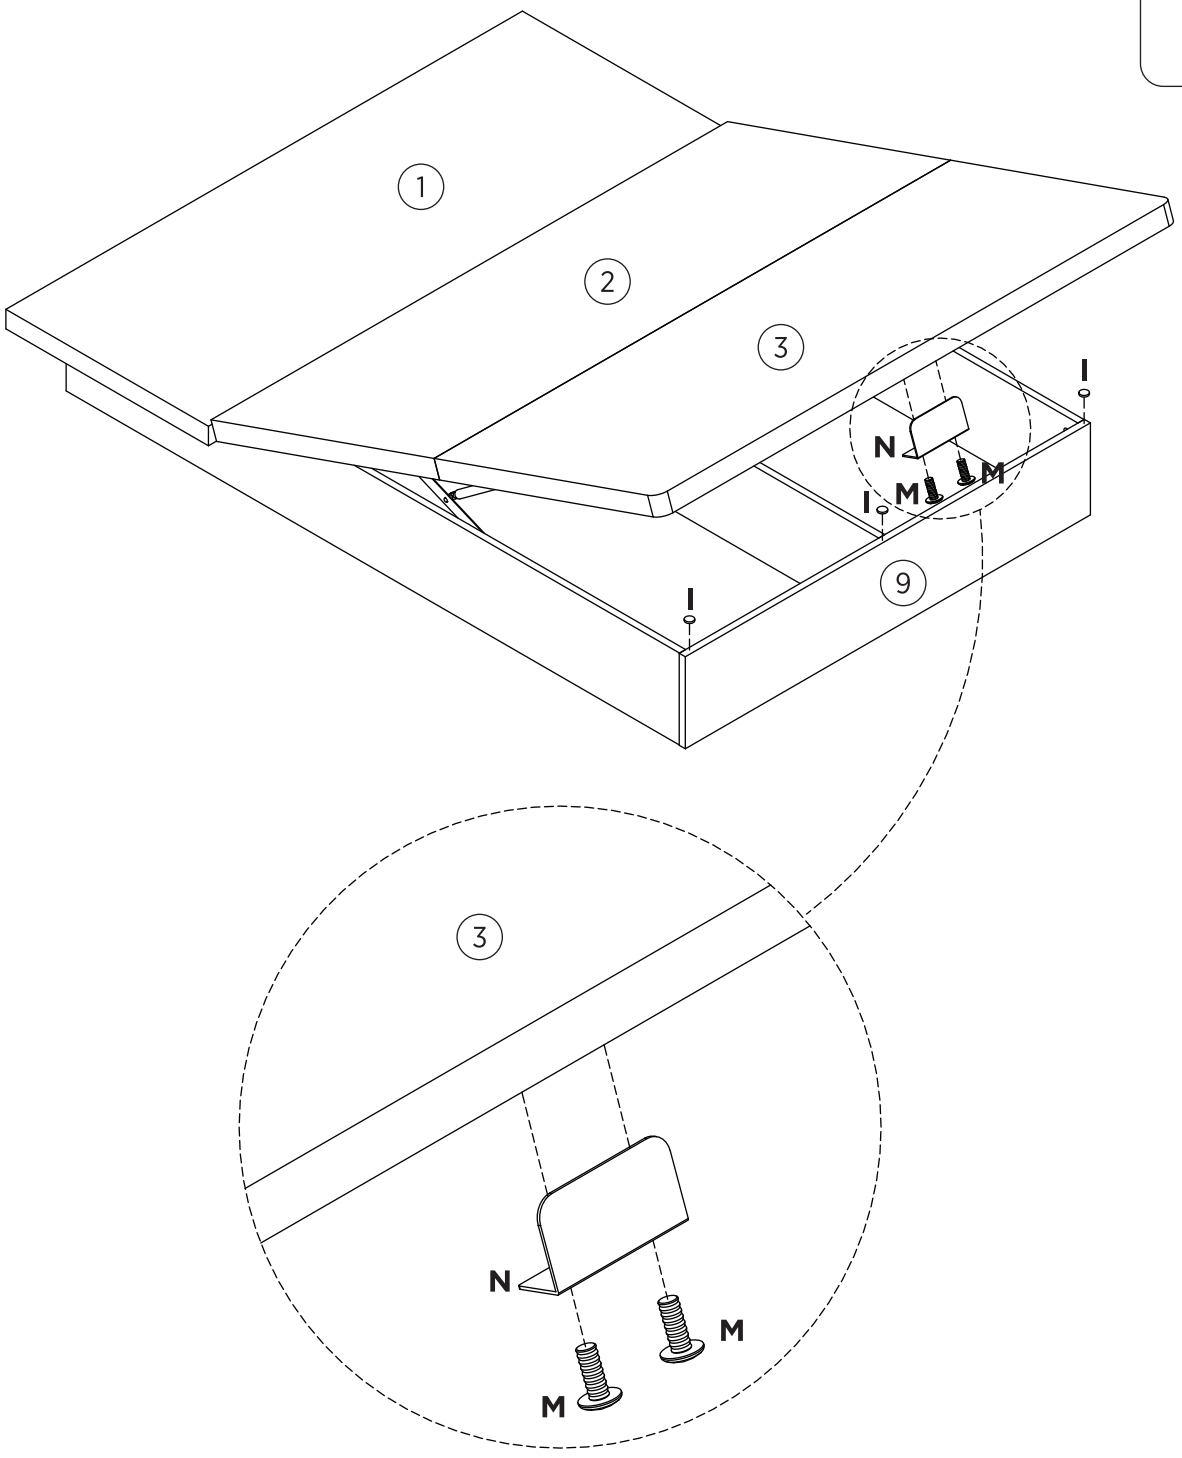

STEP 19


Paste big pads **J** on the bottom of parts **11**.

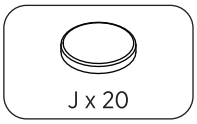

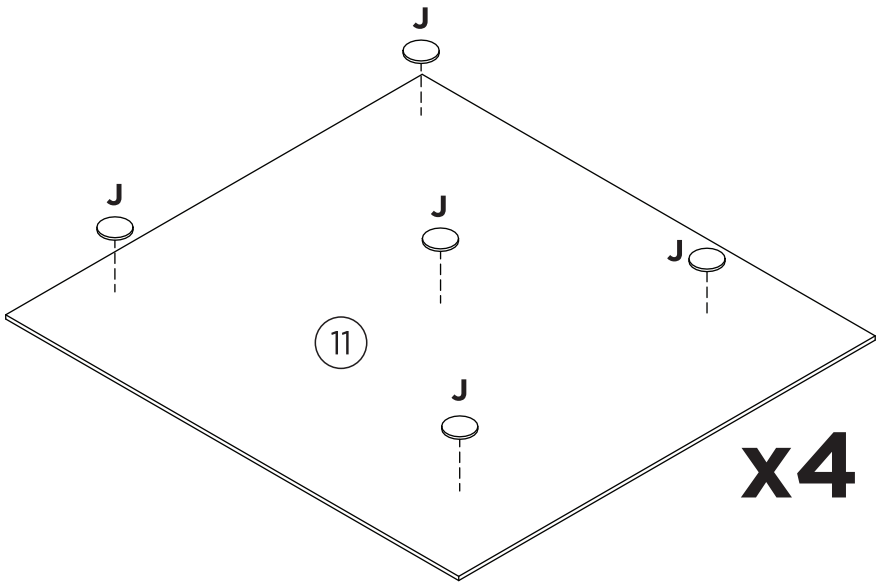


STEP 20


Place the bed base 11 into the bed boxes, big pads facing downward.

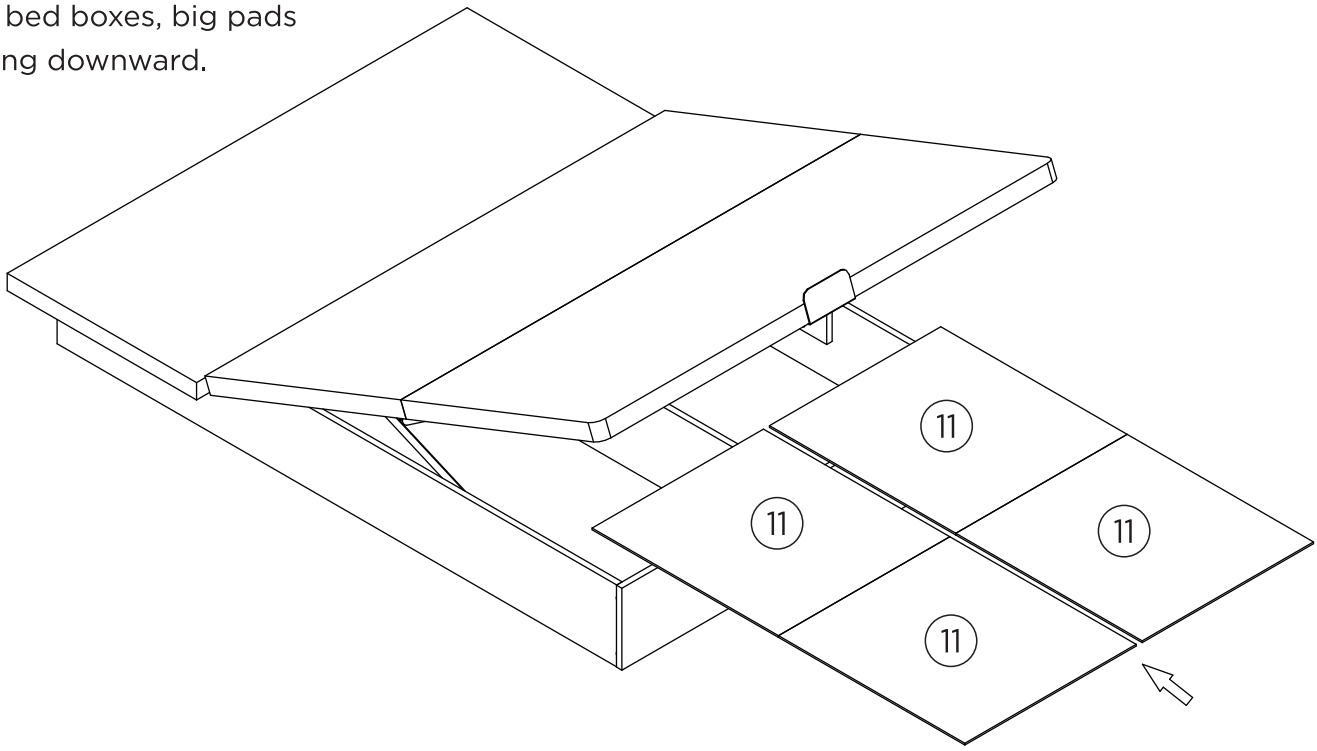

STEP 21


Insert the wooden dowels **C** to part **1**.

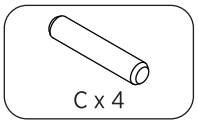


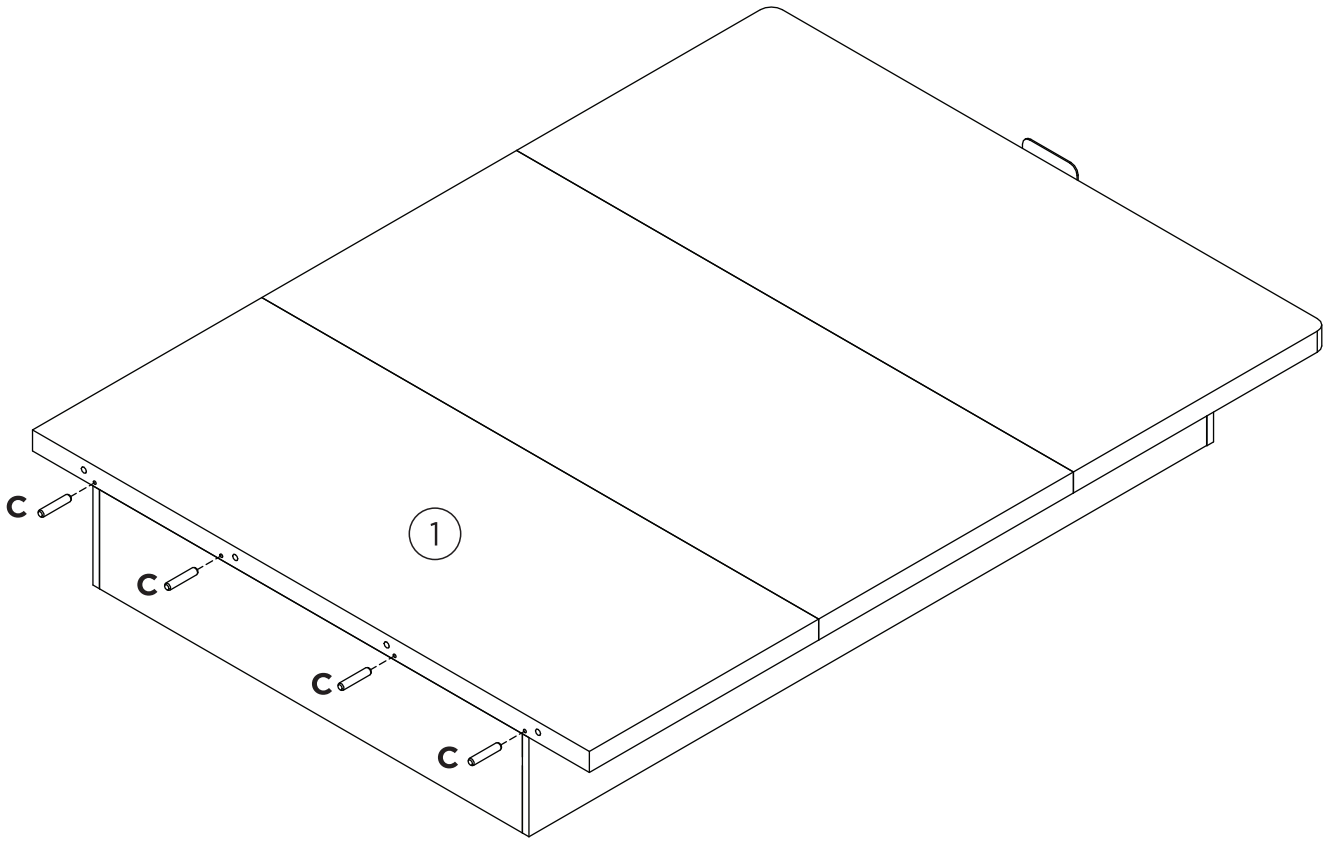

STEP 22


Fix part **12** to part **1** using bolts **P** and allen key **O**.

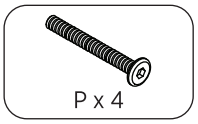


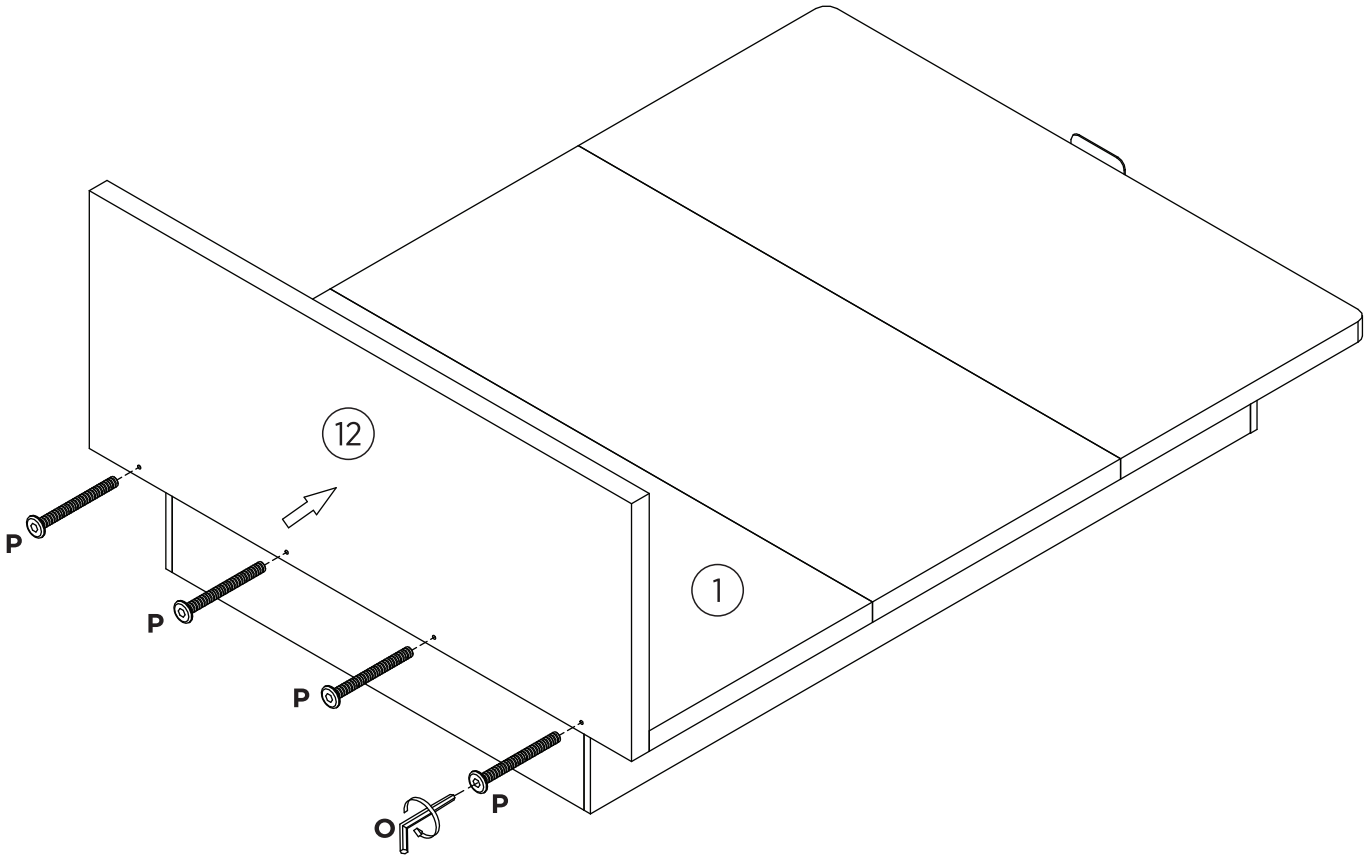

STEP 23

Fix quickfit screws **A** to parts **16** and **17** and **19**.

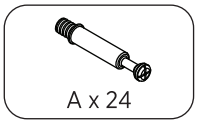

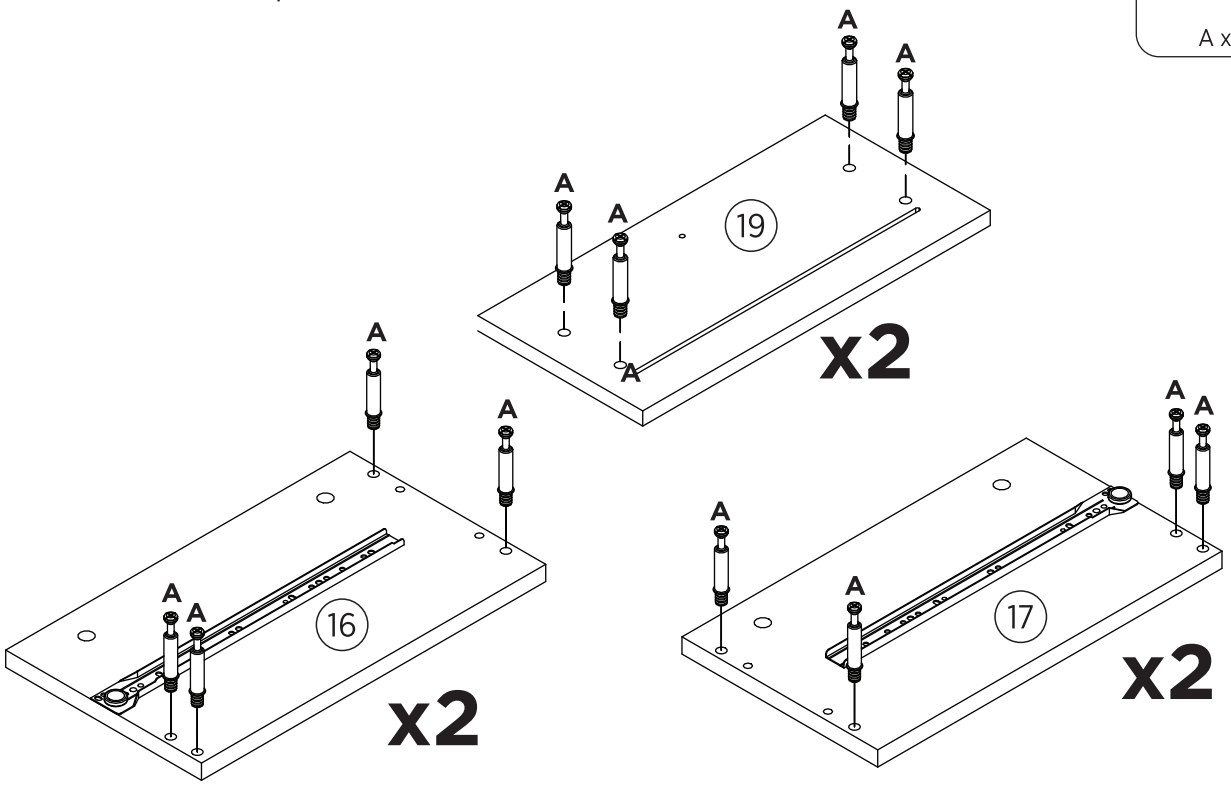



STEP 24


Insert wooden dowels **C** to part **18**.

Attach parts **15** and **18** to part **16** using cam locks **B**.

Turn cam locks clockwise to tighten.

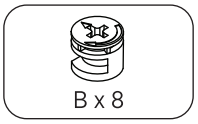

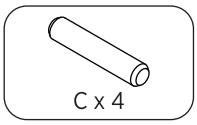

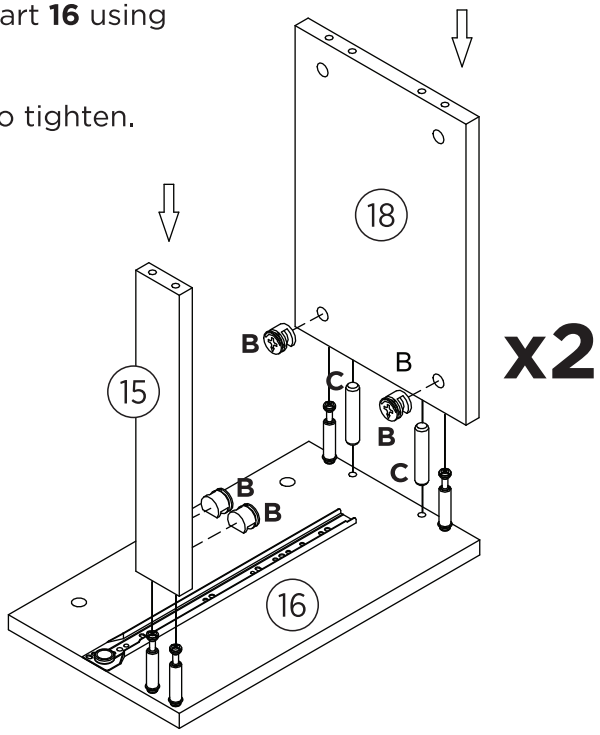



STEP 25


Insert wooden dowels **C** to part **18**.

Attach part **17** to parts **15** and **18** using cam locks **B**.

Turn cam locks clockwise to tighten.

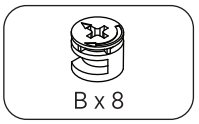


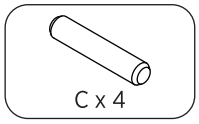


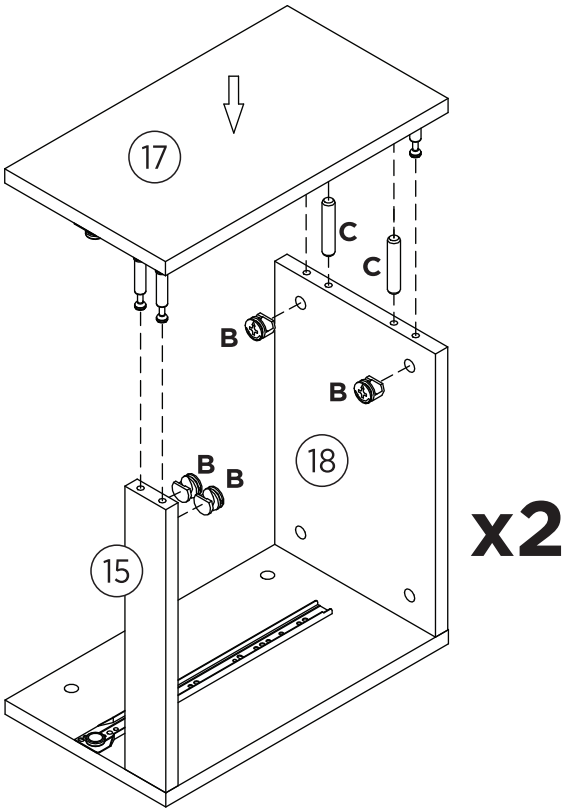

STEP 26

Fix quickfit screws **A** to part **14**.

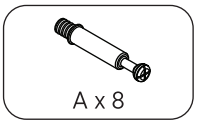

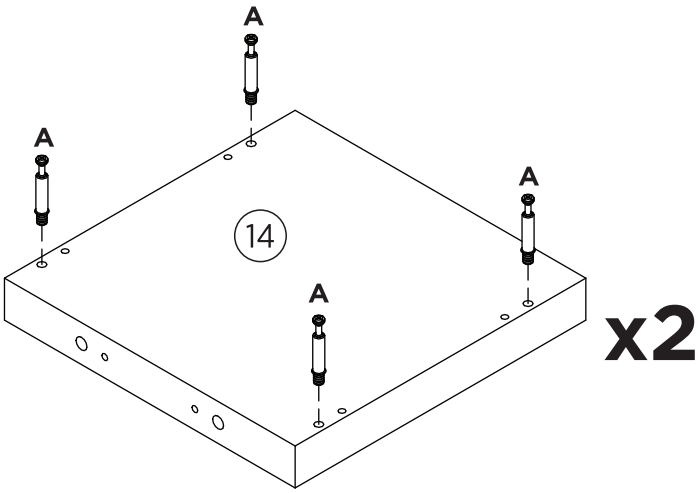


STEP 27


Insert wooden dowels **C** to parts **16** and **17**.

Attach part **14** to parts **16**, **17** and **18** using cam locks **B**.

Attach stickers **D** to all cam locks **B** to conceal them.


Turn cam locks clockwise to tighten.

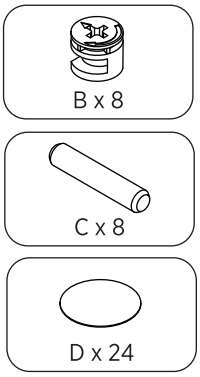


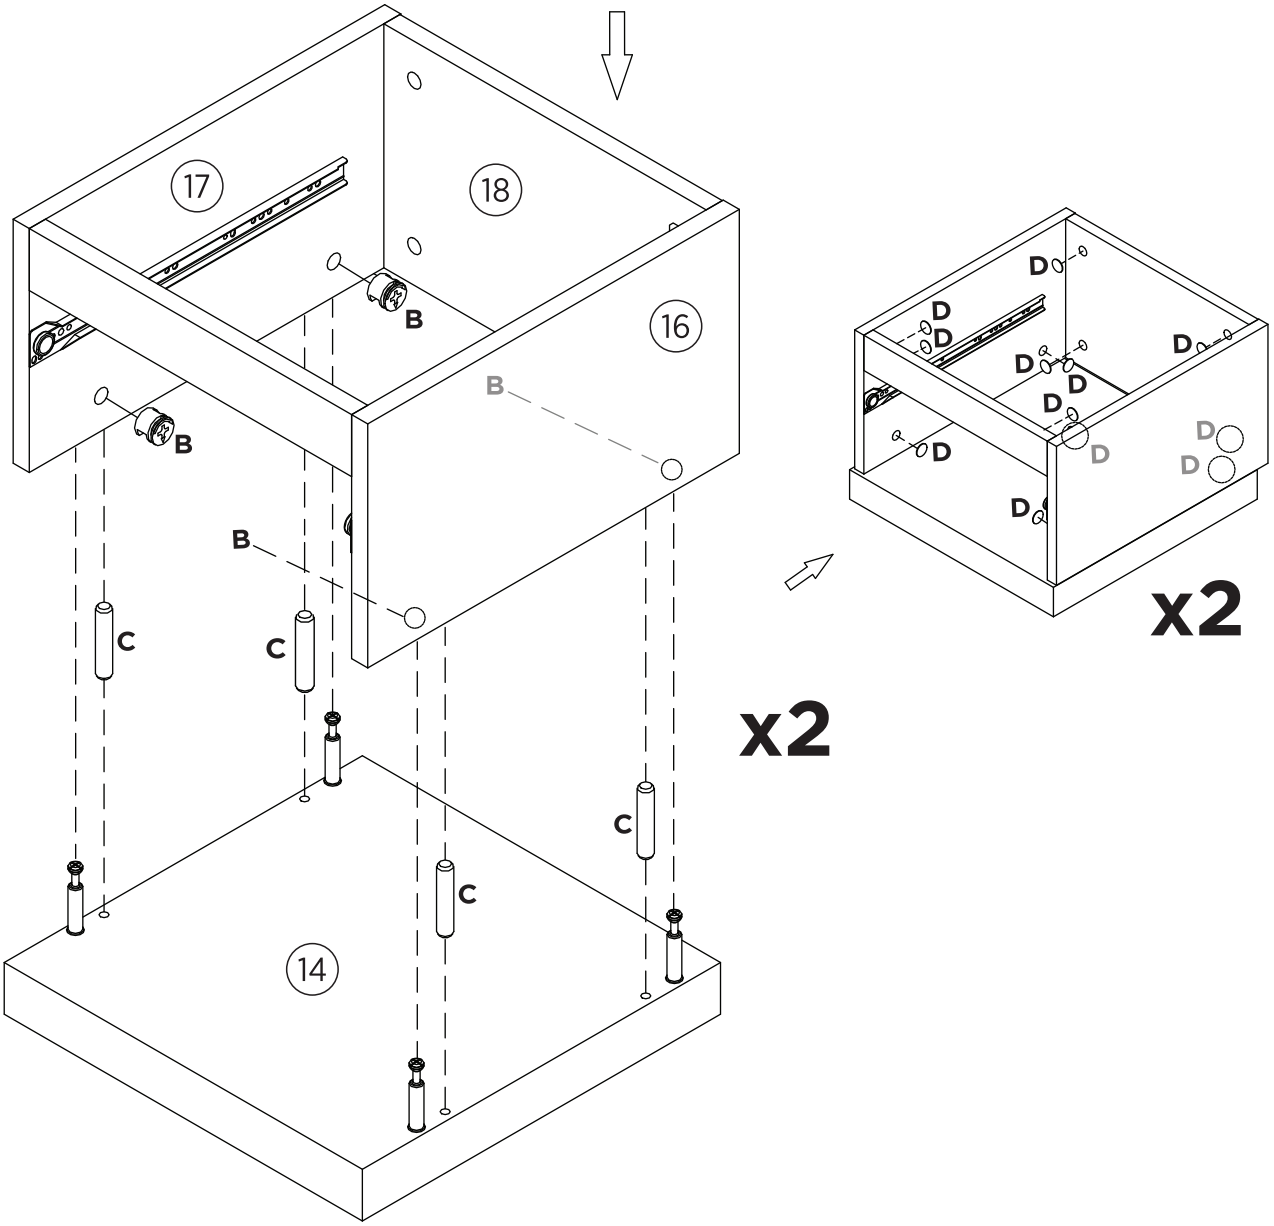

STEP 28


Insert the wooden dowels **C** to part **14**.

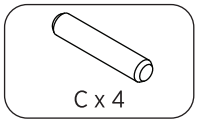


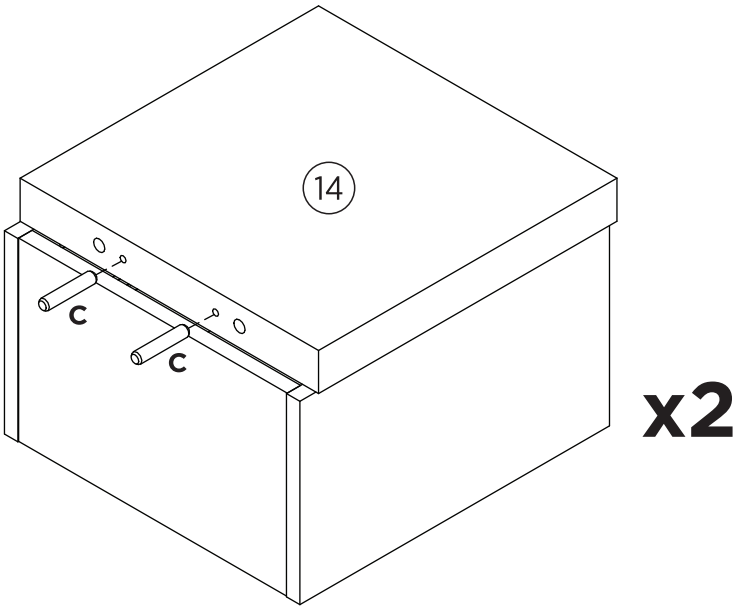


STEP 29

Fix part **13** to part **14** using bolts **P** and allen key **O**.

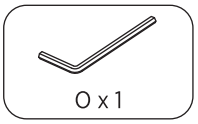


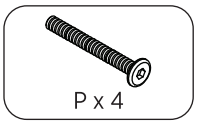


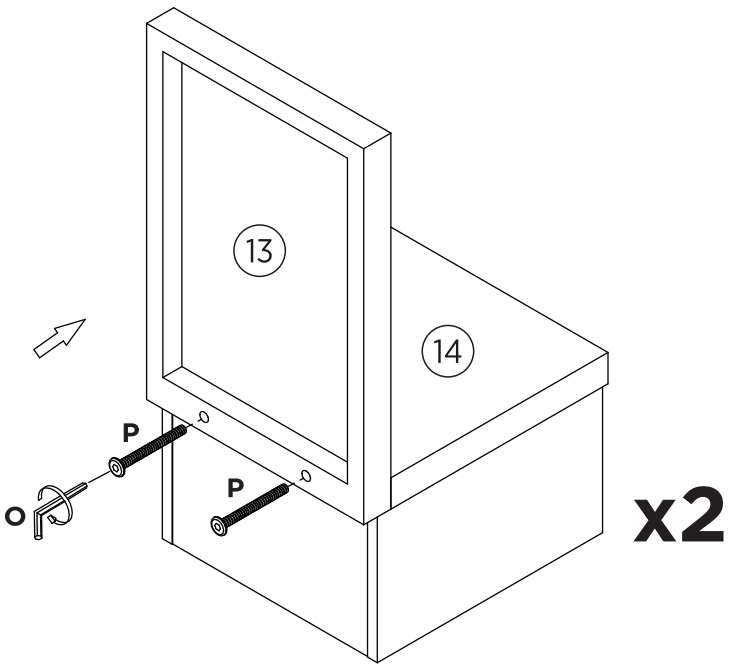

STEP 30


Fix parts **20** and **21** to part **22** using screws **T**.

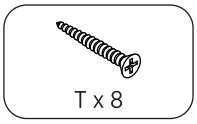

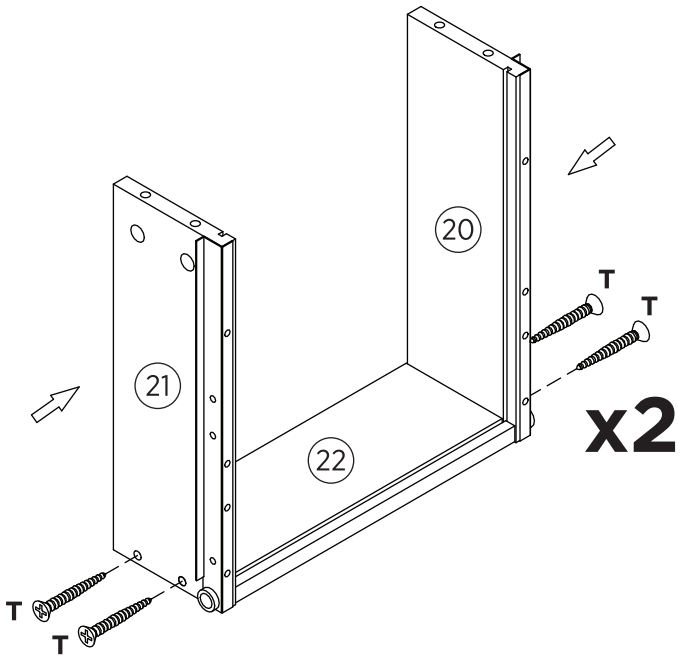

STEP 31

Slide part **23** into the grooves of parts **20**, **21** and **22**.

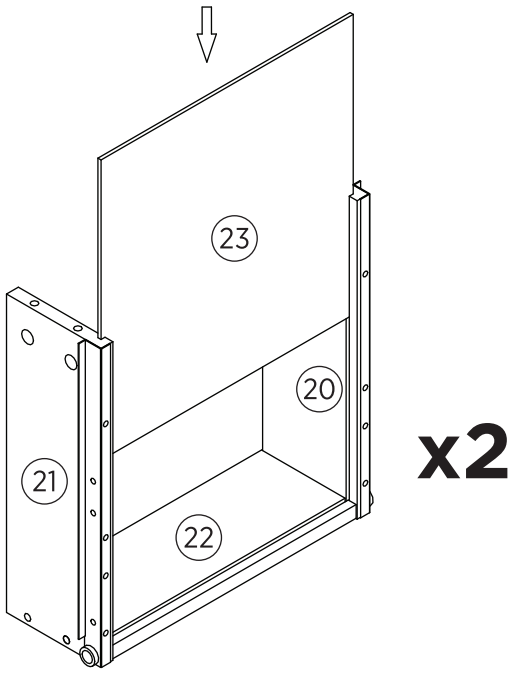



STEP 32


Attach parts **20** and **21** to part **19** using cam locks **B**.

Turn cam locks clockwise to tighten.

Attach stickers **D** to all cam locks **B** to conceal them.

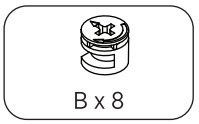


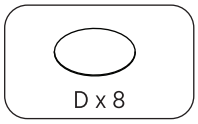


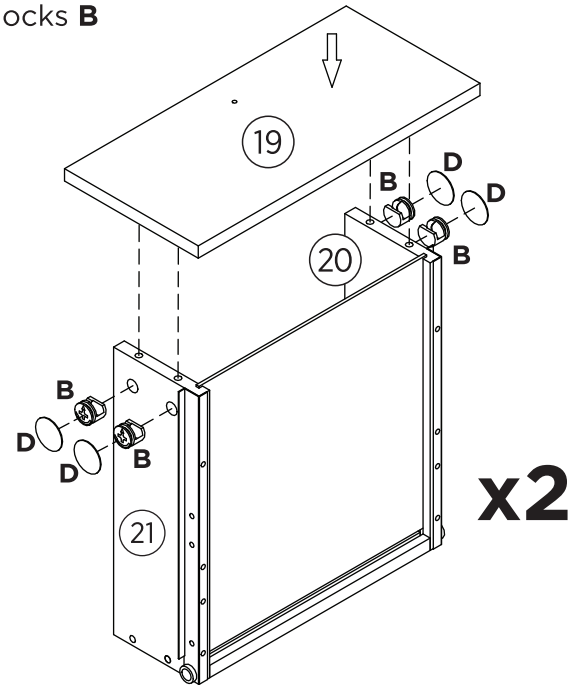


STEP 33

Fix handle **U** to part **19** using screws **V**.

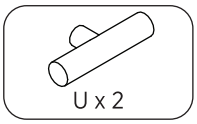


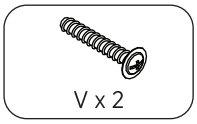

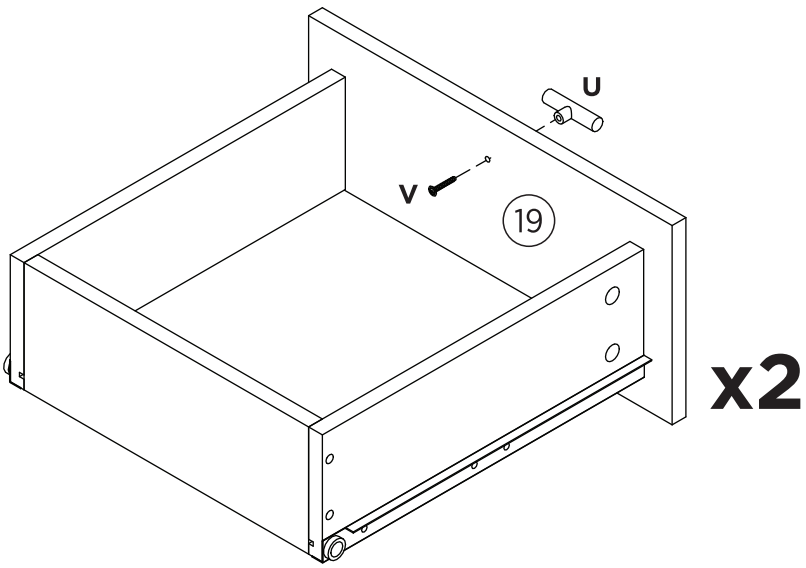


STEP 34


Slide drawers into the assembled unit of bedside tables.

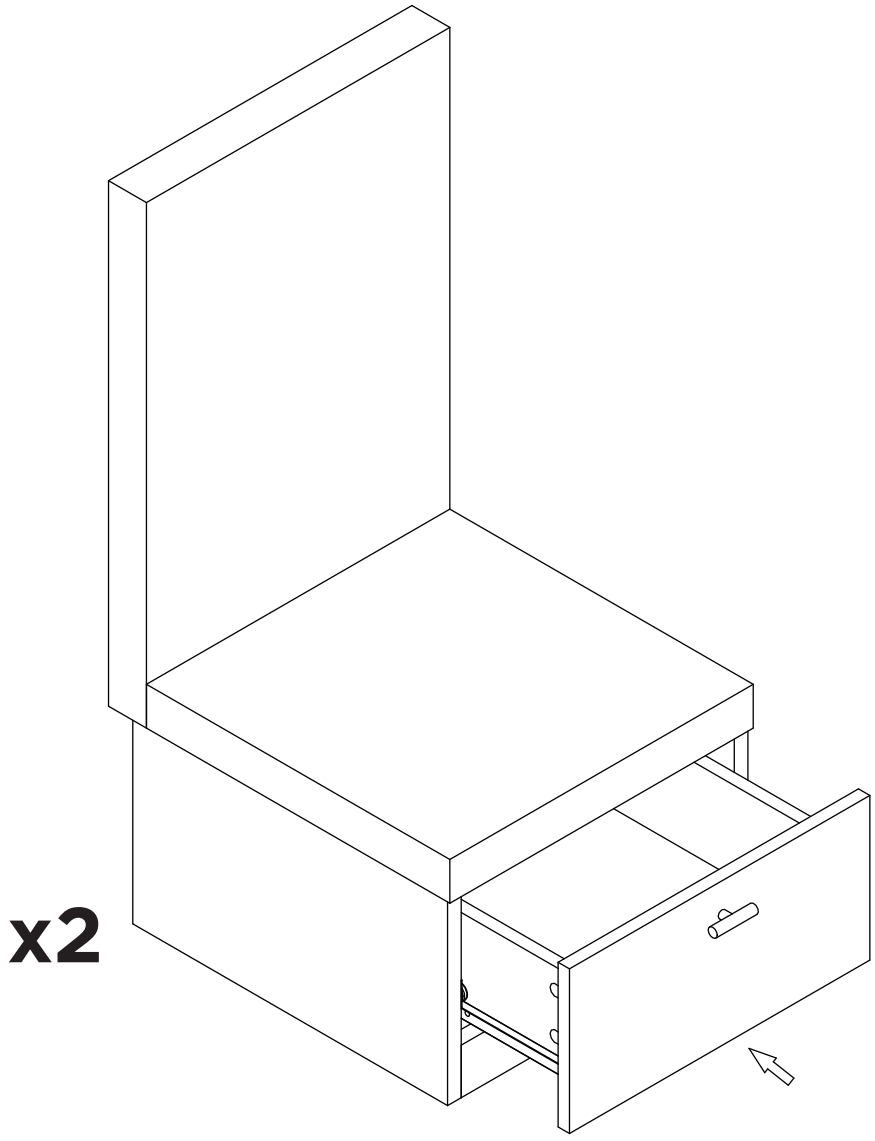


STEP 35


Connect bedside tables to bed headboard using iron plate **G** and screws **S**.

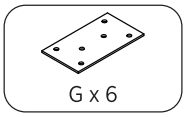

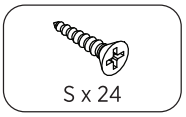

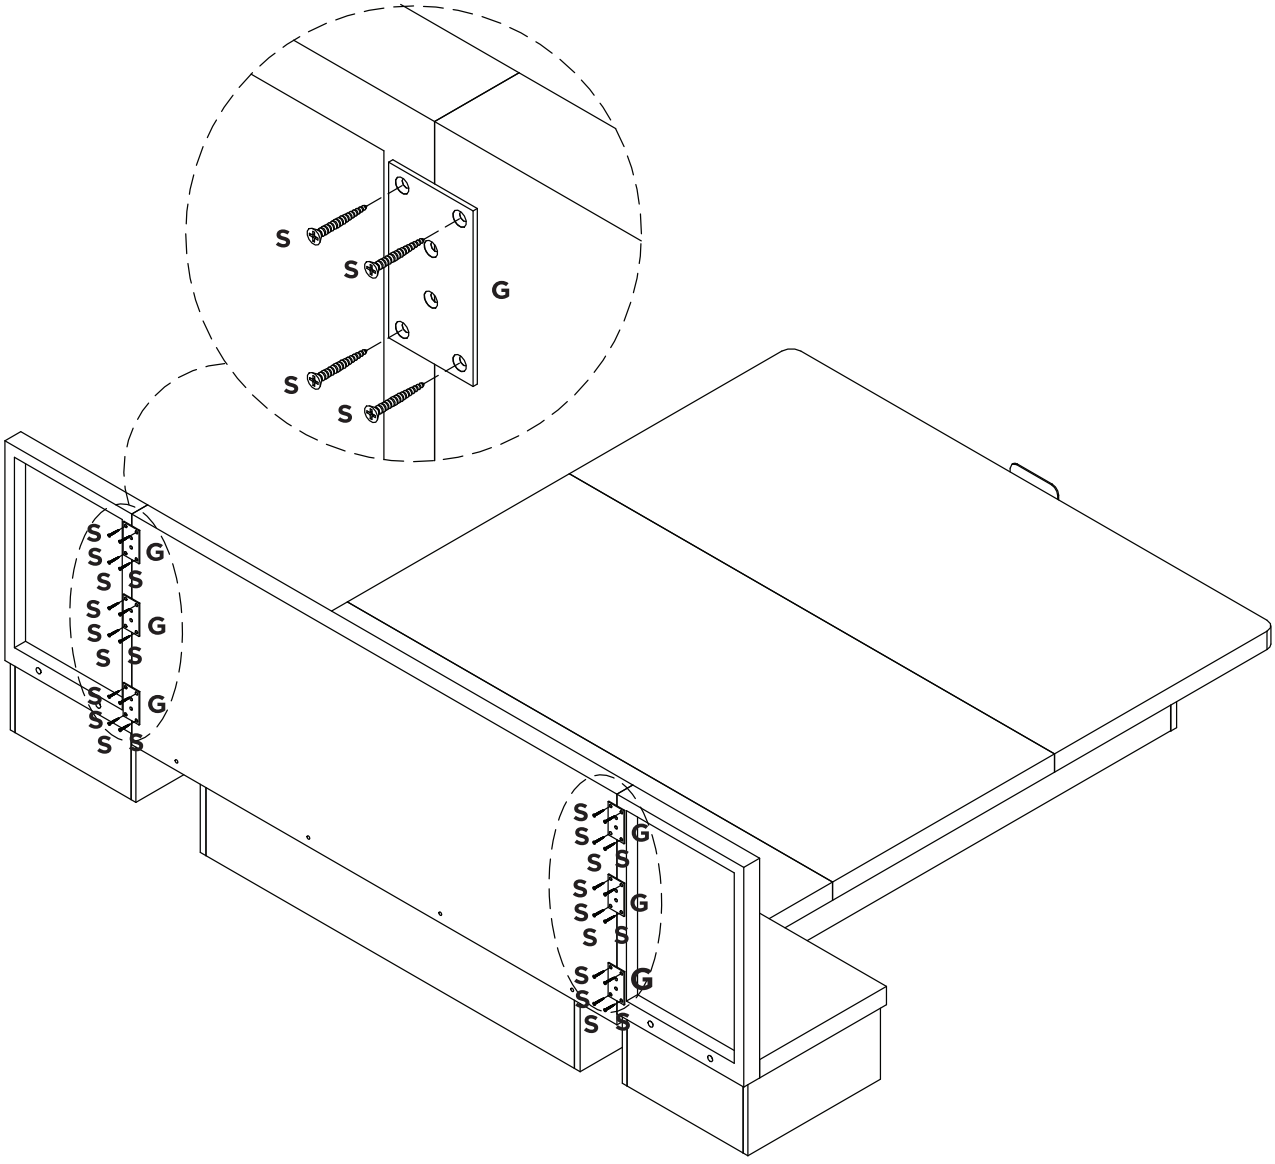

STEP 36

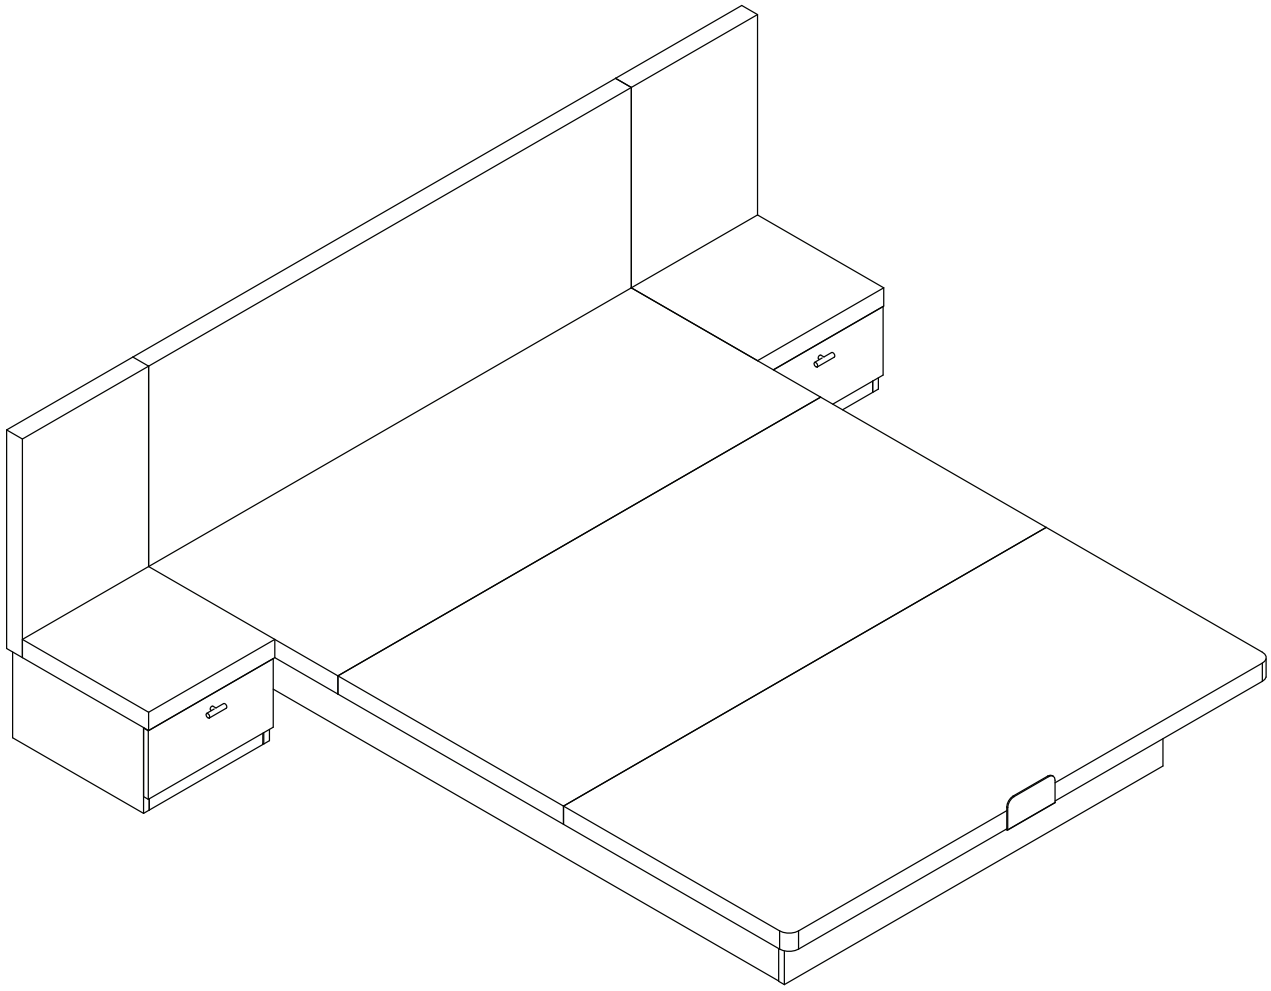

Maximum recommended weight for bed is 250kg, for drawer is 5kg and for table top is 20kg.

Your Queen Bed with Headboard and Bedsides is ready for use.