



## ASSEMBLY INSTRUCTION

A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	Legs	4 pcs
E	Center Rail	1 pc
F	Support Leg	3 pcs
G	Slat	28 pcs
H	Middle Holder	14 pcs
I	End Holder	28 pcs
J	JCBC M6 X 40	3 pcs
K	K1 K2 M5 x 70mm M4 x 65mm	1 pc
L	CSK M4 x 25mm	2 pcs
M	CSK M4 x 32mm	2 pcs
N	Stiffener Slat ( 2 Holes )	1 pc
O	Adjuster	3 pcs


Step 1: Install the legs (D) to footboard (B) and headboard (A).

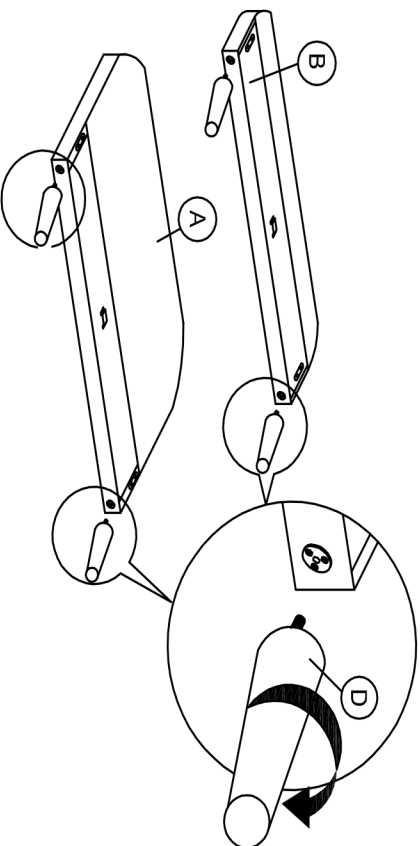


Step 2: Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

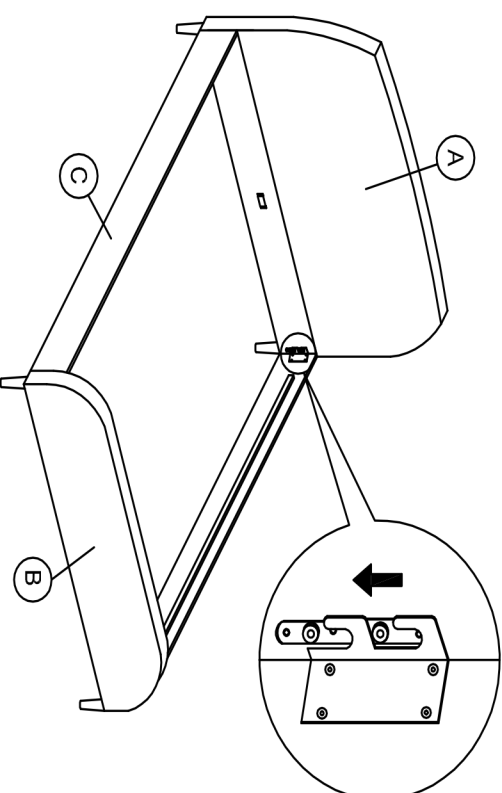

Step 3: Attach the support legs (F) to the center rail (E) of the bed as shown.

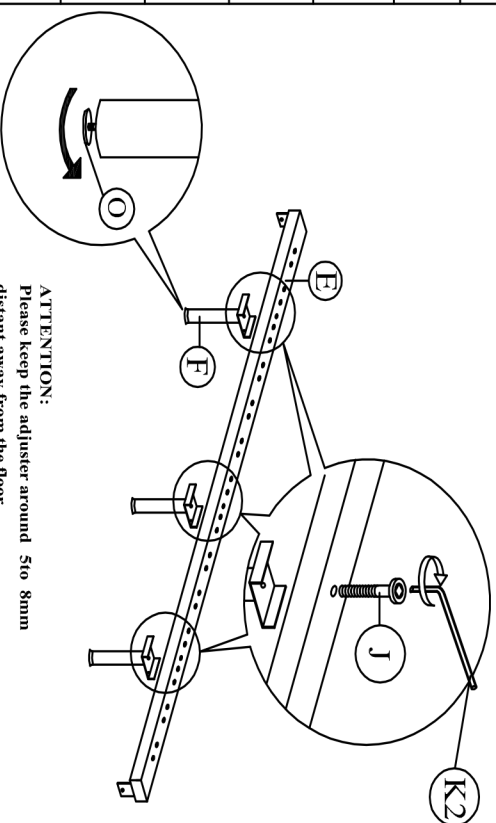

Step 4: Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (L) using screw driver (not included) to the headboard (A) and footboard (B).

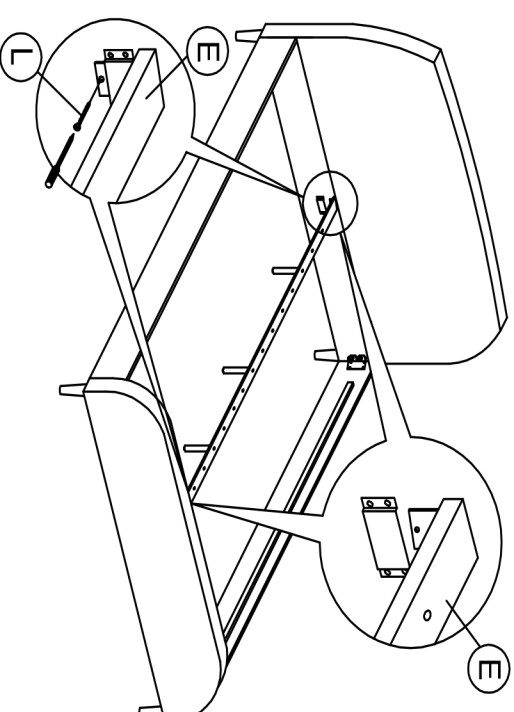

**ATTENTION:**  
Please keep the adjuster around 5to 8mm  
distant away from the floor .

Step 5: Affix the Stiffener Slat (N) to the side rail support wood and the center rail (E) . Tighten all the 4 corner ,follow by assembly of the slat holders with L VL slats as shown.

