

10 Min	
Approximate Assembly Time	2 Persons Assembly

Please follow instructions closely as deviation from these instructions may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage during assembly.

CARE INSTRUCTIONS

Periodically check and re-tighten hardware.

PARTS



(A) Bolt 8x
8mm x35mm



(B) Flat washer 8x




(C) Screw 39x



(D) Hex Key 1x




(E) Iron Legs 4x

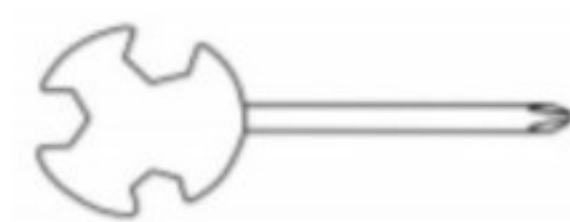

(O) Wrench 1x




(F)Middle Legs 2x

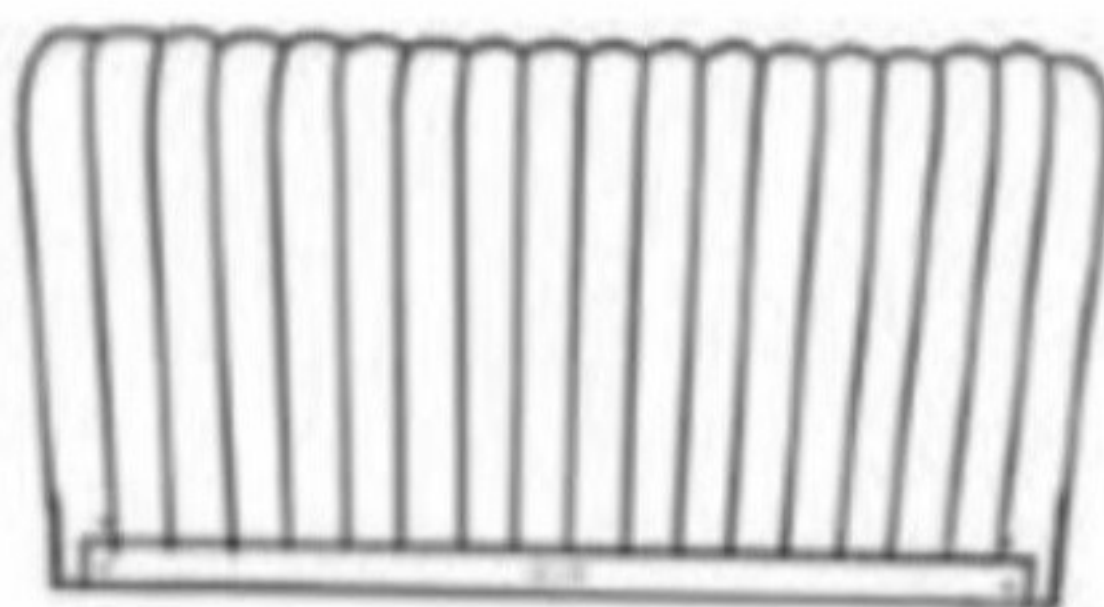

(G)Headboard 1x



(H)Side rail 2x

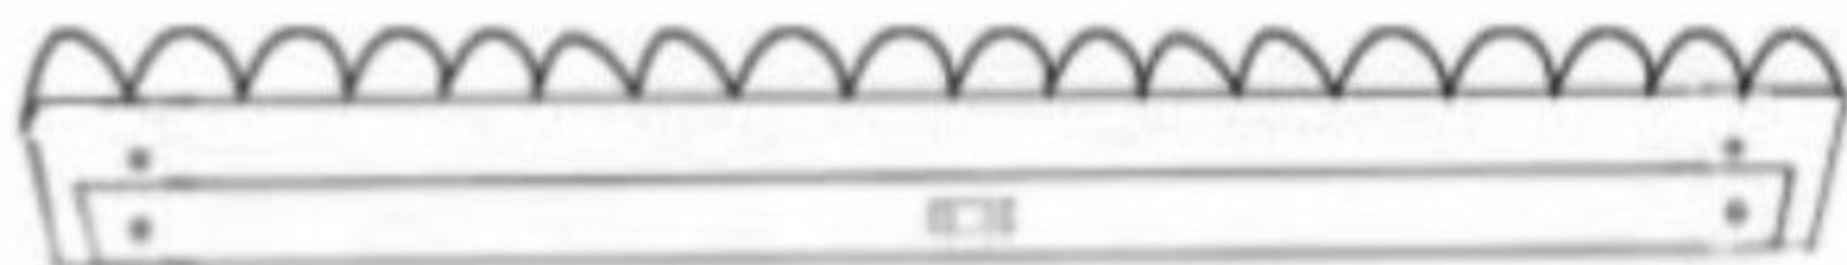

(I)Footboard 1 x



(J)Center rail 1x



(K)Roll Slats 1 x

ASSEMBLY

With help align the siderails with the headboard. Insert bolt (A), flat washer (B) in the headboard (G) and footboard (I). Ensure both flat washer (B) are close to bolt head. Align the side rail (H) with the headboard (G). Hang and align the iron corner bracket on the bolts as shown. Tighten with supplied hex key (D). Align the footboard (I) with the side rail (H). Hang and align the iron corner bracket on the bolts as shown. Tighten with supplied hex key (D). Stand bed over onto a clean smooth surface and align the iron legs (E) with all 4 corners. Insert bolt (A), flat washer (B). Tighten with supplied hex key (D). Carefully lay the bed down onto the floor with help. Align center rail (J) with headboard and footboard bracket as shown below. Press firmly into place. Screw in middle legs (F). Align the roll slats(K) into the bed making sure they are evenly spaced and locked into place over the blocks on the side rails as shown. Screw in each rail with screws (C). You may need to re-tighten all bolts after using.

