# Assembly Instruction SAFETY WARNING!

A)

WARNING: TOP BUNKS AND ELEVATED BEDS

ARE DANGEROUS AND ARE NOT RECOMMENDED

FOR CHILDREN UNDER THE AGE OF 9


Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. This is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is:

10 x greater for 7-8 year olds 7 x greater for 9-10 year olds 3 x greater for 11-12 year olds

- B) Children should be discouraged from playing on the bunk bed.
- C) The bunk bed should be checked periodically to ensure that the guardrail, access device and other components are maintained in the correct position and state of repair and that all connectors are tight.
- D) **WARNING**: The upper bunk must be more than 2m from any ceiling fan.

# **ASSEMBLY INSTRUCTIONS**

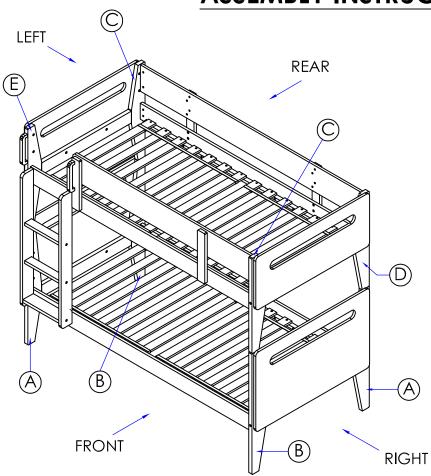

## ASSEMBLY TIPS


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.


# Warning!


- Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- This product is for home use only and not intended for commercial establishments.


"Slat base is using the timber wood material which is LVL (Laminated Veneer Lumber). Laminated veneer lumber (LVL) is an engineered wood product that uses multiple layers of thin wood assembled with adhesives, and it is comparable in strength to solid timber slat. Some of the slat you might find the timber wood joiner which is not a crack or defect which is still strong and solid".

HARDWARE LIST					
		8 PCS			32 PCS
1			9		
	JCBC M6 x 120mm			WOOD DOWEL Ø10 x 30mm	
2		22 PCS	10		28 PCS
	JCBC M6 x 70mm			BARREL NUT M6 x 16mm	
3		10 PCS	11		4 PCS
	JCBC M6 x 60mm			METAL HOLLOW PIN WITH HOLE Ø10 x 100mm	
4		32 PCS	12		8 PCS
	JCBC M6 x 40mm			WOODEN CAP Ø13.8mm	
5		8 PCS	13		1 PC
	JCBC M6 x 30mm			ALLEN KEY M4	
6		8 PCS	14		2 PCS
	JCBC M6 x 16mm			HANDLE	
7		16 PCS	15	<b>←0000 (%)</b>	8 PCS
	JCBC - W M6 x 30mm			WOOD SCREW 3.5 x 16mm	
8		56 PCS	16		4 PCS
	WOOD SCREW 4.0 x 30mm			L - BRACKET	
					PAGE LOE

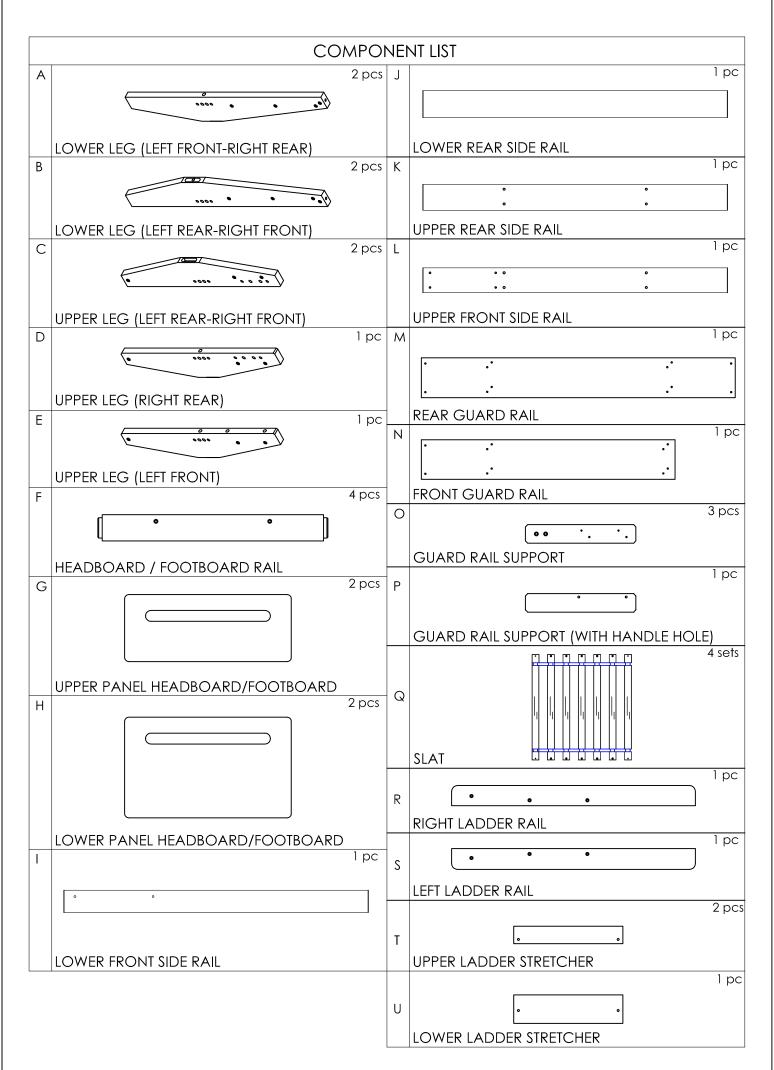

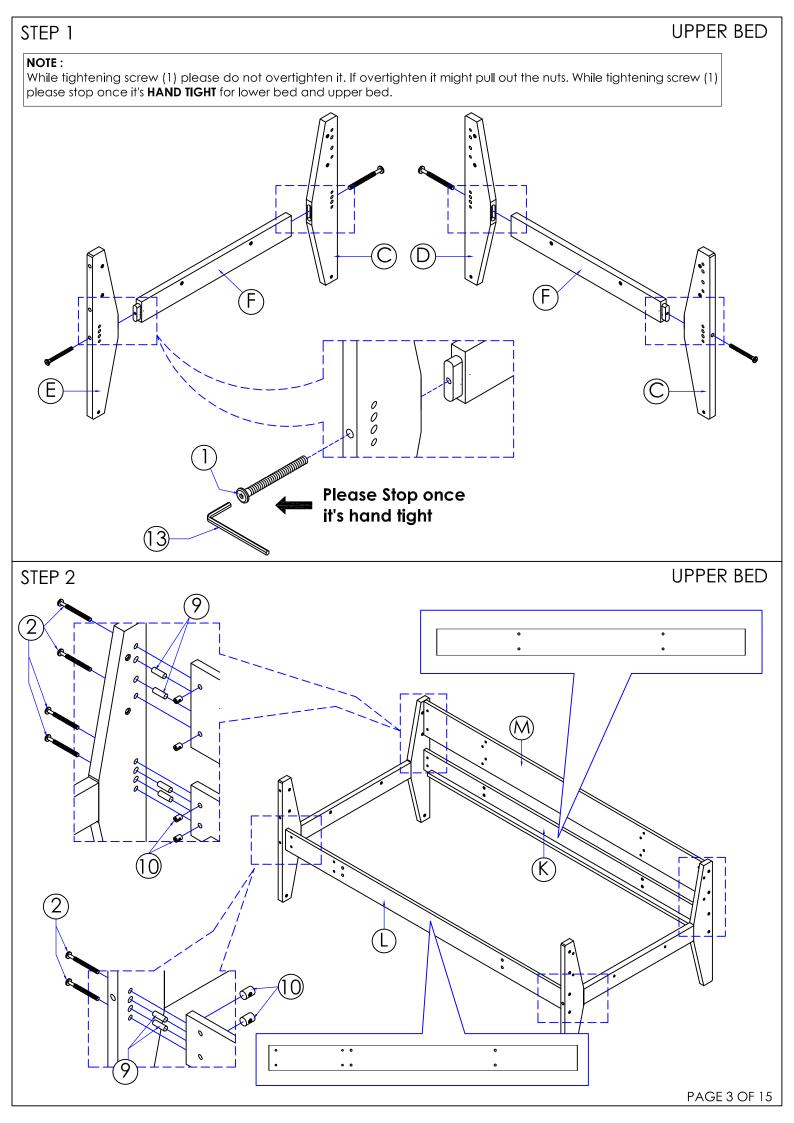

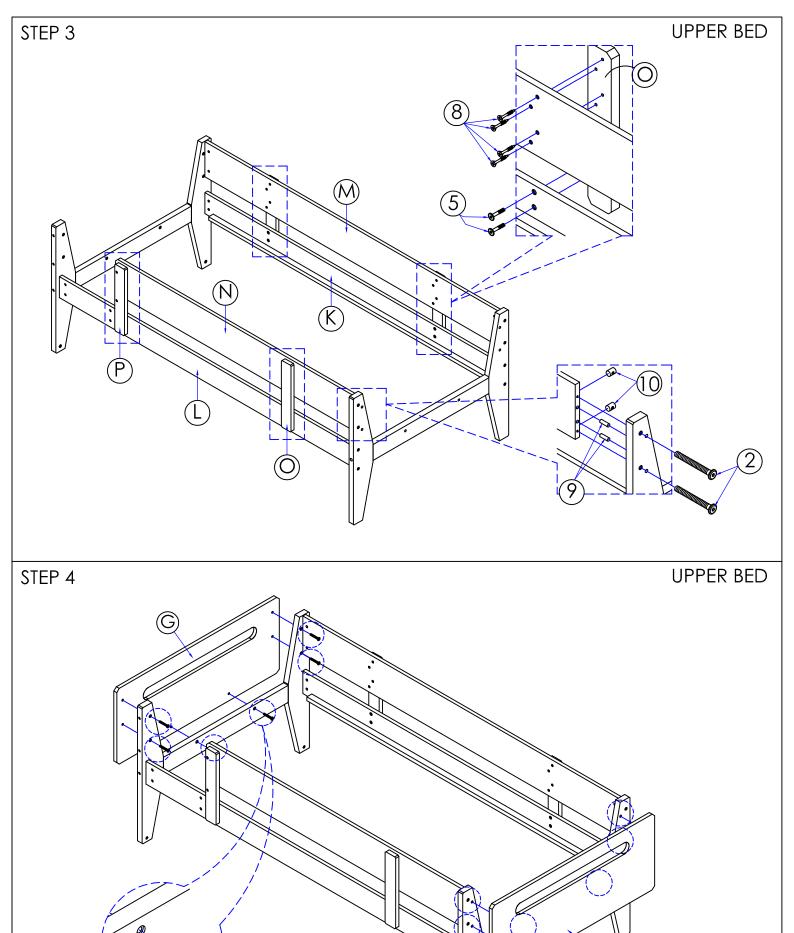


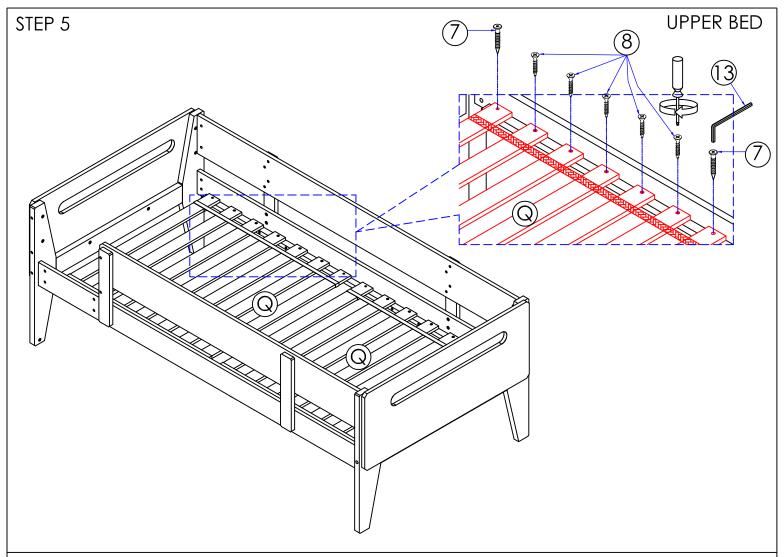



STEP 6 LOWER BED


# NOTE:


While tightening screw (1) please do not overtighten it. If overtighten it might pull out the nuts. While tightening screw (1) please stop once it's **HAND TIGHT** for lower bed and upper bed.

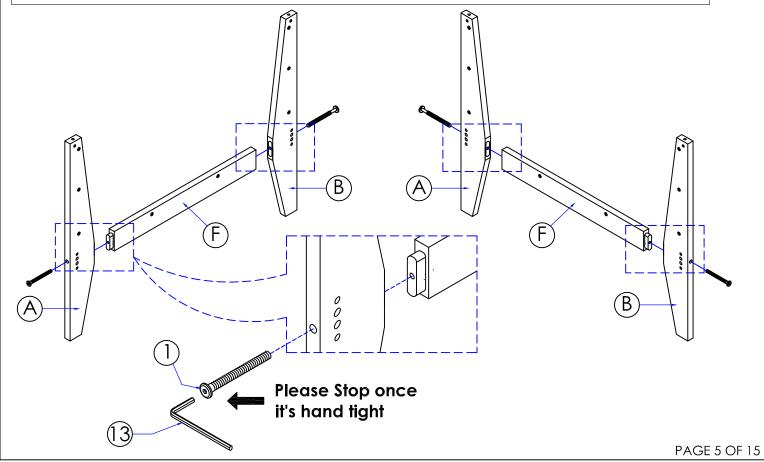


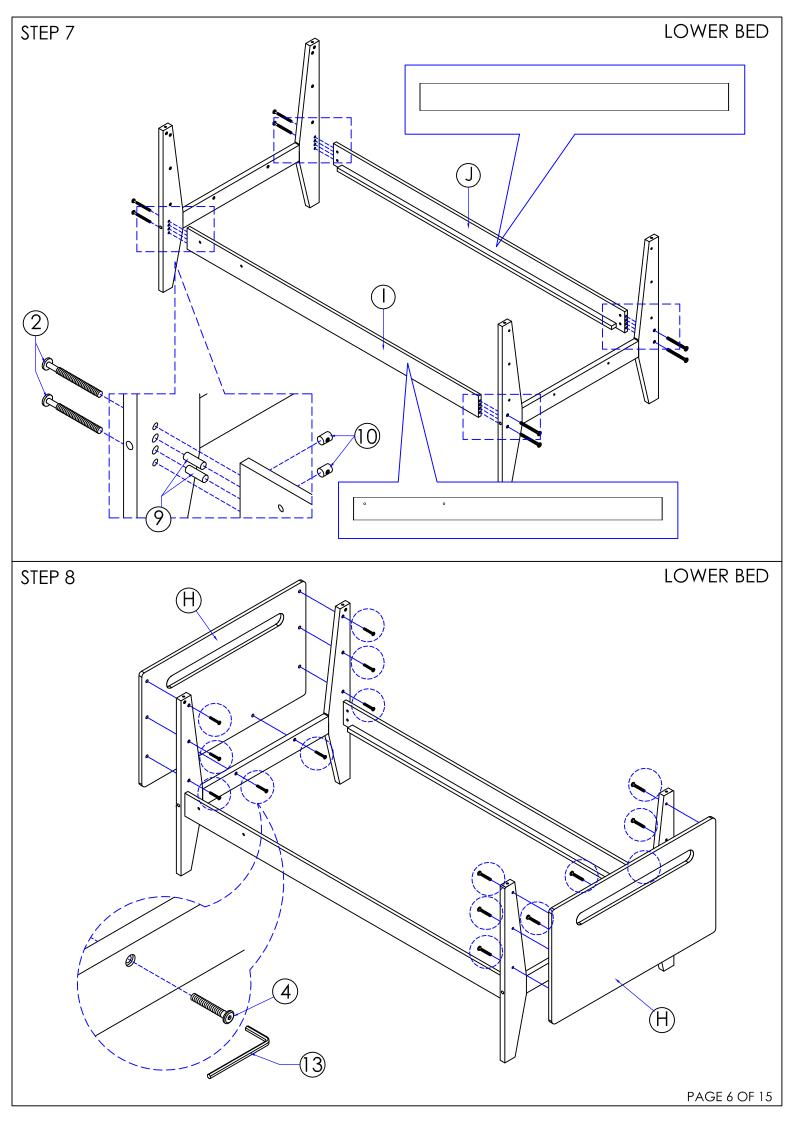

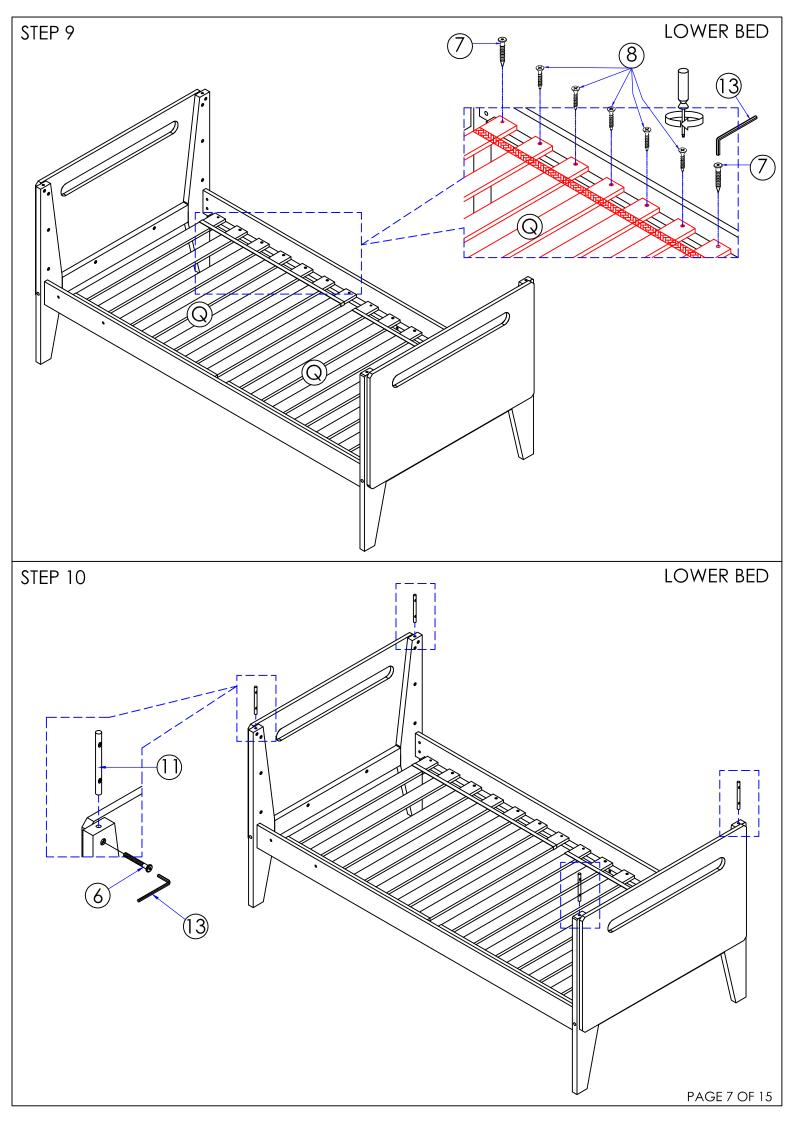


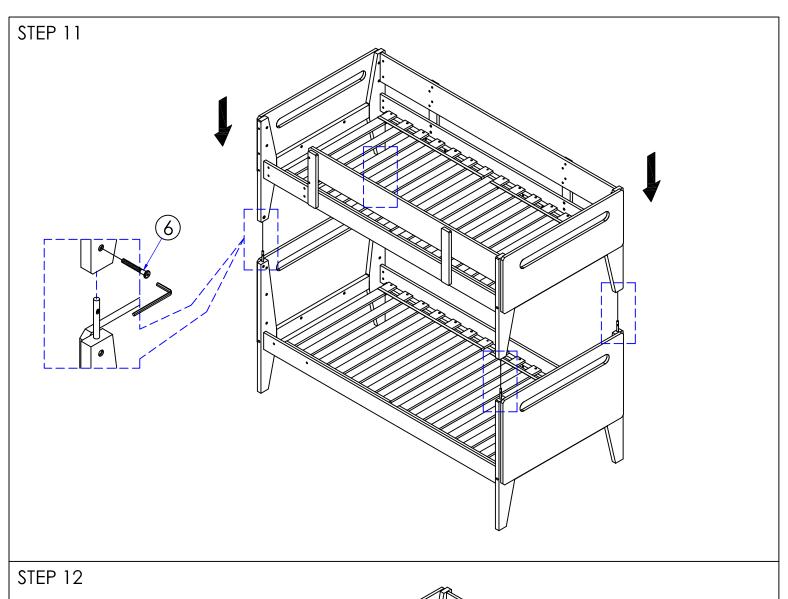


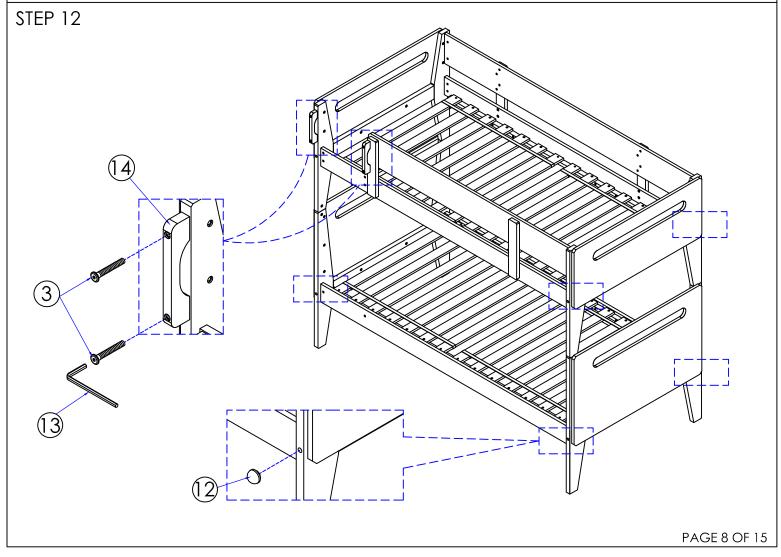


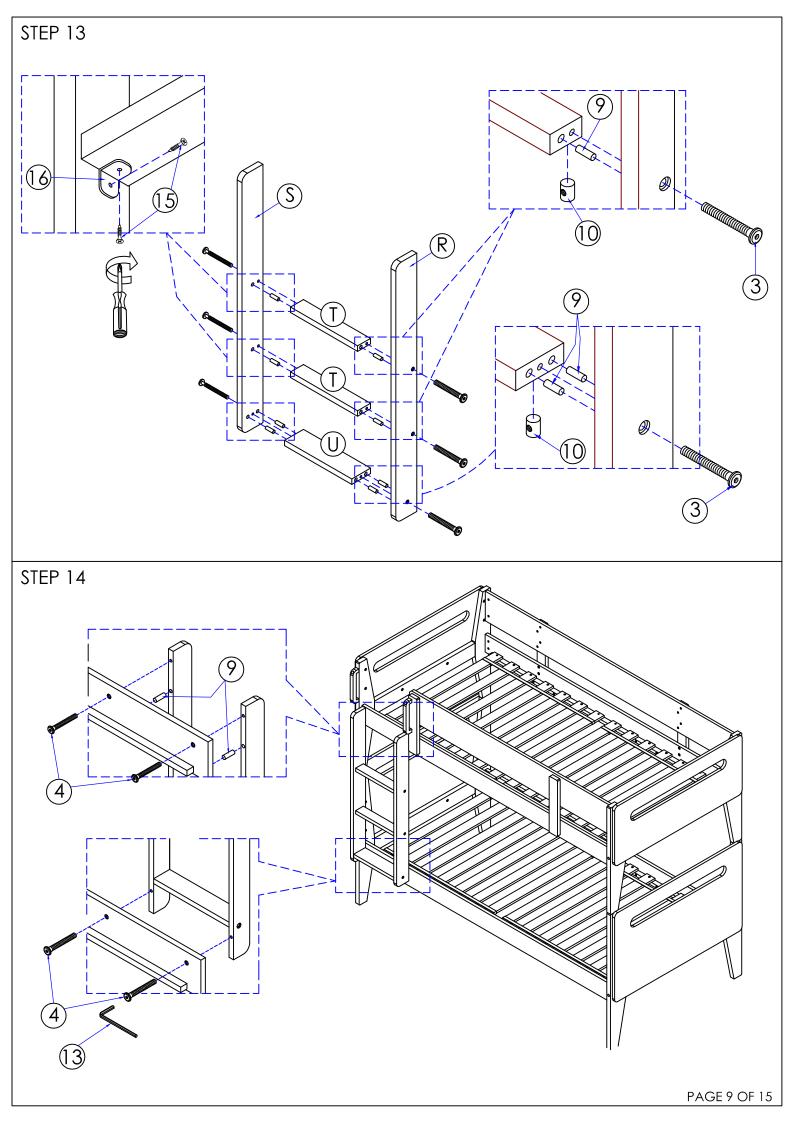



STEP 15
COMPLETE FOR BUNK BED ASSEMBLY.

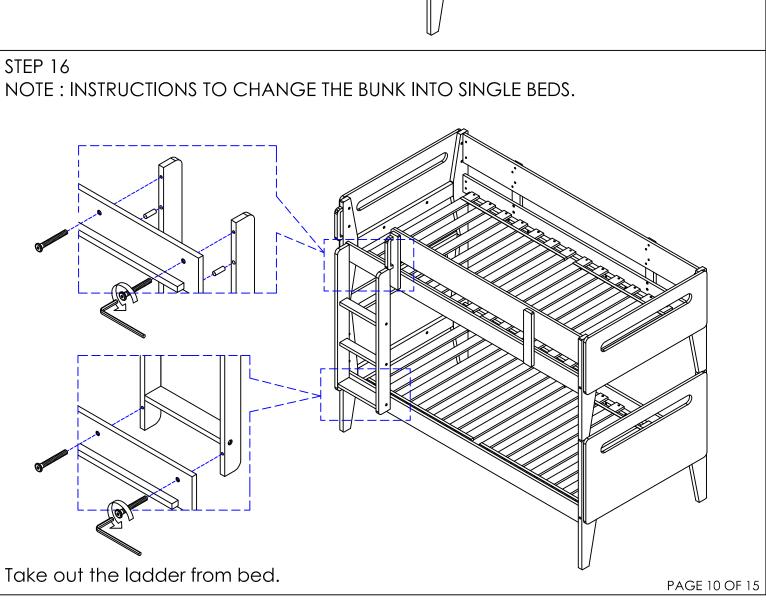

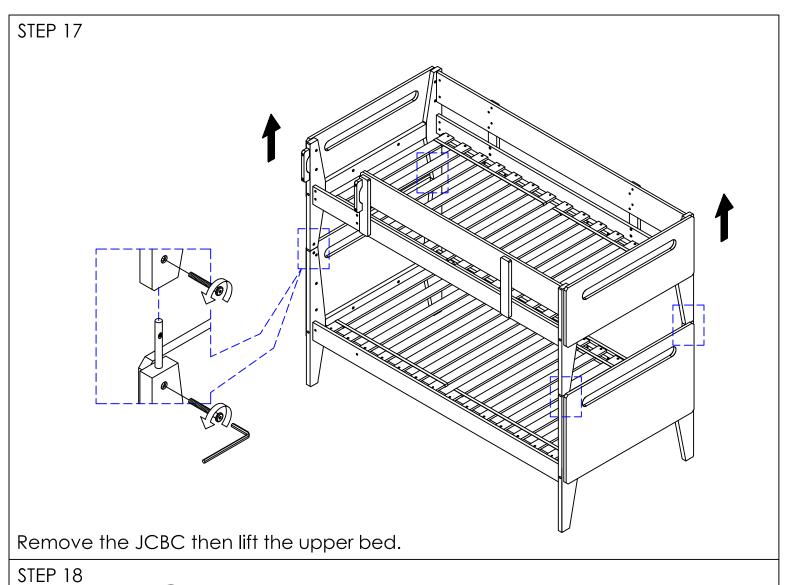


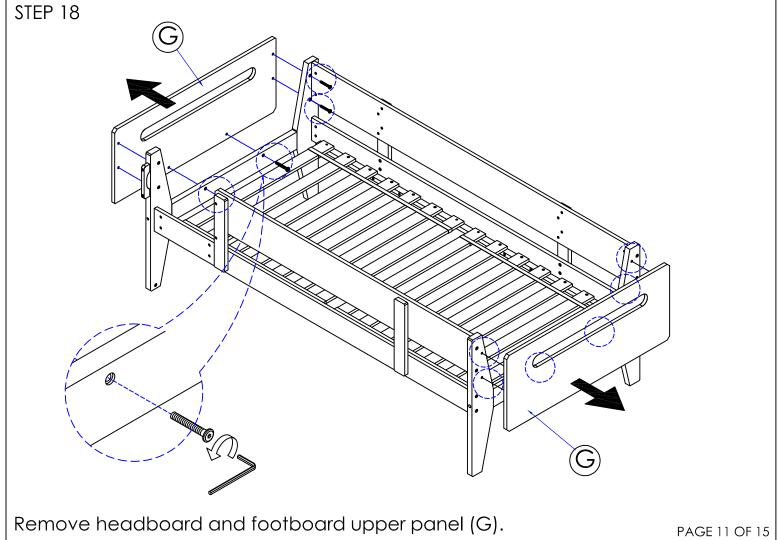


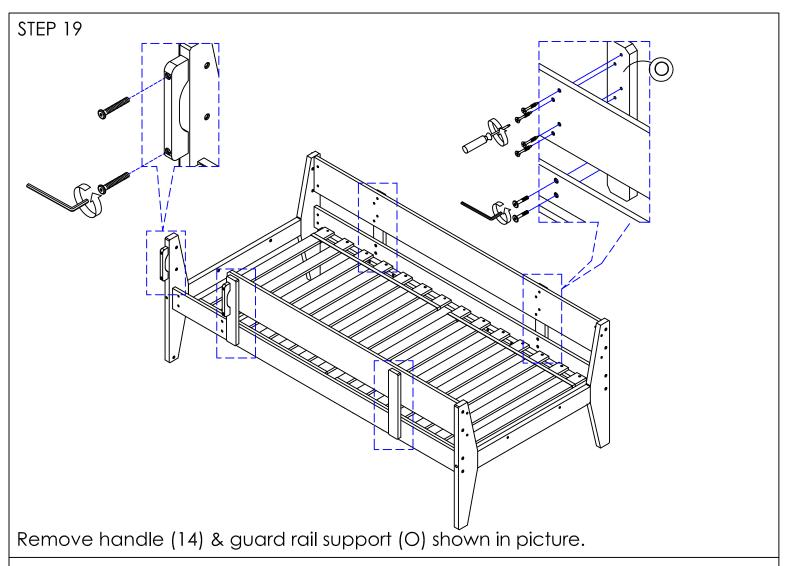

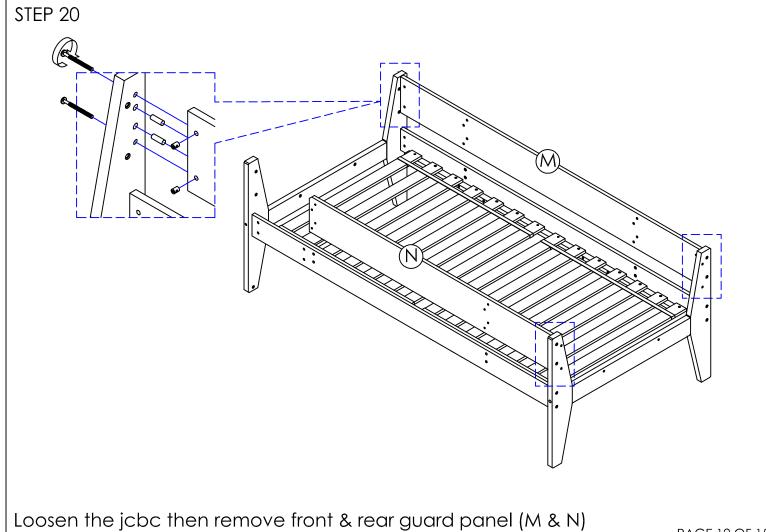

PAGE 12 OF 15

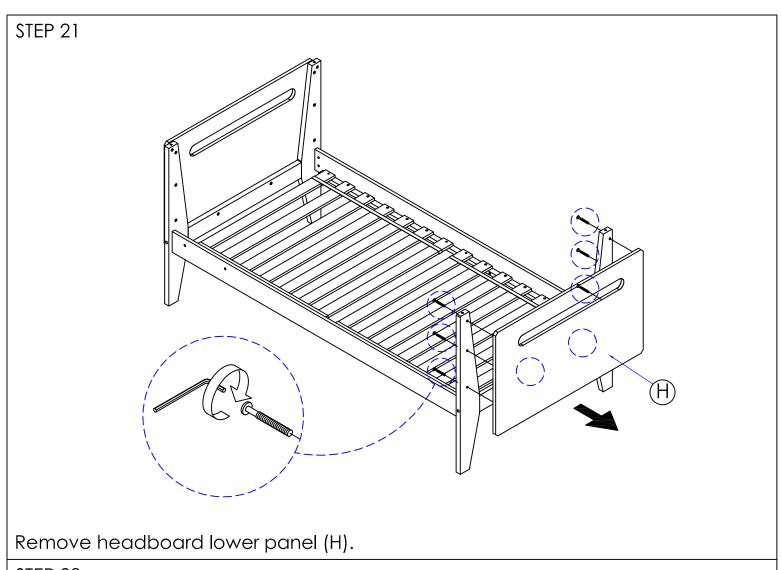

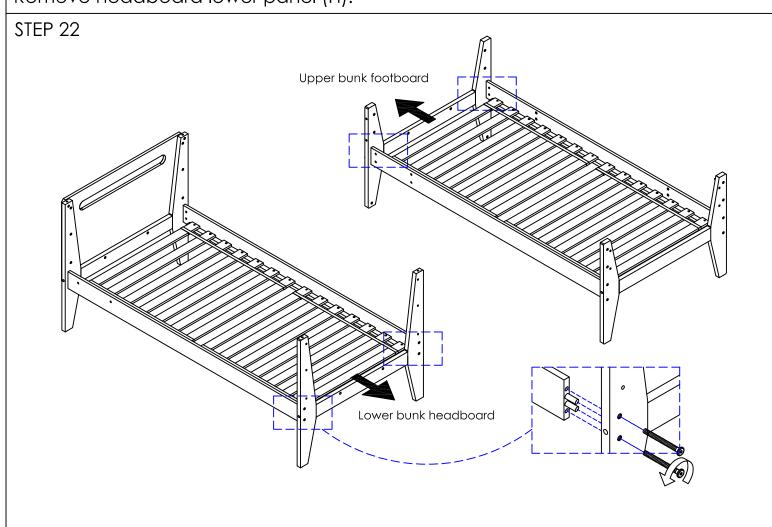

Loosen the JCBC at lower bunk headboard and upper bunk footboard. PAGE 13 OF 15

