

Read these instructions and follow steps carefully to ensure you assemble the product correctly and avoid damages. Check that all parts and hardware have been provided before assembling the product. Place all contents on a clean, soft-flat surface to avoid scratching the product.



CAUTION:


Only tighten bolts to 80% at first. Once all parts have been assembled, fully tighten all hardware. To prevent damage to threads, do not use a power tool and do not overtighten bolts. Use two people to lift and turn the product when assembling. Do not attempt with one person and do not roll onto legs. Keep all hardware and small parts away from children.




2 PERSONS RECOMMENDED

PART LIST			HARDWARE LIST		
ITEM	DESCRIPTION	QTY	ITEM	DESCRIPTION	QTY
A	Headboard	1 PC	J	Small Adjuster	4 PCS
B	Footboard	1 PC	K	JCBB M8 x 20	8 PCS
C	Side Rail	4 PCS	L	JCBC M6 x 30	8 PCS
D	Headboard Legs	2 PCS	M	Flat Washers	8 PCS
E	Footboard Legs	2 PCS	N	JCBC M6 x 60	10 PCS
F	Side Rail Legs	2 PCS	O	Allen Key 65mm	1 PC
G	Center Rail	2 PCS	P	Allen Key 70mm	1 PC
H	14 pcs slat	2 PCS	Q	CSK Screw 32mm	28 PCS
I	Support Legs	4 PCS	R	Spring Washers	6 PCS


Step 1 : Fix the headboard (A) and footboard (B) with legs (D,E) as shown.

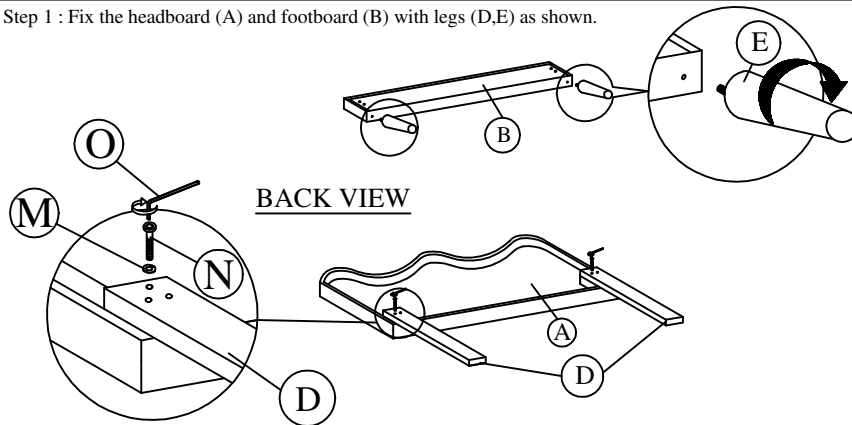


Step 2 : Attach the JCBB Bolt (K) to the headboard (A) and footboard (B).

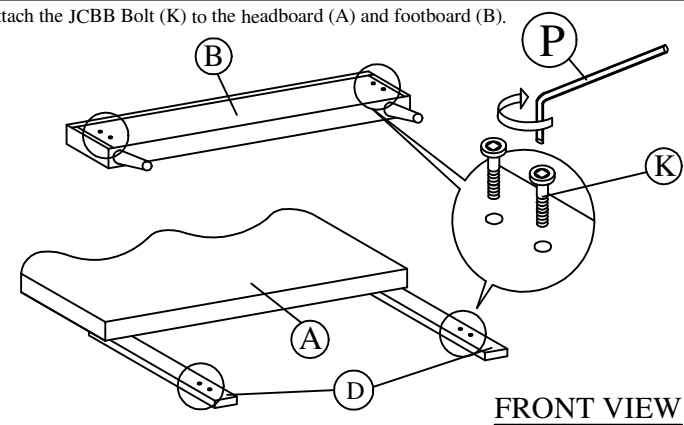


Step 3 : Attach the side rail leg (F) to the side rail (C).

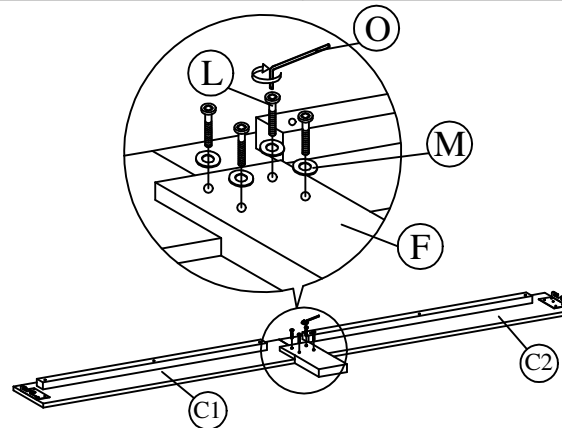

Step 4 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

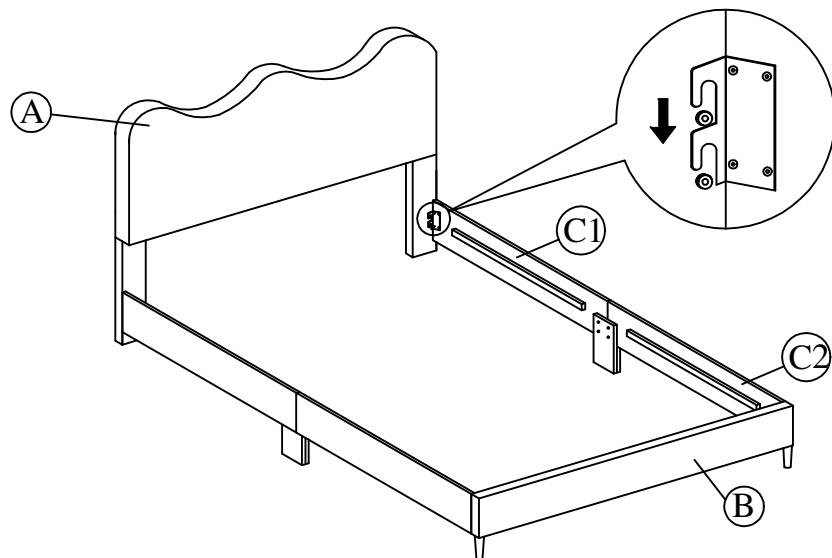

Step 5 : Attach the support legs (I) to the slats (H) and center rail (G).

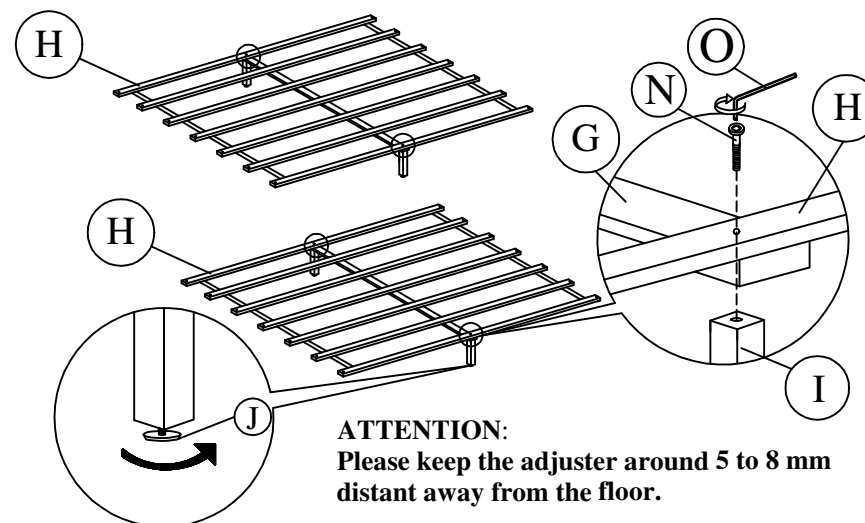

Step 6 : Tighten the 4 Corner with Allen Key (P). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

