



TEMPLE & WEBSTER

Assembly Instruction

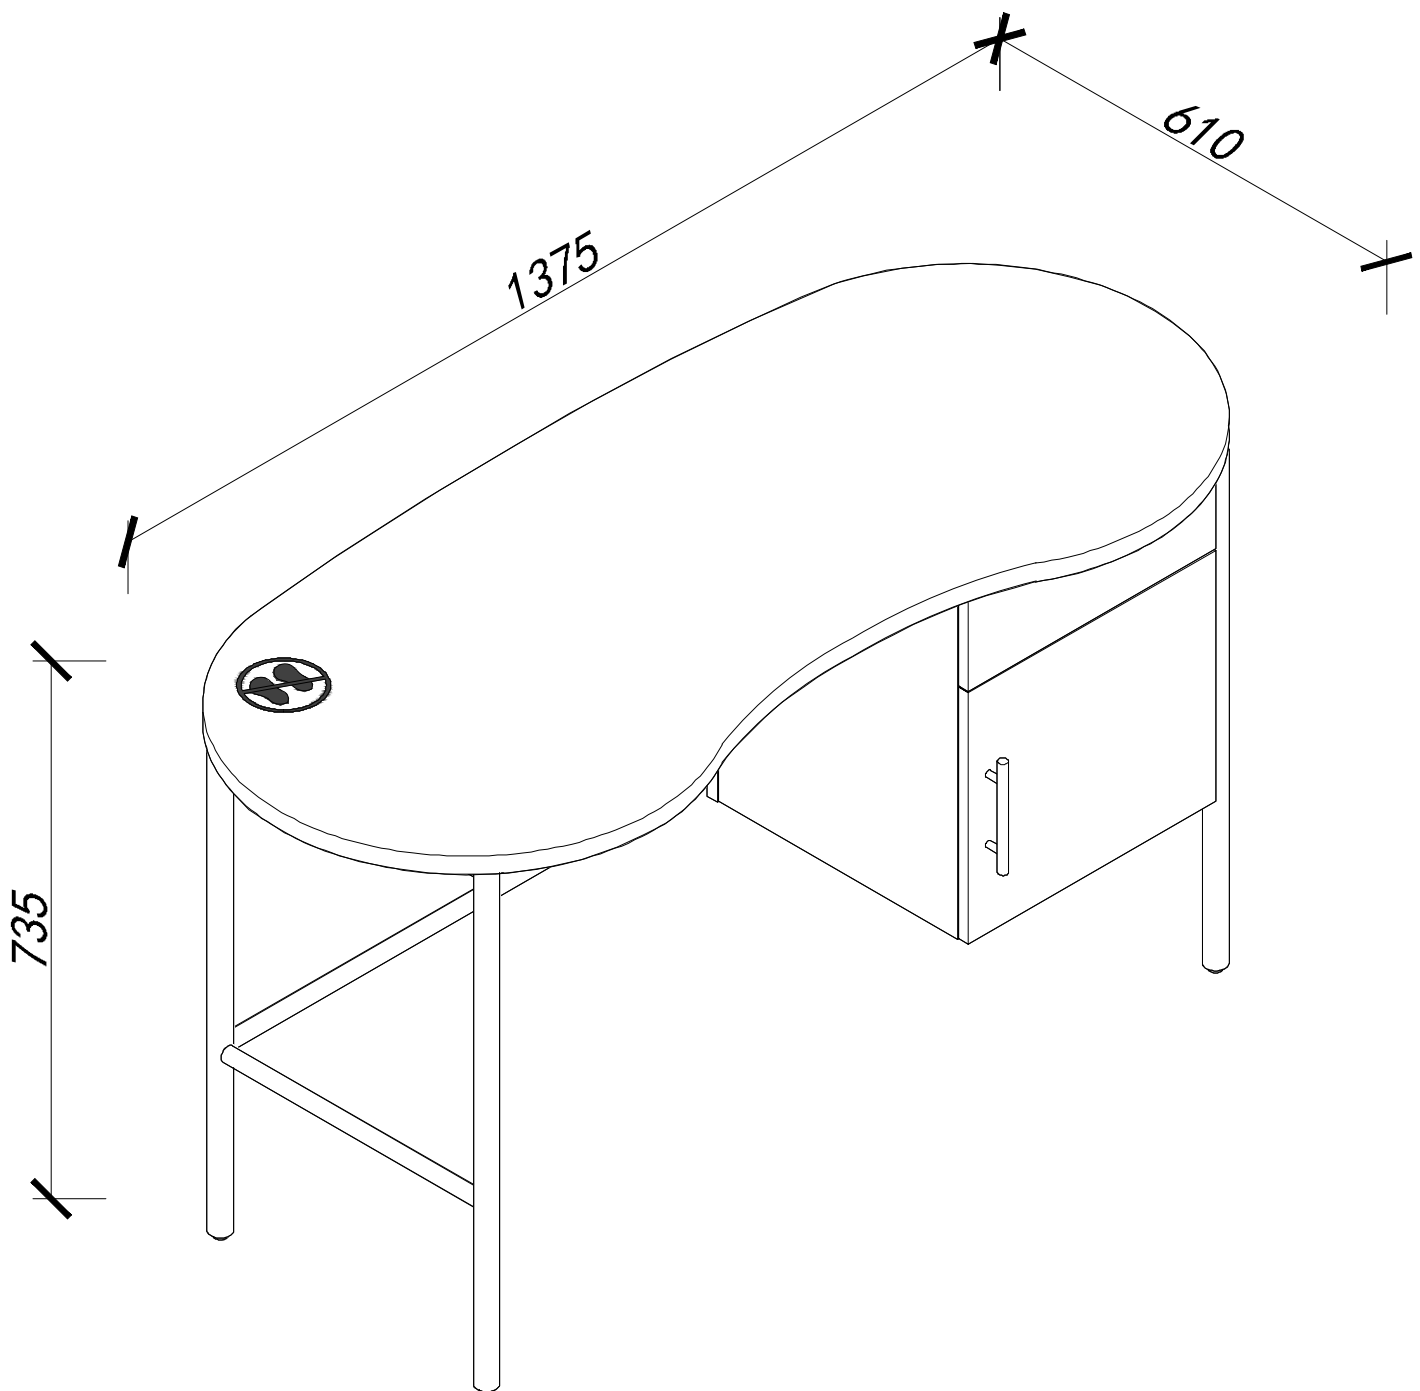

Panel No	Panel Sizes	Quantity
1	1375*610*25	1
2	366*376*16	1
3	498*377*16	1
4	498*377*16	1
5	366*80*16	4
6	363*350*16	1
7	497.5*400*16	1


Panel No	Panel Sizes	Quantity
8	390*147*16	1
9	316*80*12	1
10	350*80*12	1
11	350*80*12	1
12	326*348*5	1
13	390*343*16	1

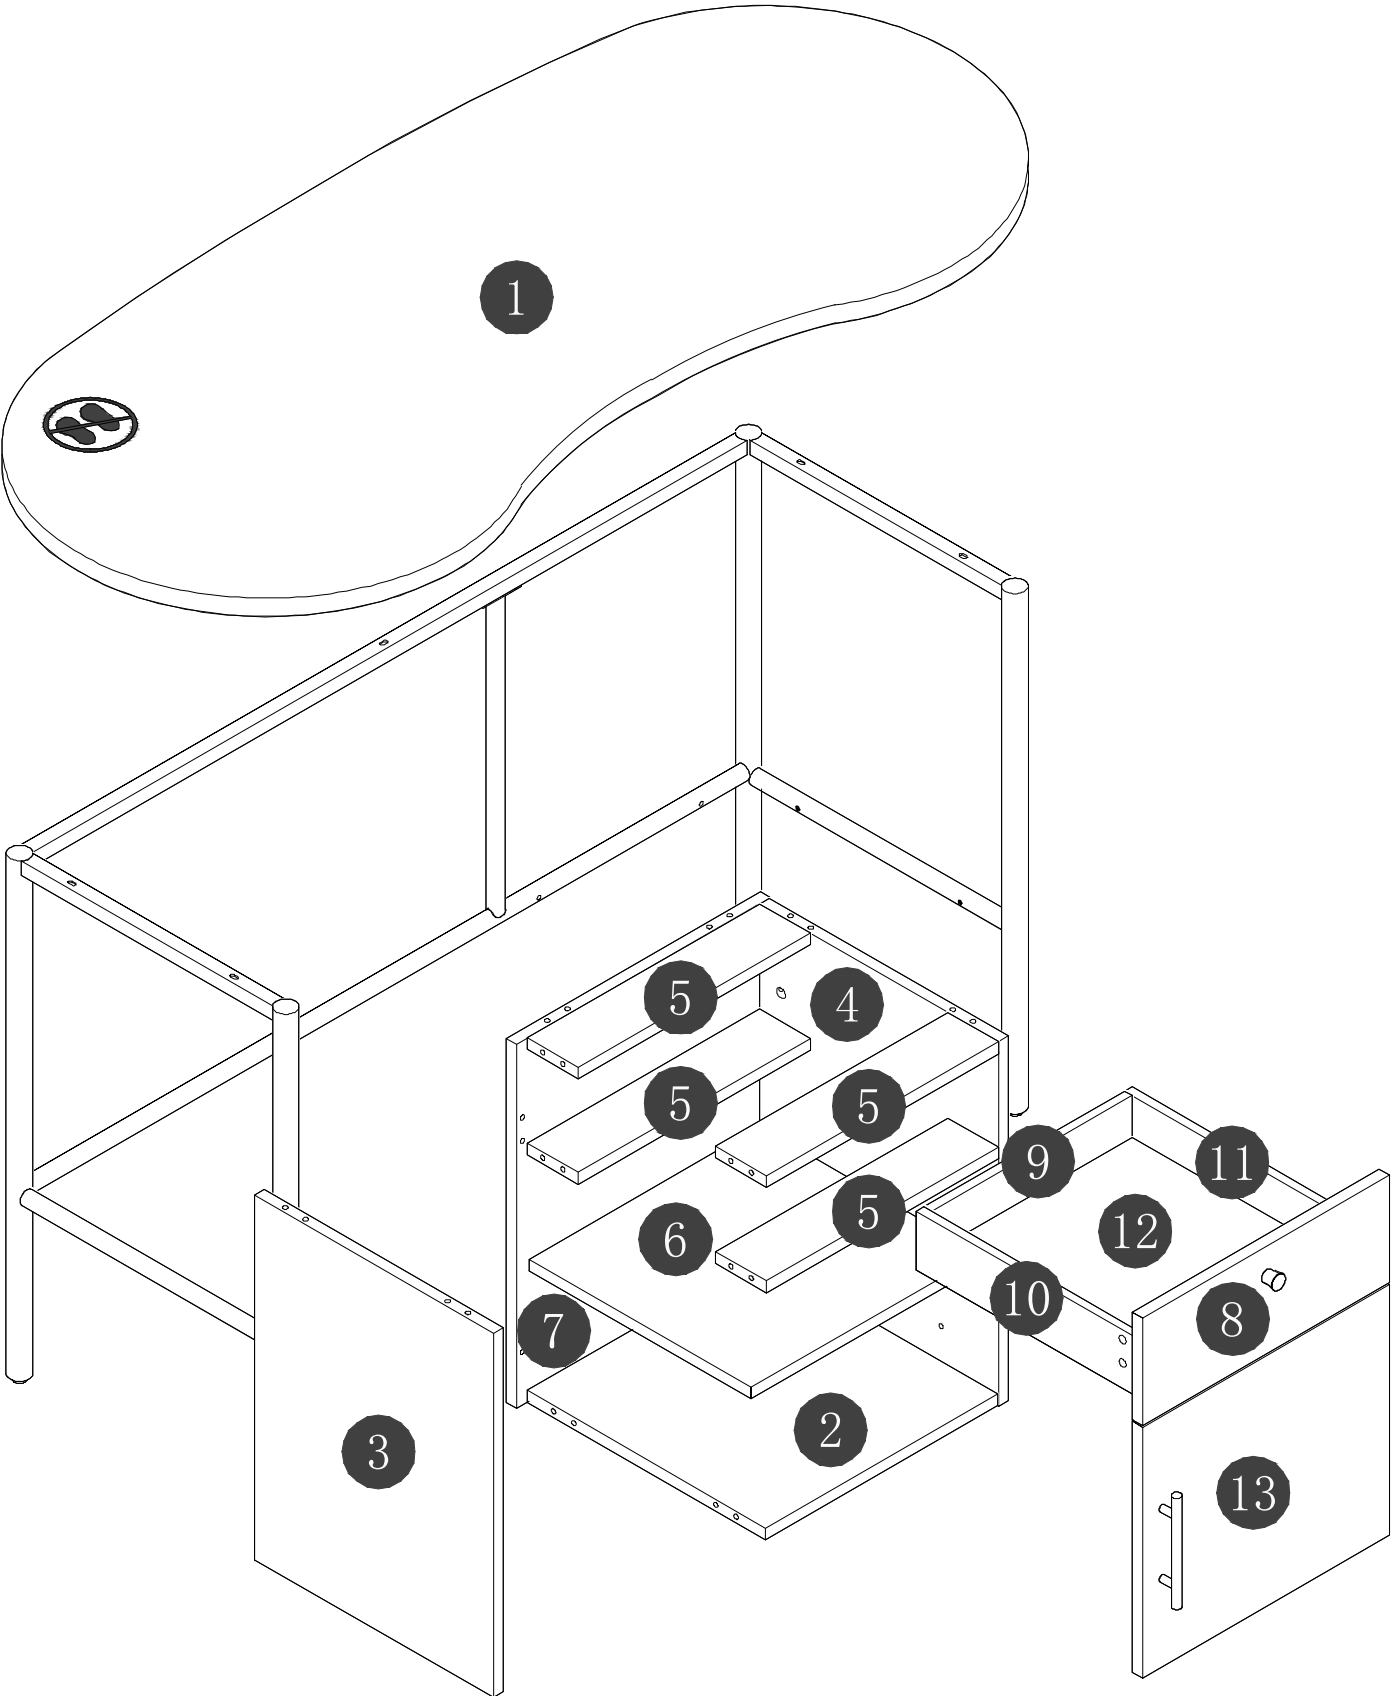


Fittings



A=24




B=24

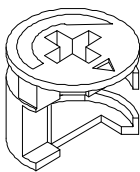


C=24




D=32

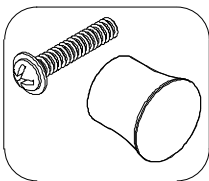


U1=1

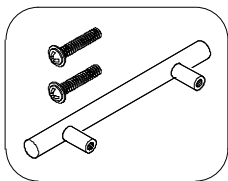

U2=1

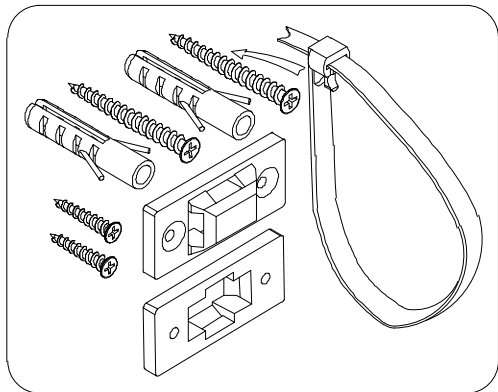

F=1

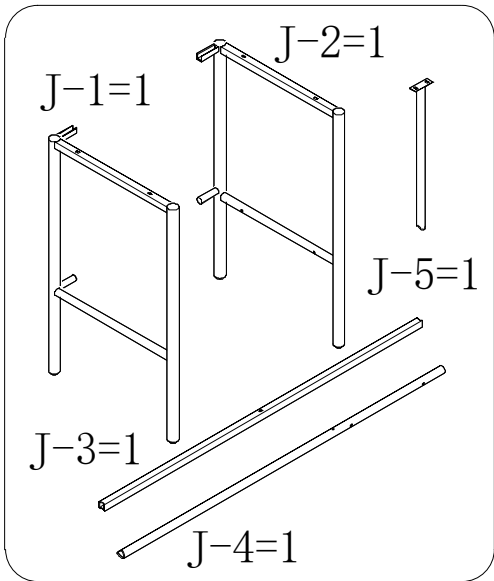


J-1=1

J-2=1

J-5=1


J-3=1

J-4=1

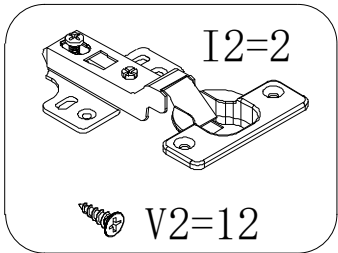


I2=2

V2=12

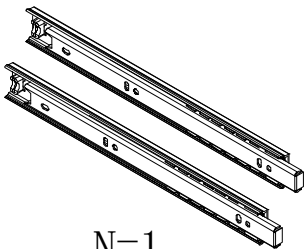


N=1



M6*16

G1=10




M6*30

G2=10



H=1

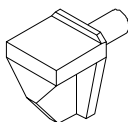

L=4



O=8





P=8




M3.5*12

V1=8


Tools Needed

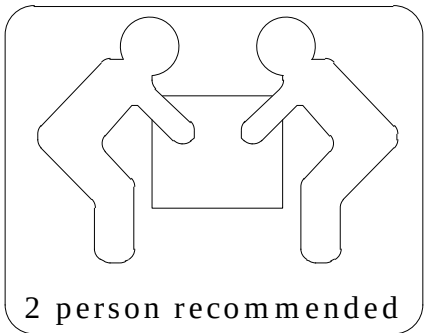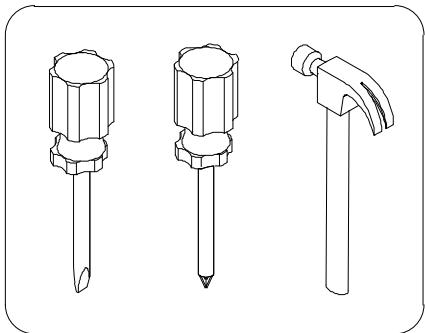



STEP 1 Separate the drawer runners

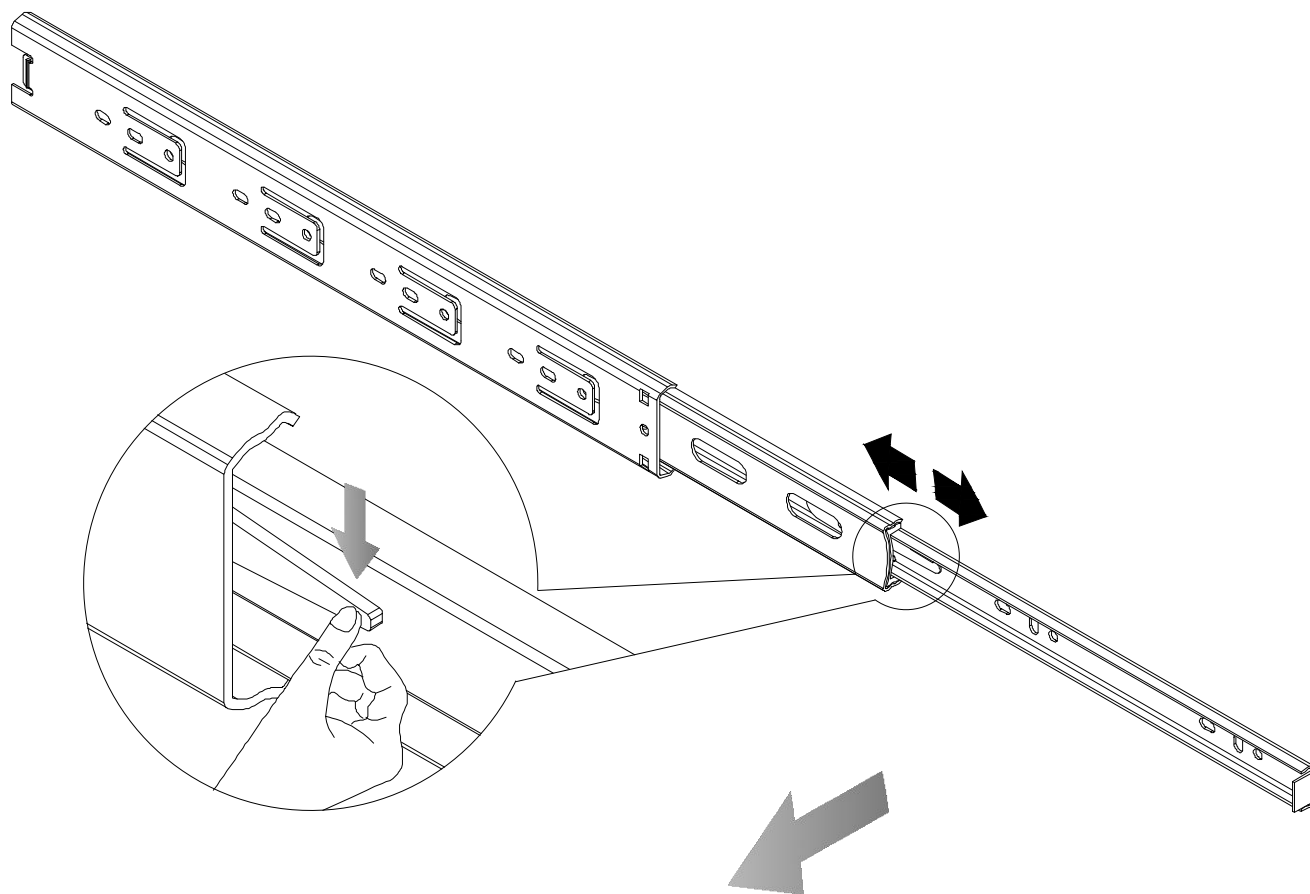


Push down the small lever and pull the two pieces apart

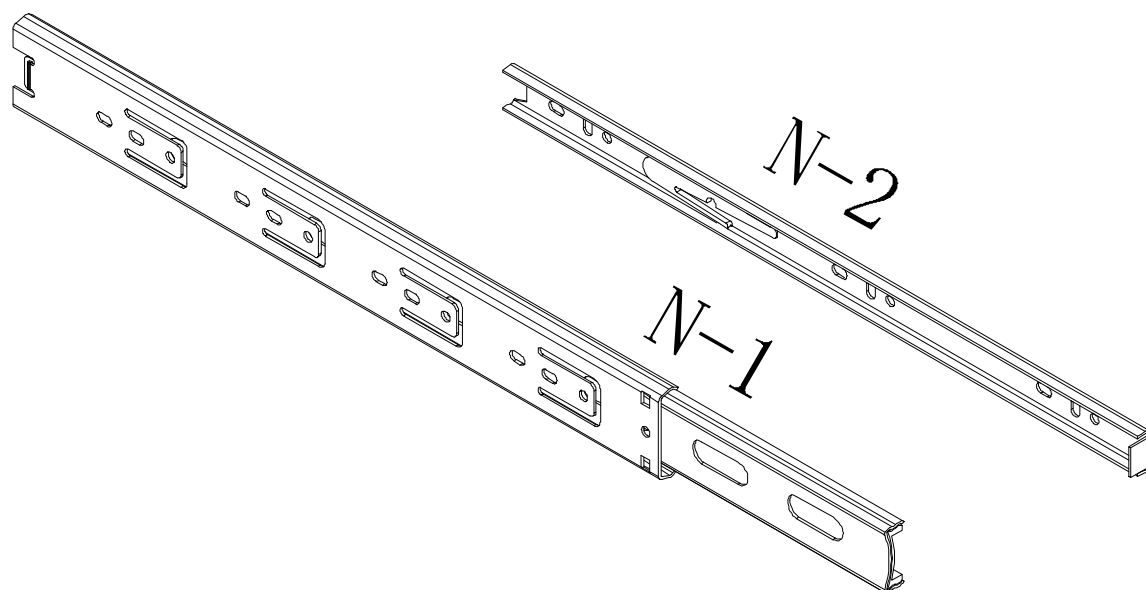



STEP 2

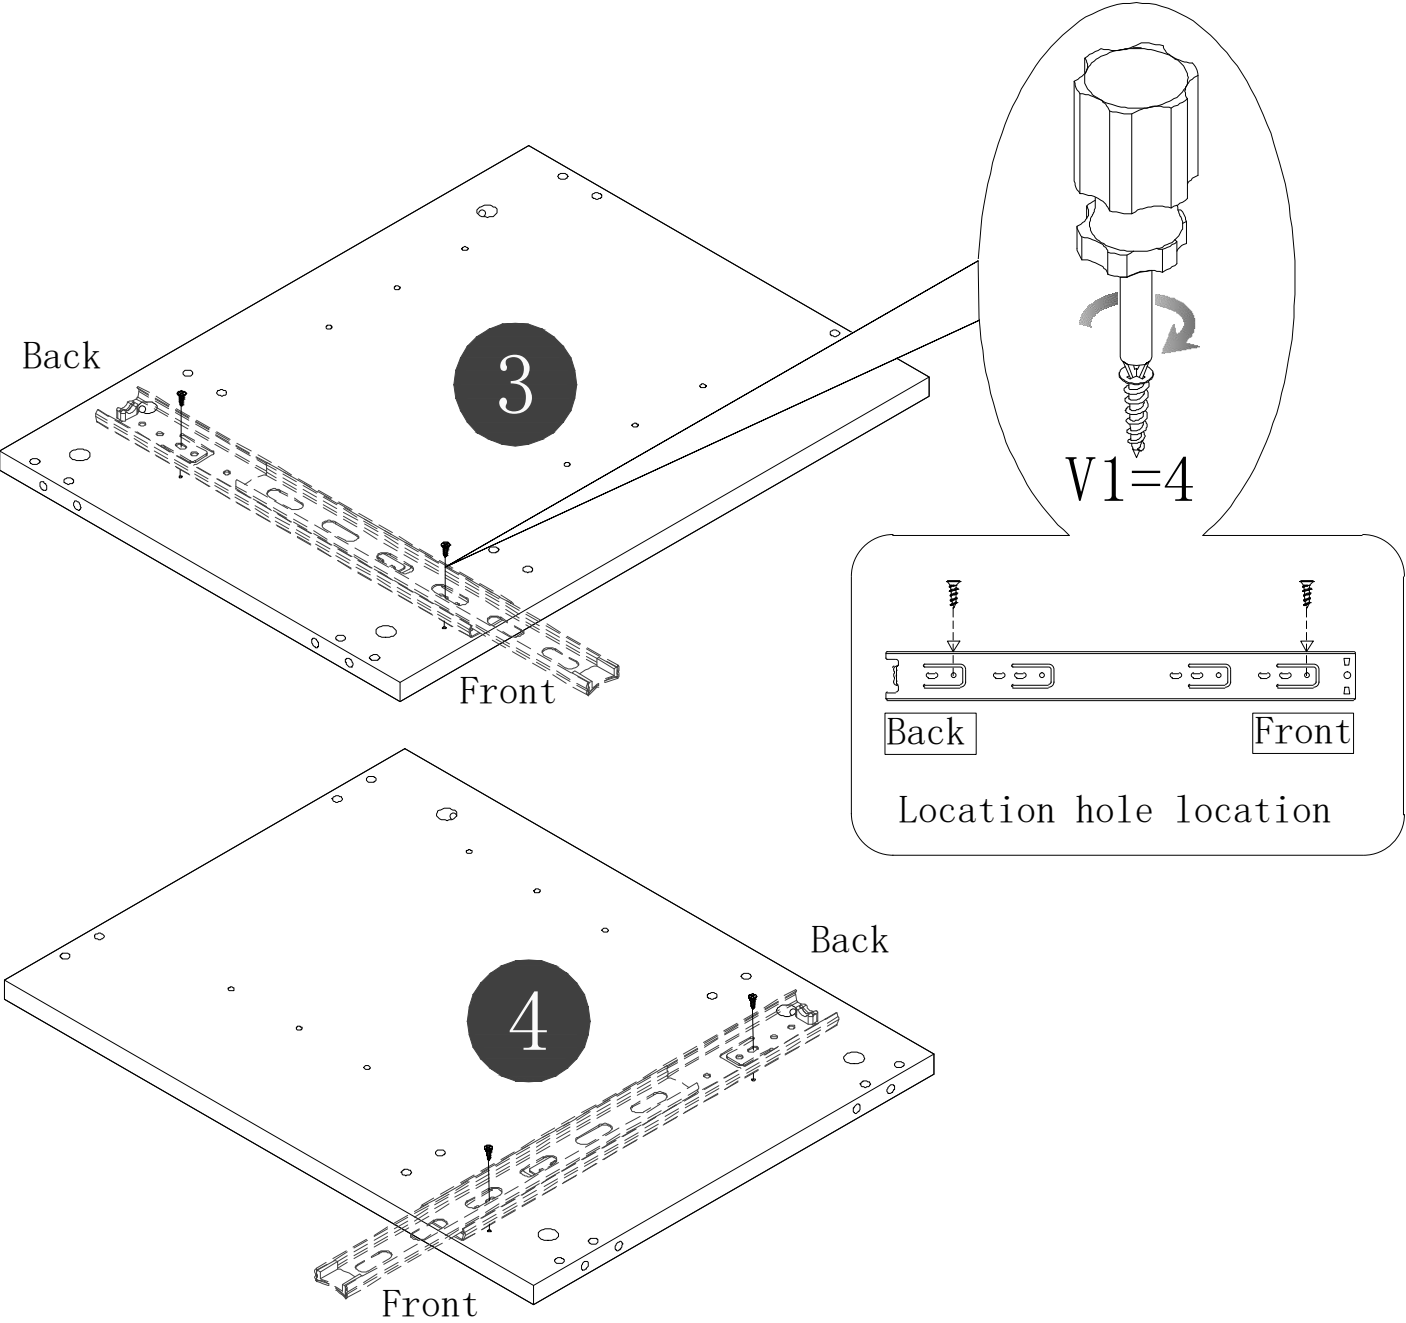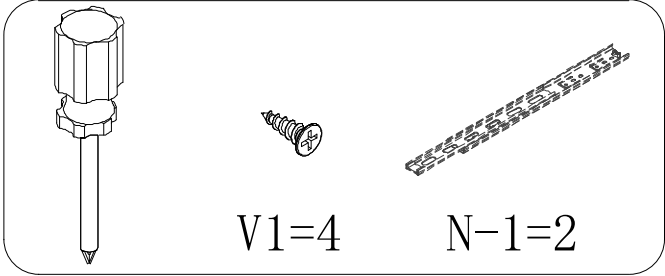


STEP 3

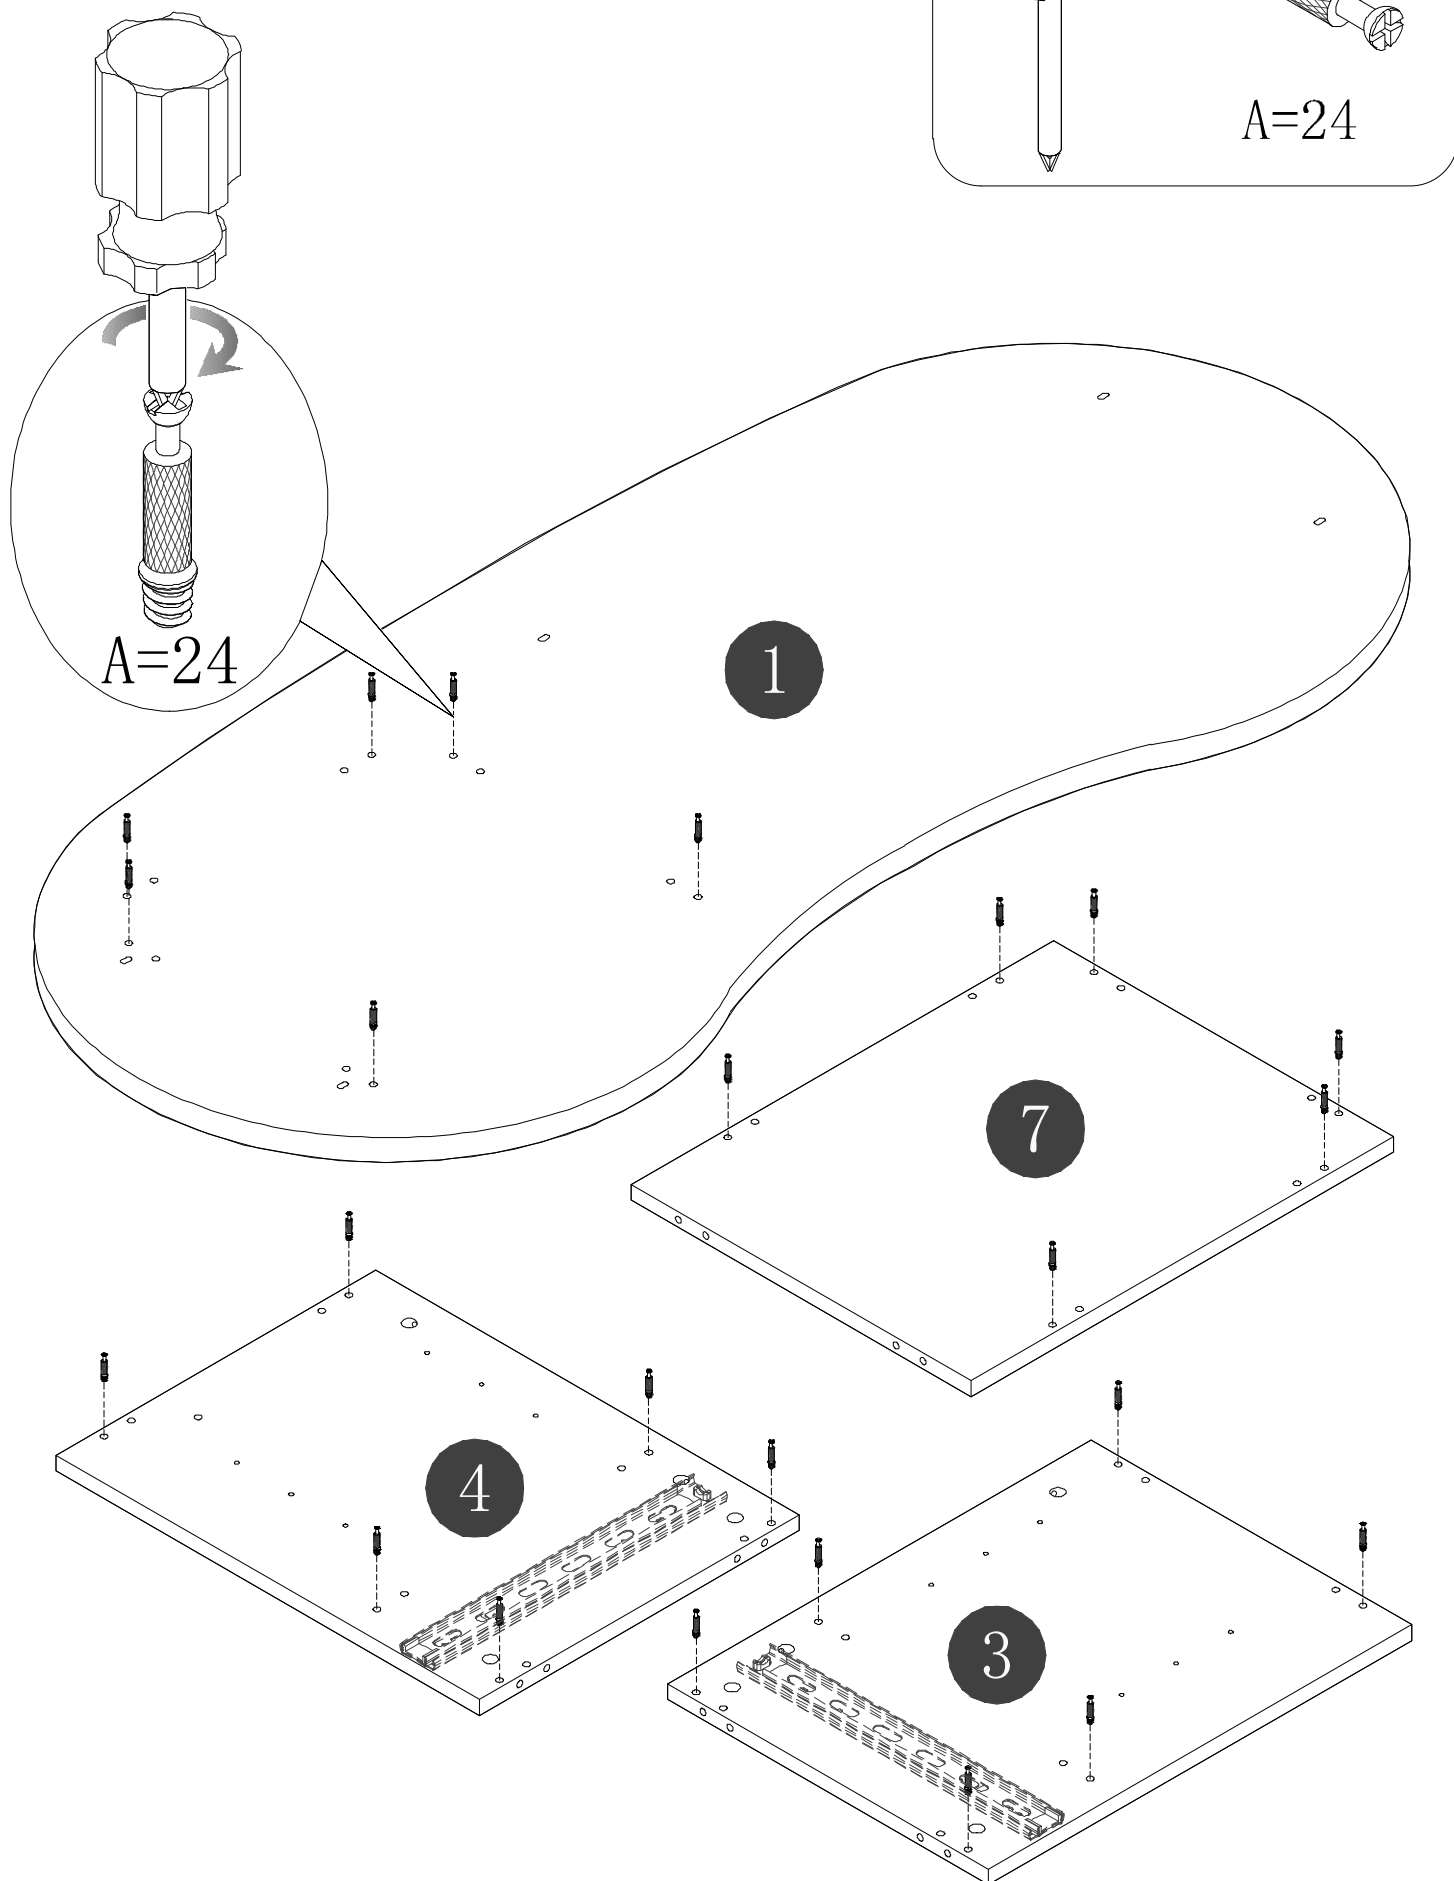


STEP 4

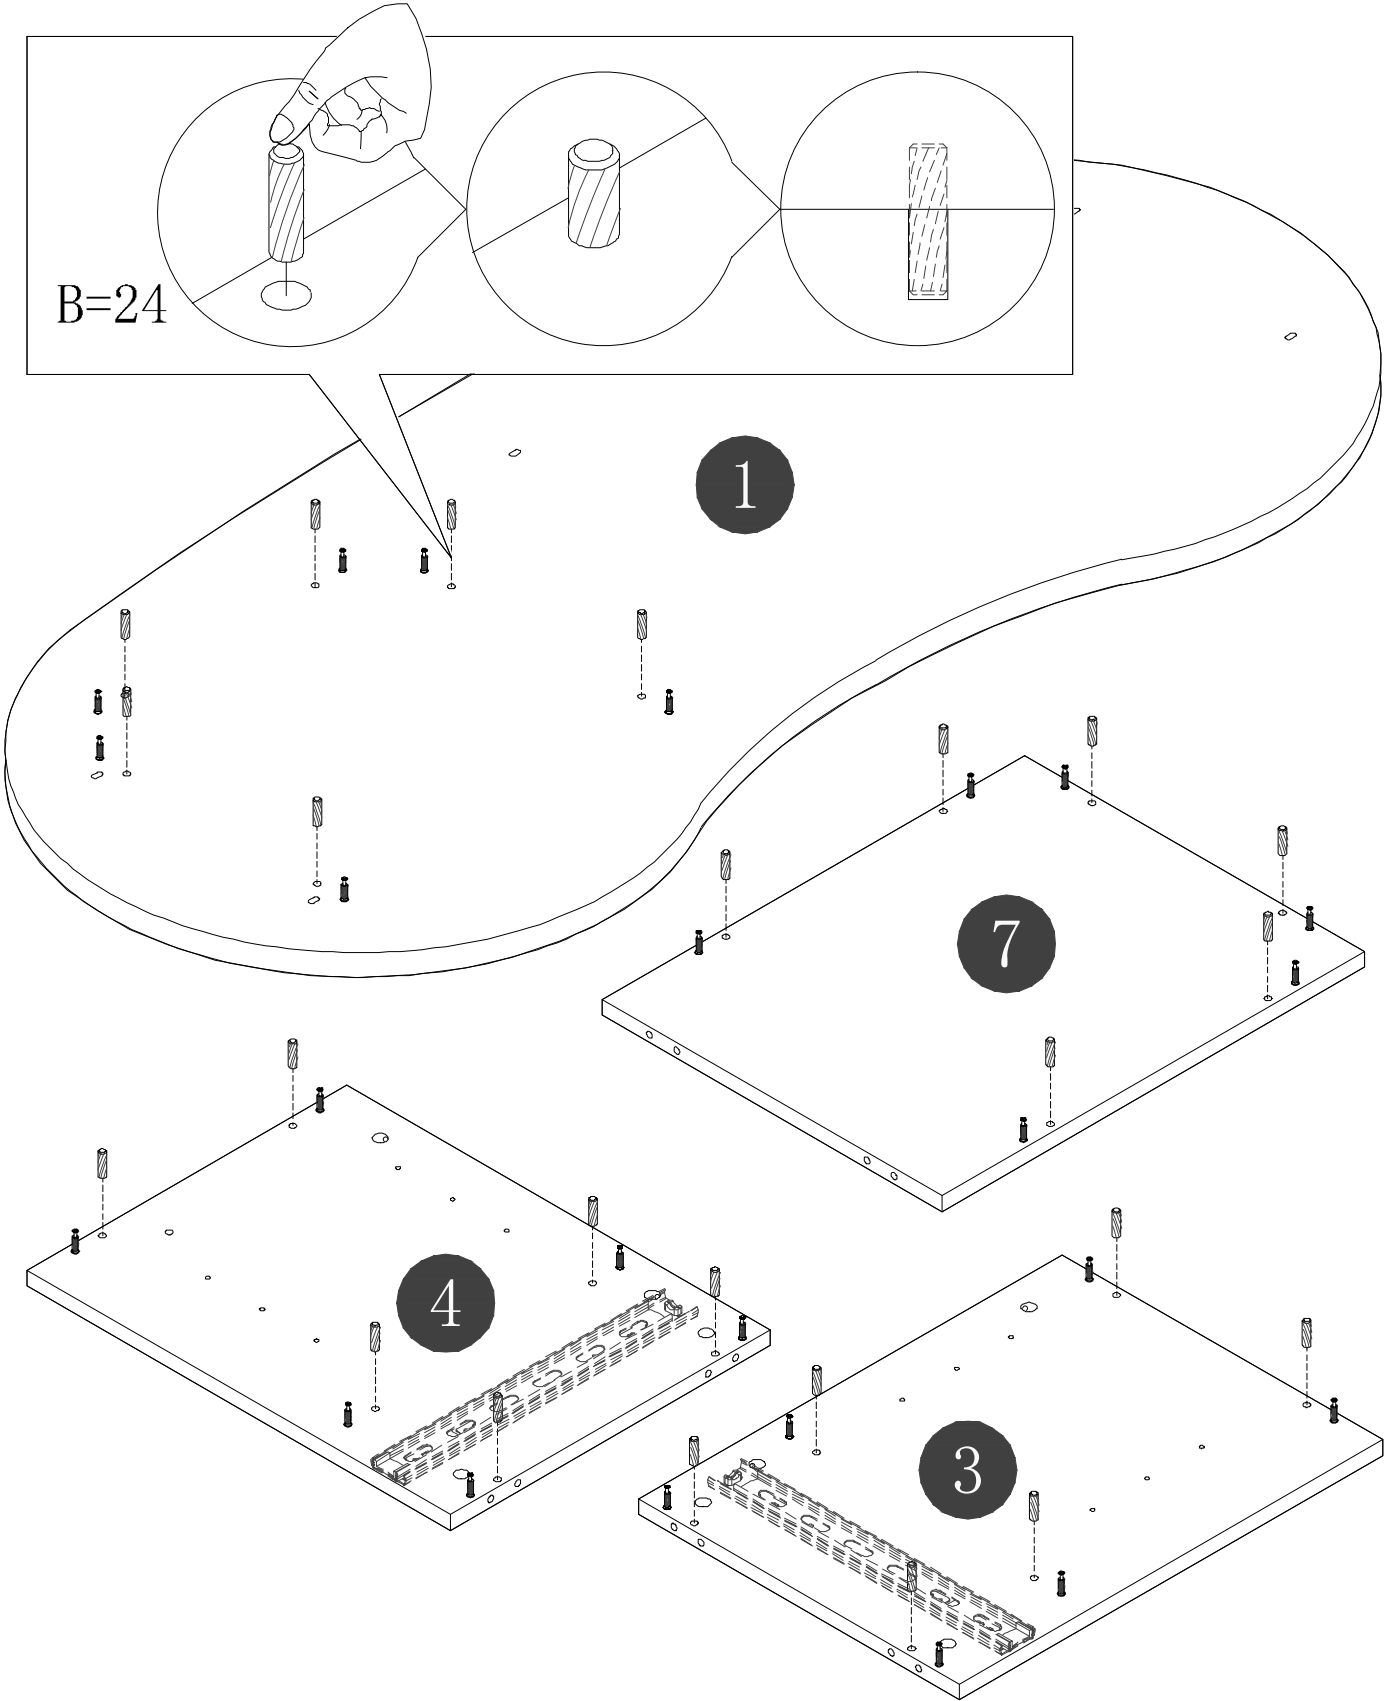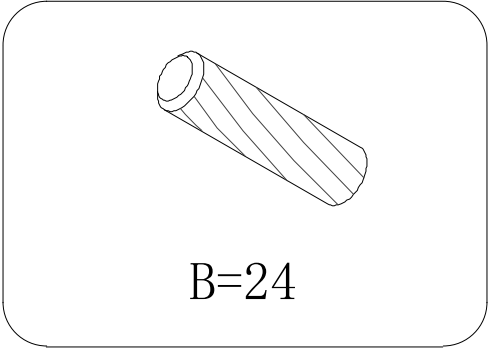



STEP 5

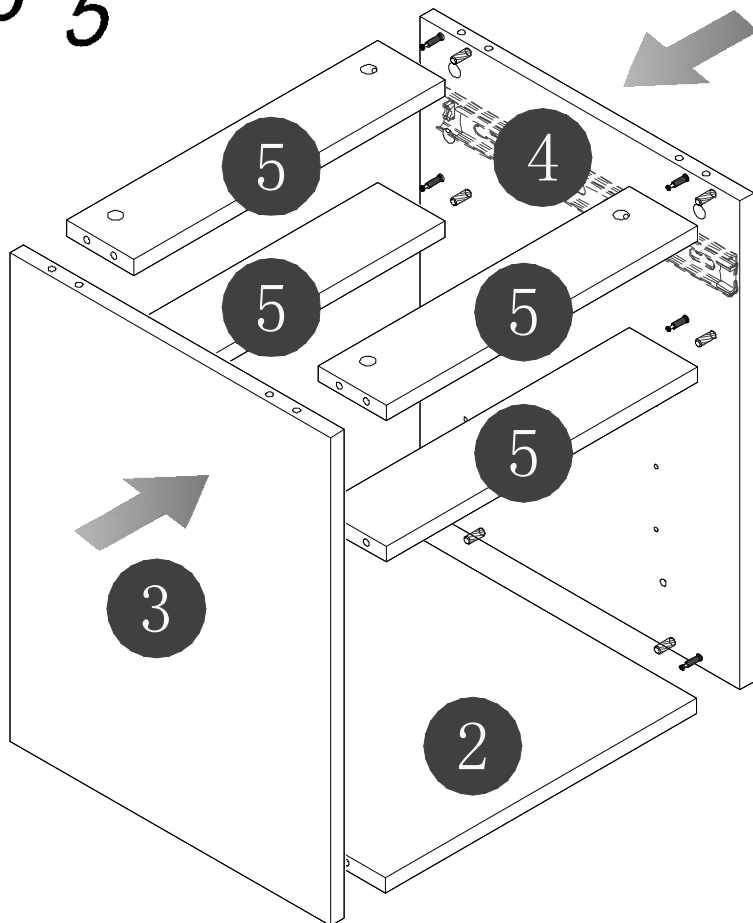


STEP 6

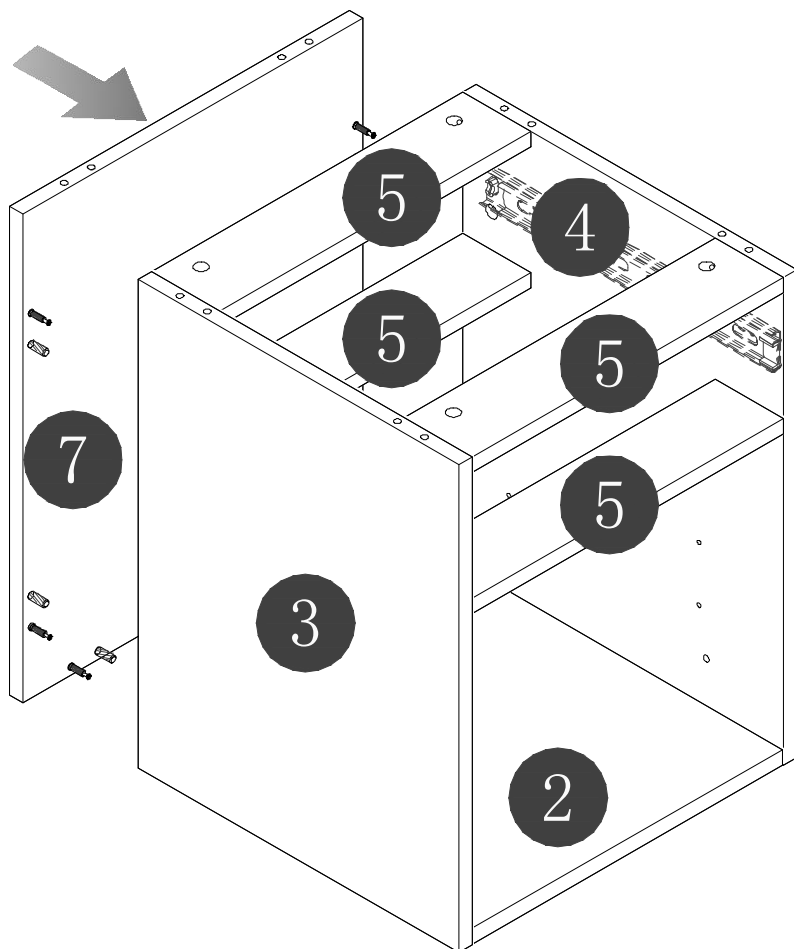


STEP 7

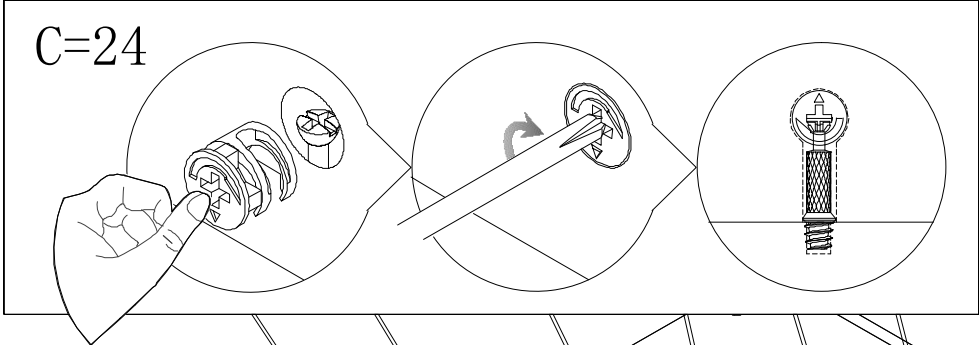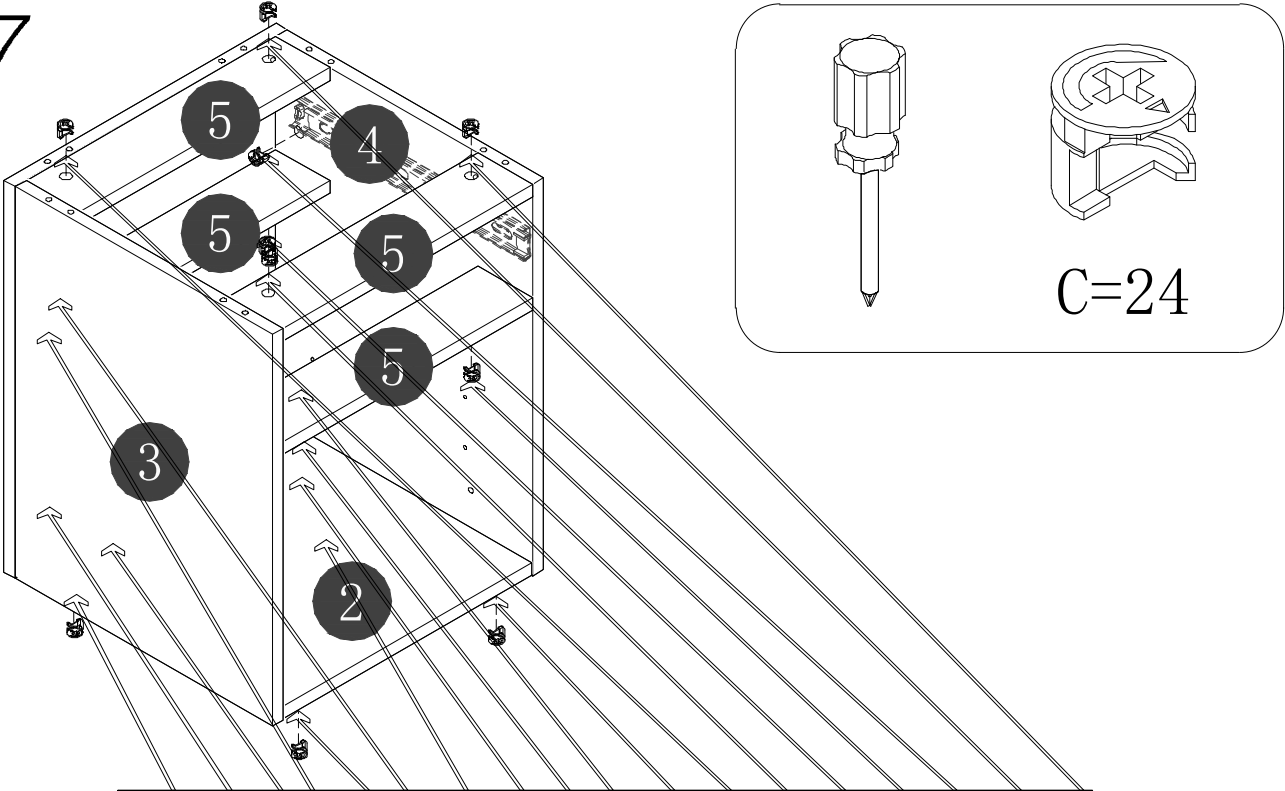


STEP 8

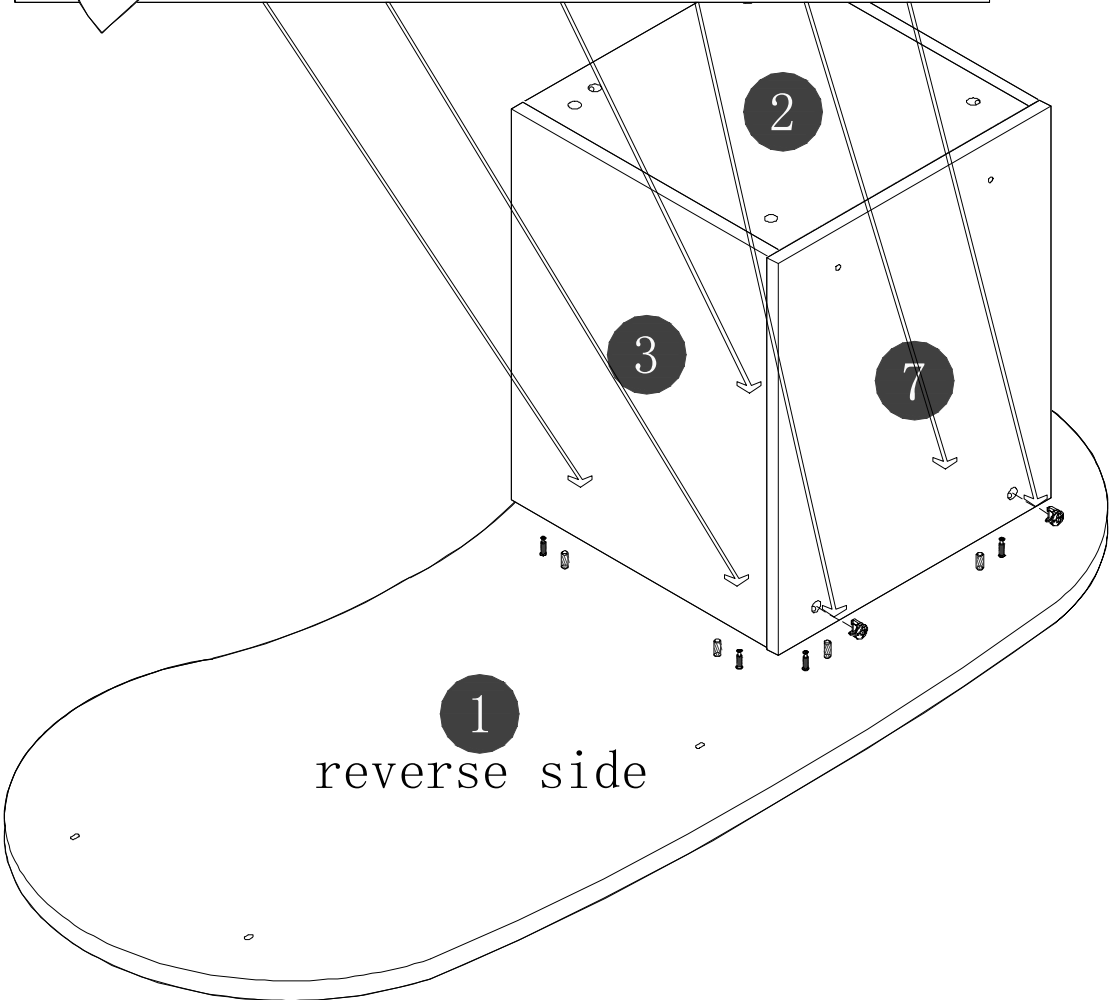



STEP 9

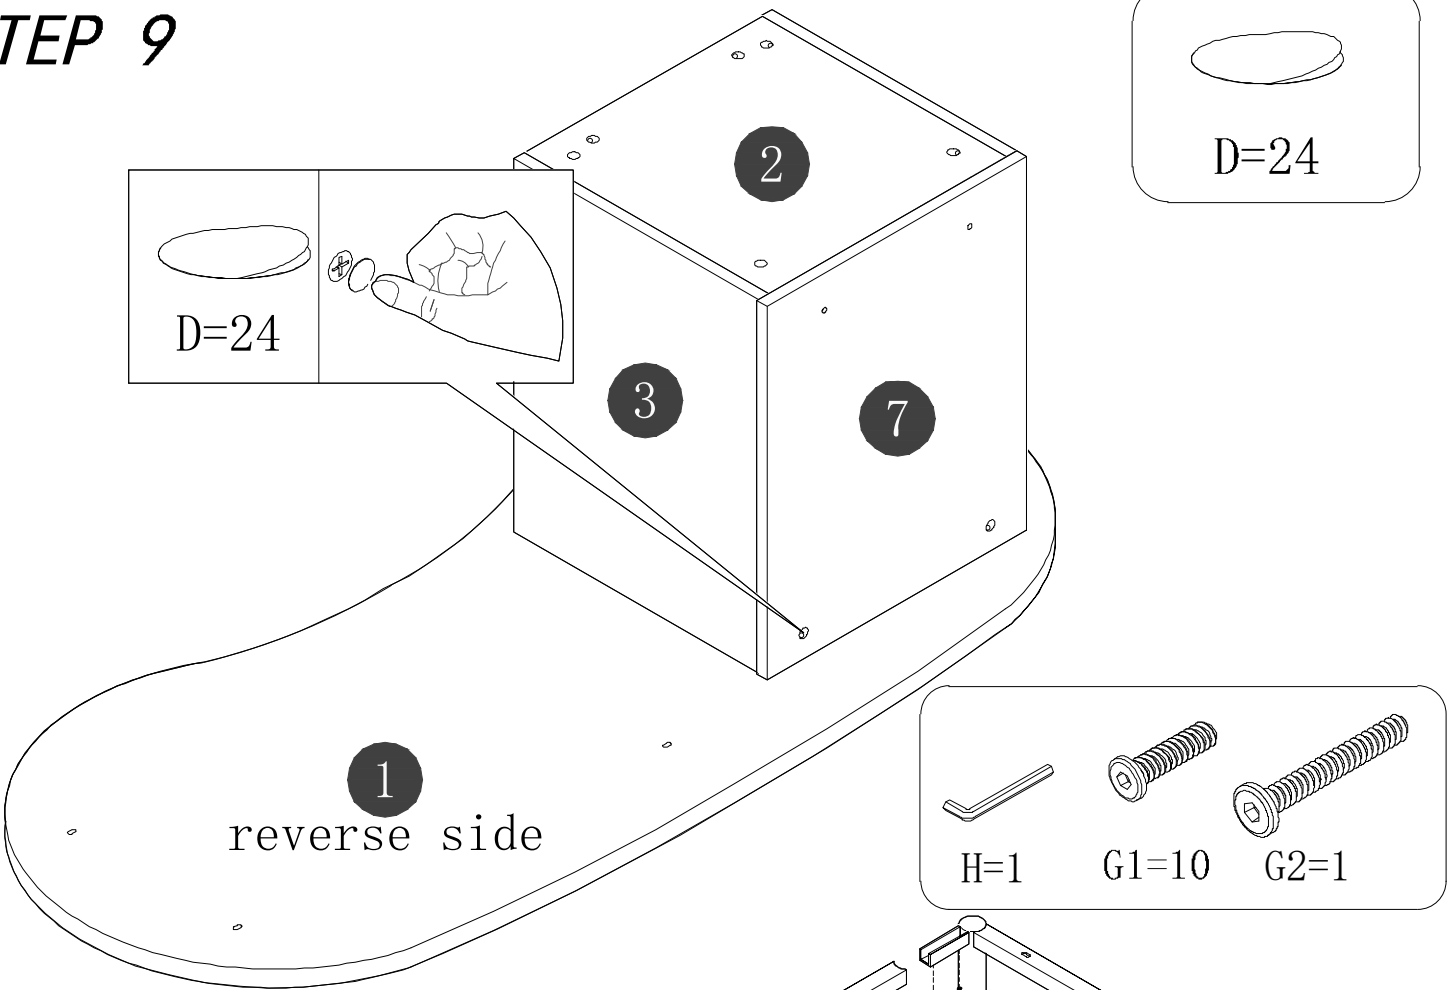



STEP 10

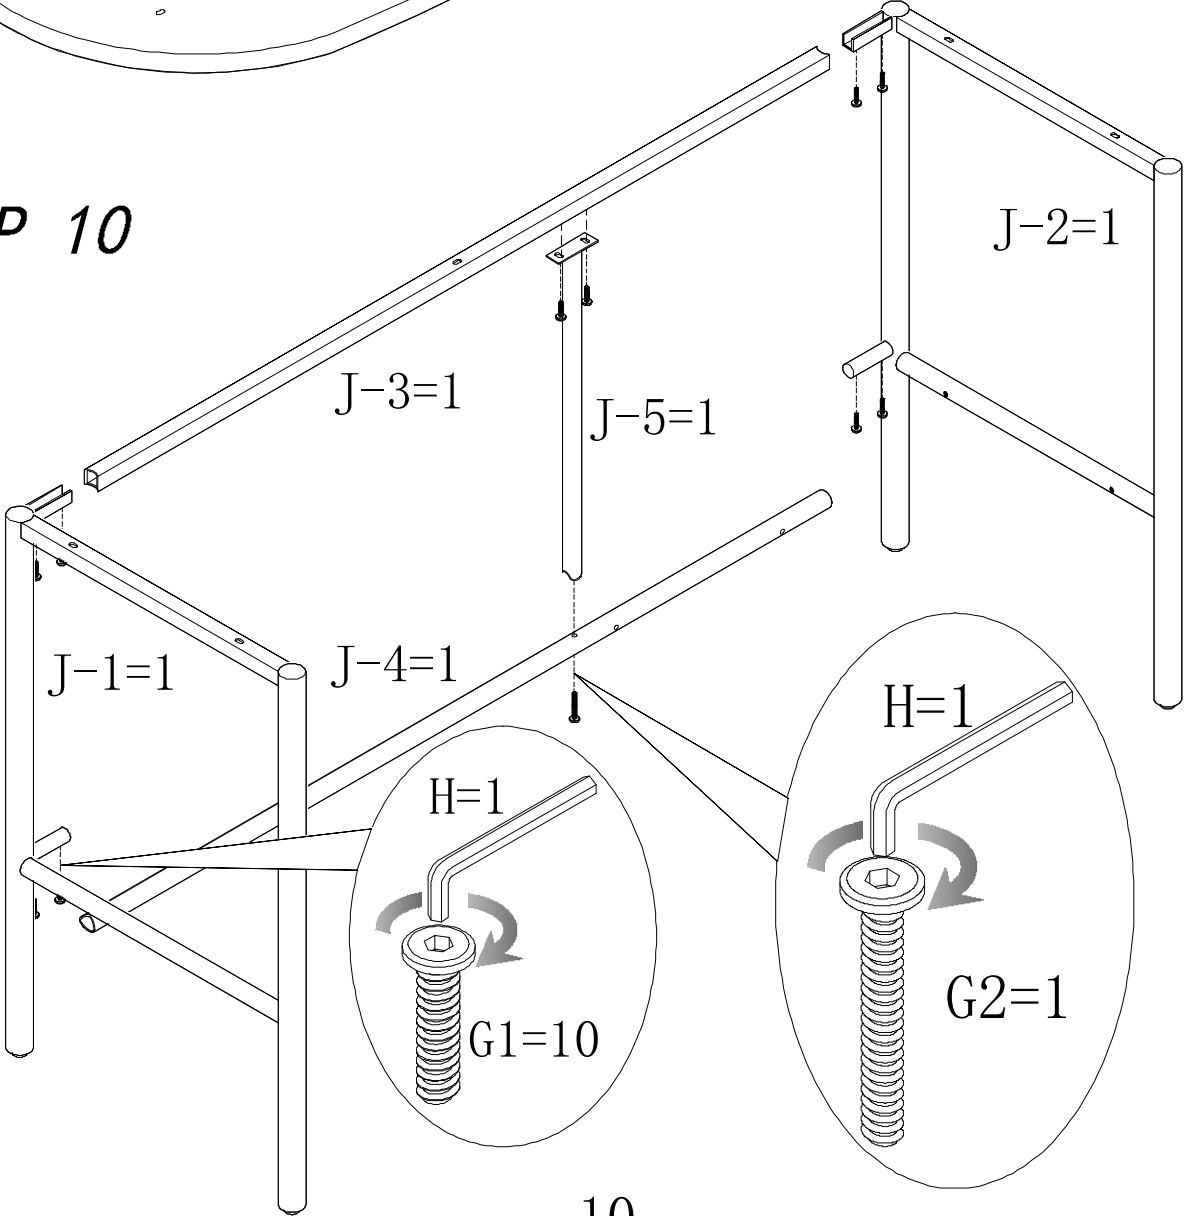




STEP 11

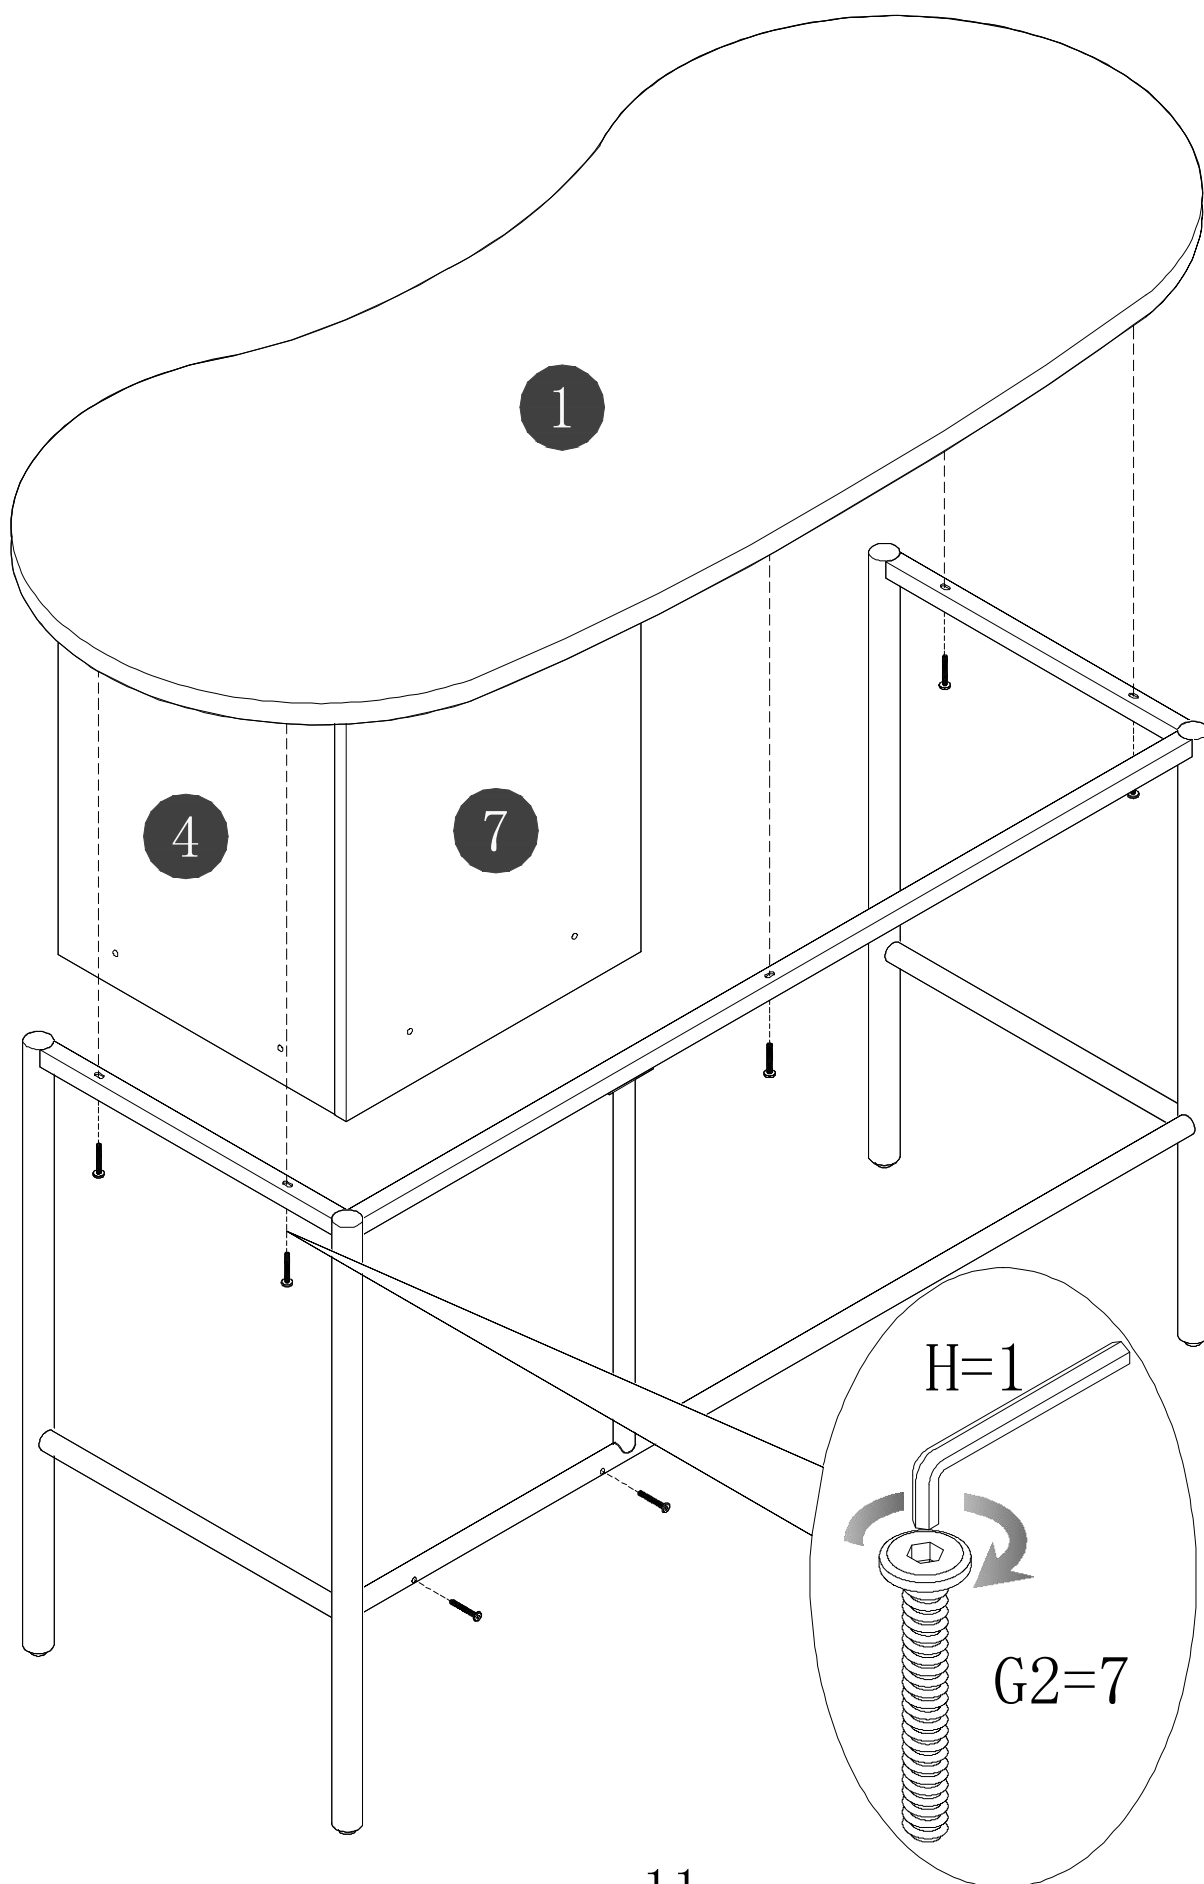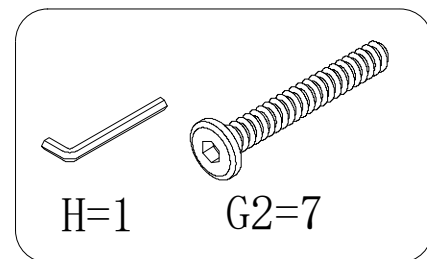


STEP 12

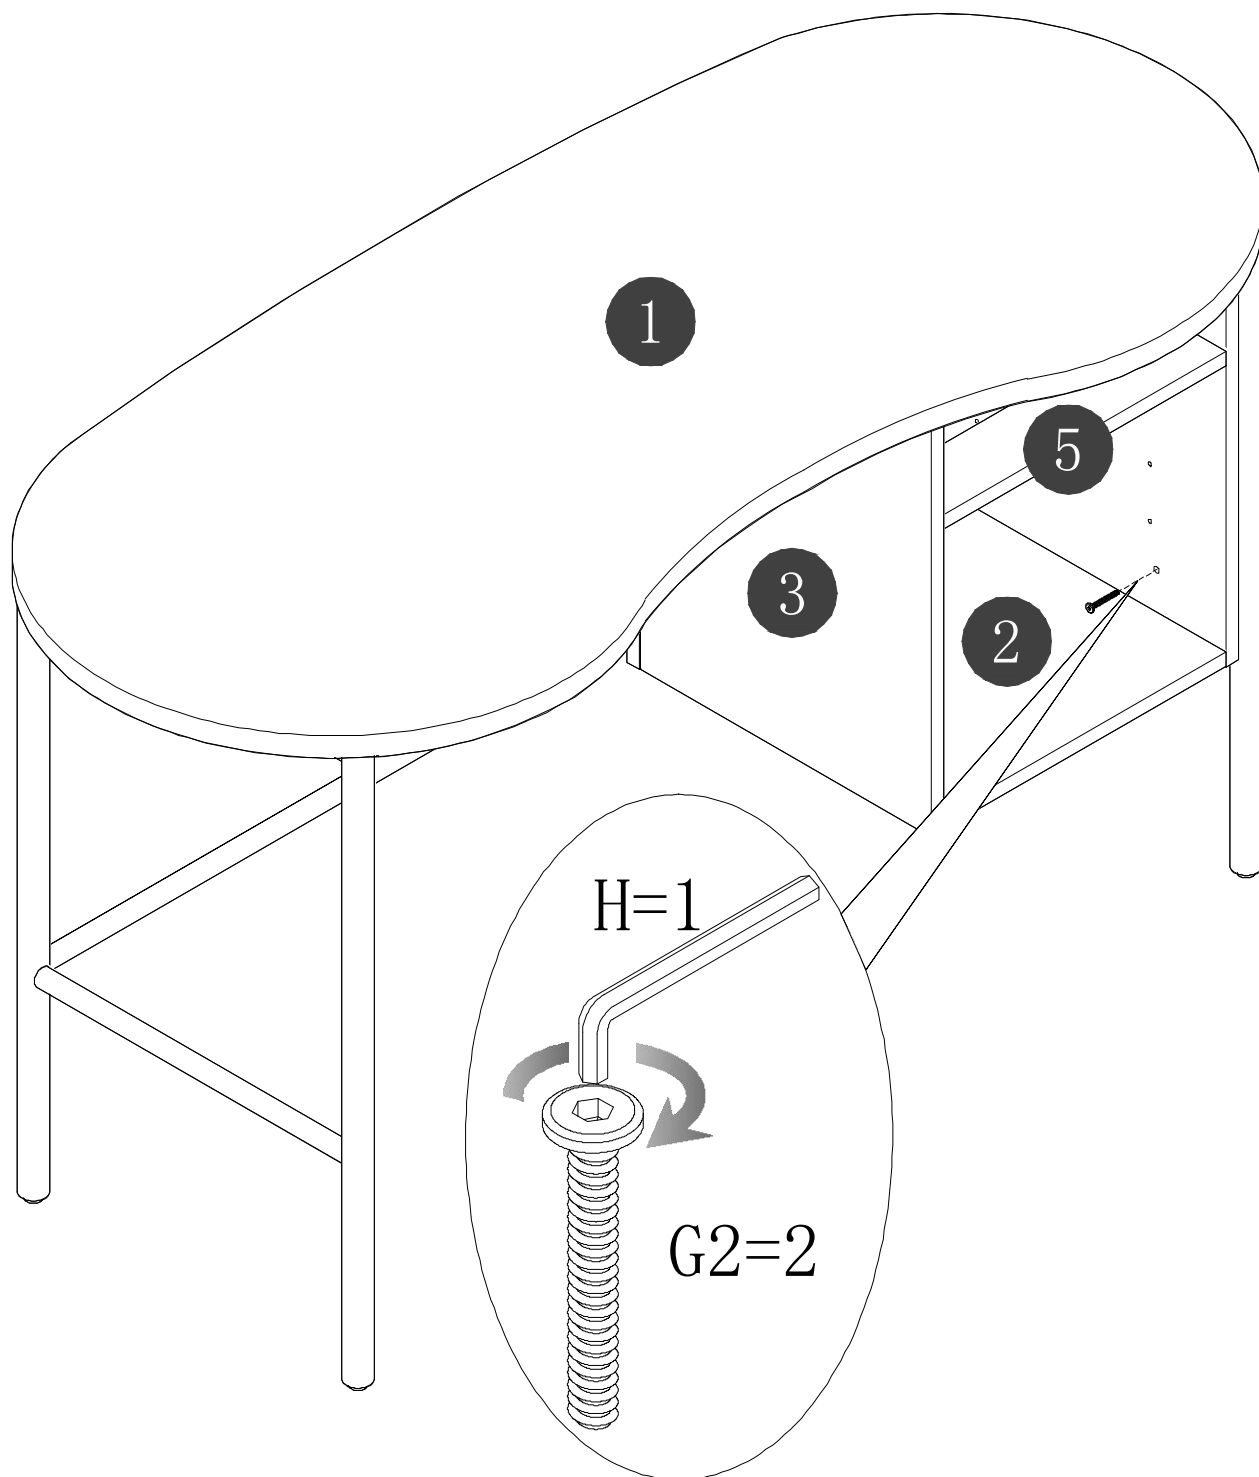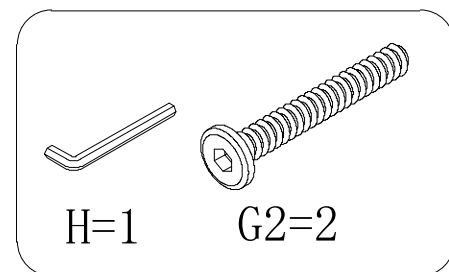


STEP 13

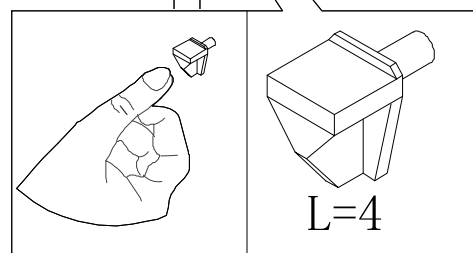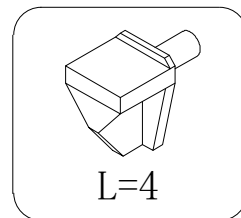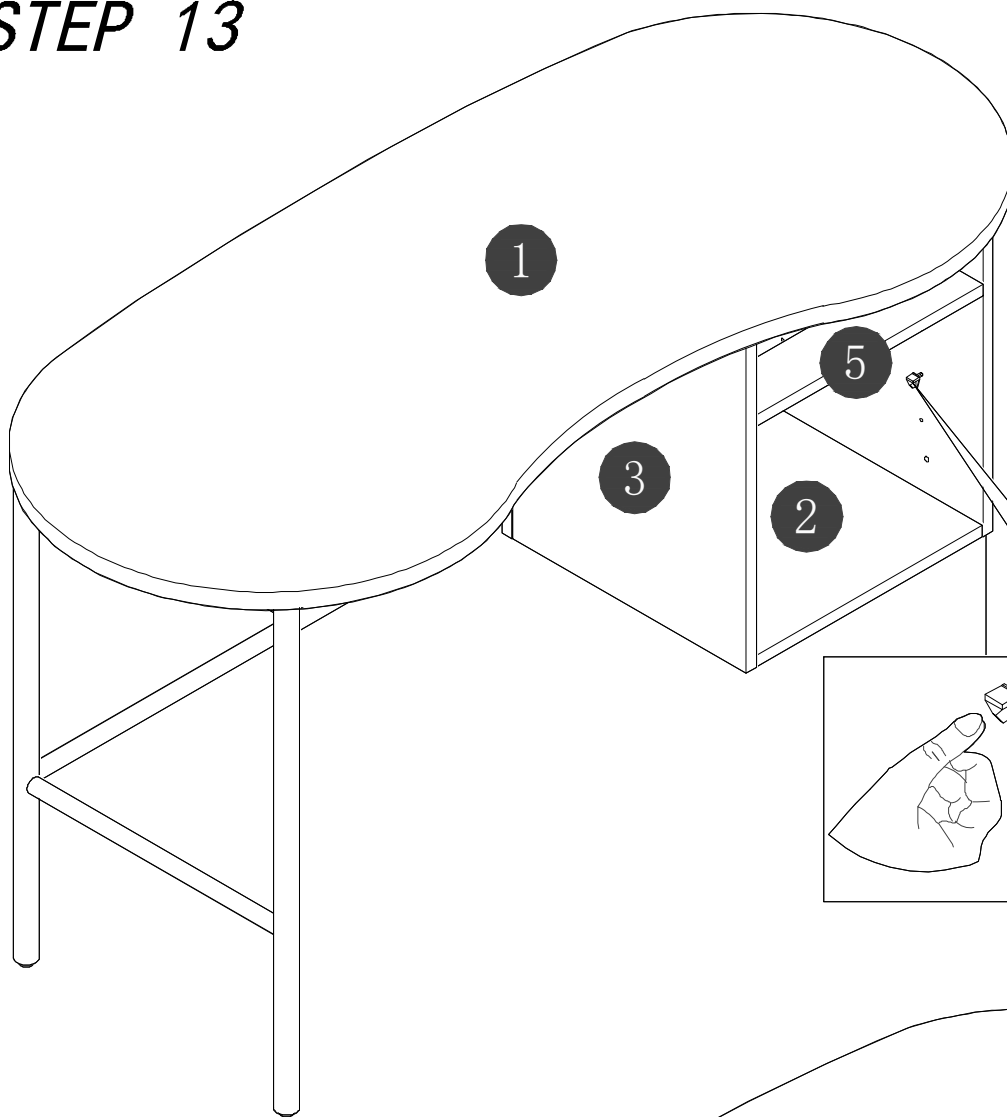


STEP 14

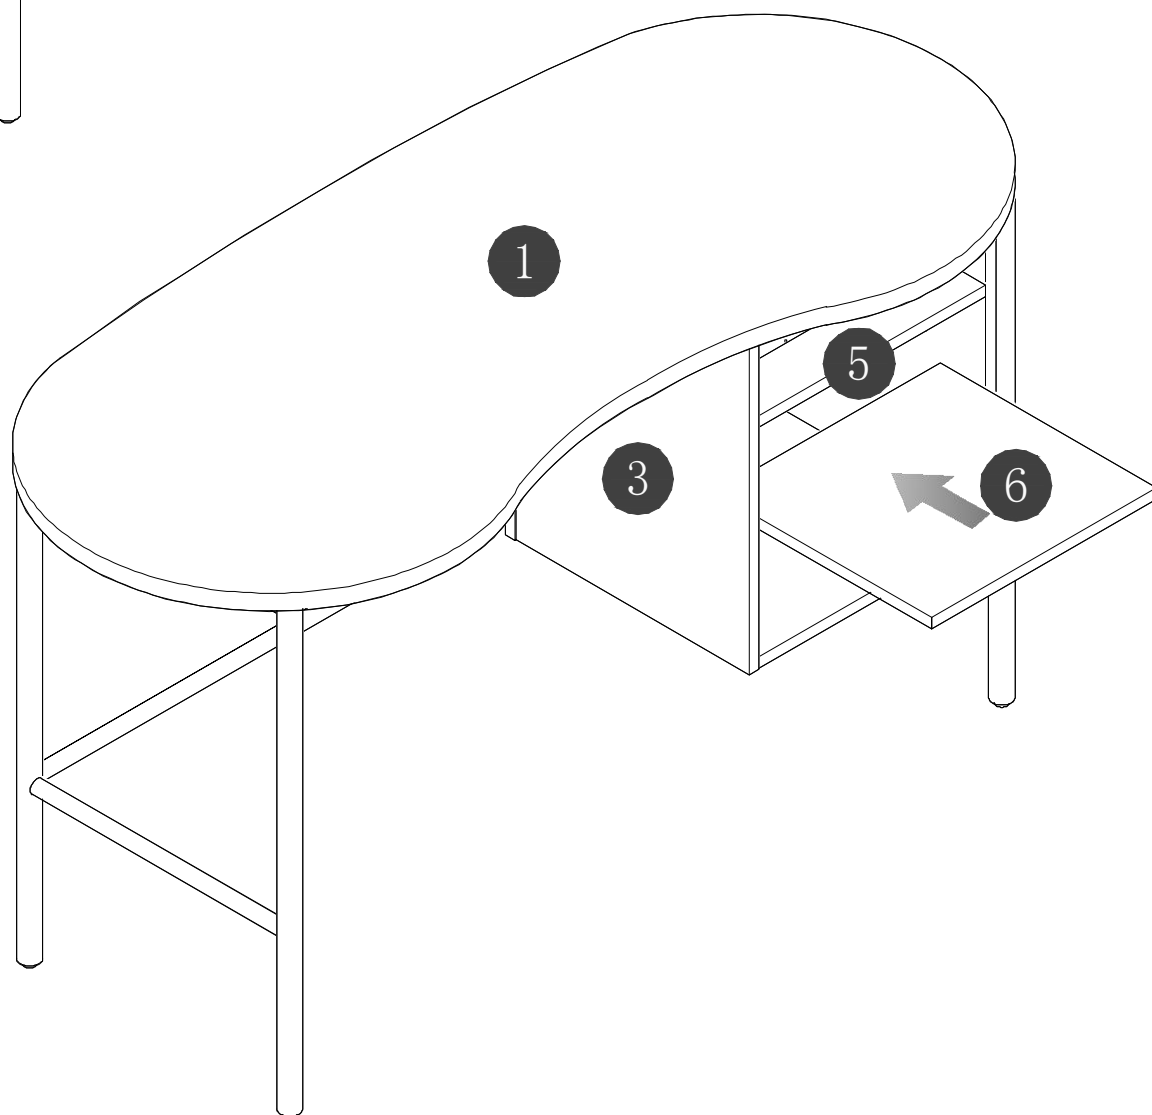





STEP 15

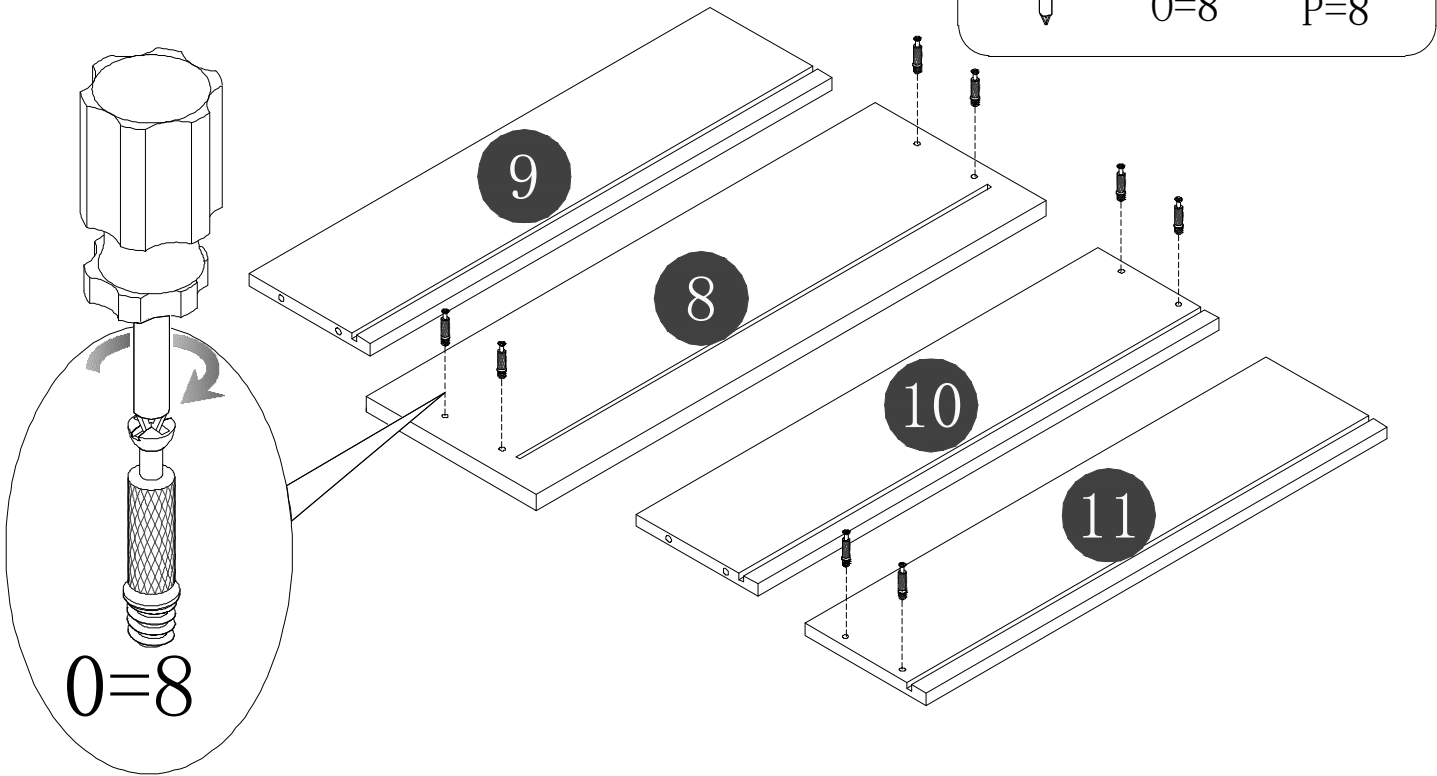

STEP 16

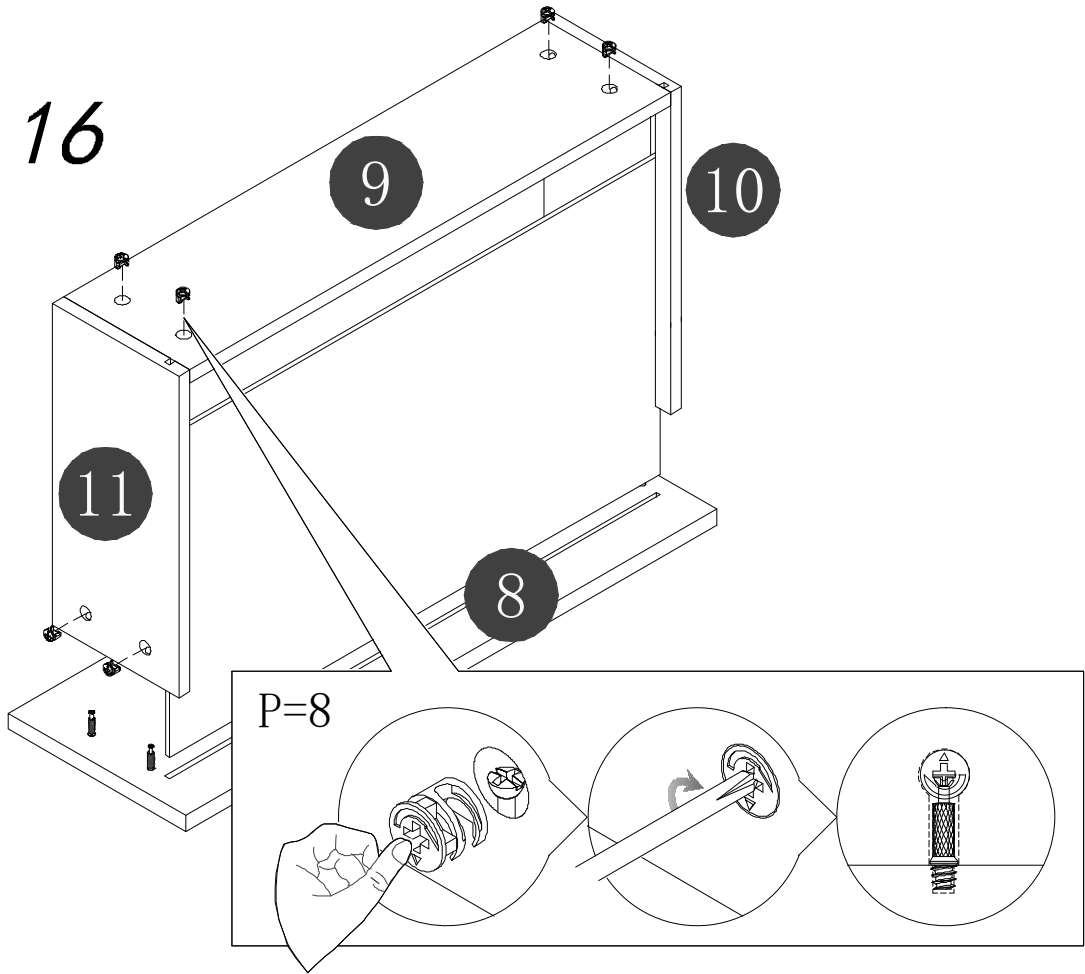


STEP 17

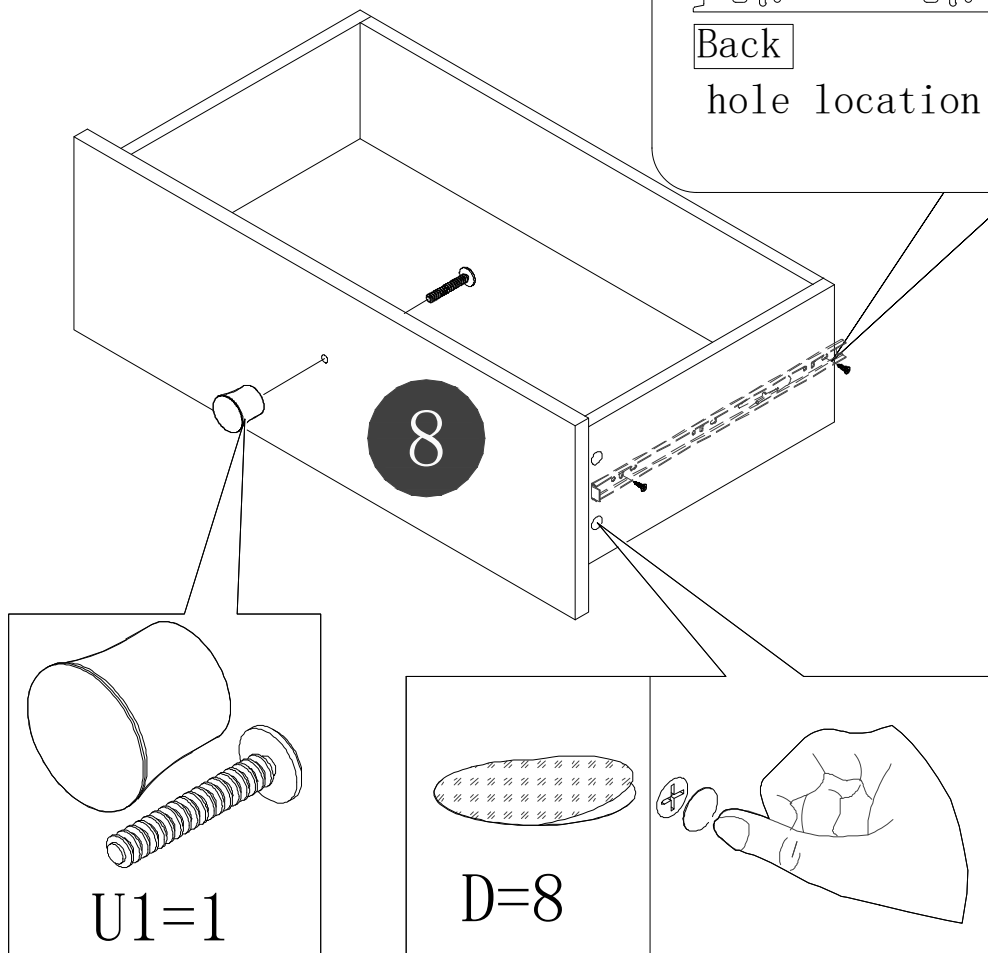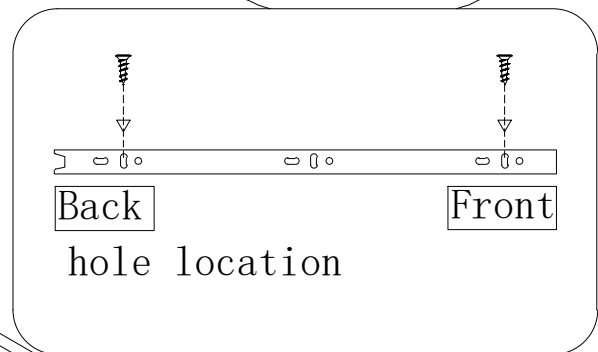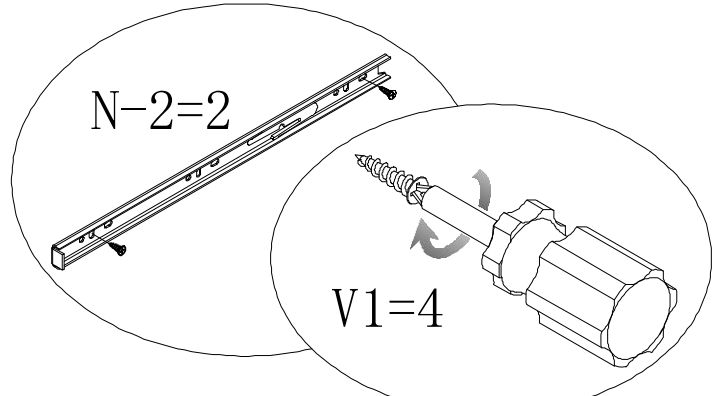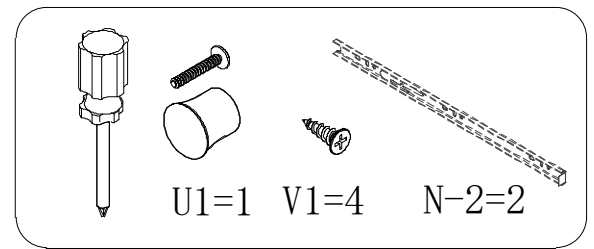




The drawers will allign evenly when you ensure the screw is in the same place

STEP 18

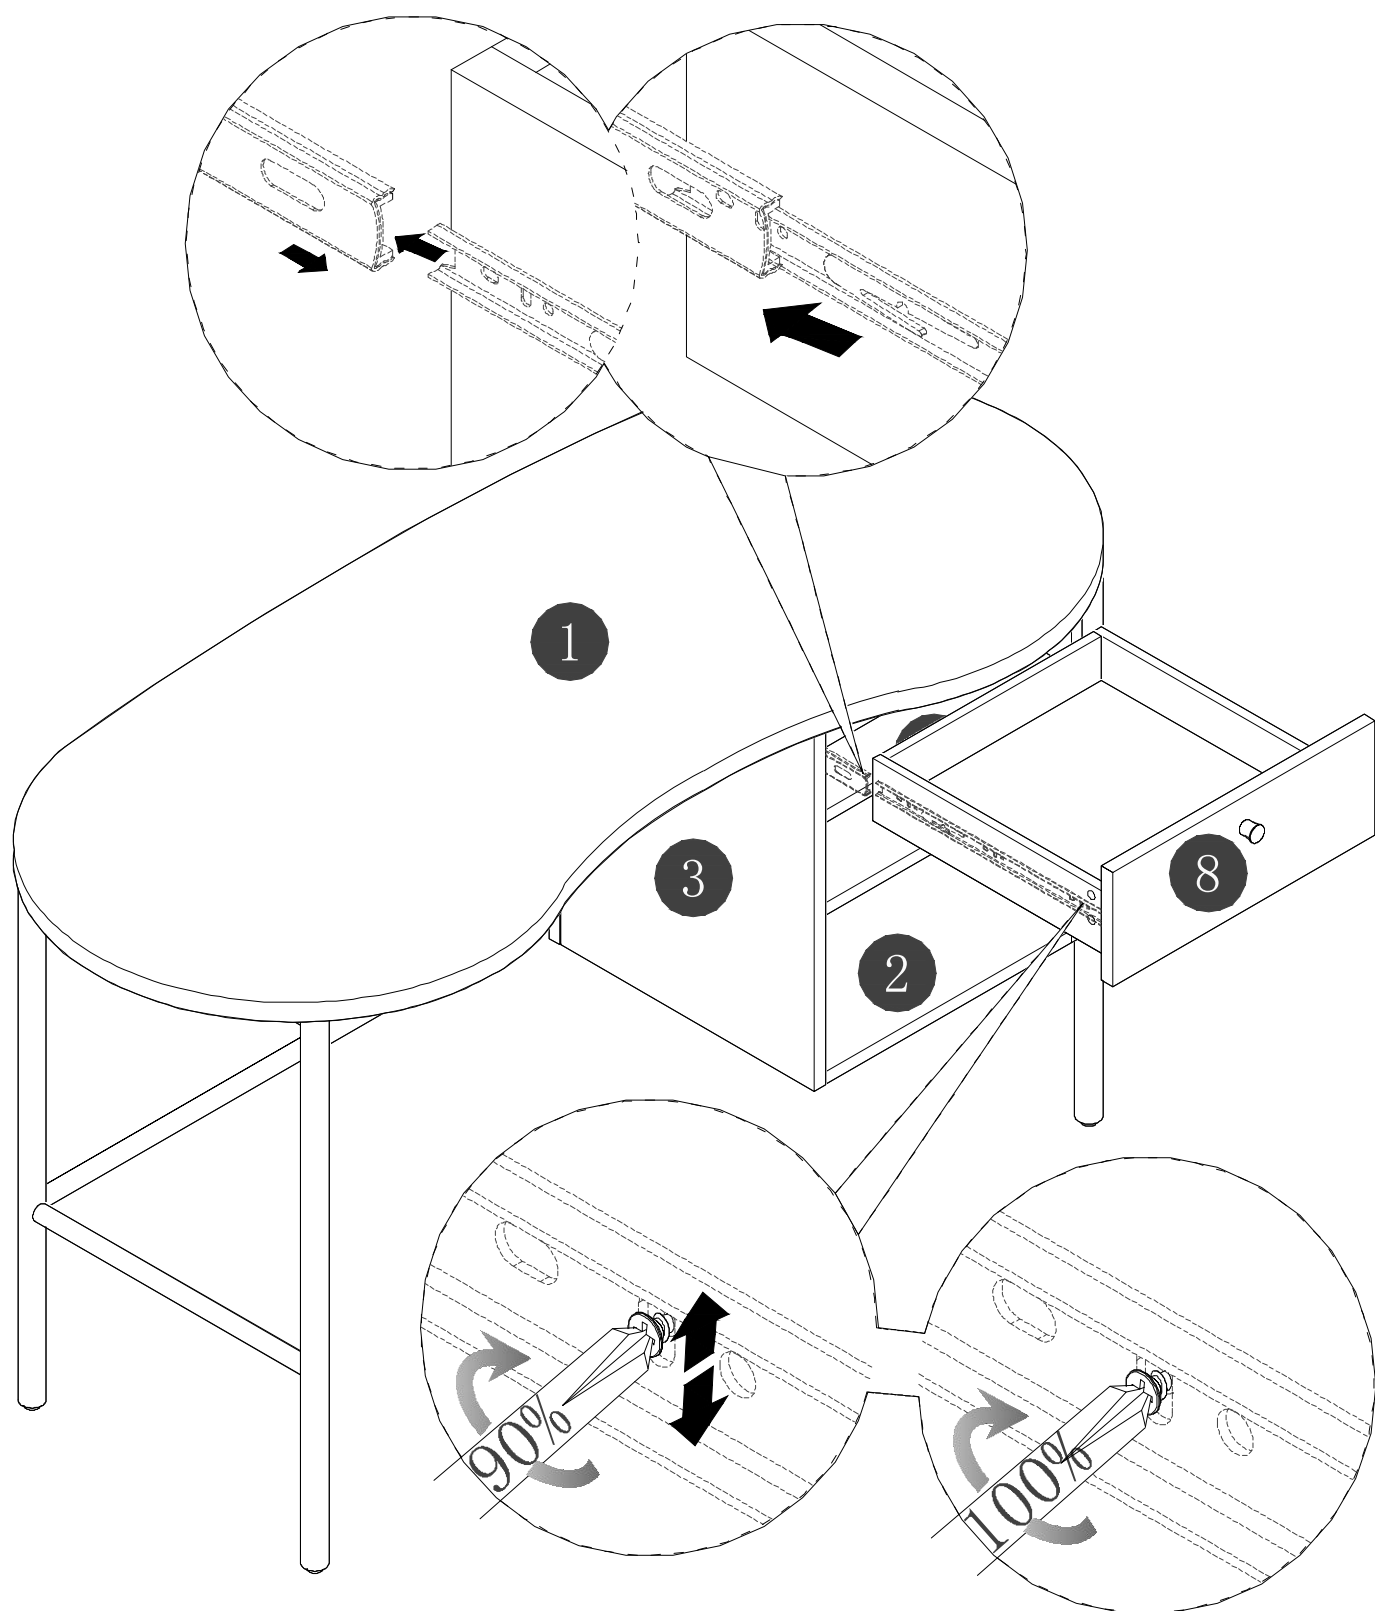


*If drawers are stiff or uneven, adjust the position of the screws on the drawer runners.
Try to keep all screws in the same position.*




STEP 19

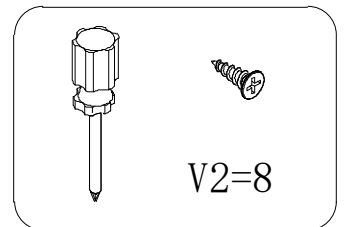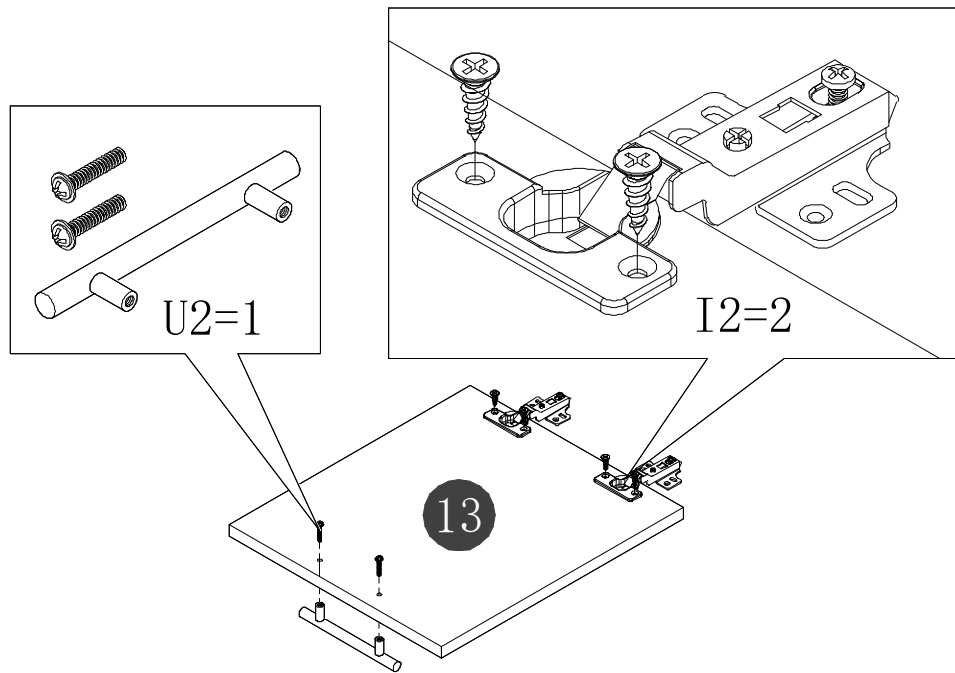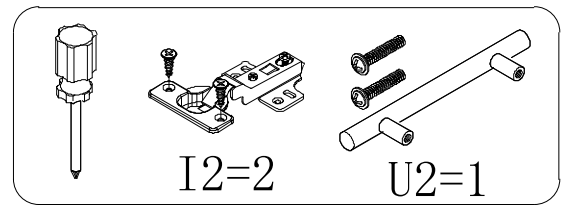




STEP 20

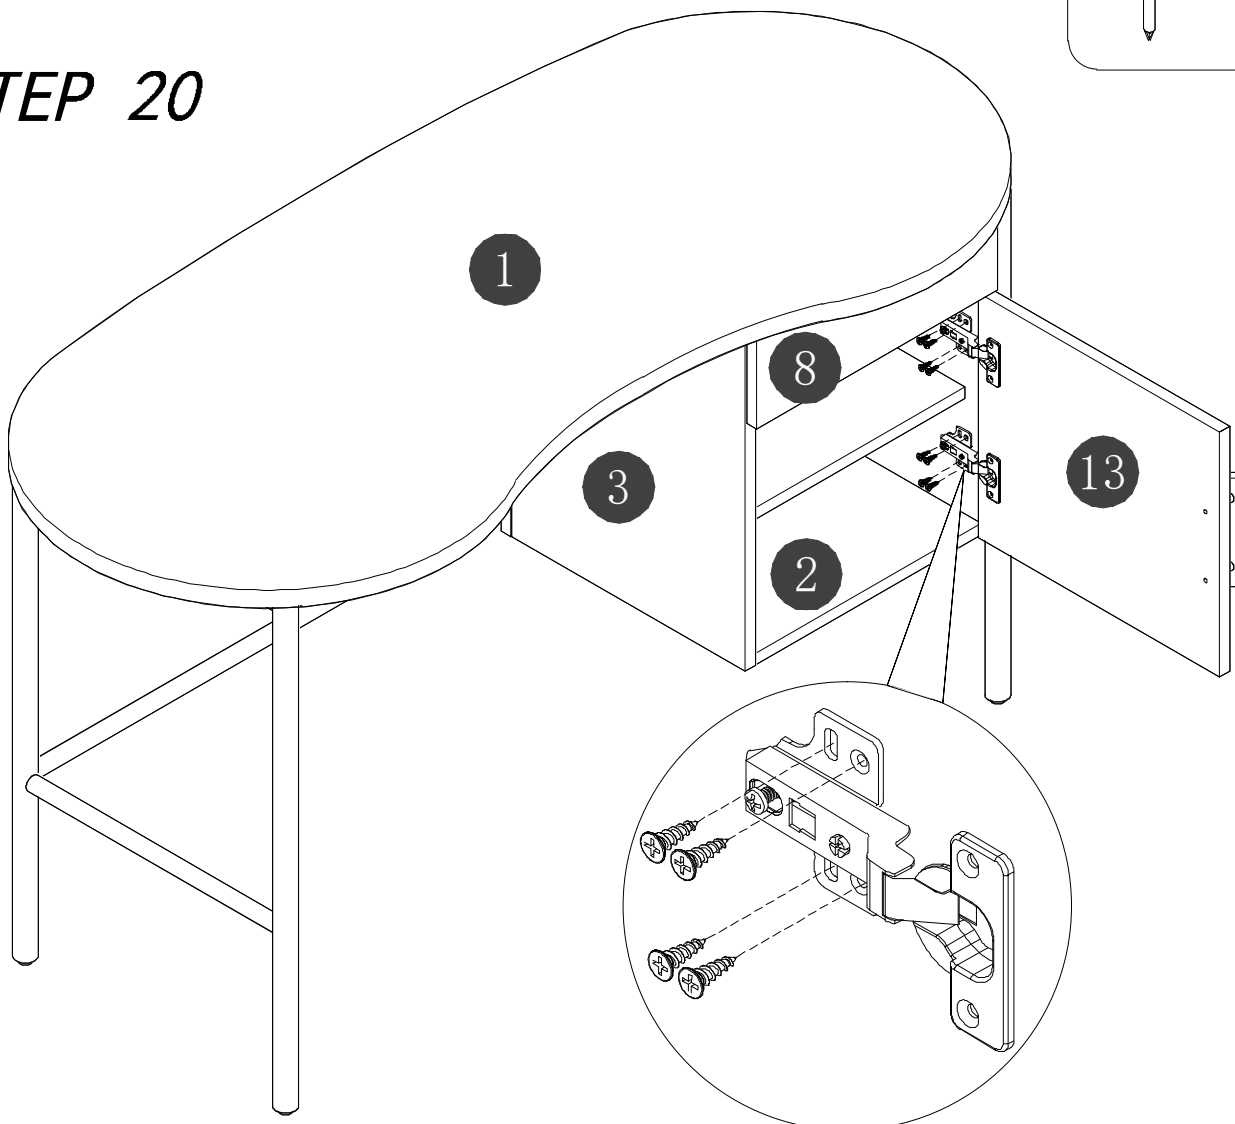

STEP 21

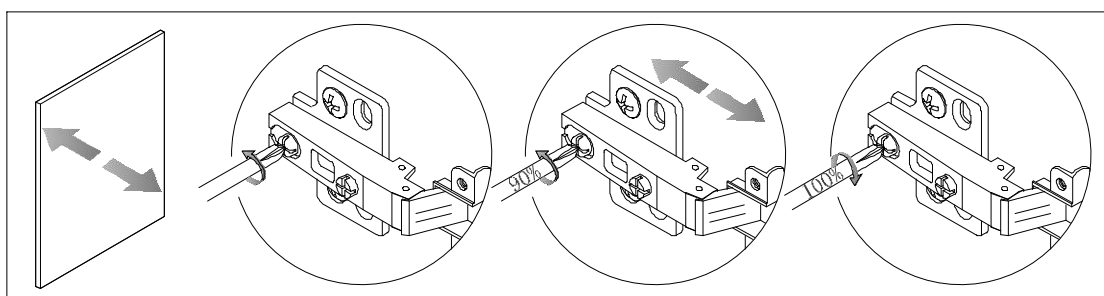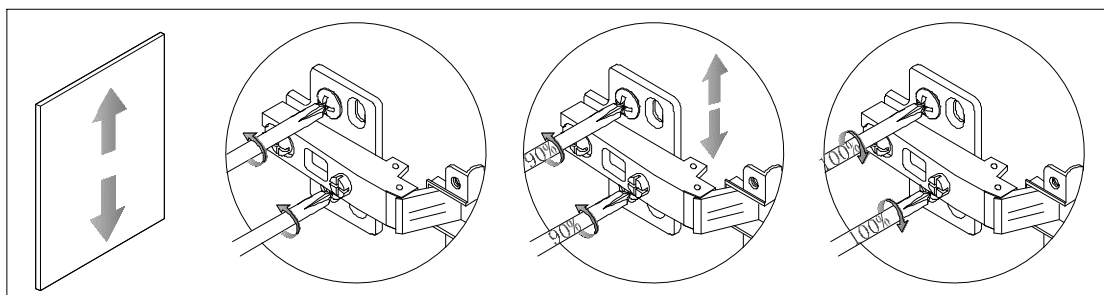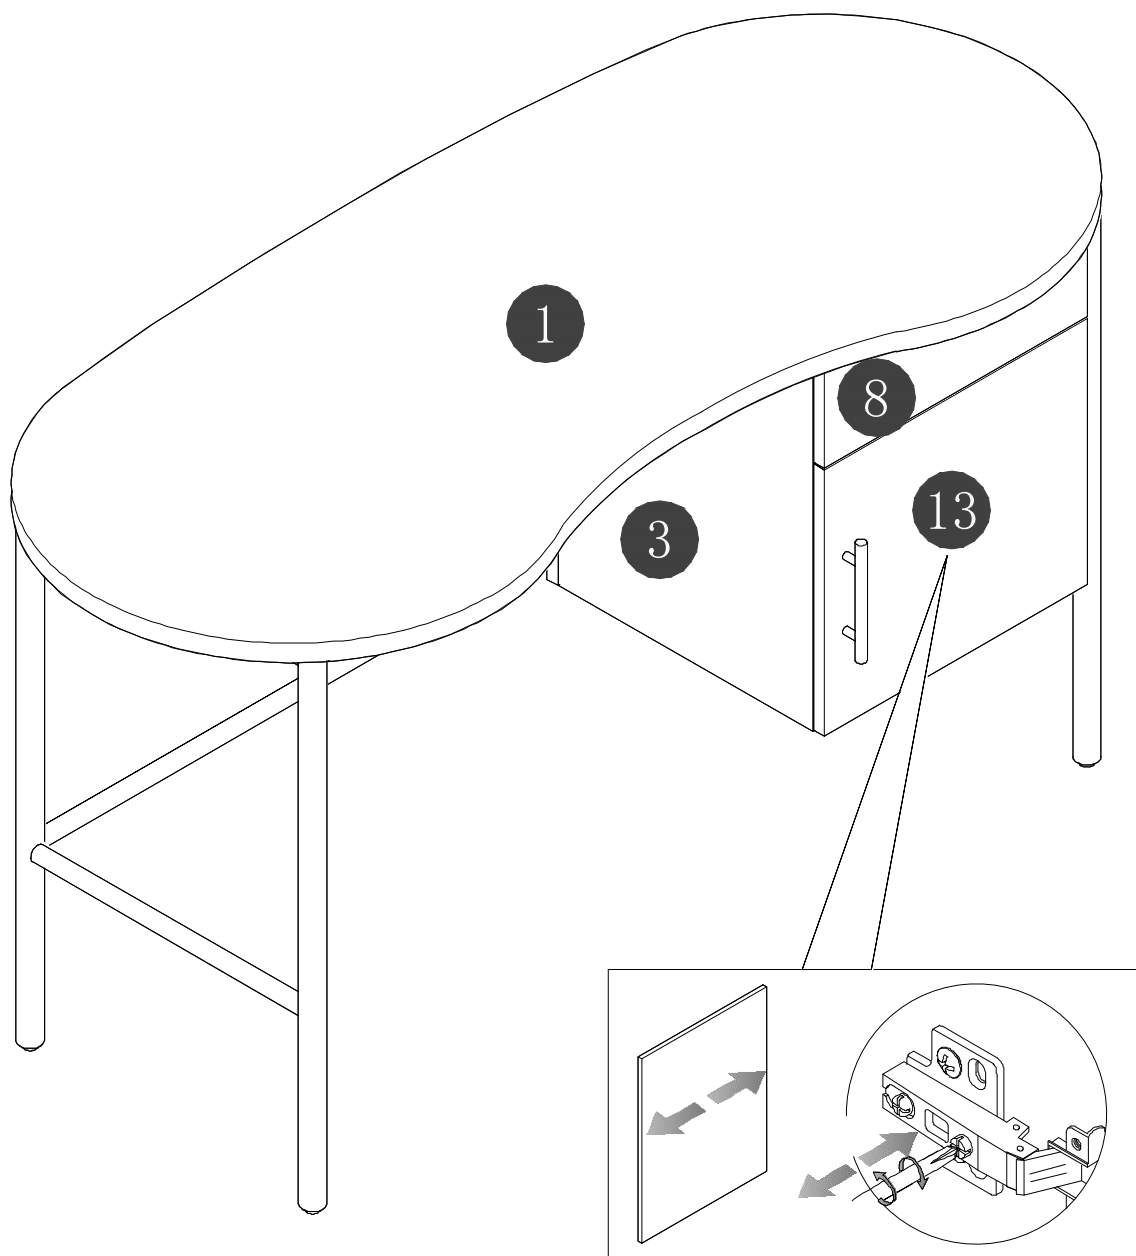

STEP 22

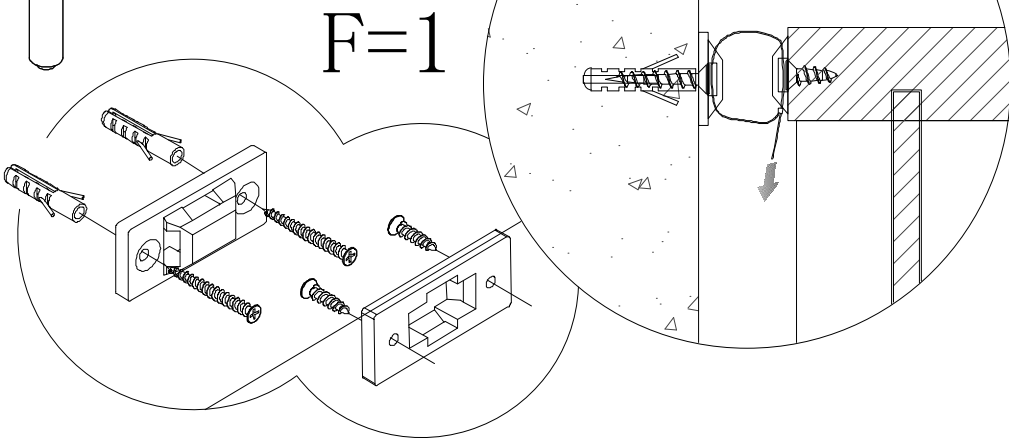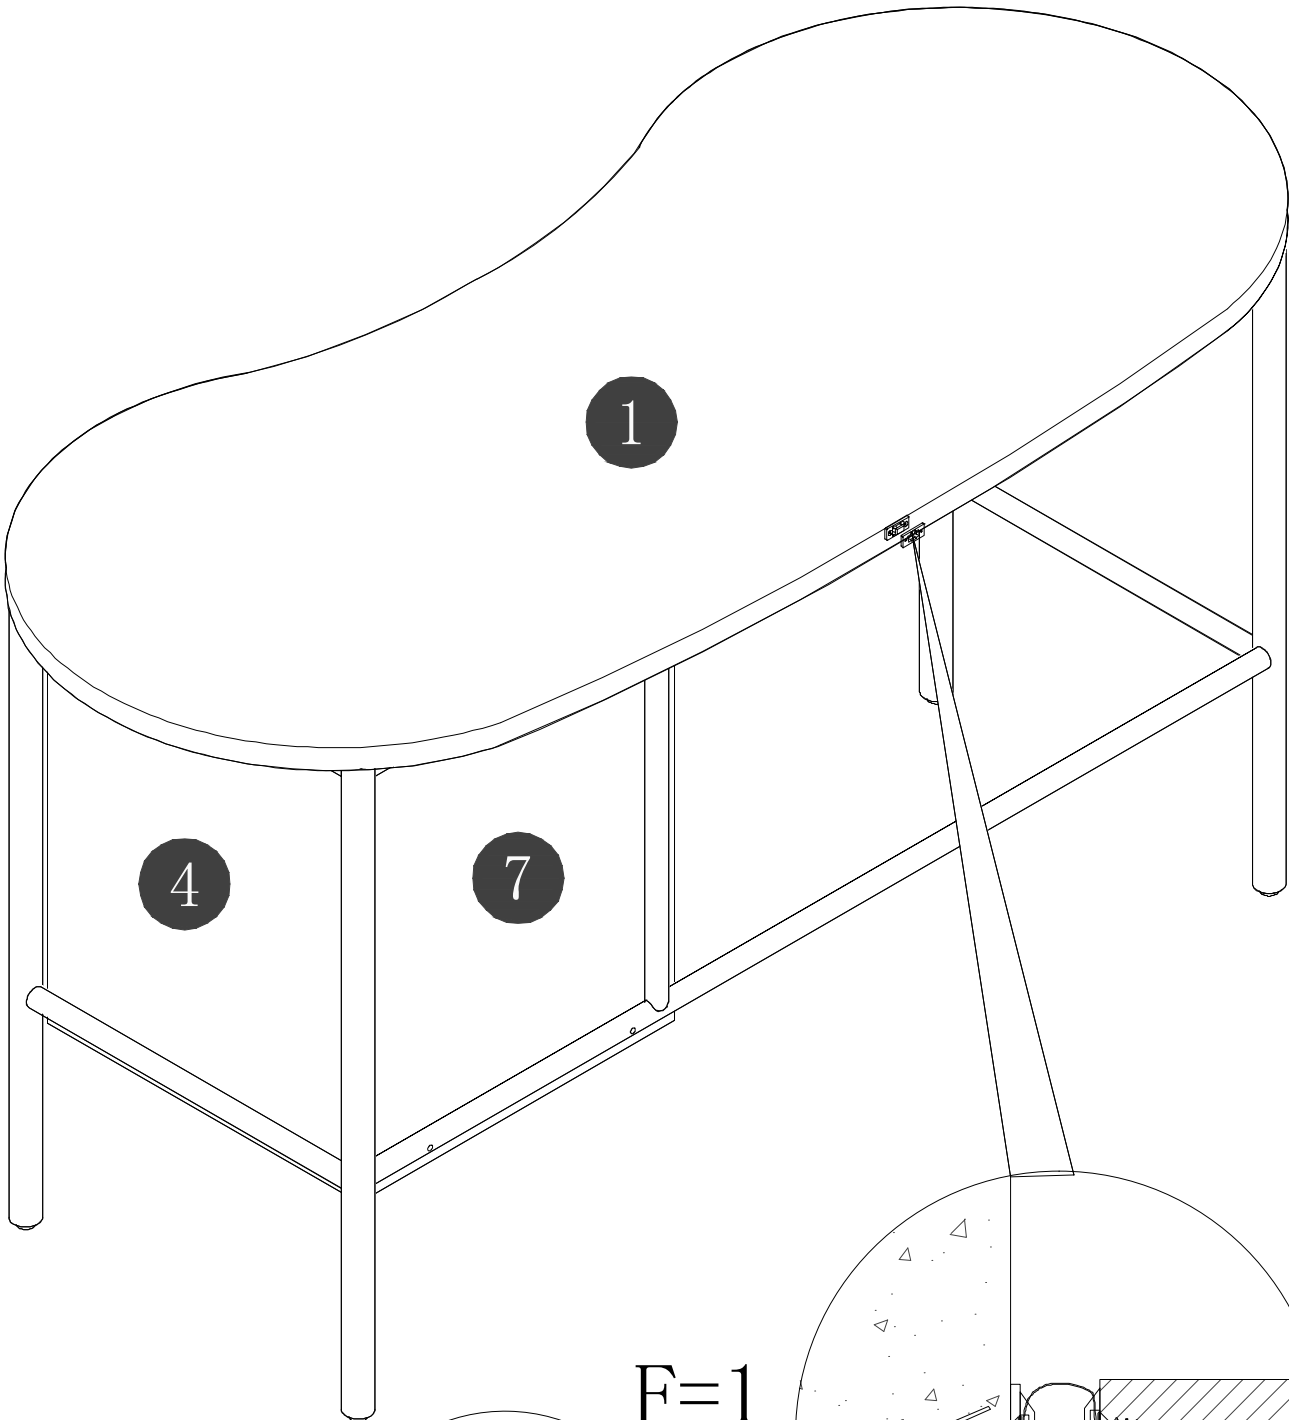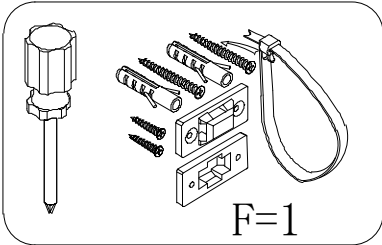

STEP 23

