



ASSEMBLY INSTRUCTIONS

Thanks for purchasing one of our products, please read carefully the assembly instructions before the installation (Attention: Do not tighten the screws before all screws are in place).

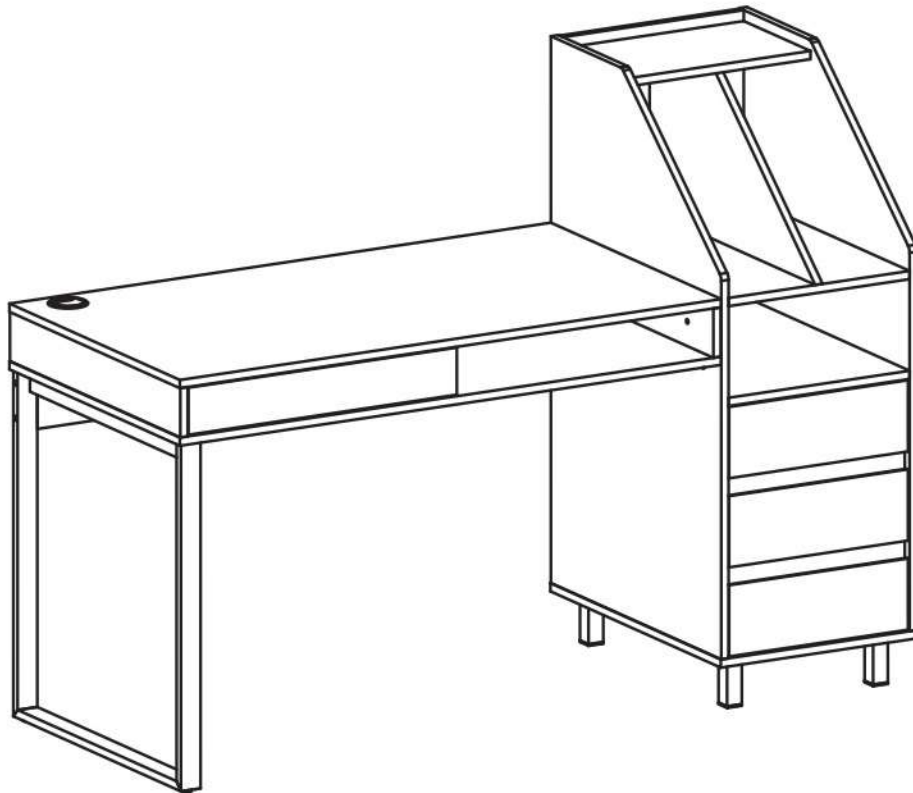

**TWO PEOPLE
REQUIRED**

LSBRSD

General Care:


-Keep your furniture out direct sunlight-Use desk pads and coasters to protect the surface from dents, scratches, and moisture from hot or cold liquids.







Cleaning:

-For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.
-Window cleaning liquid or a similar cleaning liquid can be used to clean glass surface.









■ PARTS LIST

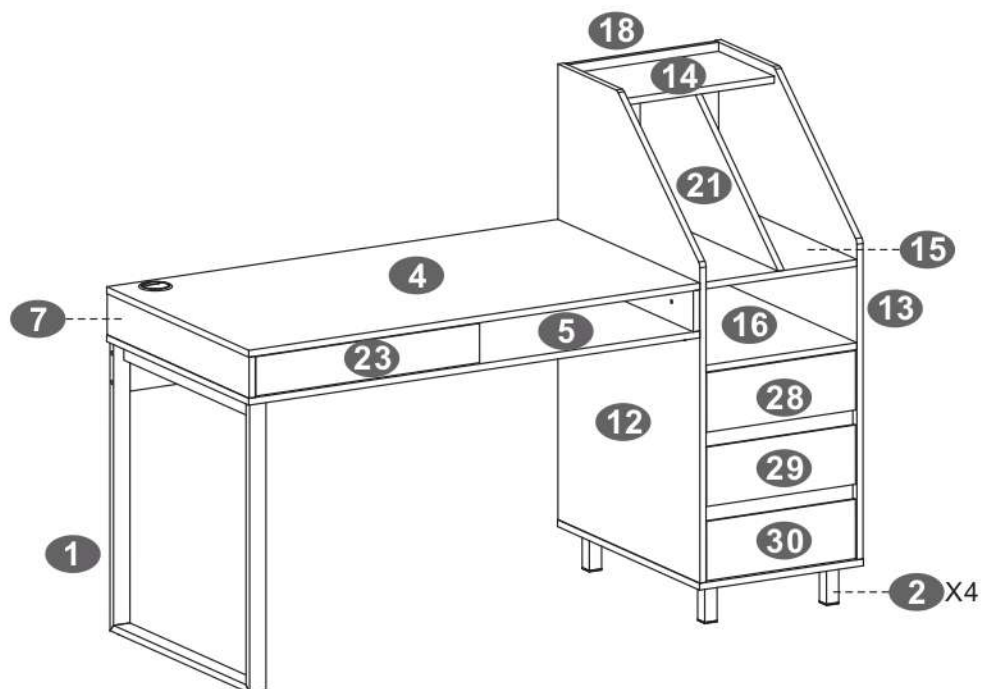

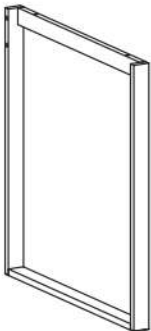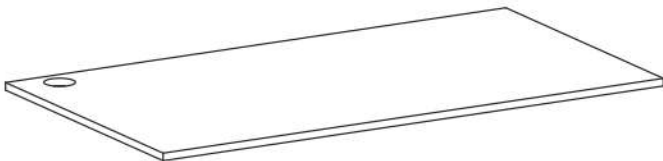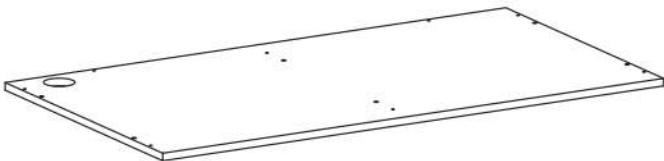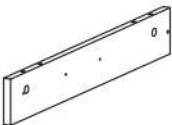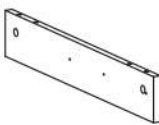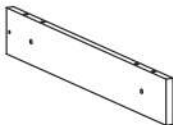 X1	 X4	 X1
 X1	 X1	
 X1	 X1	 X1
		 X1

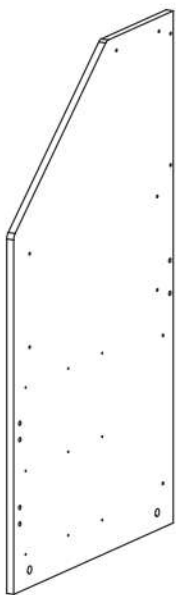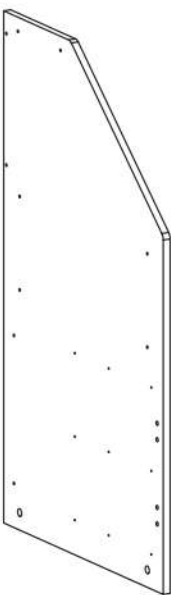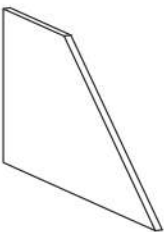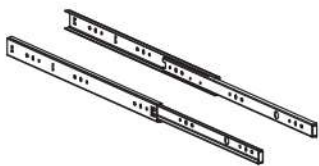

 X1		 X1	
 X1	 X1	 X1	 X1
		 X1	 X1
 X1	 X1	 X2	 X1
 X4	 X1	 X1	 X1




26  X1	27  X1	28  X1	29  X1
30  X1	31  X3	32  X3	33  X3
34  X3	35  X2	36  X8	



ASSEMBLY STEPS:

1

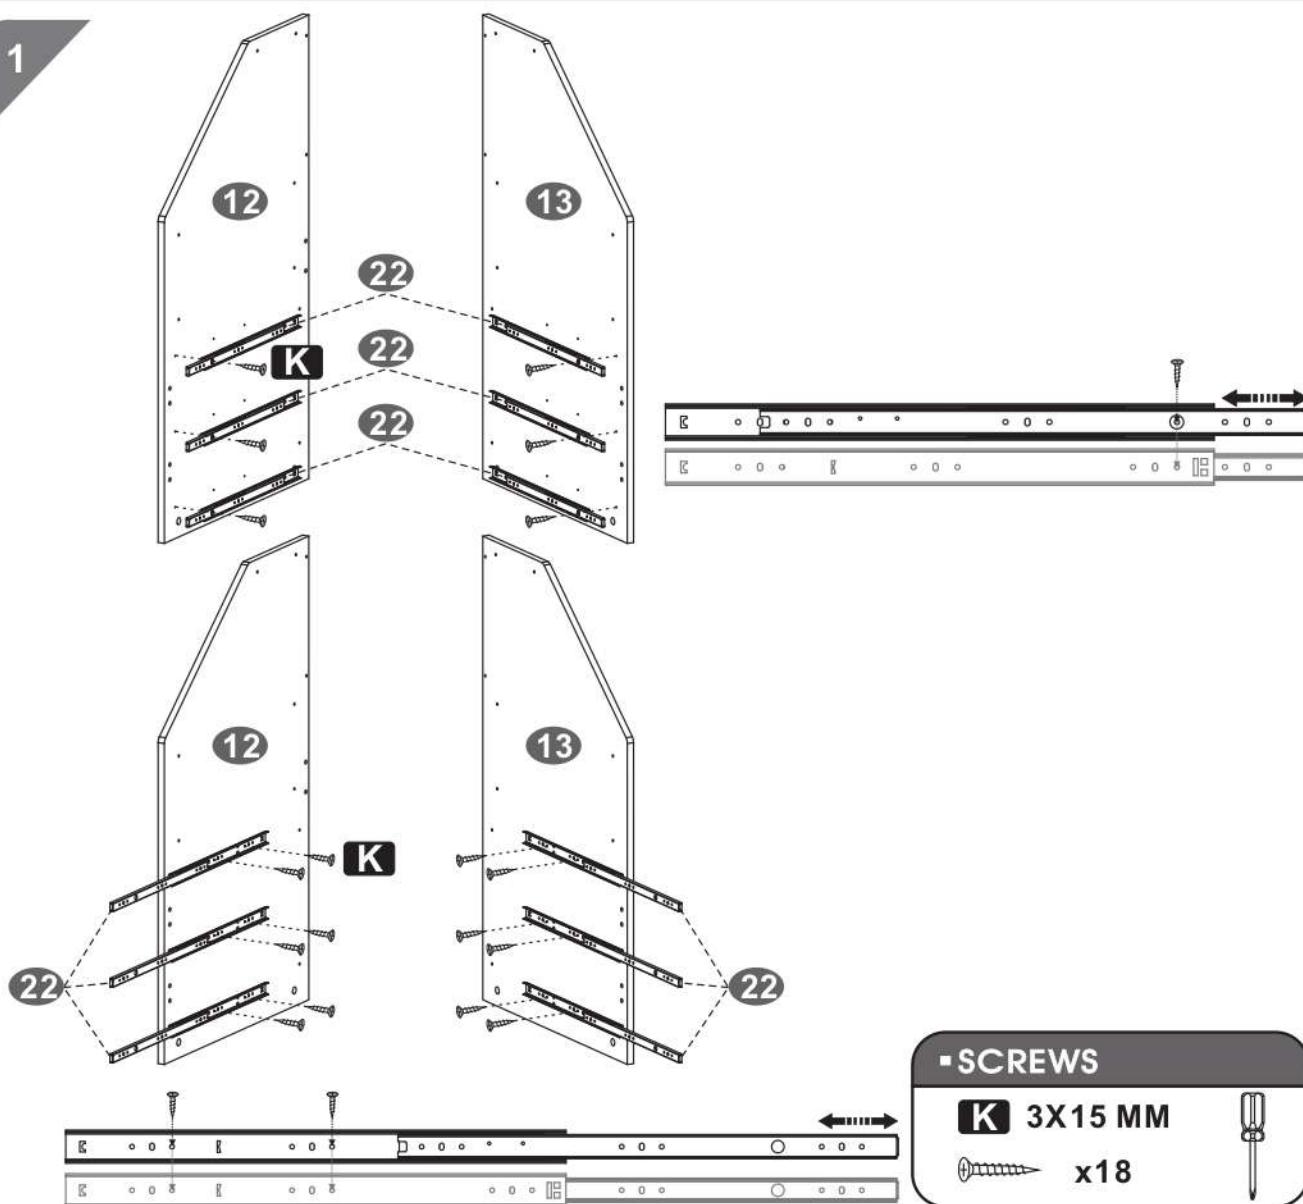


SCREWS

K 3X15 MM
x18




2

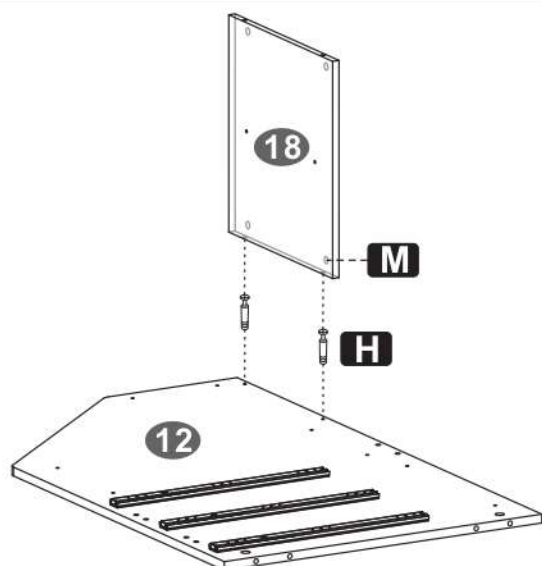



SCREWS

H 6X25 MM
x2


M Φ 12 MM
x2





3

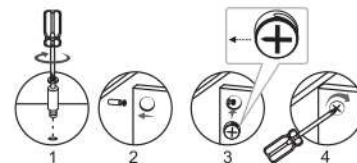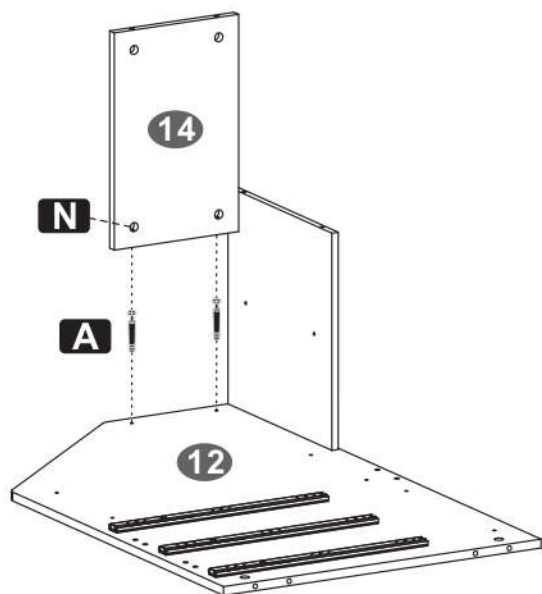

- SCREWS

A 6X45 MM x2**N** Φ 15 MM x2



4

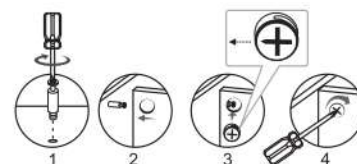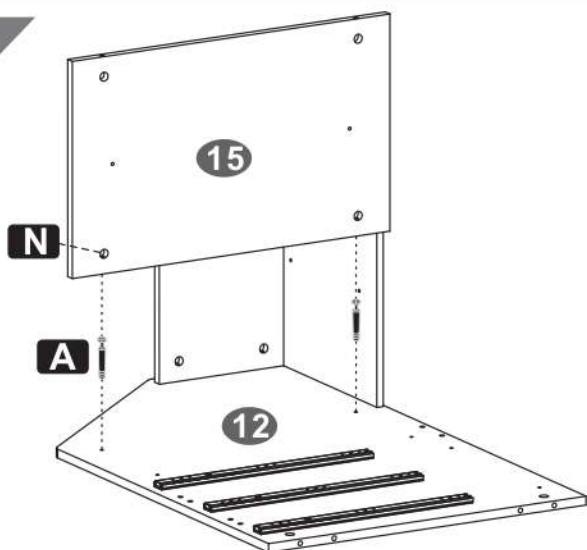


- SCREWS

A 6X45 MM x2**N** Φ 15 MM x2



5

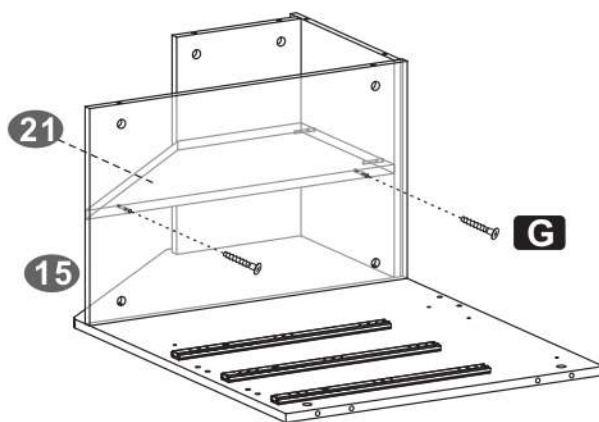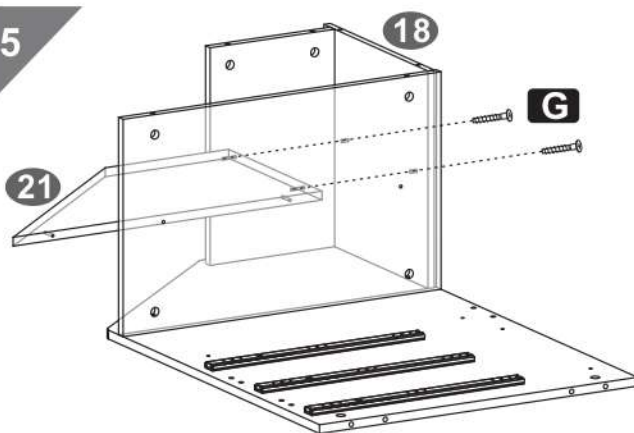

- SCREWS

G 5X40 MM x4



6

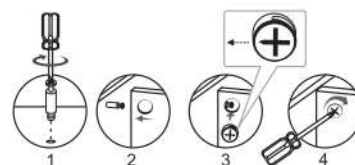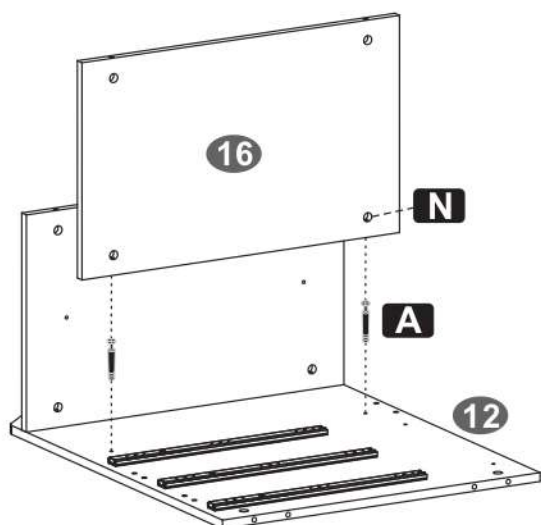

- SCREWS

A 6X45 MM x2**N** Φ 15 MM x2



7

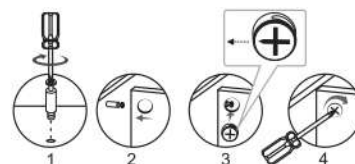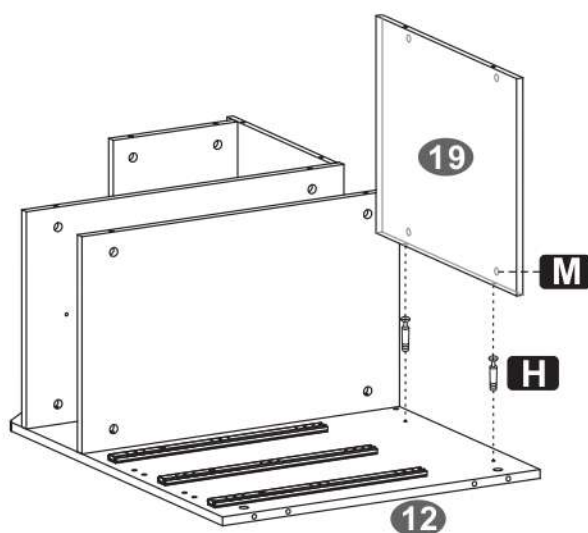

- SCREWS

H 6X25 MM x2**M** Φ 12 MM x2


8

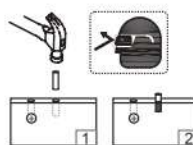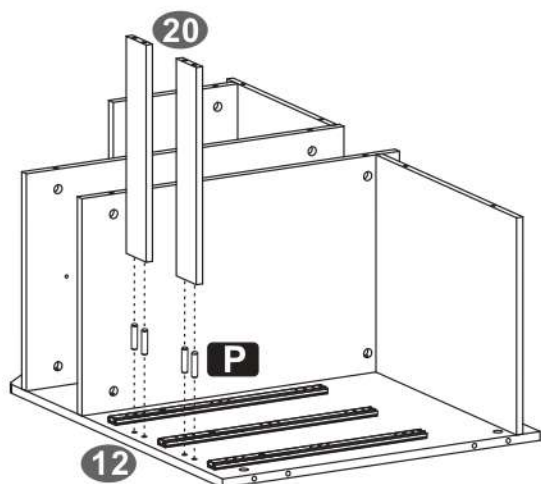

- SCREWS

P 8X30 MM x4

9

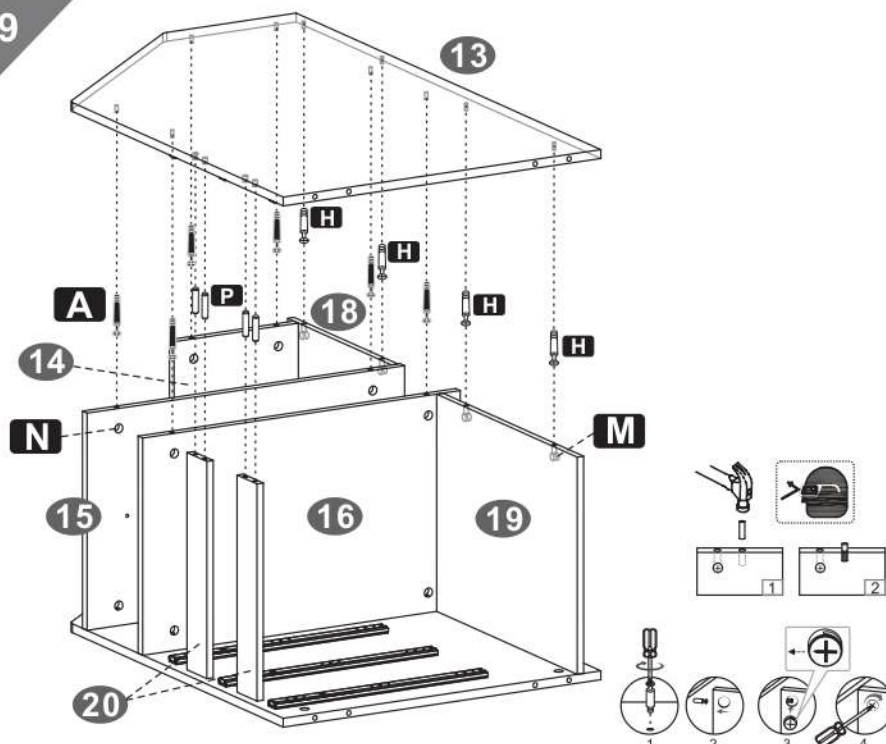

SCREWS

A 6X45 MM

x6

H 6X25 MM

x4

M Φ 12 MM

x4


N Φ 15 MM

x6

P 8X30 MM

x4

10

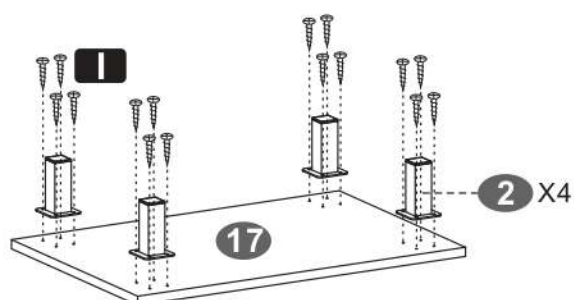


SCREWS

I 4X14 MM

x16

11

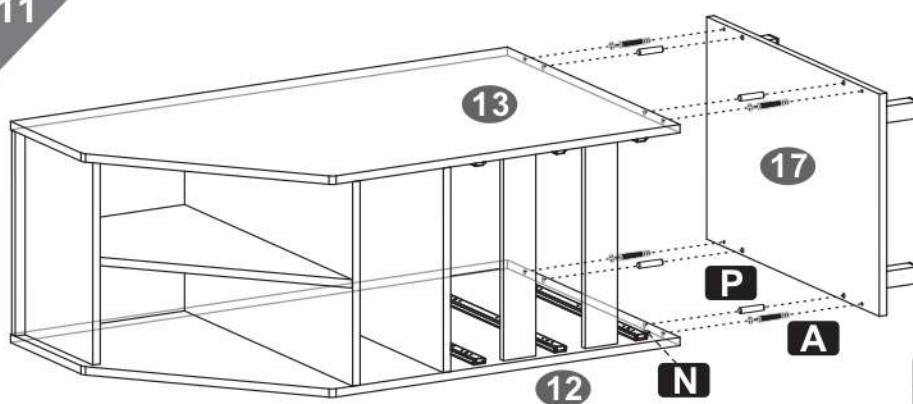

SCREWS

P 8X30 MM

x4

SCREWS


A 6X45 MM

x4

N Φ 15 MM

x4

12

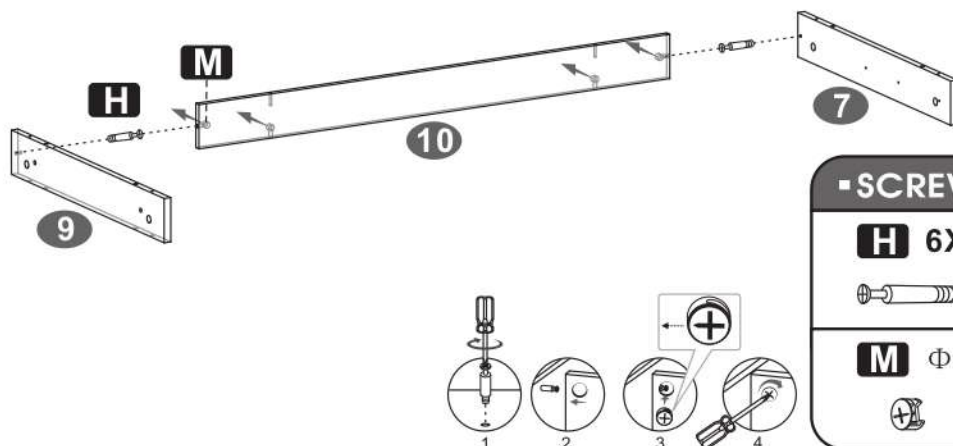

- SCREWS


H 6X25 MM

x2

M Φ 12 MM

x2

13

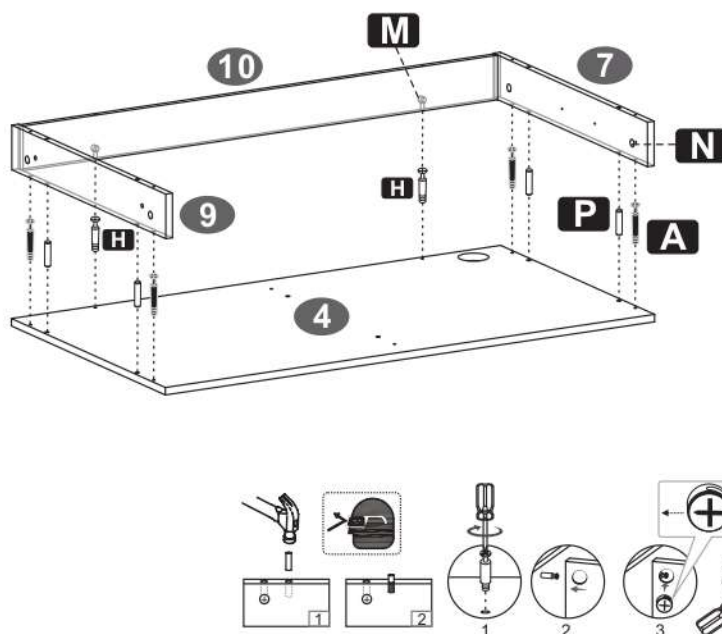

- SCREWS

A 6X45 MM

x4

H 6X25 MM

x2

M Φ 12 MM

x2


N Φ 15 MM

x4

P 8X30 MM

x4

14

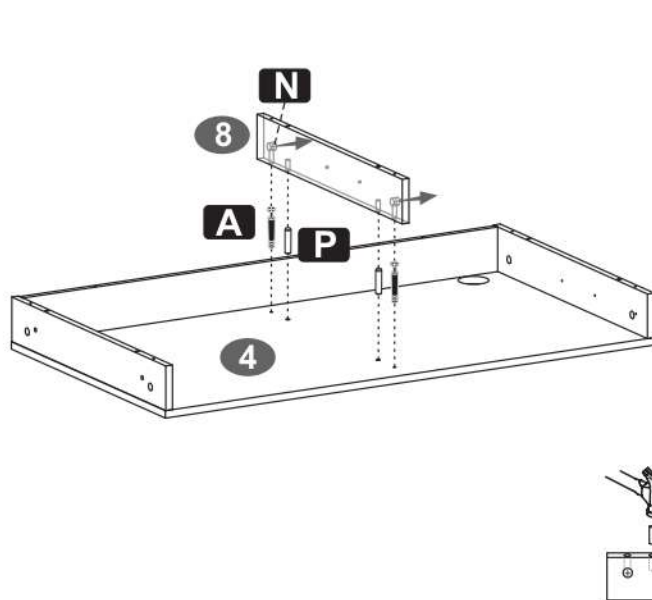

- SCREWS

A 6X45 MM

x2


N Φ 15 MM

x2


P 8X30 MM

x2


15

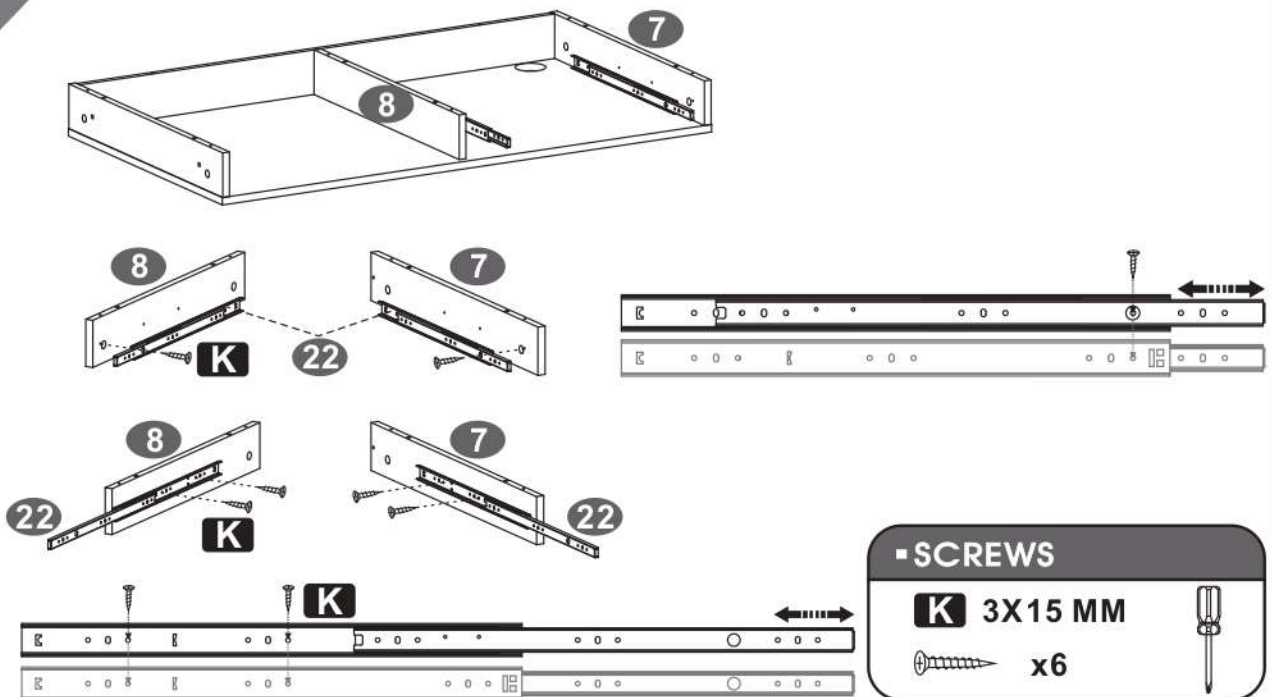


16

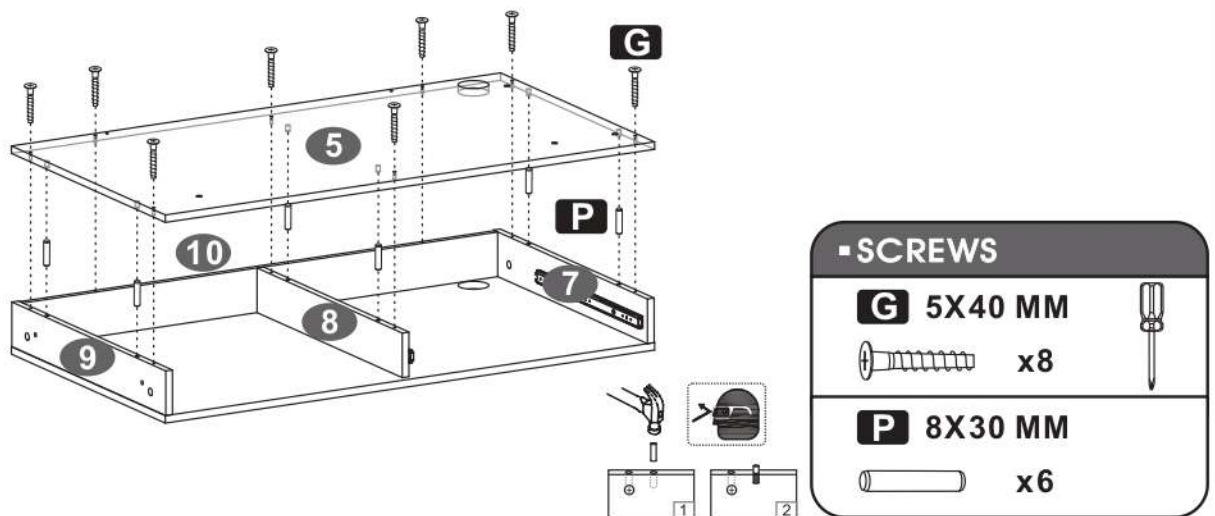

17

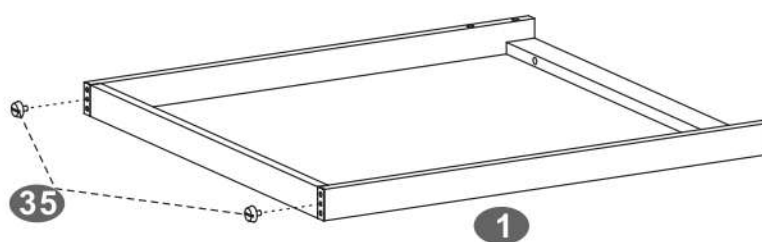

18

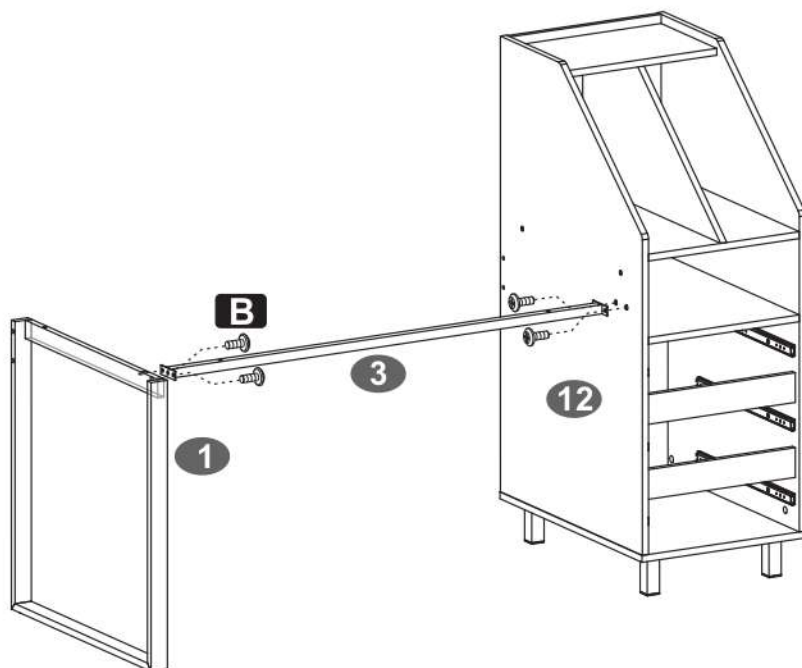


-SCREWS

B 6X12 MM

x4



19

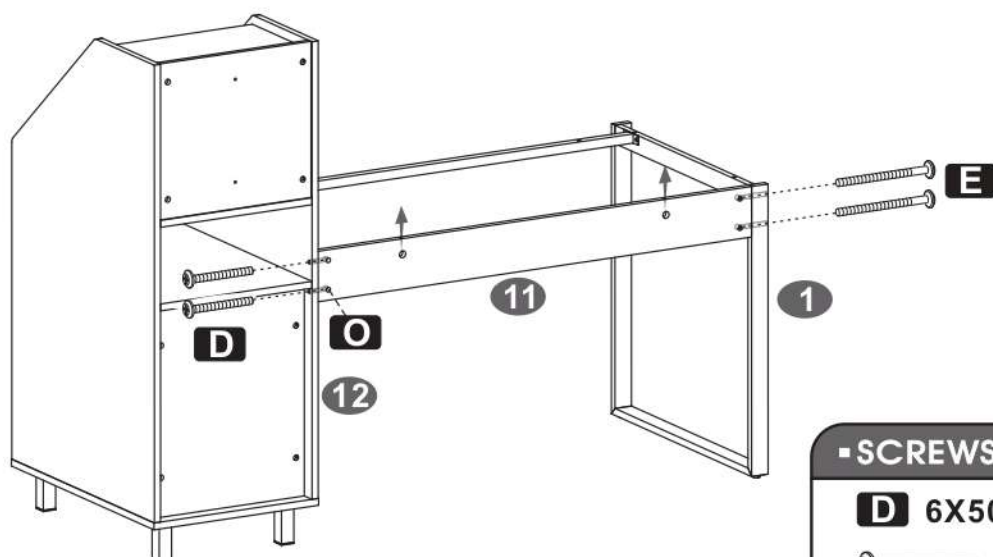

-SCREWS

D 6X50 MM


x2

E 6X75 MM



x2

O Φ 10 MM

x4

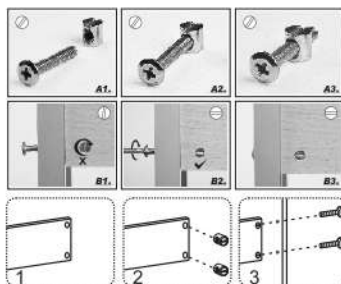


20

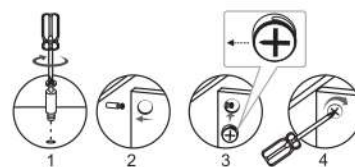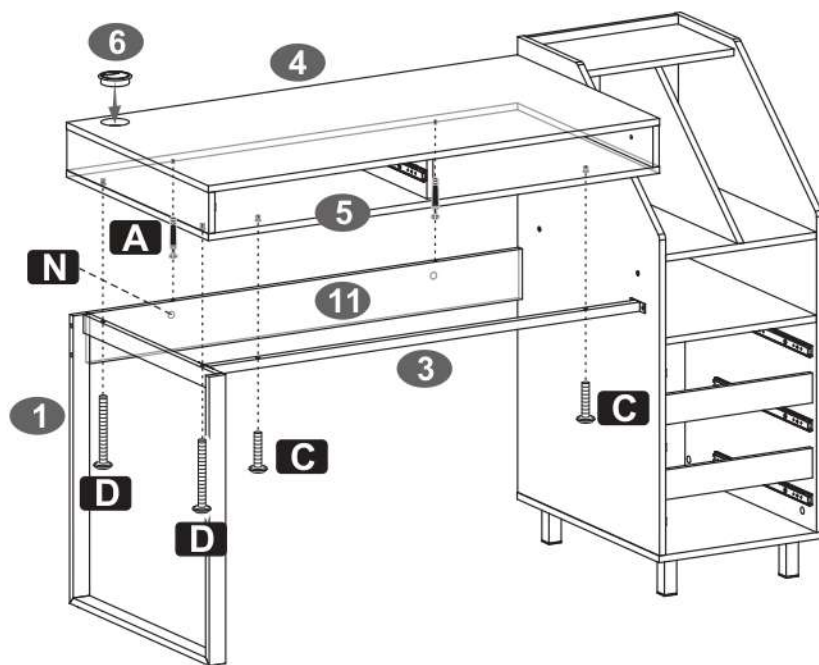

- SCREWS

A 6X45 MM x2**C** 6X30 MM x2**D** 6X50 MM x2**N** Φ 15 MM x2


21

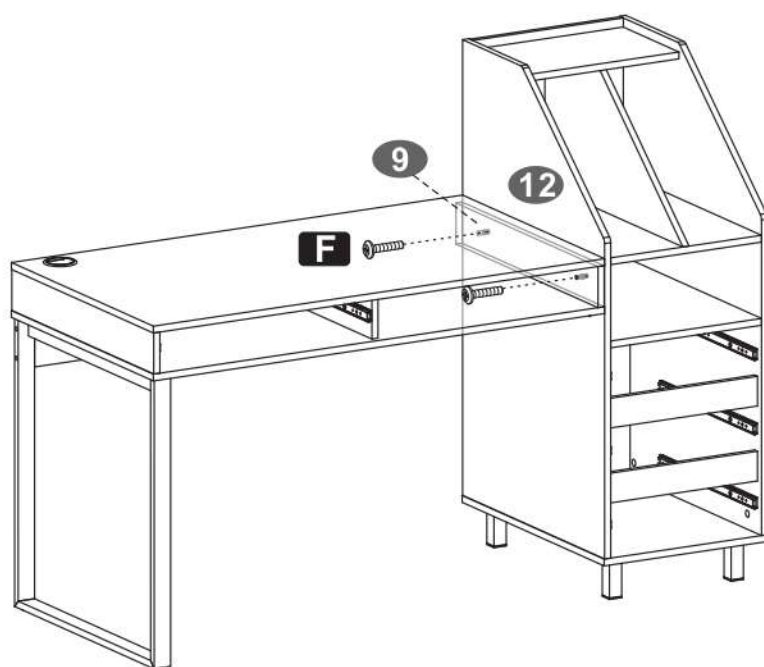

- SCREWS

F 6X25 MM x2


22

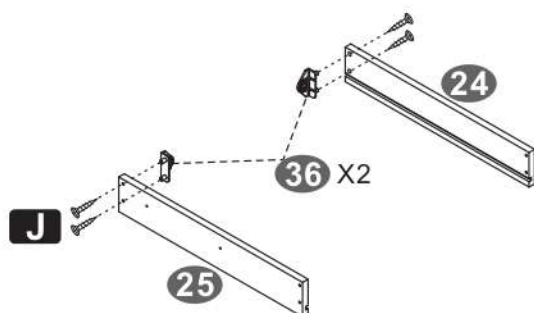

- SCREWS

J 3X12 MM x4


23

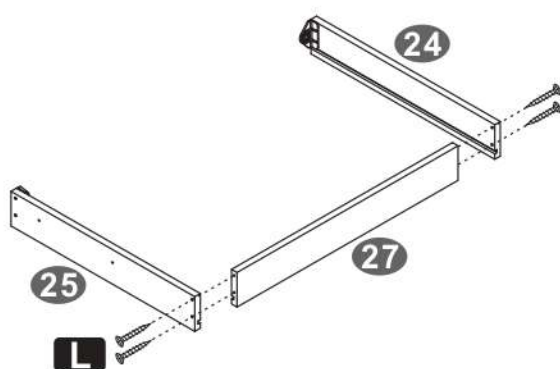


- SCREWS

L 4X35 MM x4

24

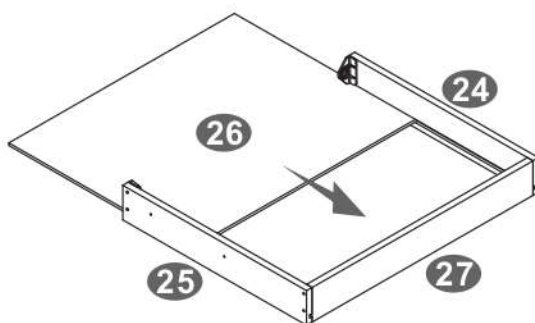


25

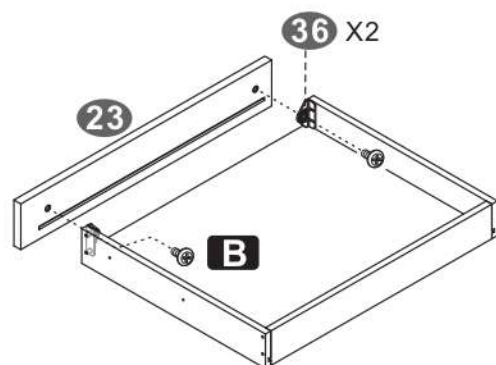

- SCREWS

B 6X12 MM x2

26

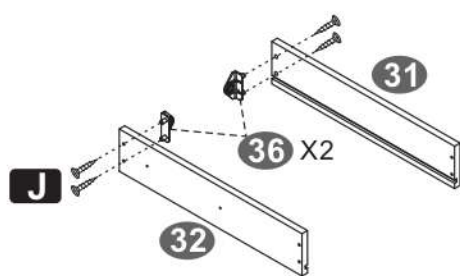


-SCREWS

J 3X12 MM

x4



27

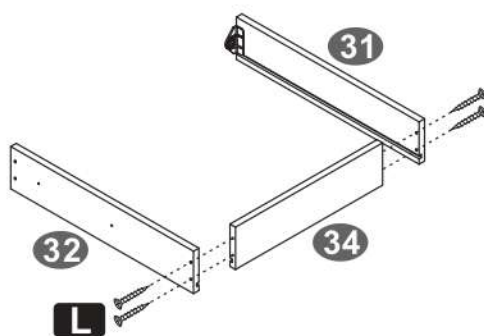


-SCREWS

L 4X35 MM

x4





28

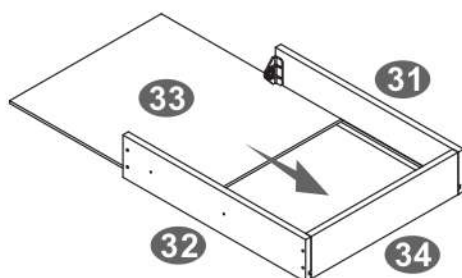

Repeat steps 26 to 28 to
install the other drawer

29

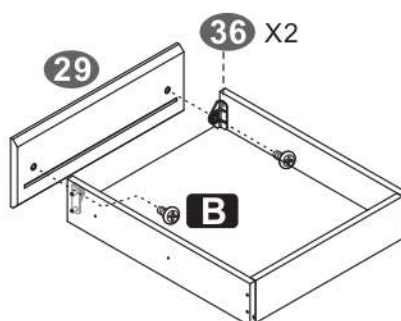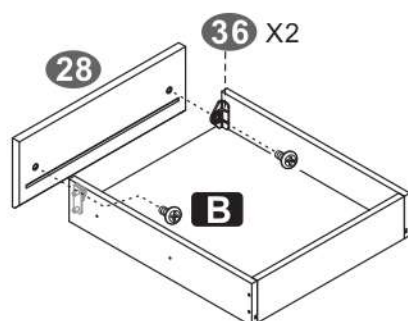

-SCREWS



B 6X12 MM

x6





30

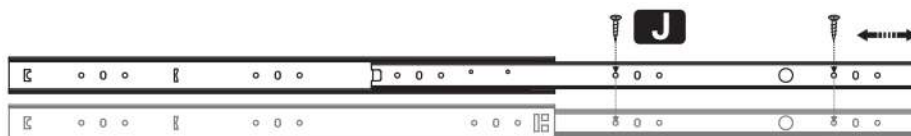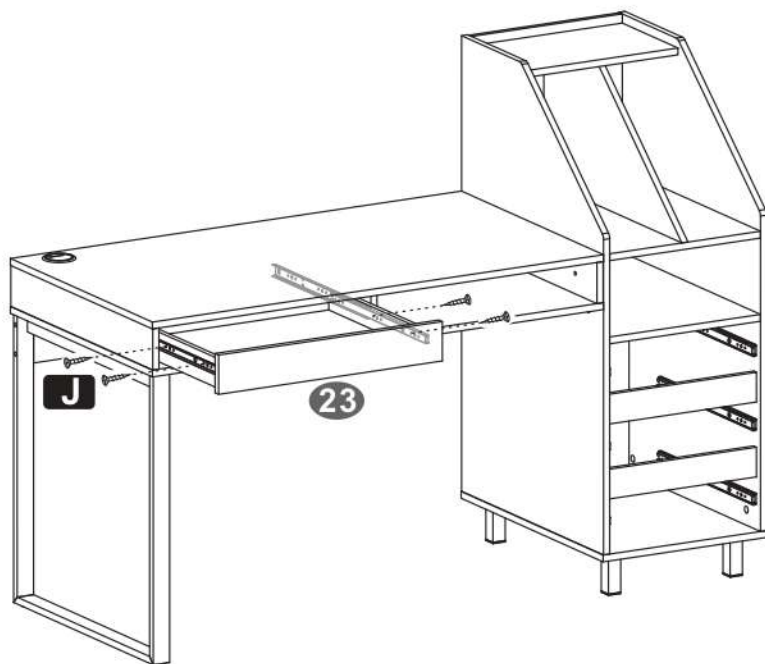



• SCREWS

J 3X12 MM

x4



31

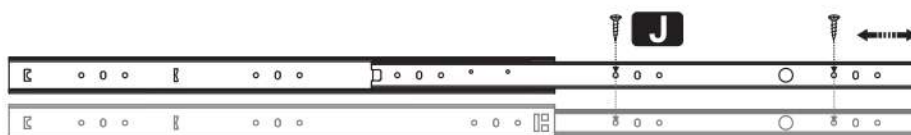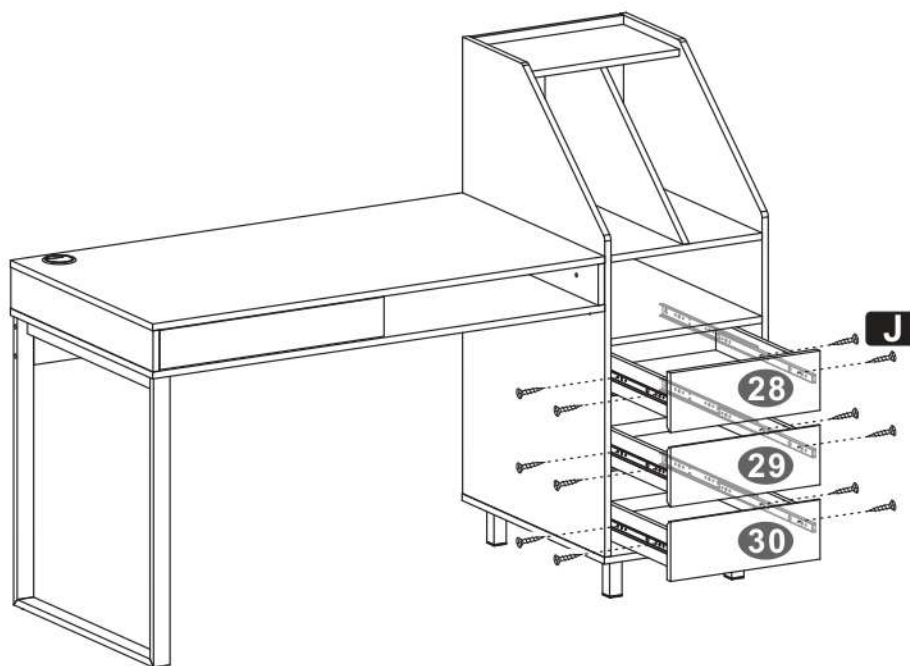

• SCREWS

J 3X12 MM

x12

