
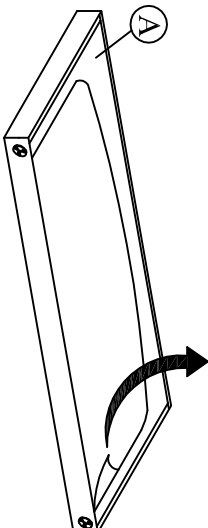
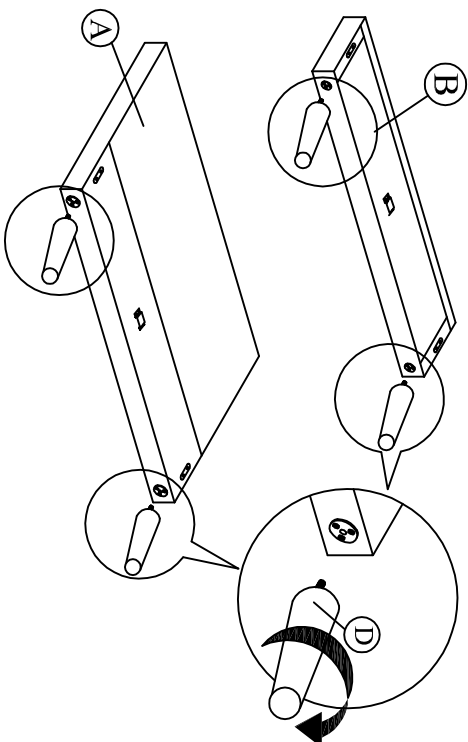
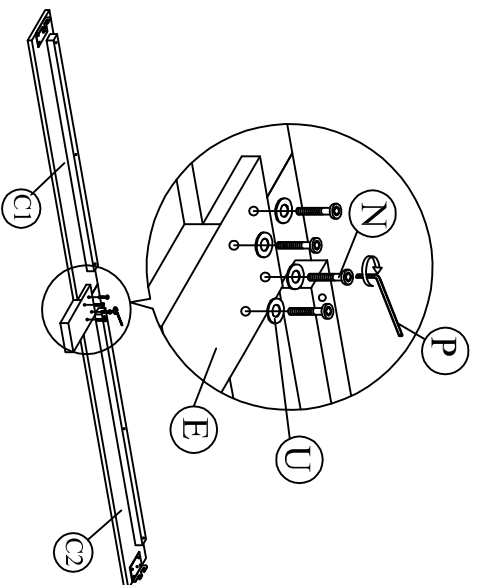
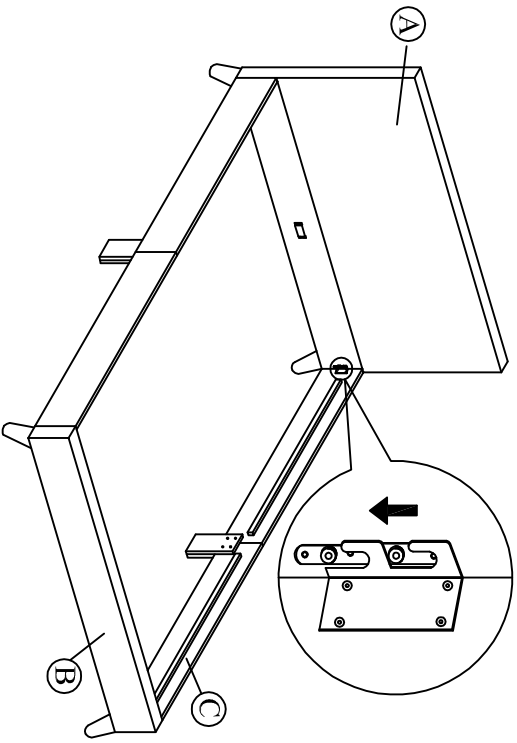



TEMPLE & WEBSTER

Model : CFBRDDHF			Assembly Instruction	
A		1pc	Step 1 : Unzip the black non-woven fabric on the back of headboard and take out all the parts out.  Attention: Zip the black non-woven fabric after take out the parts !! <u>BACK VIEW</u>	Step 2: Install the legs (D) to footboard (B) and headboard (A). 
B		1pc		
C		4pcs		
D		4pcs		
E		2pcs		
F		2pcs		
G		1pc		
H		2pcs		
I		1pc		
J		24pcs		
K		12pcs		
L		24pcs		Step 3: Attach the side rail leg (F) to the side rail (C) . 
M		1pc		
N		10 pcs		
O		1 pc		
P		1pc		
Q		1pc		
R		12pcs		
S		4pcs		
T		3pcs		
U		8pcs		
V		2pcs		Step 4: Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it. 
W		3pcs		


Step 5: Attach the support legs (H) and middle support leg (I) to the center rail (F) of the bed as shown.

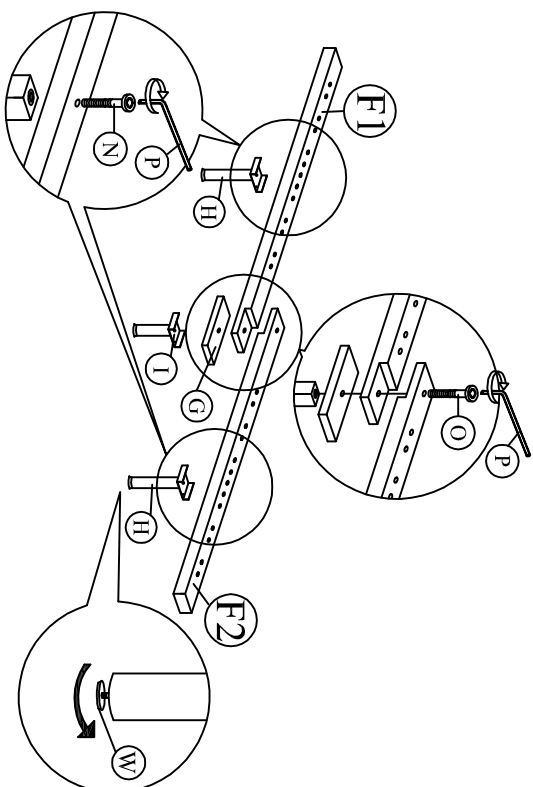

Step 6: Attach L-bracket (V) to center rail (F) and tighten the screw (S) to the center rail support (G).

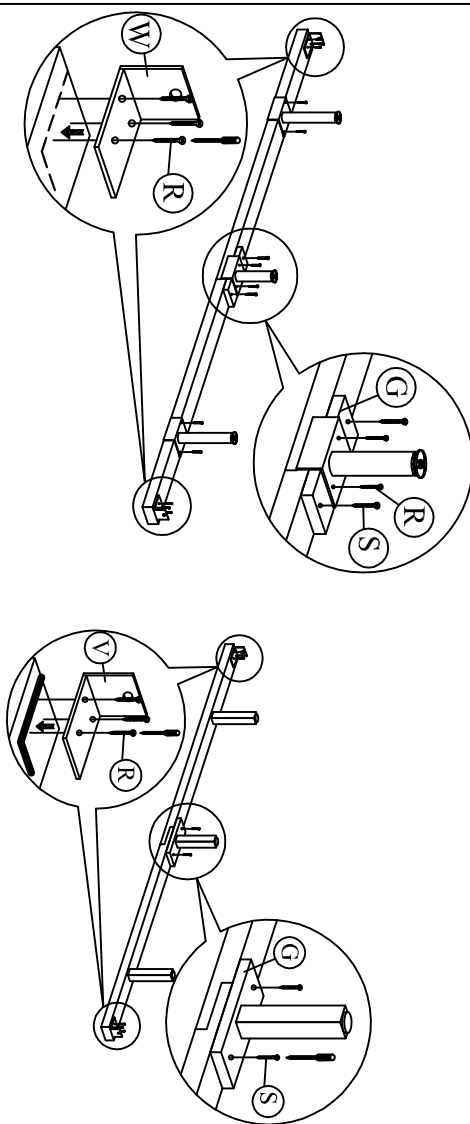

Step 7: Slide the center rail (G) to the headboard (A) and footboard (B). Tighten screws (S) using screw driver (not included) to the headboard (A) and footboard (B).

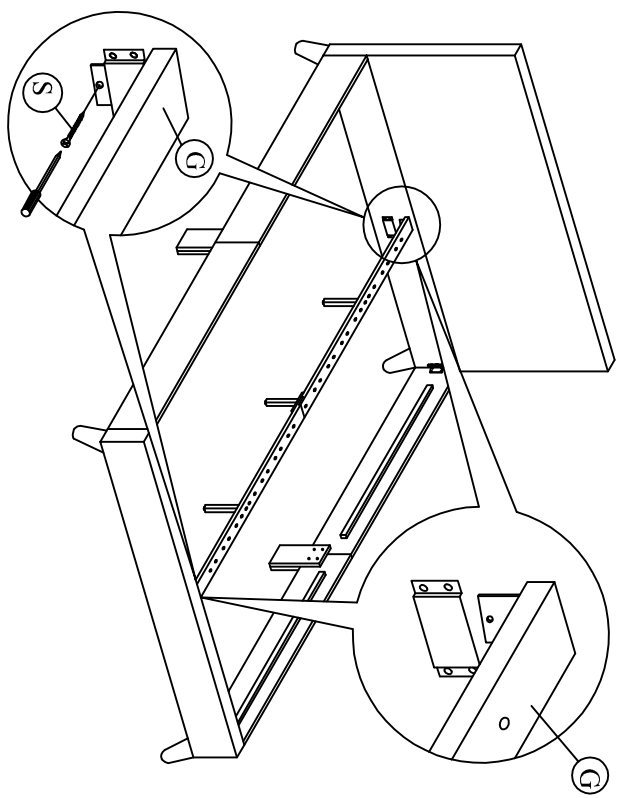

Step 8: Affix the stiffener slat (M) to the side rail support wood and the center rail (G). Tighten all the 4 corner, follow by a assembly of the slat holders with LVL slats as shown.

