


TEMPLE &  
WEBSTER

ASSEMBLY  
INSTRUCTIONS

---

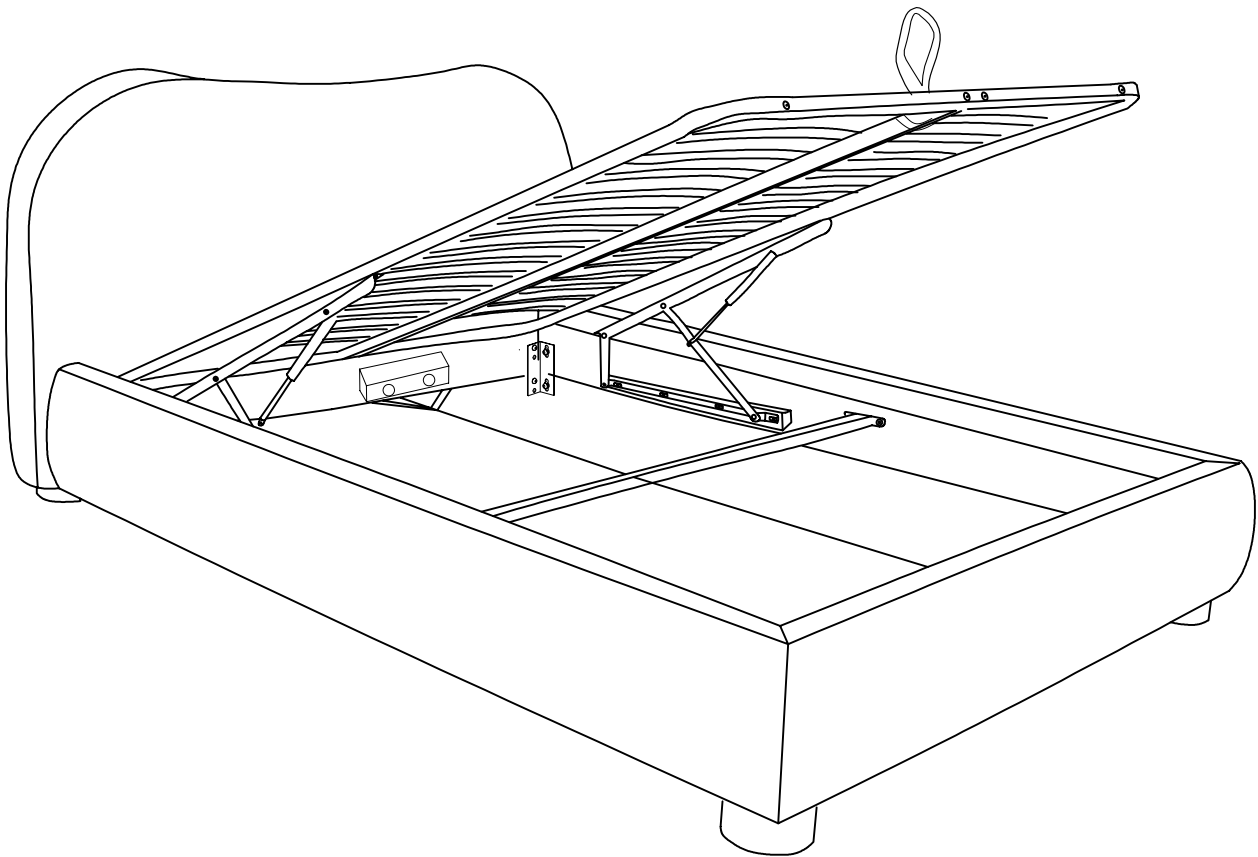

---

# Paloma Queen Gas Lift Storage Bed

# Read first, enjoy forever

## Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don't over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

## Safety, care and maintenance

- To reduce the risk of injury, always secure storage furniture to walls and/or floors by using tip-over restraints.
- Never let children climb or hang on drawers, doors or shelves.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

## Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it's still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.



# Parts list

## ASSEMBLY INSTRUCTIONS


### Paloma Queen Gas Lift Storage Bed











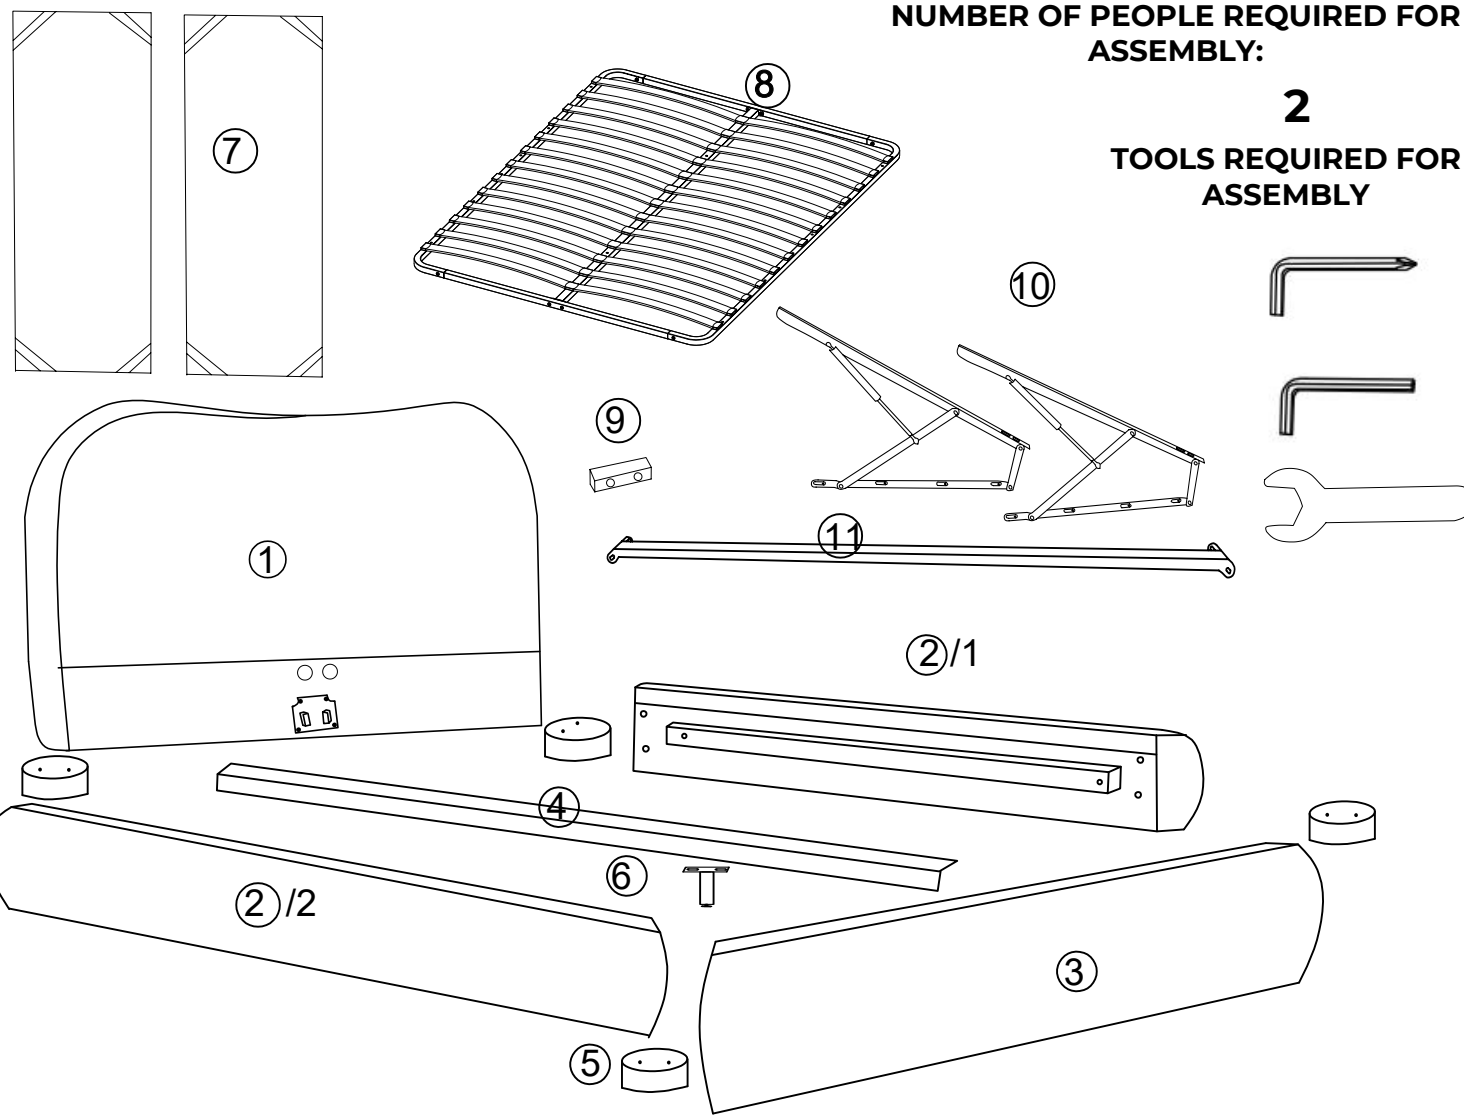



#### AAPAQSTCR

NUMBER OF PEOPLE REQUIRED FOR ASSEMBLY:


2

TOOLS REQUIRED FOR ASSEMBLY









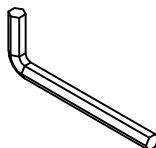
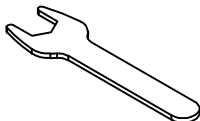


<b>AX30</b>  M8X30mm	<b>BX4</b>  Ø120mm	<b>CX2</b>  M6X20mm	<b>DX4</b>  130X47X47mm	<b>EX4</b>  Ø 4X16mm	<b>FX2</b>  193*102*27*2.5mm
<b>GX2</b>  68X33X30mm	<b>HX2</b>  M6X16mm	<b>IX1</b>  5mm	<b>JX1</b>  5mm	<b>KX18</b>  M8X45mm	<b>LX10</b>  M8X20mm
<b>MX1</b>  60X40X40mm					
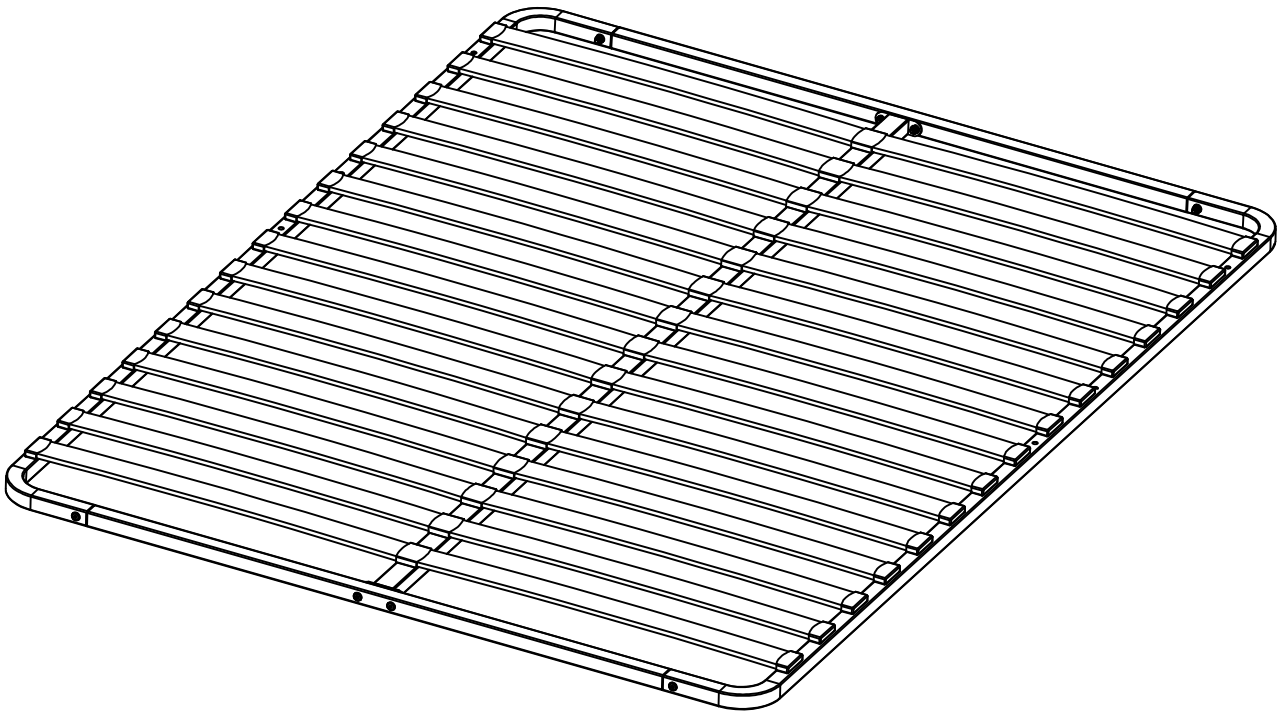
# Disassembly Slats Assembly Instructions




## Parts List

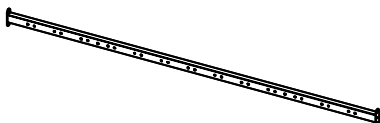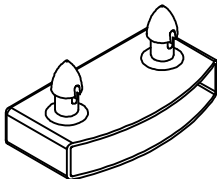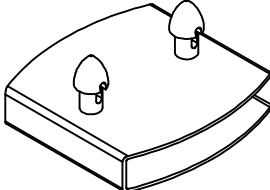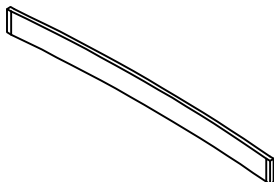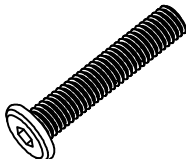1		2		3			
Siderail/2PCS		Traverse bed/2PCS		Centre rail/1PC			
4		5		6			
Plastic single buckle/ 30PCS		Plastic double buckle/15PCS		Poplar curved slat /30PCS			
#1		#2		#3		#4	
M8*45mm		M8		5mm		13mm	
Bolt/14PCS		Nut/14PCS		Allen key/1PC		Spanner/1PC	

# 1.

Attach 1x Siderail(1) into the 2x Traverse Beds(2) with 2x Bolts(#1) and 2x Nuts(#2).

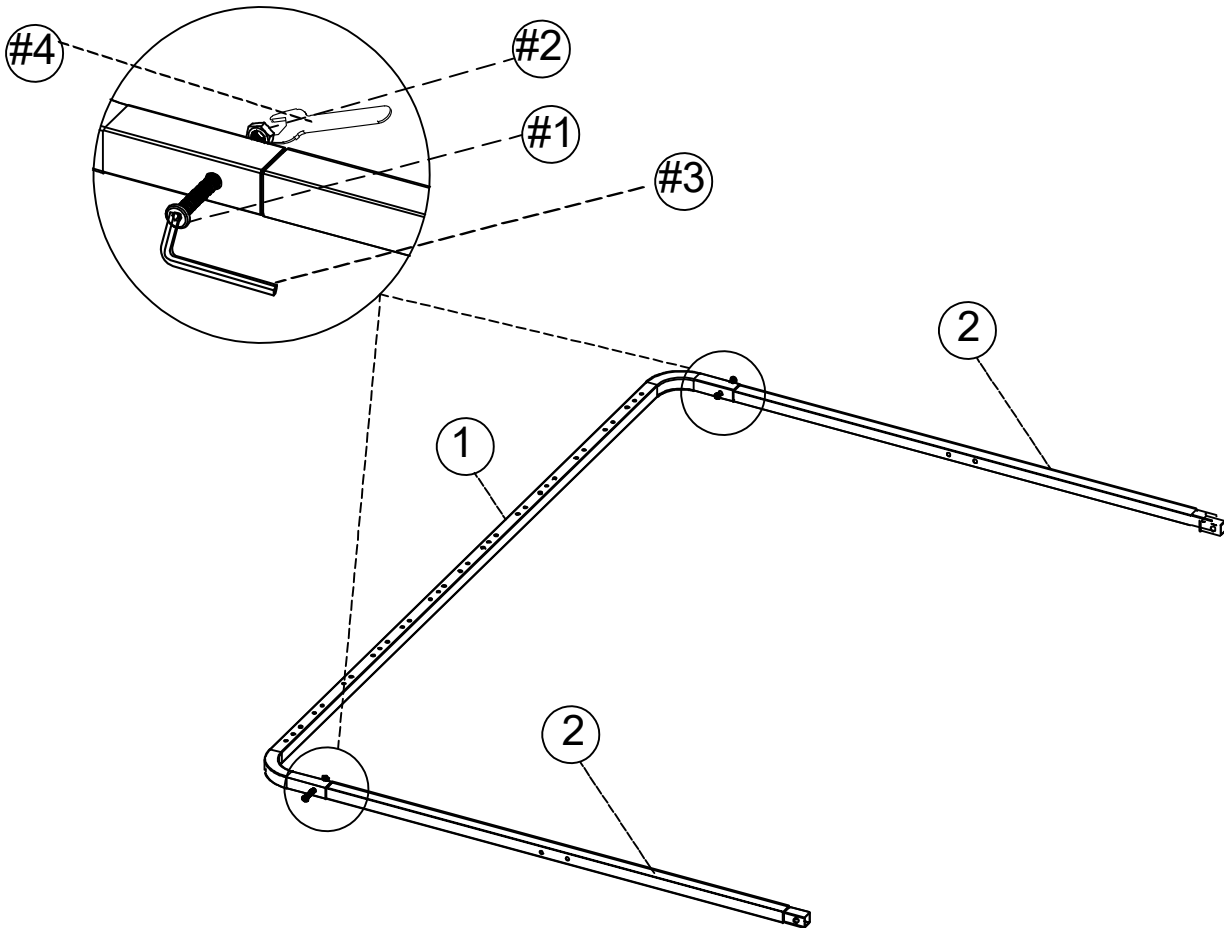

**You will need:**

#1 X4




M8\*45mm

#2 X4




M8

#3 X1



5mm


#4 X1



13mm

# 2.

Follow step 1 to complete another Siderail(1).

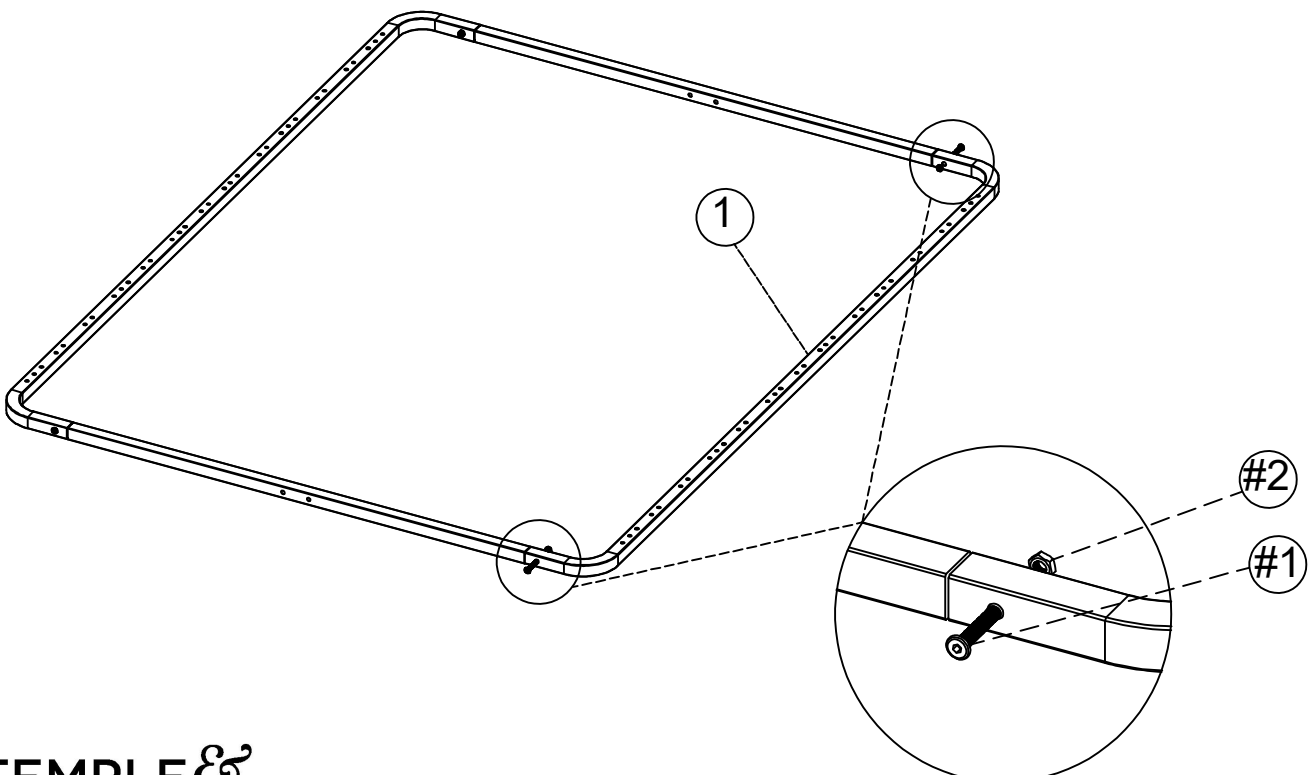


**TEMPLE &  
WEBSTER**

Damaged or missing parts? Or just need help?  
Contact us on [service@templeandwebster.com.au](mailto:service@templeandwebster.com.au)

# 3.

Attach the Center Rail(3) into the Traverse Beds(2) with 4xBolts(#1) and 4xNuts(#2).

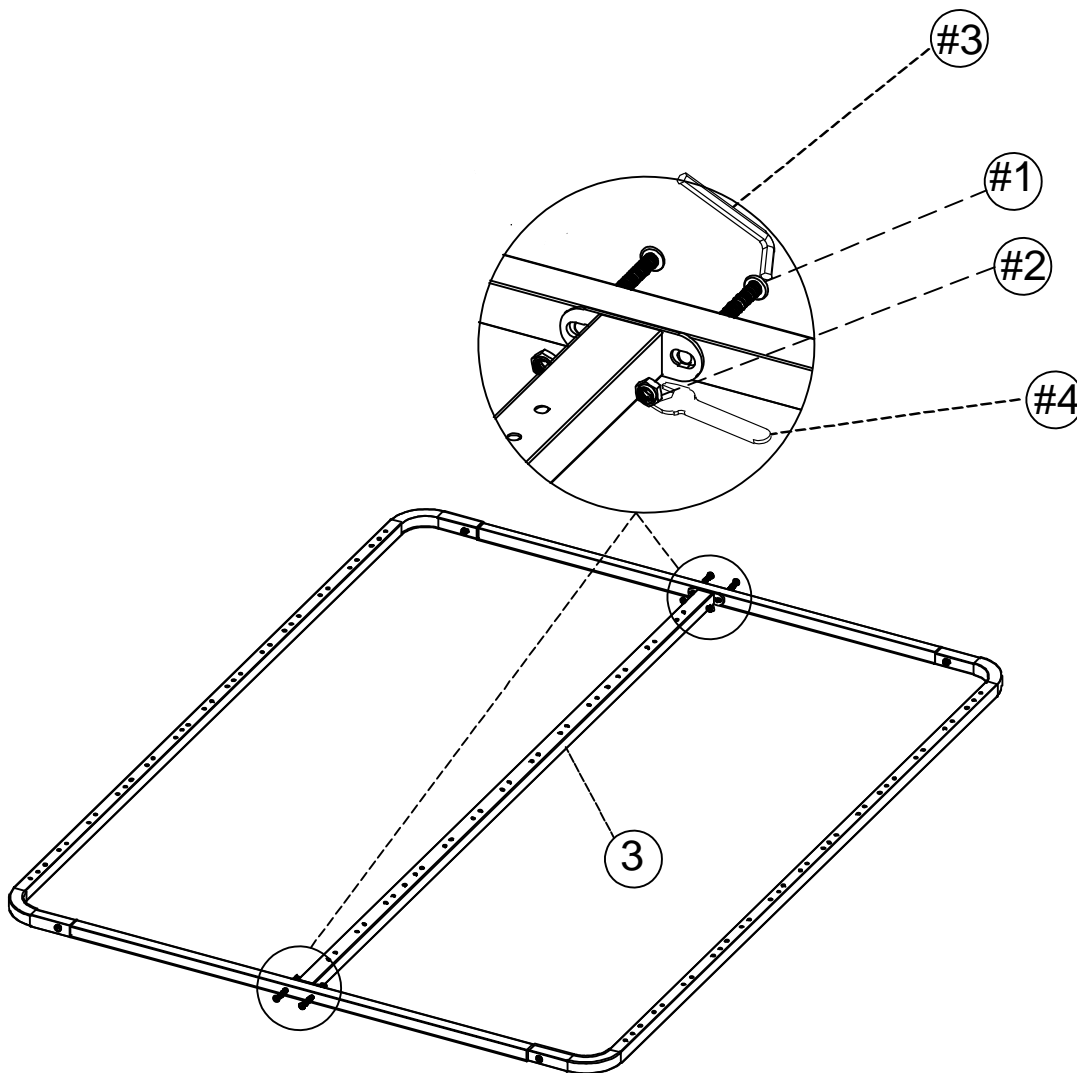

## You will need:

#1 X4




M8\*45mm

#2 X4



M8

#3 X1



5mm


#4 X1



13mm

# 4.

- 1) Attach 2x Slats(6) with 1x Plastic Double Buckle(5).
- 2) Follow steps 1 to complete another 28x Slats(6).
- 3) Attach 30x Plastic Single Buckles(4) into outside of 30x Slats(6).

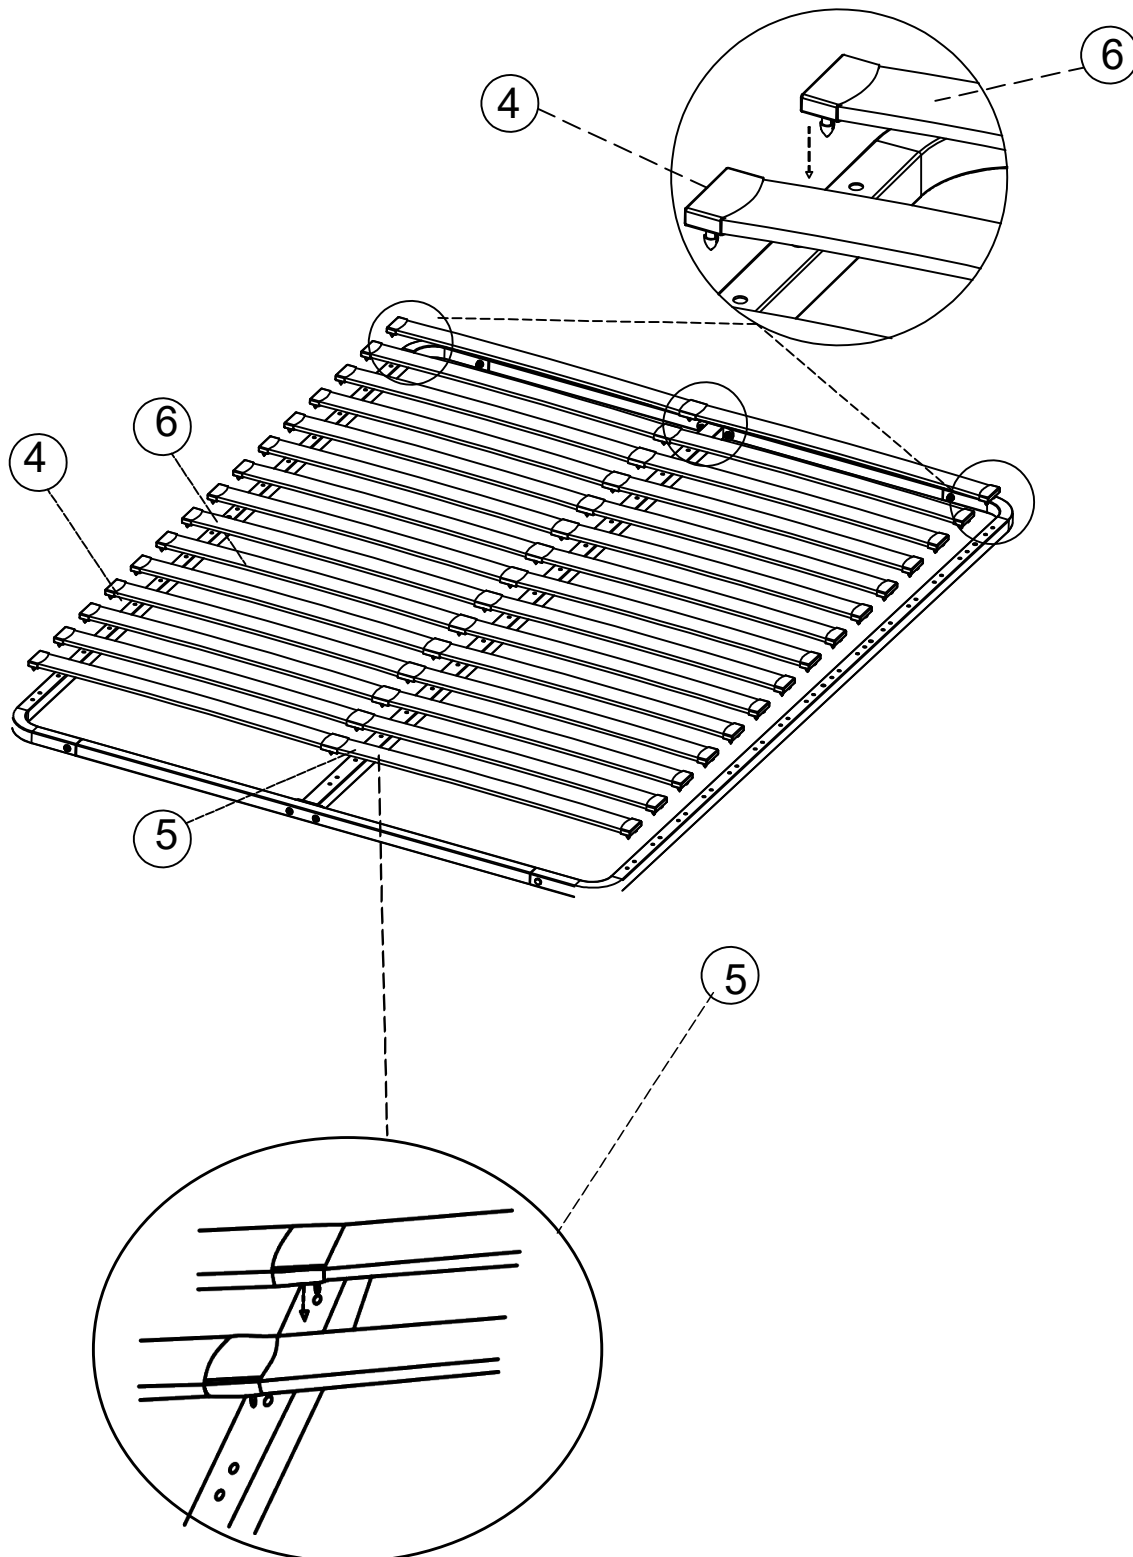


**TEMPLE &  
WEBSTER**

Damaged or missing parts? Or just need help?  
Contact us on [service@templeandwebster.com.au](mailto:service@templeandwebster.com.au)

# 5.

- 1) Attach 4x Bolts (A) into Headboard (1).
- 2) Attach 4x Bolts (A) into Footboard(3).

Be careful not to tighten the Bolts, just to 70%.

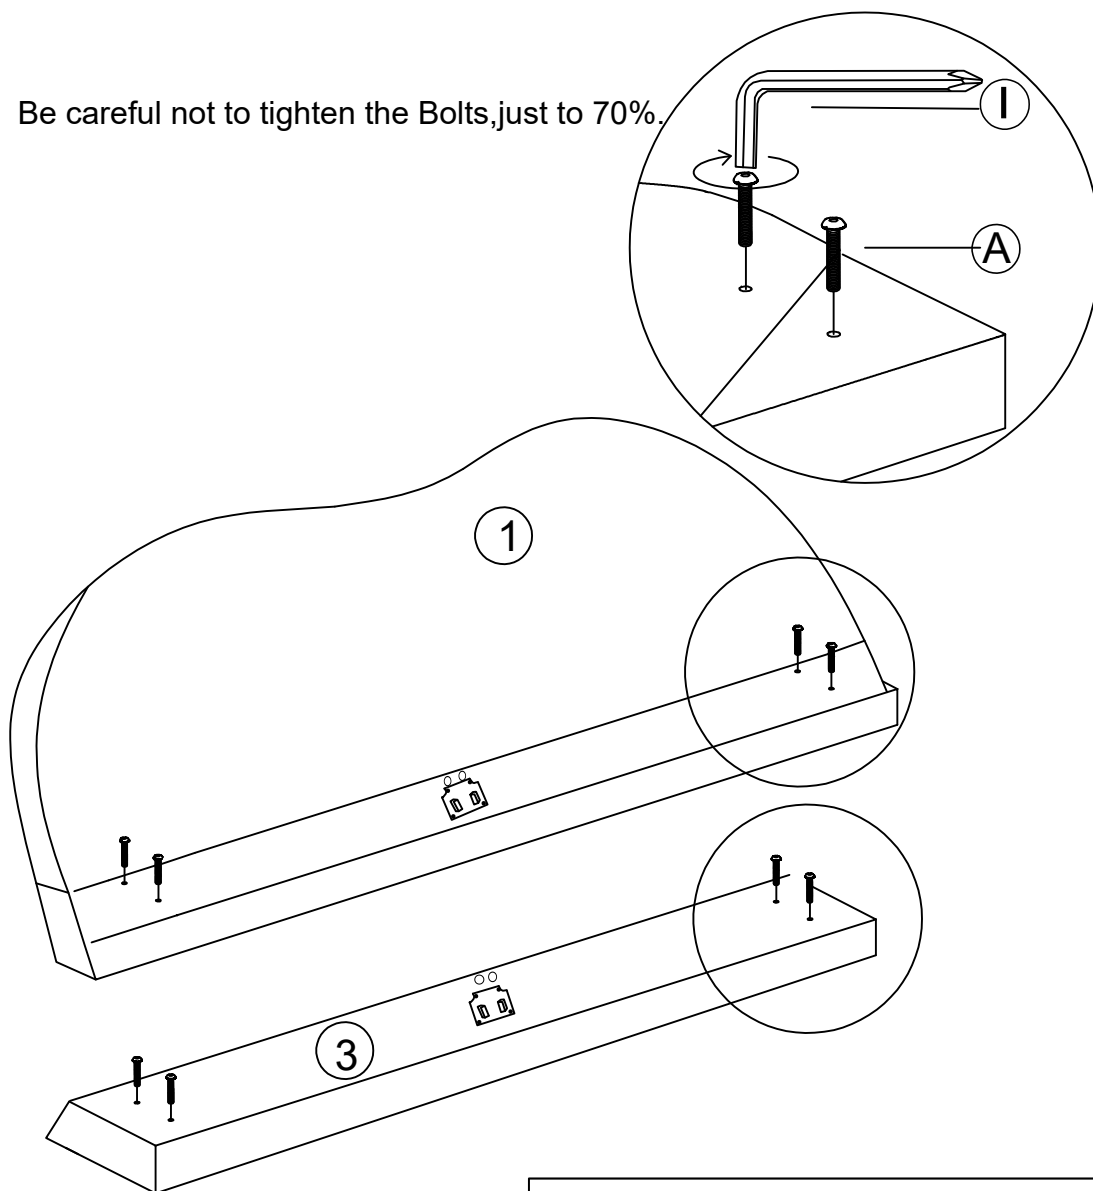

**You will need:**

**IX1**




5mm

**AX8**



M8X30mm

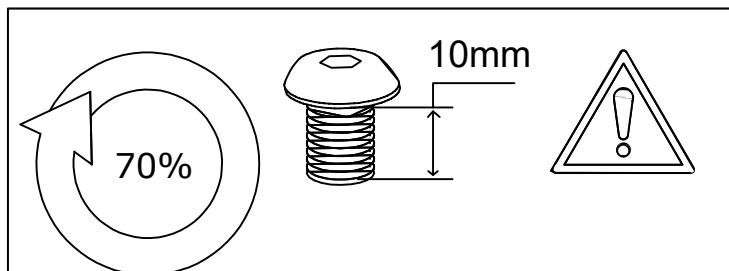


**TEMPLE &  
WEBSTER**

Damaged or missing parts? Or just need help?  
Contact us on [service@templeandwebster.com.au](mailto:service@templeandwebster.com.au)


# 6.

- 1) Attach 2x Brackets(D) into 1x Sideboard (2) with 8x Bolts(A).
- 2) Follow steps 1 to complete another Sideboard (2).

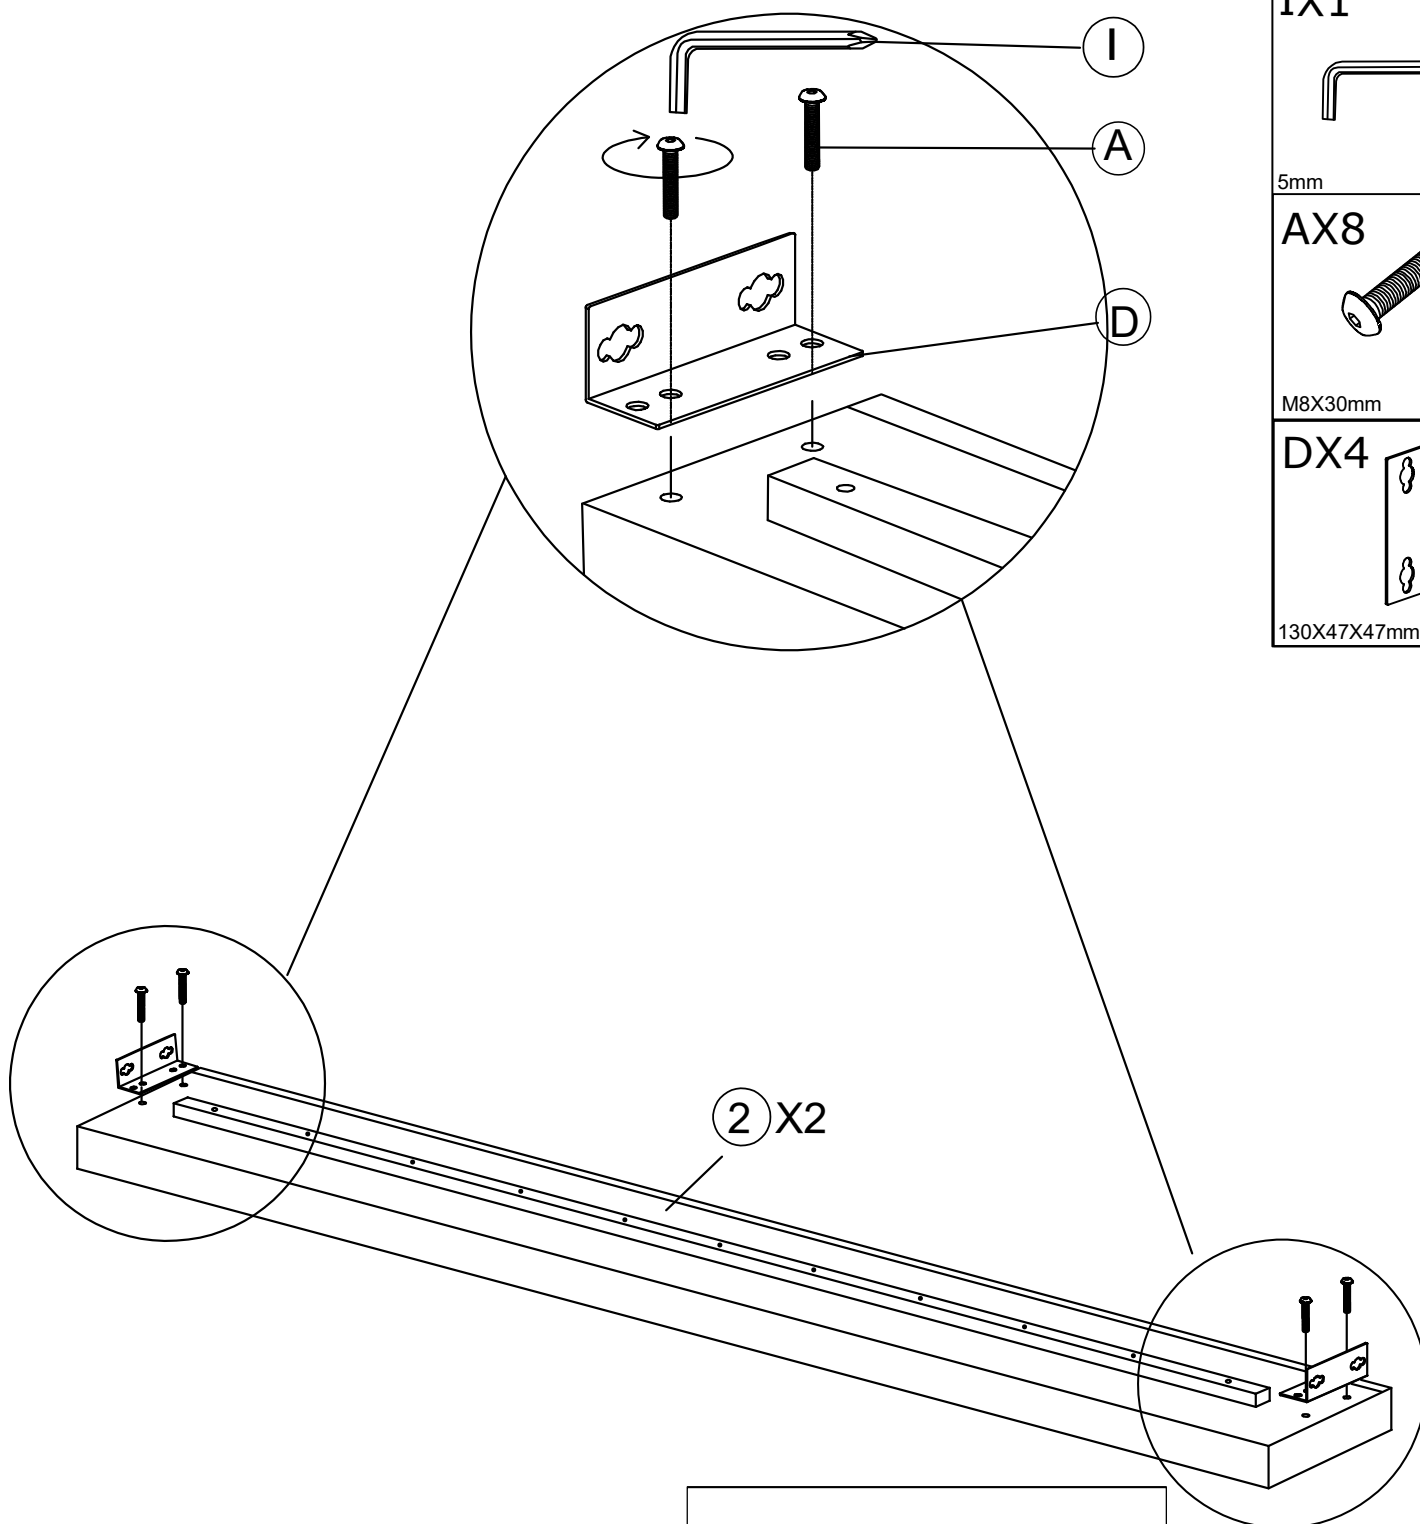


**You will need:**

**IX1**




5mm

**AX8**




M8X30mm

**DX4**



130X47X47mm

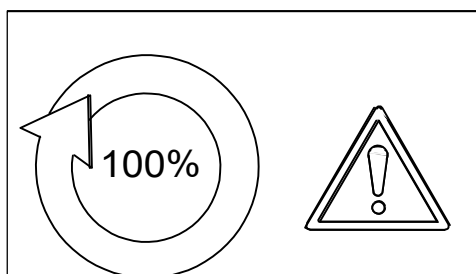

**TEMPLE &  
WEBSTER**


Damaged or missing parts? Or just need help?  
Contact us on [service@templeandwebster.com.au](mailto:service@templeandwebster.com.au)

# 7.

Attach 2x Sideboard(2) to Headboard(1) and Footboard (3) with Bolts have been installed.



**You will need:**

**1X1**



5mm

Noted:After hanging, press down sideboards, the bolts reach the top, and then tightened.

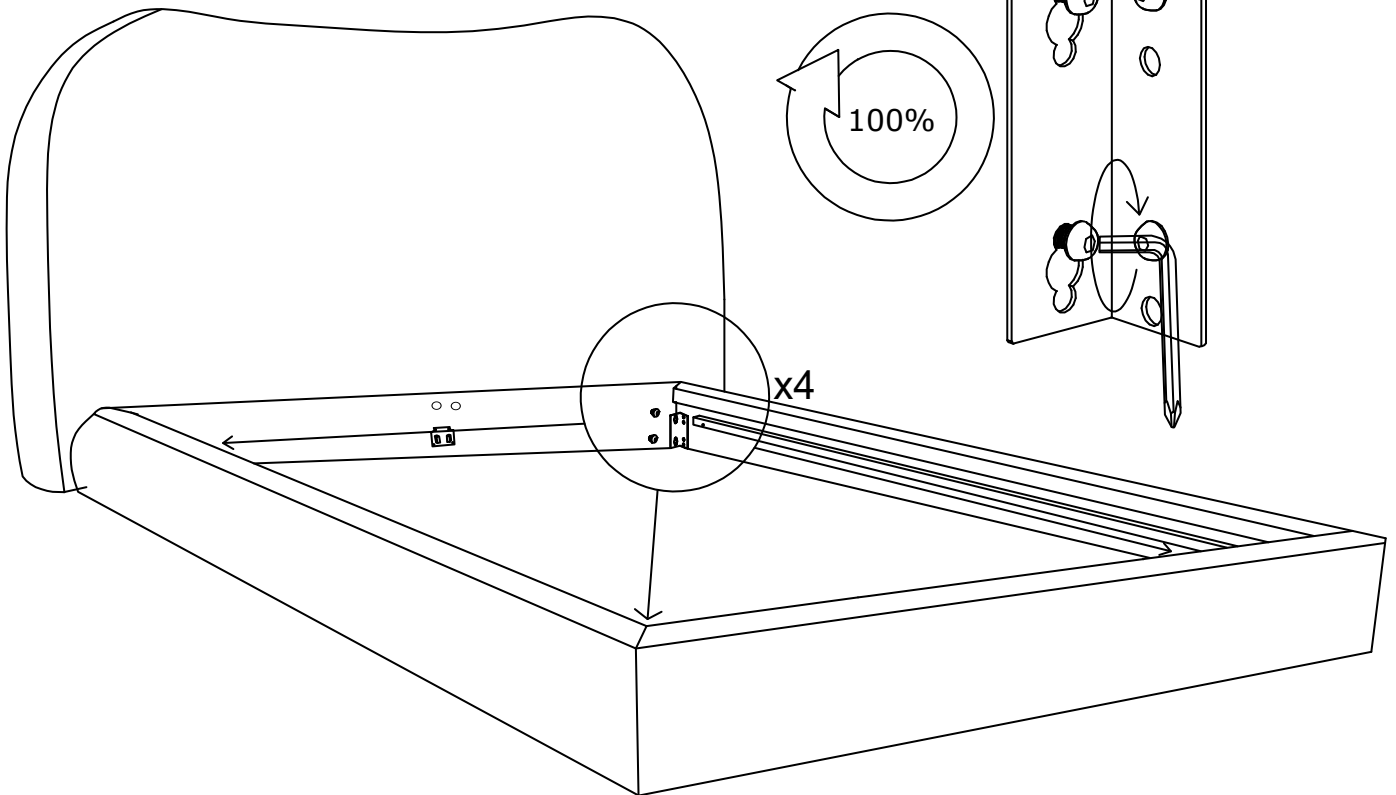
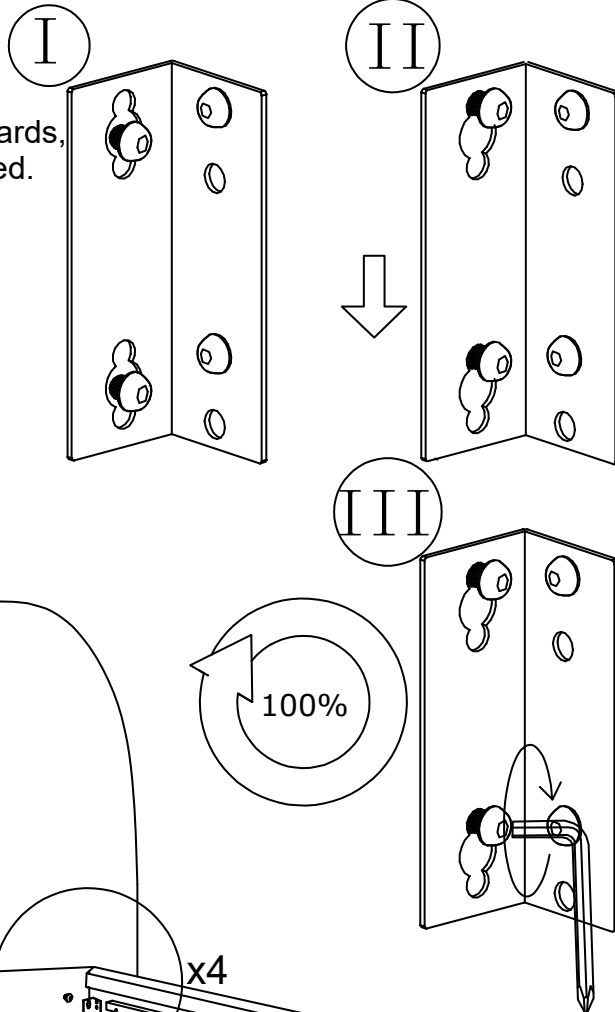


**TEMPLE &  
WEBSTER**

Damaged or missing parts? Or just need help?  
Contact us on [service@templeandwebster.com.au](mailto:service@templeandwebster.com.au)

# 8.

- 1) Attach 4x Legs(5) to Bed with 8x Bolts (K) and 8x Shims(L) .
- 2) Attach 4xFelts(B) into the bottom of the Legs.

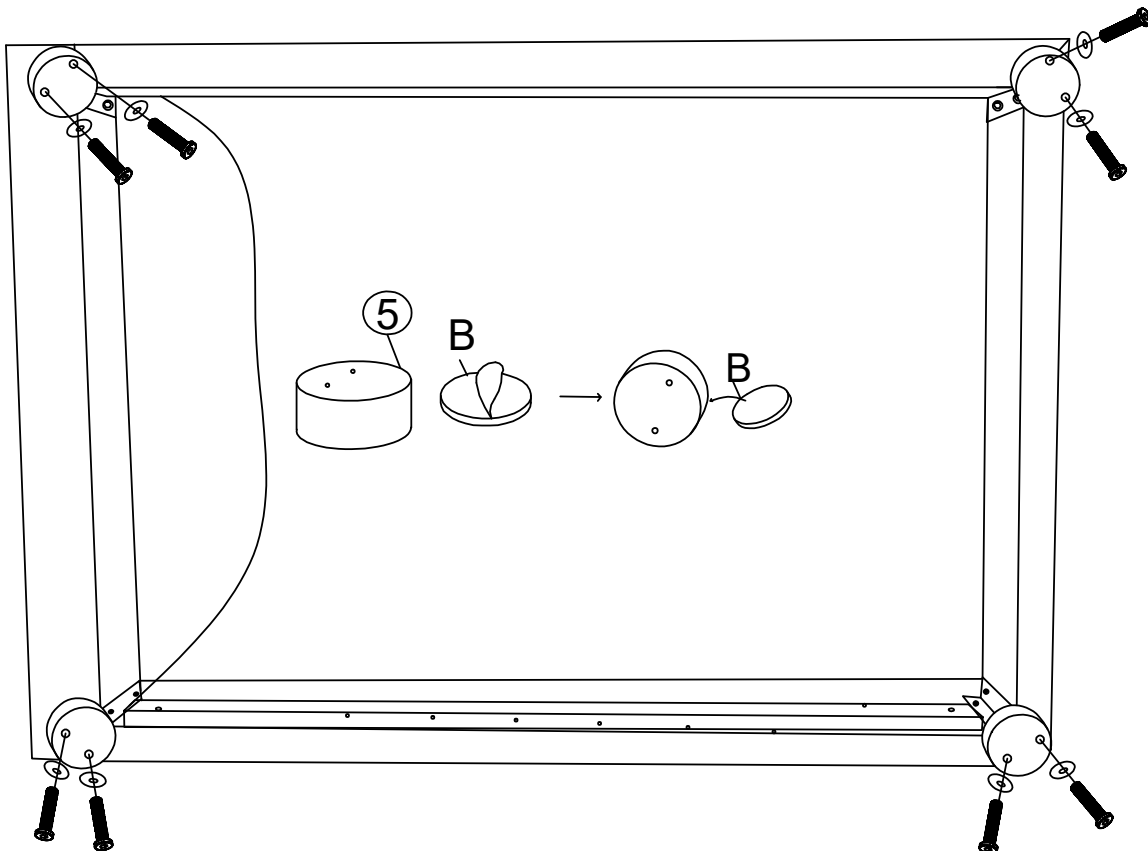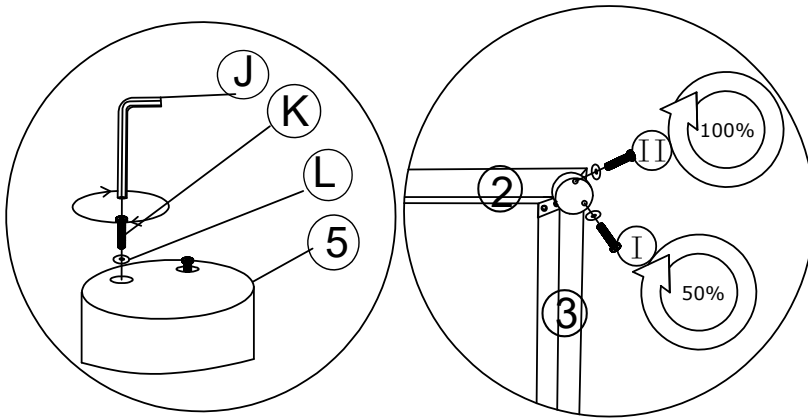

**You will need:**

**BX4**




ø120mm

**JX1**



5mm

**KX8**



M8\*45mm


**LX8**



M8\*20mm

# 9.

- 1) Attach 1x Support Leg(6) to Middle Support(4) with 2x Bolts (C).
- 2) Attach 2x L Plats(G) to Middle Support(4) with 2x Bolts (H) and 4x Screws(E).

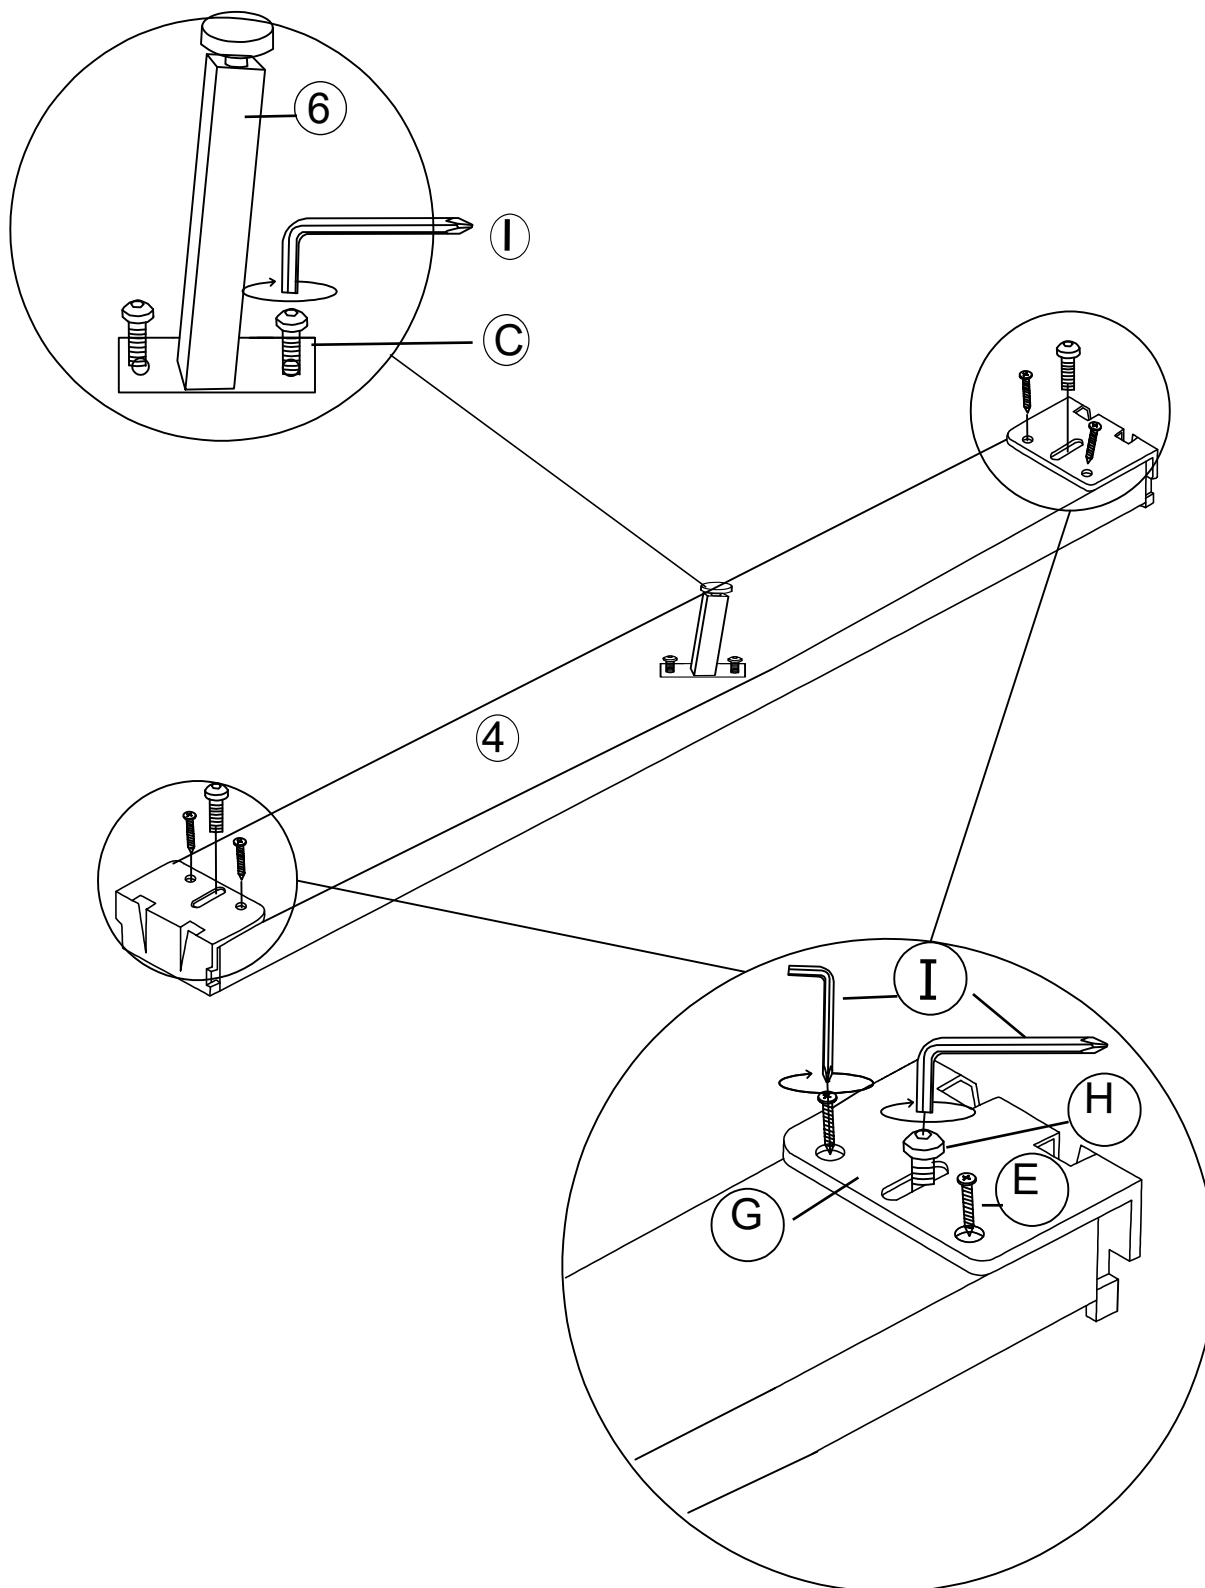

## You will need:

Gx2




68X33X30mm

Hx2



M6x16mm

Cx2



M6x20mm

Ix1



5mm


Ex4



ØM4x16mm


# 10.

Attach 1x Middle Support (4) to Bed with 2x Plats have been installed on it.

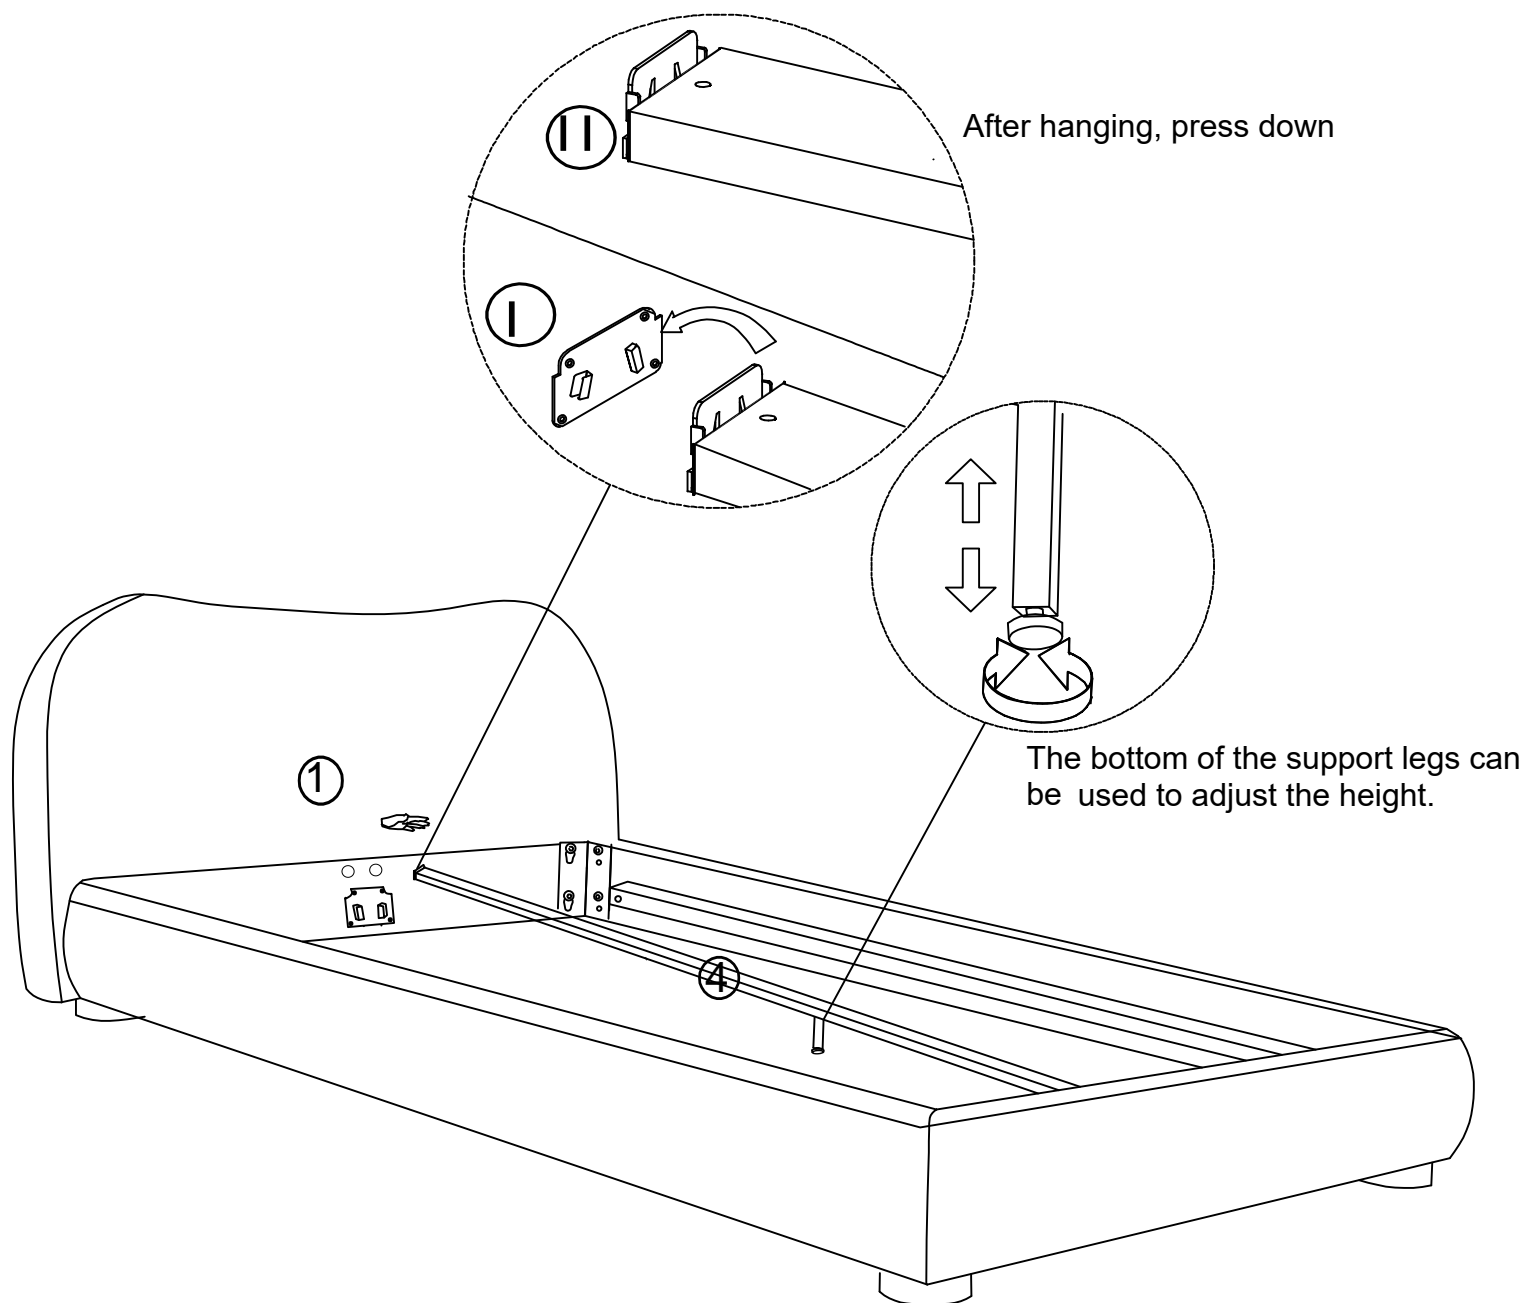

# 11.

Attach the Bed Base Plat(7) into the Bed.

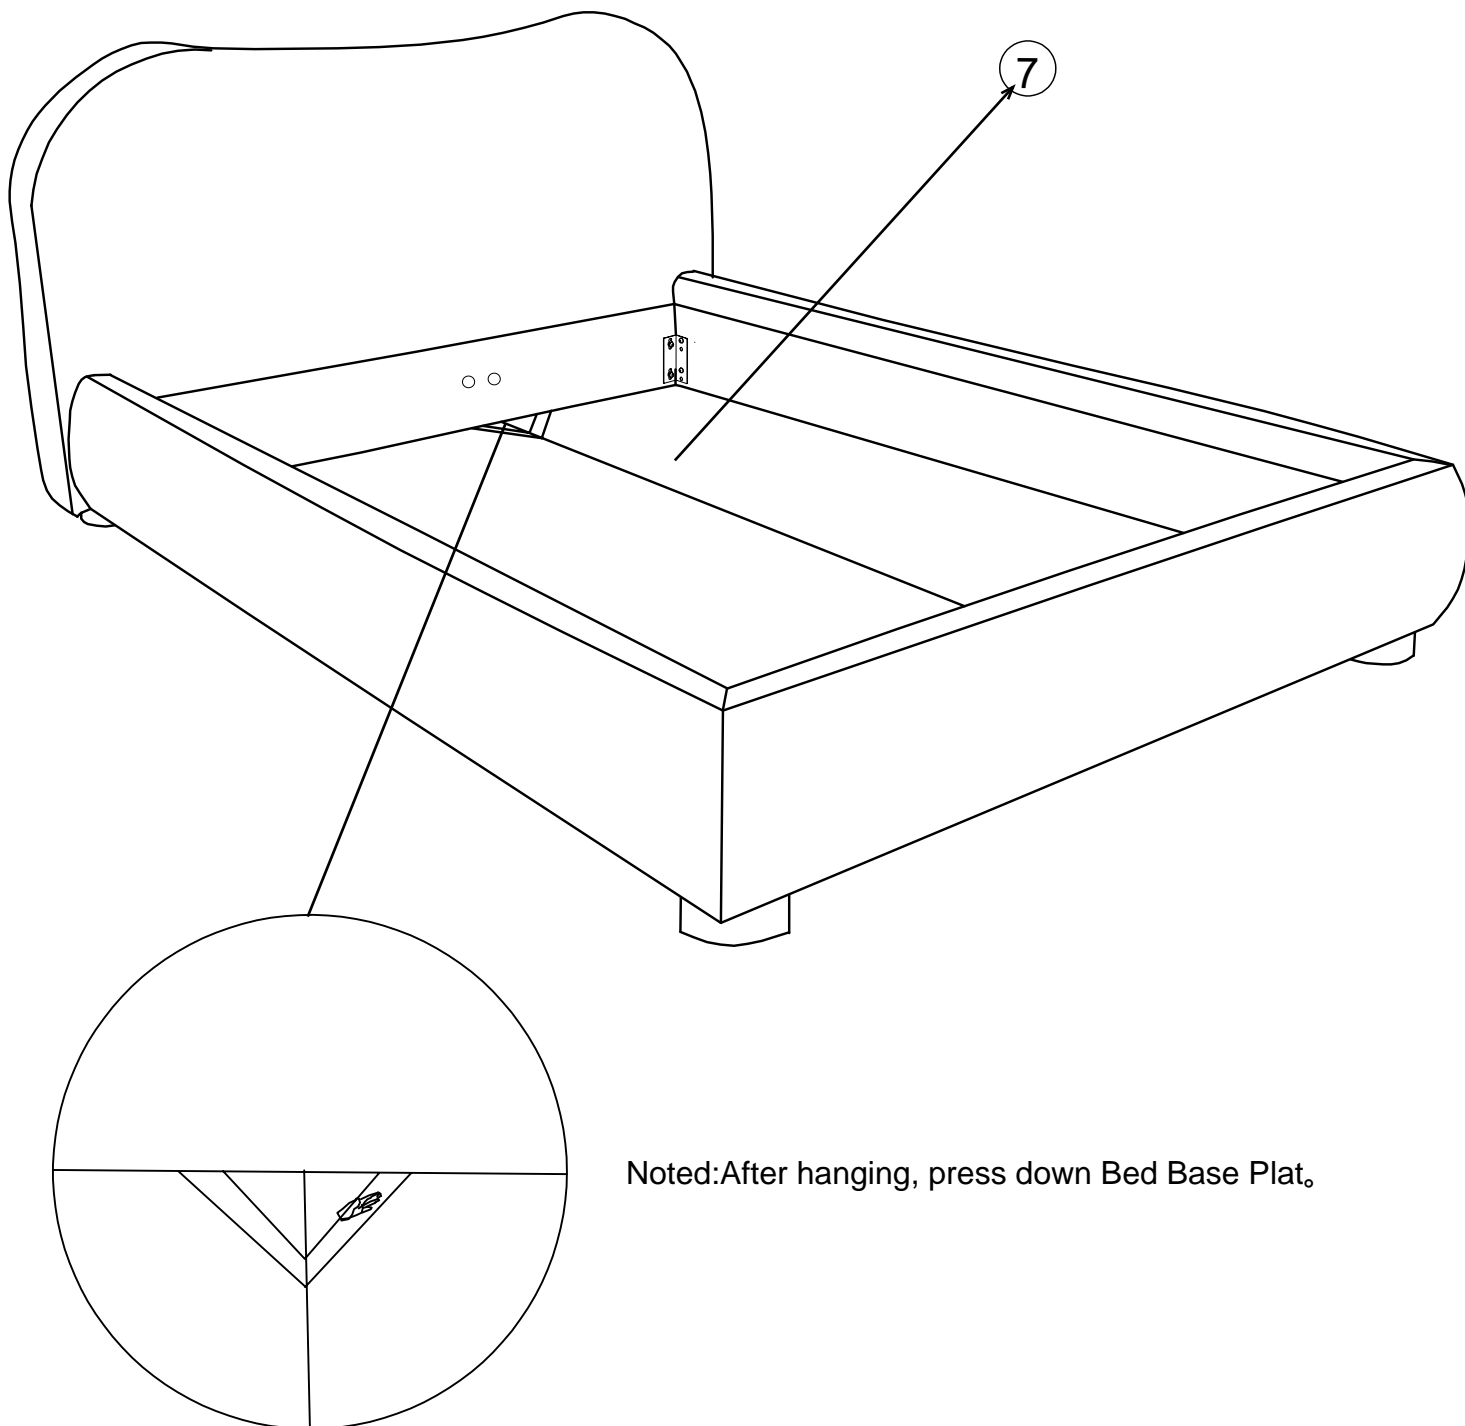


Noted:After hanging, press down Bed Base Plat.

# 12.

- 1) Attach the Wooden block(9) into the Headboard(1) with 2x Shims(L) and 2x Bolts(K).
- 2) Attach 2x Gas Lifts(10) into the Sideboard(2) with 8x Bolts(K).


## You will need:

JX1



5mm

KX10




M8X45mm

LX2




M8X20mm

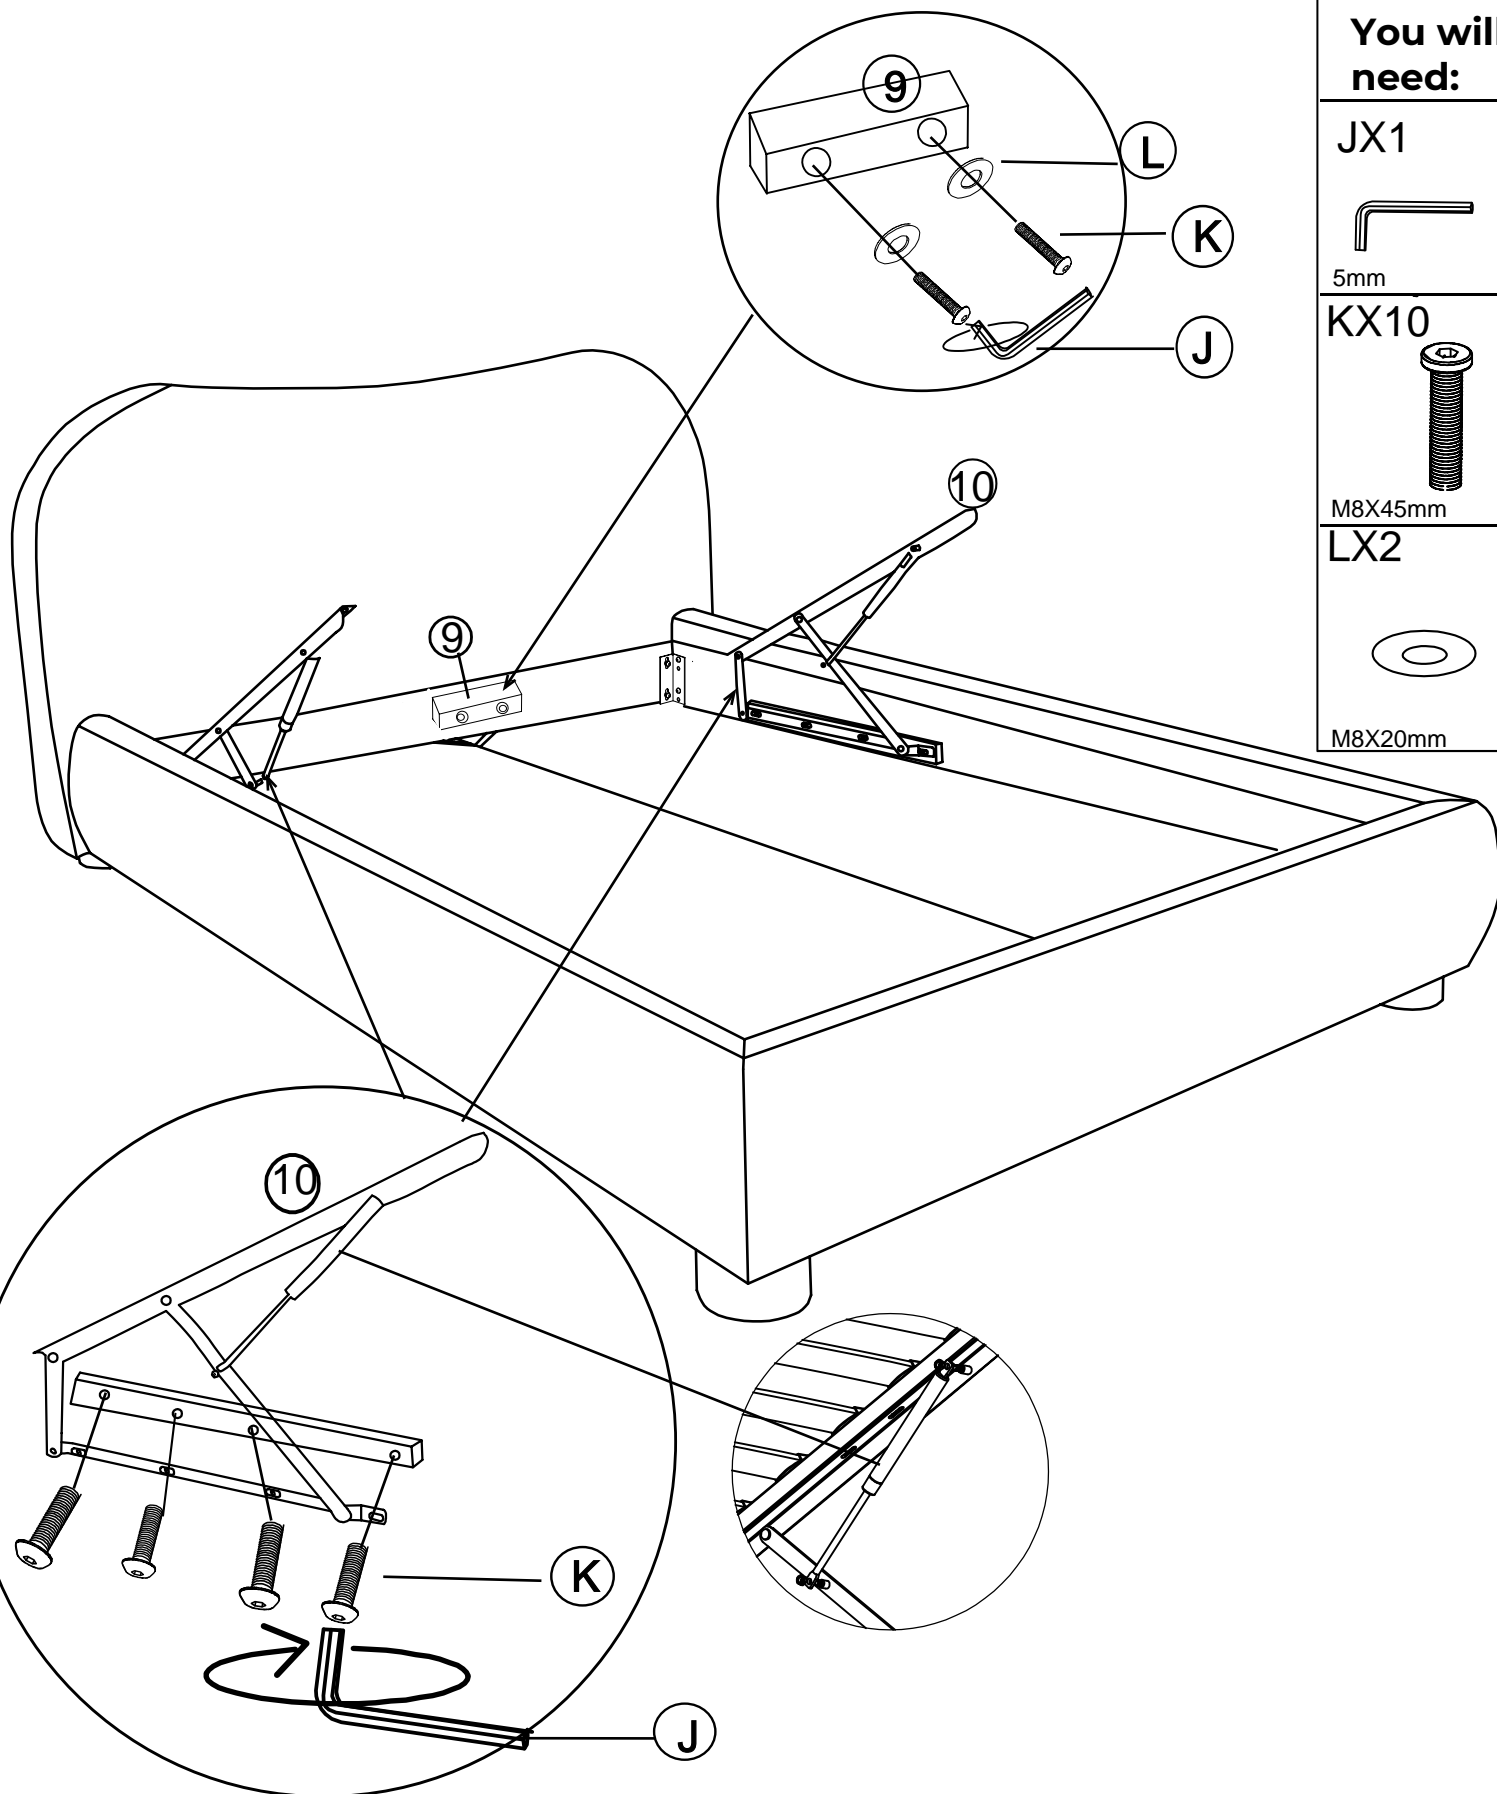

# 13.

- 1) Attach 1x L Plat(M) into the Footboard(3) with 2x Bolts(A).
- 2) Attach 2x Flat Brackets(F) into the Footboard(3) with 8x Bolts(A).

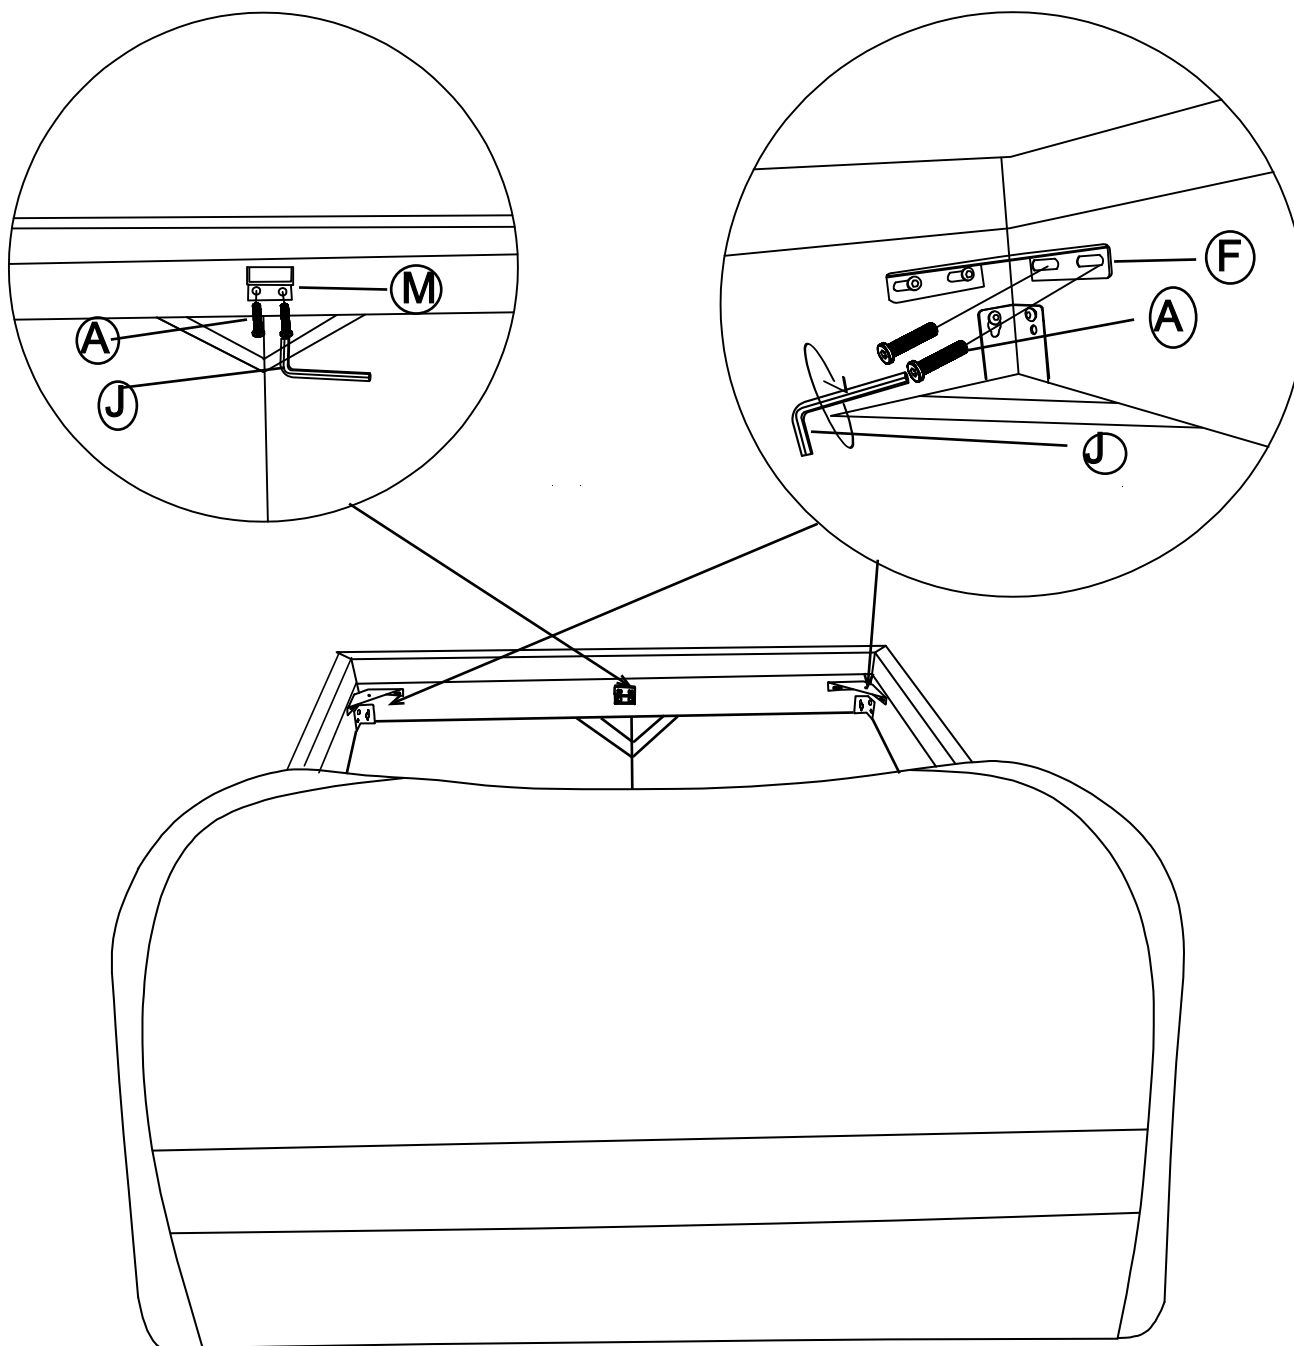

**You will need:**

**JX1**



5mm

**AX10**




M8X30mm

**MX1**



60X40X40mm


**FX2**



193\*102\*27\*2.5mm

# 14.

- 1) Attach the Support Rod into the Sideboard(3) with 4xBolts(A).
- 2) Attach the installed Slat(8) into the Bed with 6x Bolts(#1) and 6x Nuts(#2).

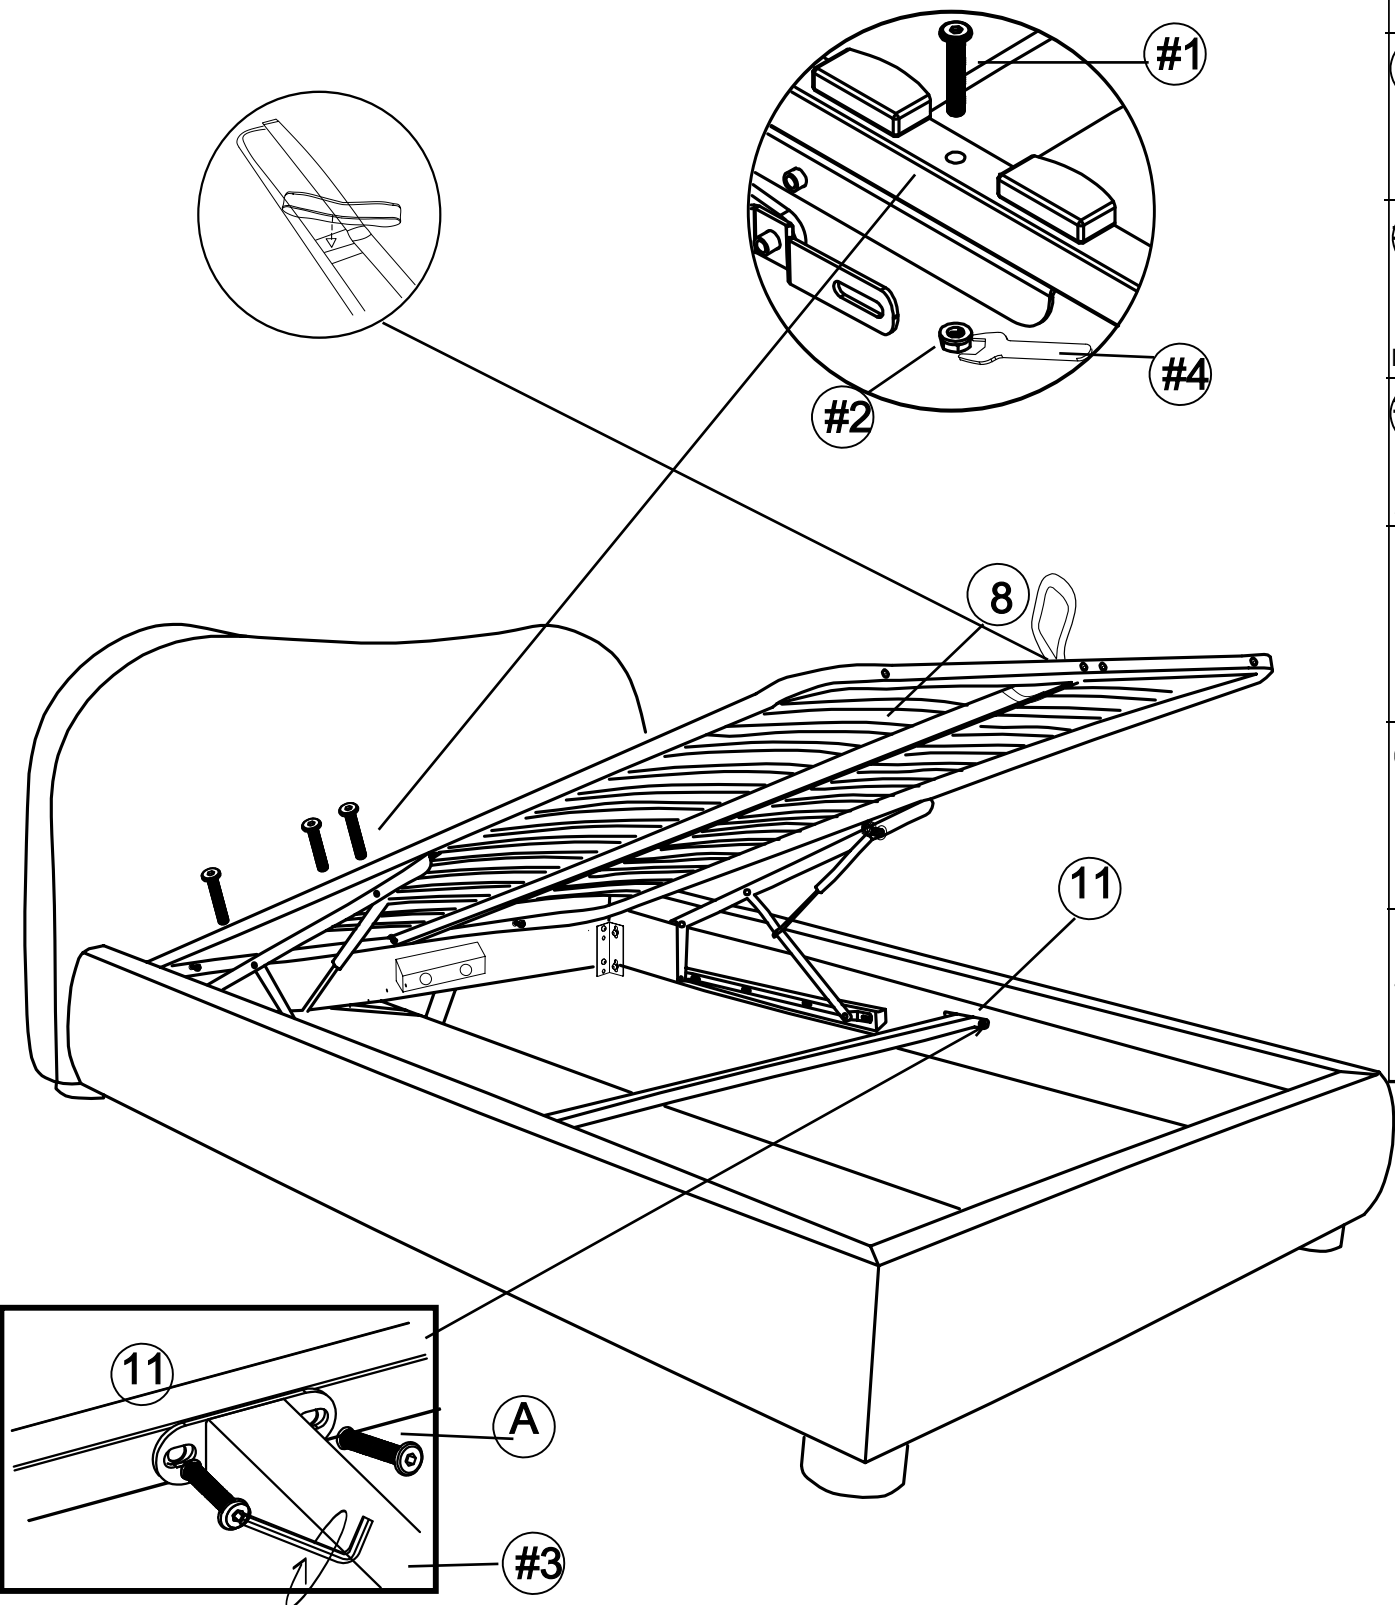

## You will need:


#1 X6




#2 X6



#3 X1



#4 X1

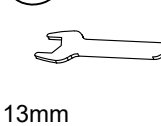

A X4

