
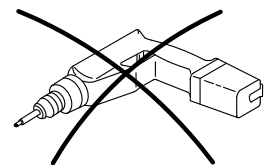
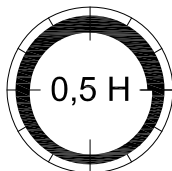



TEMPLE &
WEBSTER

ATLDCTBK
ATLDCTOK

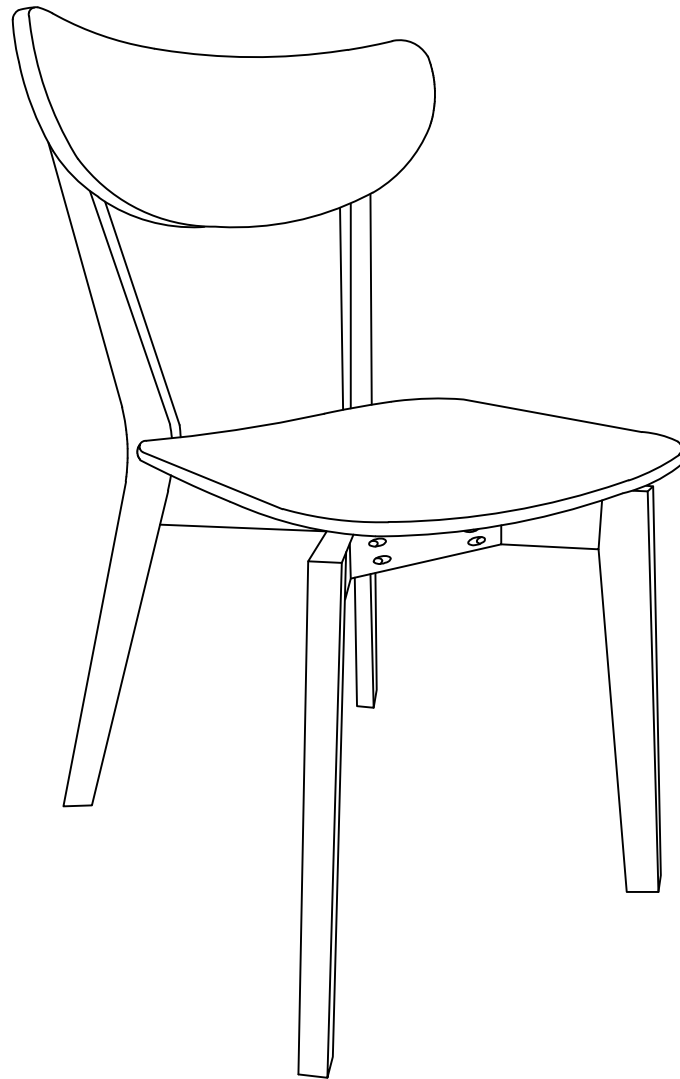

ASSEMBLY INSTRUCTIONS:

Read these instructions and follow the steps carefully to ensure you assemble the product correctly and avoid damage

Check that all parts and hardware have been provided before assembling the product

Place the product on a clean, soft, flat surface to avoid scratching the product









Caution:


Only tighten bolts to 80% at first unless otherwise specified in the instructions. Once all parts have been assembled, you may fully tighten all hardware

To prevent damage to threads, DO NOT use a power tool and do not over tighten bolts



Use two people to lift and turn the product when assembling and do not roll the product onto the legs

Keep all hardware, small parts and packaging away from children
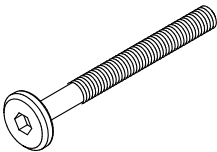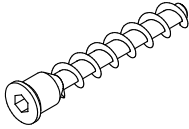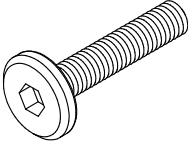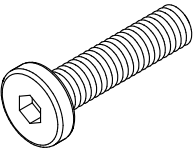
<div>A x 4</div> <div></div> <div>M6x60 mm</div>	<div>B x 1</div> <div></div> <div>Ø7/50 mm</div>	<div>C x 8</div> <div></div> <div>Ø6 mm</div>	<div>D x 1</div> <div></div> <div>4 mm</div>	<div>E x 4</div> <div></div> <div>M6x30 mm</div>
<div>F x 4</div> <div></div> <div>M6x25 mm</div>	<div>G x 4</div> <div></div> <div>Ø6/Ø13 mm</div>	<div>H x 4</div> <div></div> <div>Ø22x3 mm</div>		



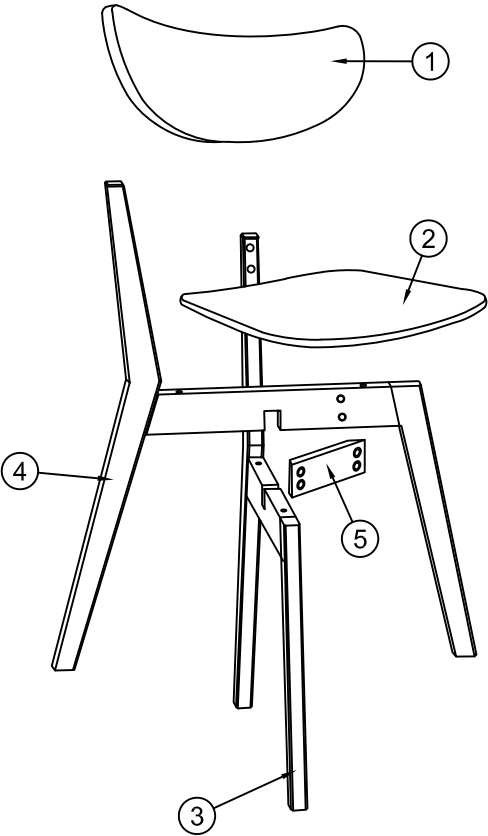


Step 1

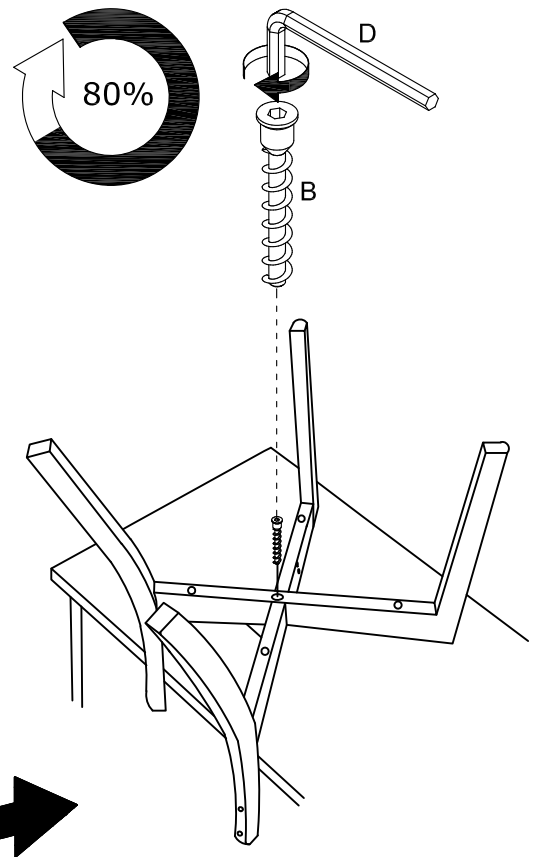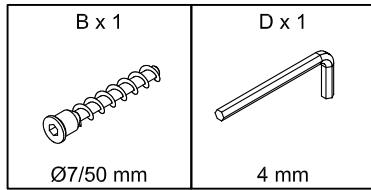



Screw the Bolt only 80% of the way and do not over tighten

Step 2

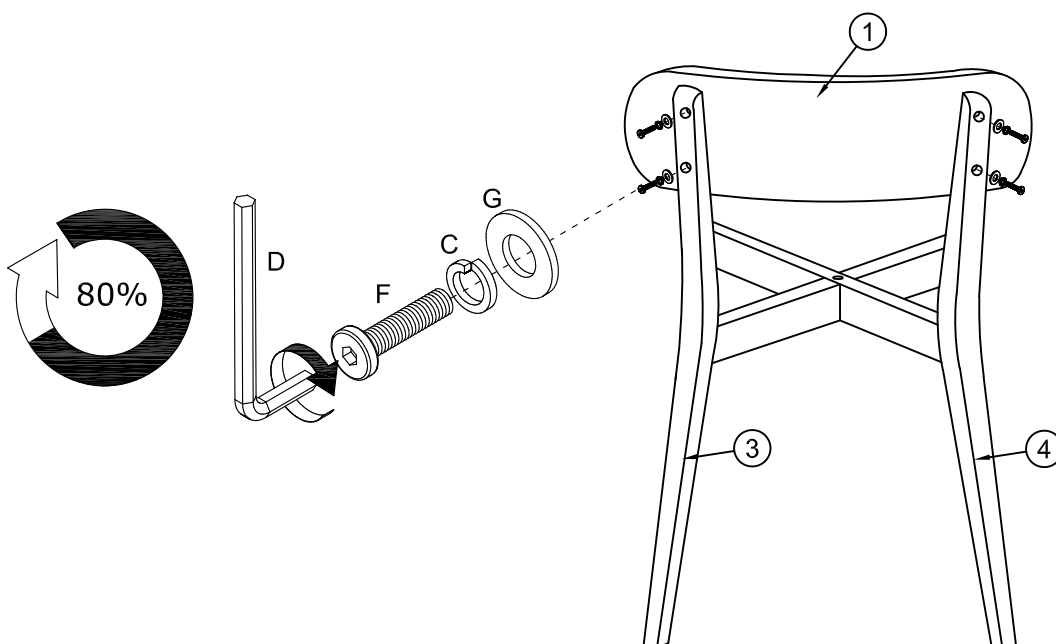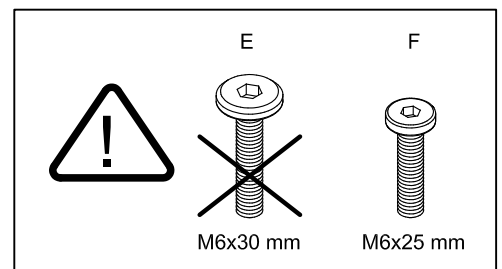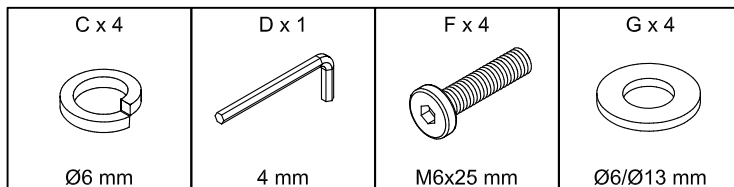





Screw the Bolts only 80% of the way and do not over tighten

Step 3

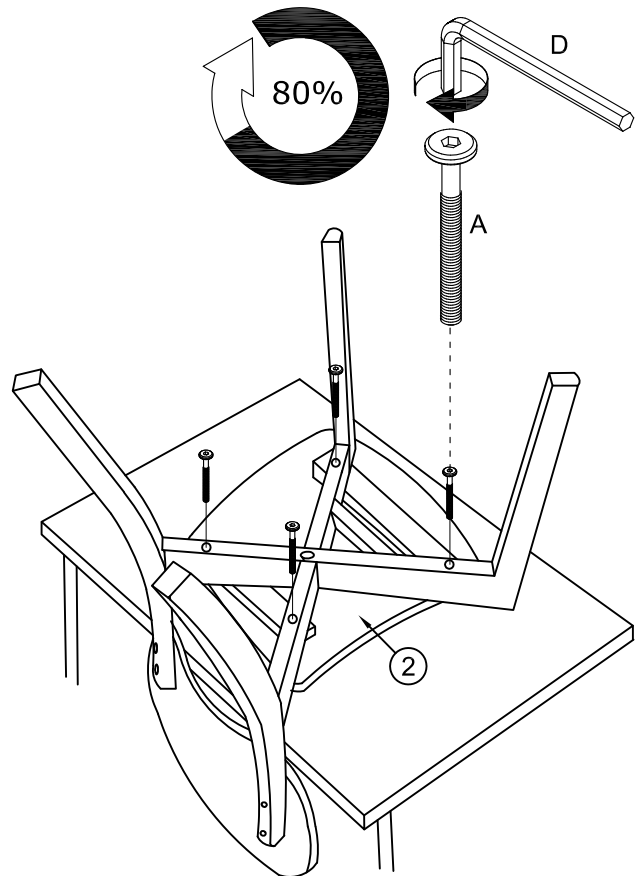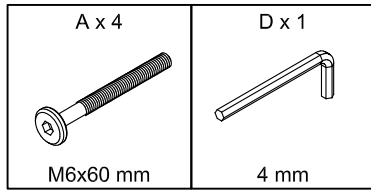





Screw the Bolts only 80% of the way and do not over tighten

Step 4

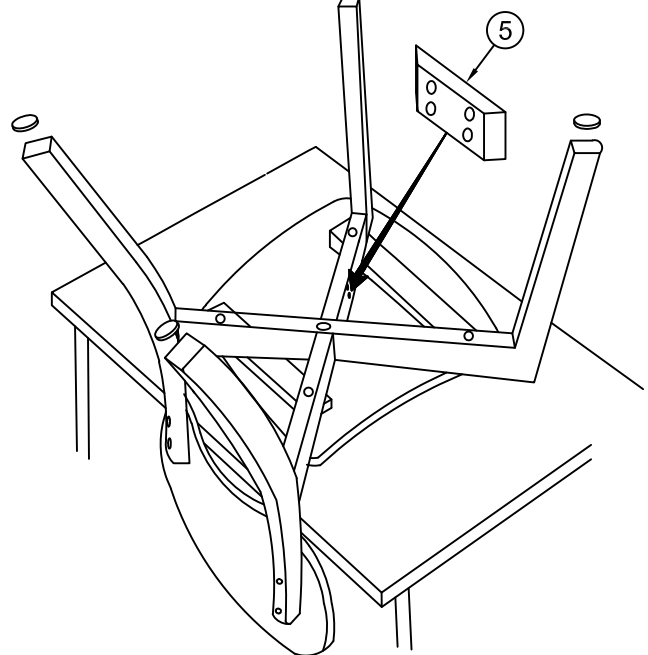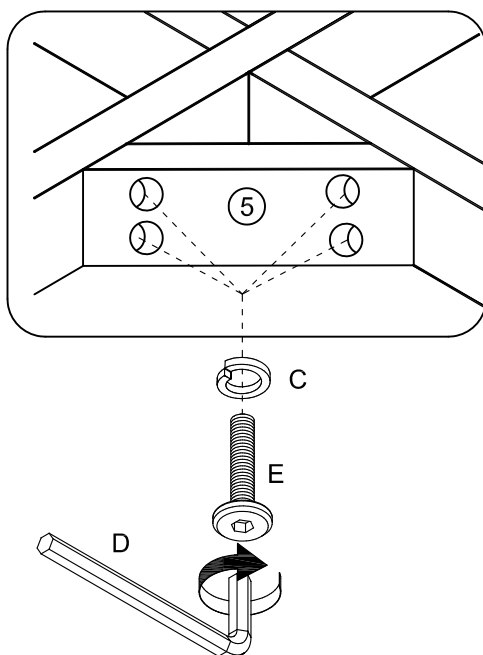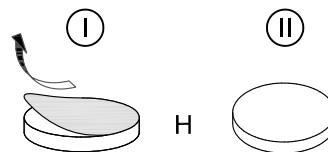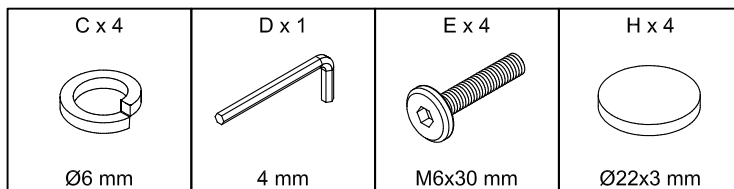






Tighten all Bolts 100% but do not over tighten
Attach the Felt Pads to the Legs

Step 5

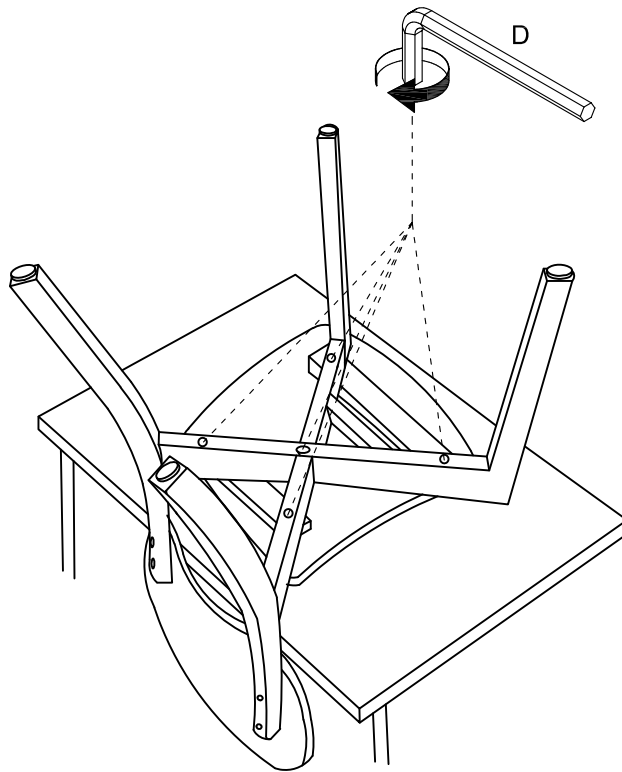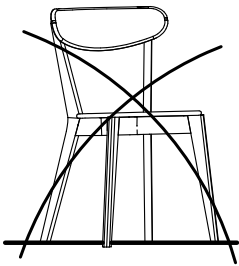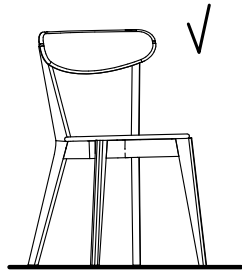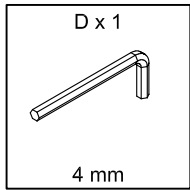

Tighten all Bolts 100% but do not over tighten

Step 6

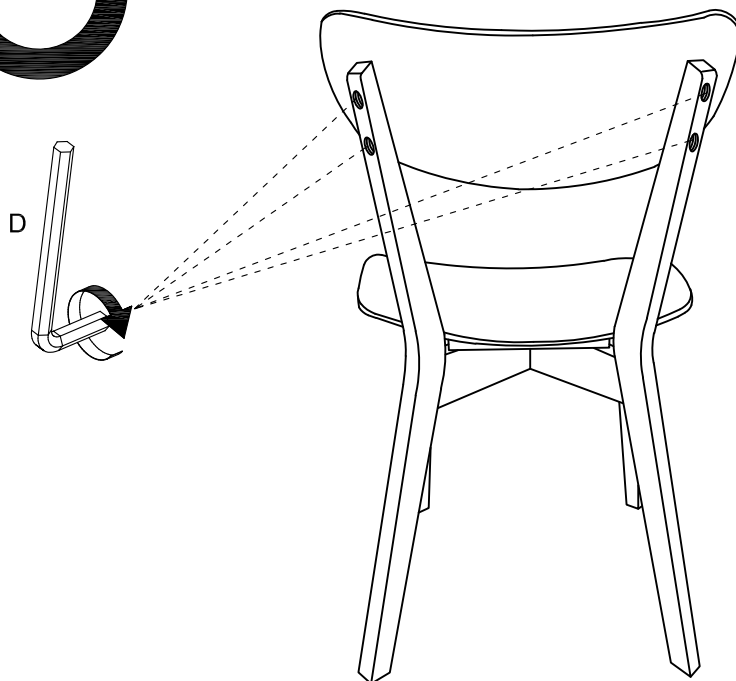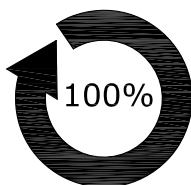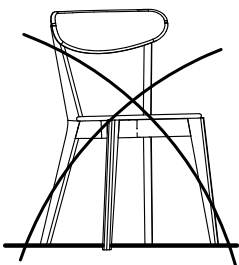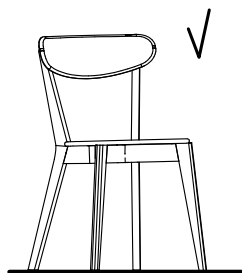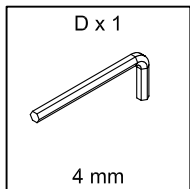

Tighten all Bolts 100% but do not over tighten