

Raphael Oak Buffet Sideboard

Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don't over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- ALWAYS secure it with an anchor device
- Never let children climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local specialized dealer.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it's still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.



Important safety instructions

DANGER!

Children have died from furniture tip over.

Toppling Hazard Warning

- ALWAYS secure items with an anchor device
- For safety reasons, we recommend you follow the provided instructions
- When installed properly, the provided hardware may prevent the unit from tipping over unexpectedly.
- Never let children climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- Place heavy items down low
- For advice on suitable fastening devices, contact your local specialized dealer




Parts list

ASSEMBLY INSTRUCTIONS

Raphael Oak Buffet Sideboard



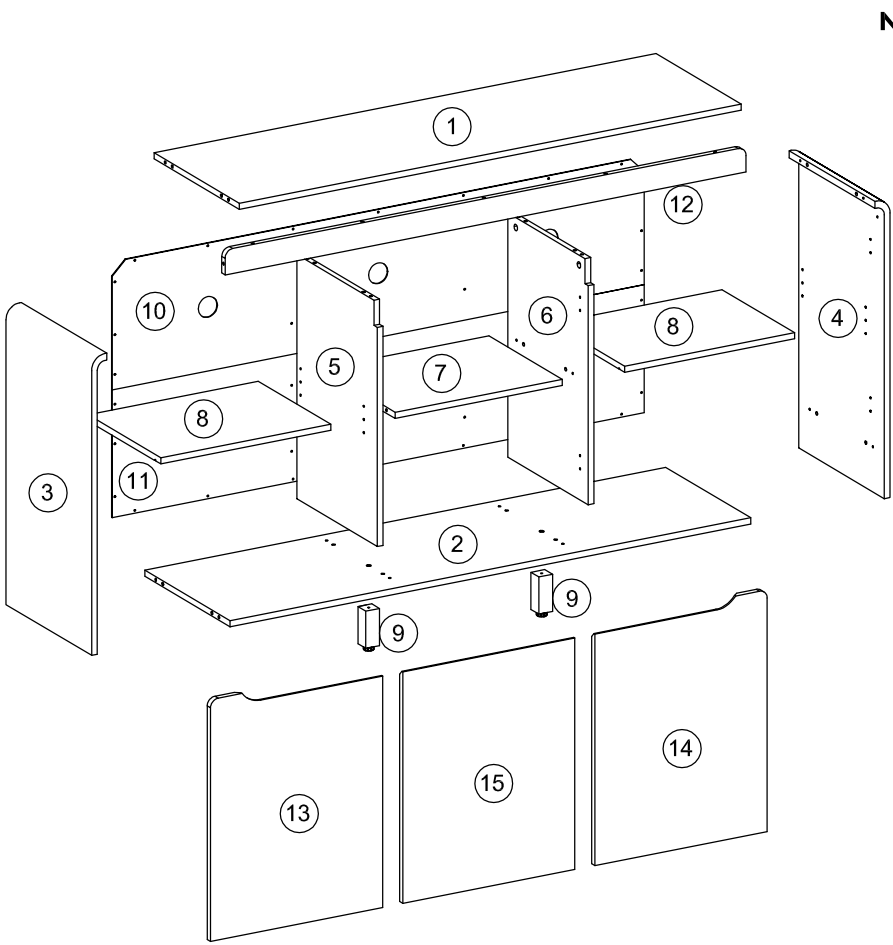








SBRABTOA



NUMBER OF PEOPLE REQUIRED
FOR ASSEMBLY:
2


TOOLS REQUIRED FOR
ASSEMBLY




| | | | | | | | |
|---|---|---|---|---|--|--|--|
| A  21 PCS | B  21 PCS | C  21 PCS | D  22 PCS | E  34 PCS | F  6 PCS | G  8 PCS | H  4 PCS |
| I  2 PCS | J  2 PCS | K  3 PCS | | | | | |

1.

Attach 7x Cam Bolts (B) into Top Panel (1).
Insert 4x Plastic Dowel (D) into Top Panel (1).

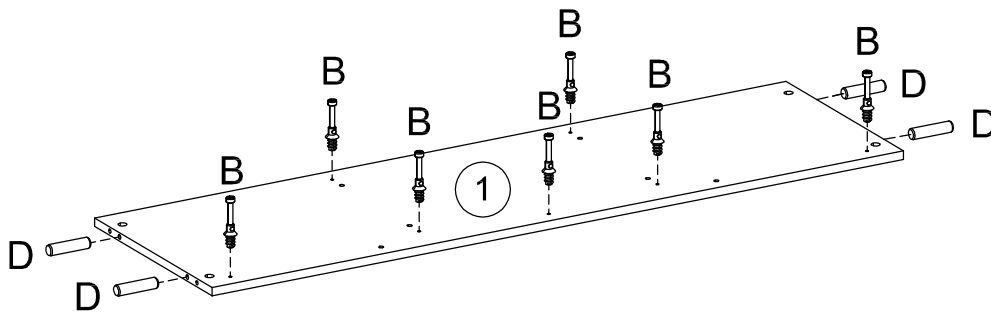

Insert 4x Plastic Dowel (D) into Bottom Panel (2).

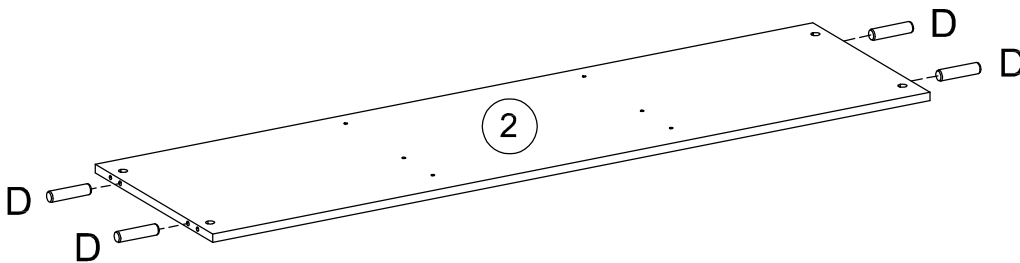

You will need:

B




7 Cam Bolts

D




8 Plastic Dowels




1 Phillips head screwdriver

2.

Attach 5x Cam Bolts (B) into Left Panel (3).

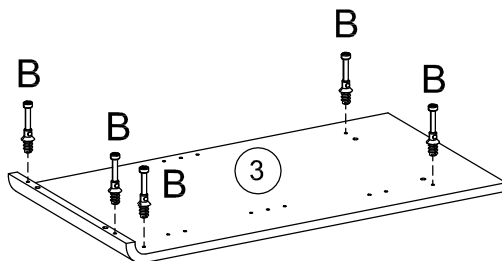

Attach 5x Cam Bolts (B) into Right Panel (4).

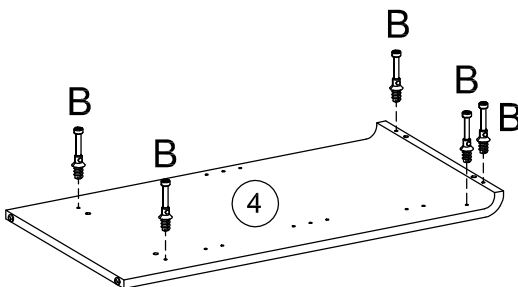


You will need:

B




10 Cam Bolts




1 Phillips head screwdriver

3.

Attach 2x Cam Bolts (B) into Divider Left Panel (5).
Insert 4x Plastic Dowel (D) into Divider Left Panel (5).

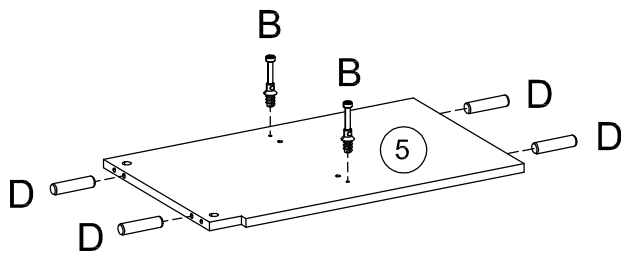

Attach 2x Cam Bolts (B) into Divider Right Panel (6).
Insert 4x Plastic Dowel (D) into Divider Right Panel (6).

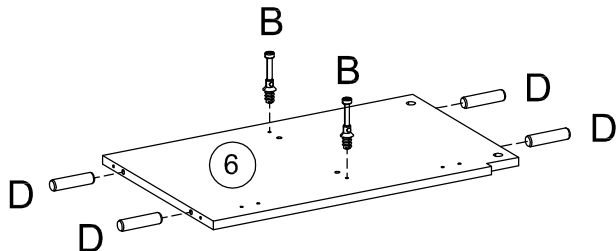

You will need:

B




4 Cam Bolts

D




8 Plastic Dowels



1 Phillips head
screwdriver

4.

Insert 4x Plastic Dowel (D) into Shelf Panel (7).

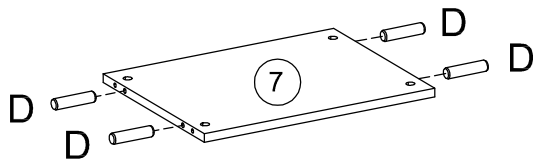


You will need:

D




6 Plastic Dowels

Insert 2x Plastic Dowel (D) into Top Panel Support (12).

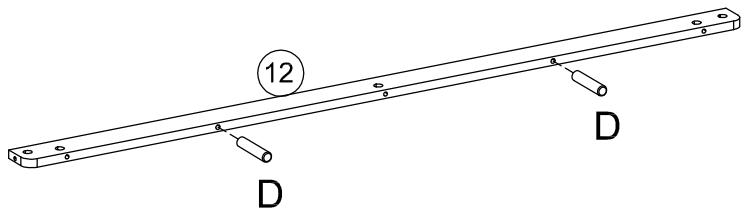

5.

Attach Top Panel Support (12) to Top Panel (1) using 3x Cam lock (A) as shown,
Use a screwdriver to turn the Cam lock clockwise to lock.
Paste 3x Cam sticker (C) as shown.

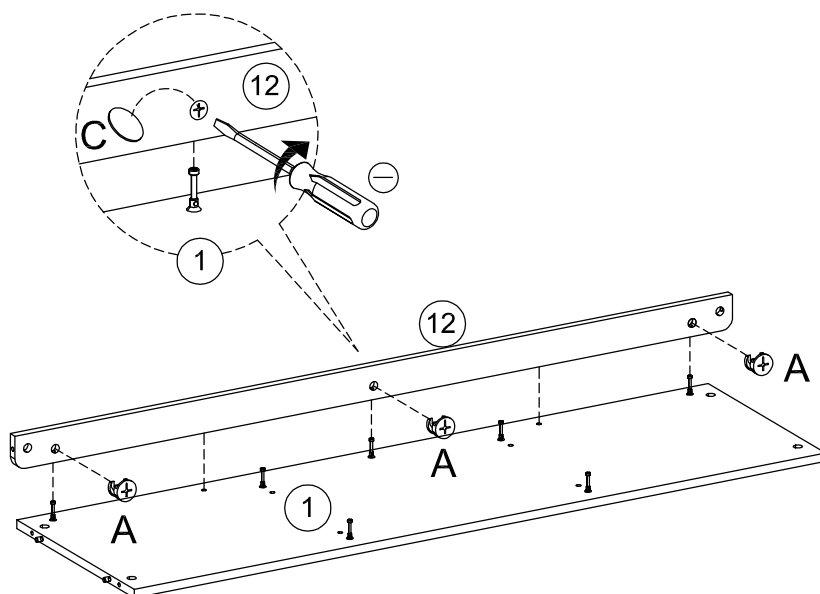

You will need:

A




3 Cam Locks

C




3 Cam Stickers



1 Phillips head screwdriver

6.

Attach leg (9) to Bottom Panel (2) using 2x Screw (F).

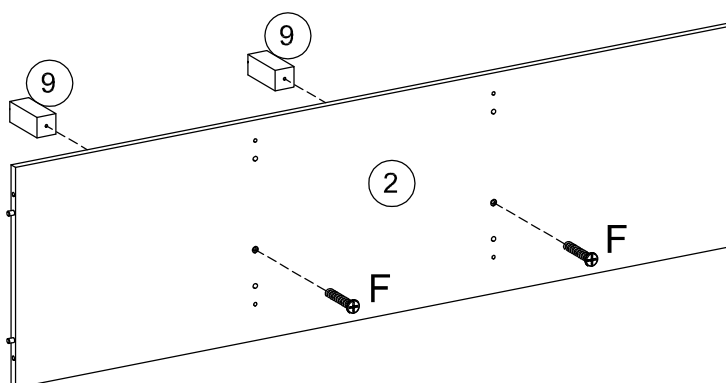


You will need:

F




2 Screws



1 Phillips head screwdriver

7.

Attach Shelf Panel (7) to Divider Left Panel (5) and Divider Right Panel (6) using 4x Cam lock (A),
Use a screwdriver to turn the Cam lock clockwise to lock.
Paste 4x Cam Sticker (C) as shown.

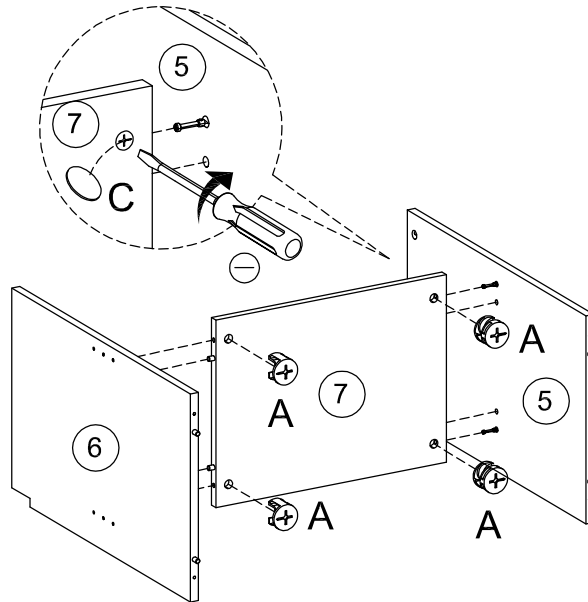

You will need:

A




4 Cam Locks

C




4 Cam Stickers



1 Phillips head screwdriver

8.

Attach Assembly using 4x Cam lock (A),
Use a screwdriver to turn the Cam lock clockwise to lock.
Paste 4x Cam Sticker (C) as shown.

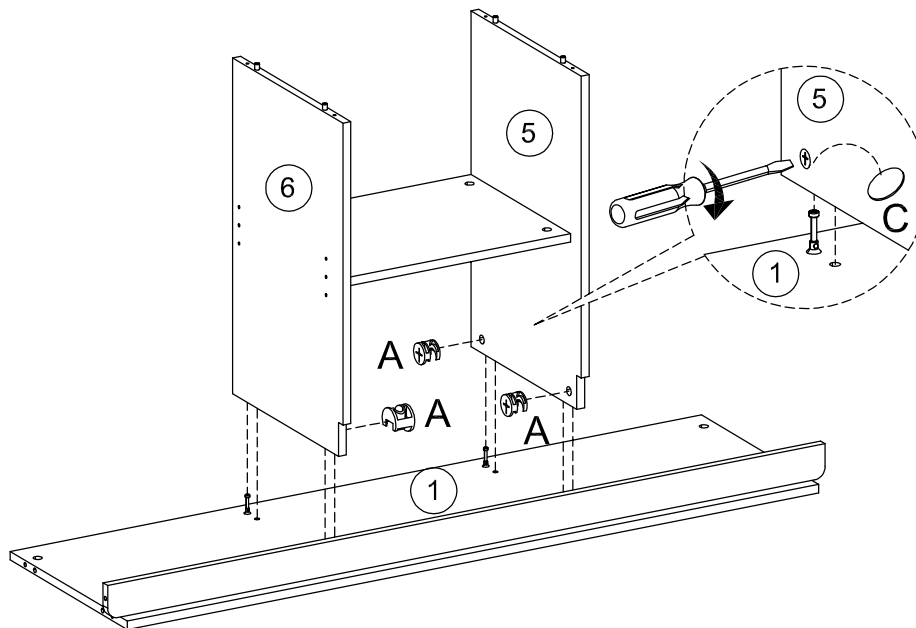

You will need:

A




4 Cam Locks

C




4 Cam Stickers



1 Phillips head screwdriver

9.

Attach Assembly using 4x Screw (F) as shown.

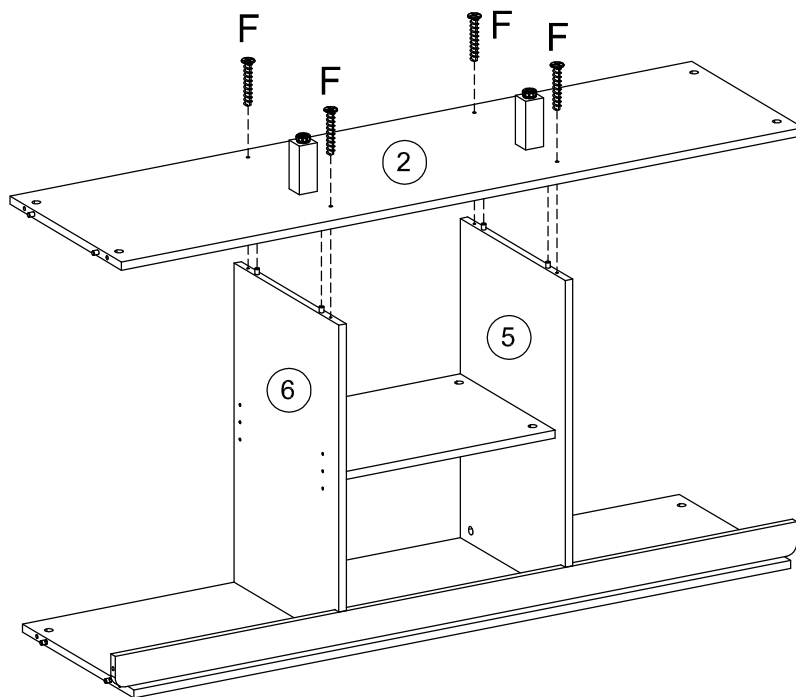


You will need:

F




4 Screws



1 Phillips head screwdriver

10.

Attach Left Panel (3) and Right Panel (4) to Assembly using 10x Cam lock (A), Use a screwdriver to turn the Cam lock clockwise to lock. Paste 10x Cam Sticker (C) as shown.

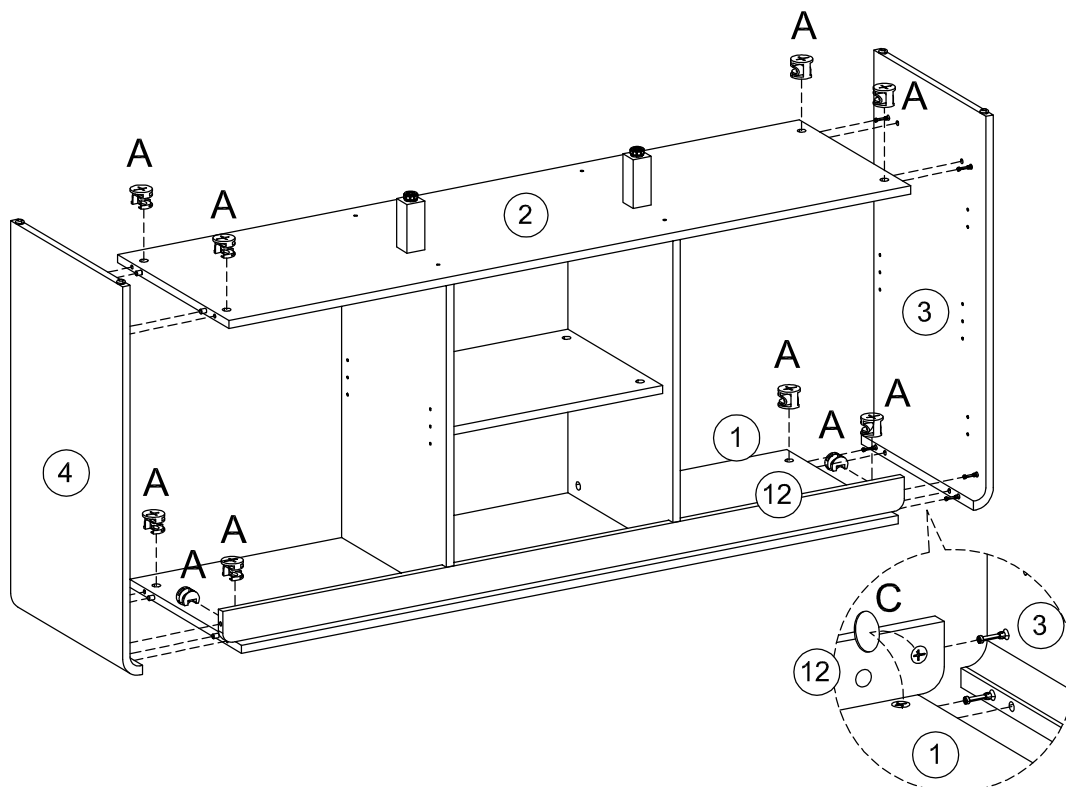

You will need:

A




10 Cam Locks

C



10 Cam Stickers




1 Phillips head screwdriver

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

11.

Attach Top Backpanel (10) and Bottom Backpanel (11) to Assembly using 32x Screw (E).
Attach 2x Anti-tip bracket (J) to Top Backpanel (10) using 2x Screw (E).

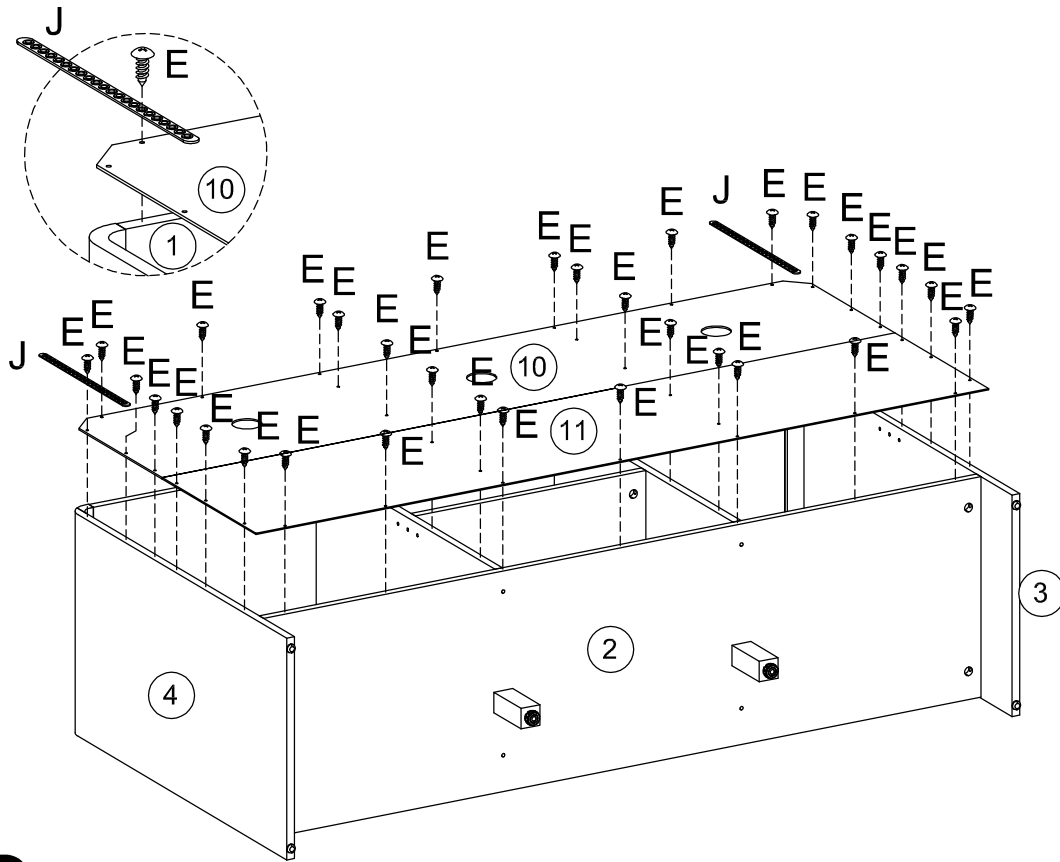

You will need:

E




34 Screws

J




2 Anti-tip Brackets



1 Phillips head screwdriver

12.

Insert 8x Shelf Pin (G) into Left Panel (3) and Divider Left Panel (5), Right Panel (4) and Divider Right Panel (6).
Put inside Adjustable Shelf (8) into assembly.

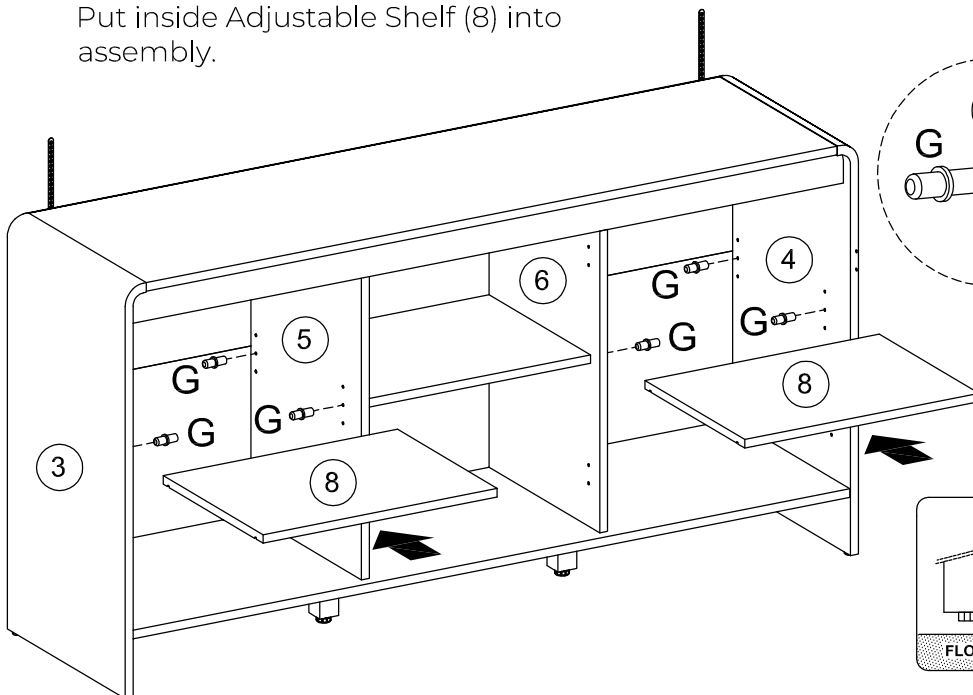




You will need:

G



8 Shelf pins

ADJUSTABLE FEET

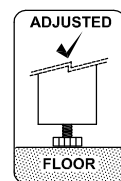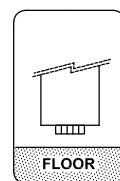


**TEMPLE &
WEBSTER**


Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

13.


Attach 2x Full Curve Hinges (H) into Left Door (13).

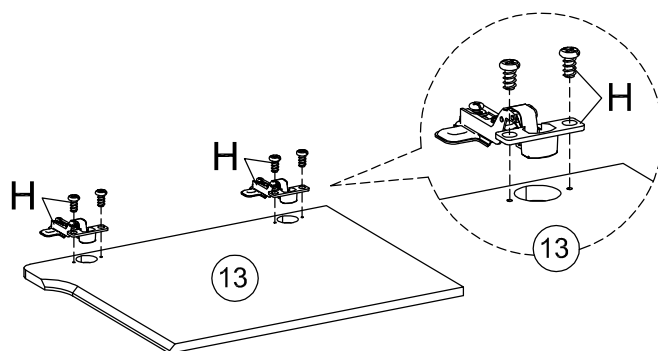


Attach 2x Full Curve Hinges (H) into Right Door (14).

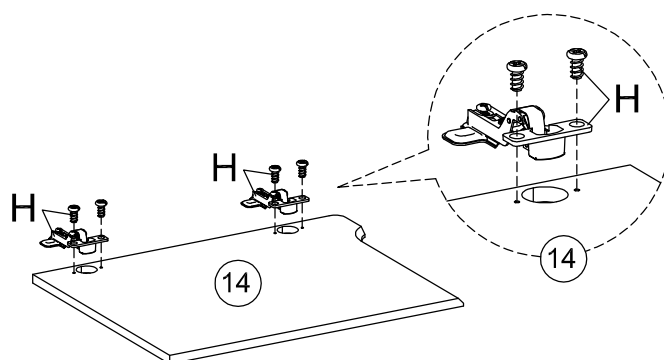


Attach 2x Half Curve Hinges (I) into Middle Door (15).

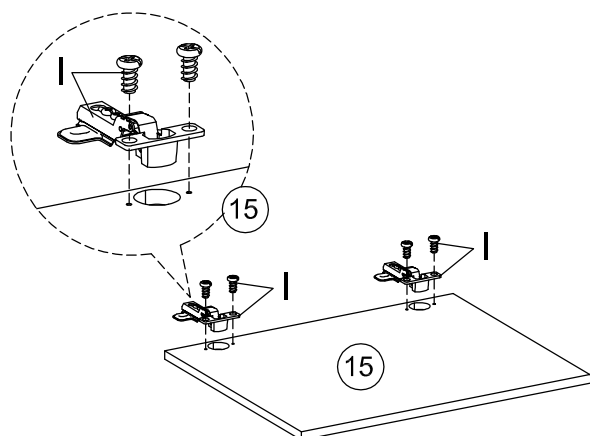


You will need:



4 Full Curve Hinges



2 Half Curve Hinges



1 Phillips head screwdriver

14.


Attach Left Door (13), Right Door (14) and Middle Door (15) to Assembly as shown.

Adjust The Door using instruction.



Paste 3x Buffer (K) to The Door as shown.

You will need:

K



3 Buffers

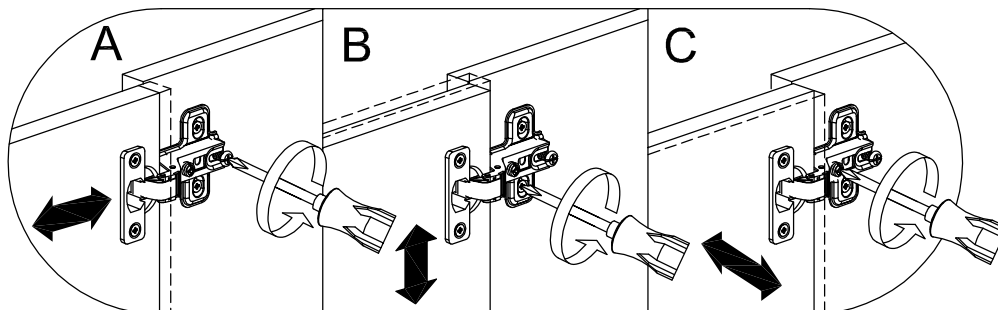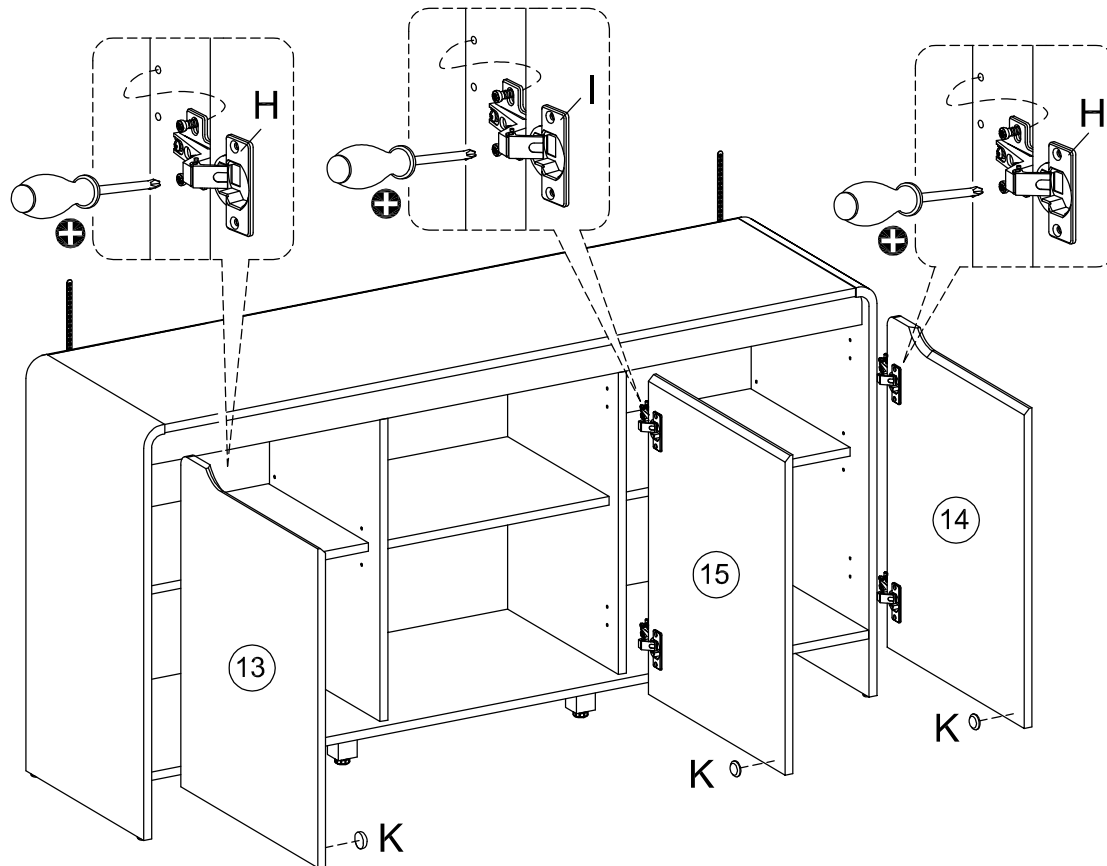

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

15.

Assembly is complete.

