

### **SECTION 1: S-FOLD Curtain Track Installation Instructions.**












- Thank you for purchasing the **S-fold Curtain Track System**. Please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the packaging.
- Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.




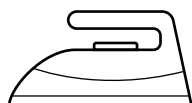

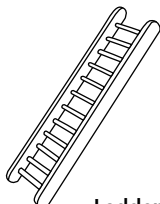
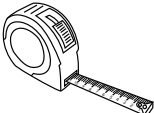
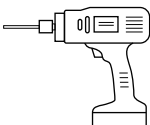

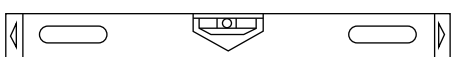
**For accurate curtain lengths install your S-Fold Tracks first then measure your curtain drop.**

**Warning: Some components are sharp. Keep out of reach of children. Take care not to place your finger on the pointed edge. Wear covered footwear during installation.**
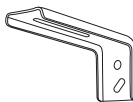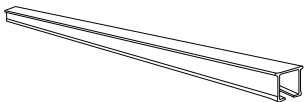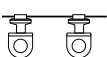
### **Care Information**

Remove curtains and regularly vacuum carefully inside track to ensure smooth operation.

Hardware (included)					
 <p><b>Screws</b> 140cm track x 6 180cm track x 6 220cm track x 8 280cm track x 10 360cm track x 12</p>	 <p><b>Masonry Plugs</b> 140cm track x 6 180cm track x 6 220cm track x 8 280cm track x 10 360cm track x 12</p>	 <p><b>Set Screws</b> 140cm track x 3 180cm track x 3 220cm track x 4 280cm track x 5 360cm track x 6</p>	 <p><b>Ceiling Clips</b> 140cm track x 3 180cm track x 3 220cm track x 4 280cm track x 5 360cm track x 6</p>	 <p><b>Wall Brackets</b> 140cm track x 3 180cm track x 3 220cm track x 4 280cm track x 5 360cm track x 6</p>	 <p><b>Track</b> 140cm track x 1*140cm 180cm track x 1*180cm 220cm track x 1*220cm 280cm track x 2*140cm 360cm track x 2*180cm</p>
 <p><b>Carriers</b> 140cm track x 28 180cm track x 32 220cm track x 40 280cm track x 52 360cm track x 64</p>	 <p><b>End Cap x 2</b></p>	 <p><b>Joiner</b> *280cm &amp; 360cm track only</p>	 <p><b>Joiner Screws &amp; Allen Key</b> *280cm &amp; 360cm track only</p>	 <p><b>Plastic curtain hooks</b> 140cm track x 30 180cm track x 34 220cm track x 42 280cm track x 54 360cm track x 66 note: there are spare hooks</p>	

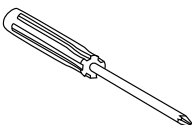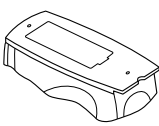Tools (not supplied)					
 <p><b>Phillips Head Screwdriver</b></p>	 <p><b>Stud Finder</b></p>	 <p><b>Pencil</b></p>	 <p><b>Iron</b></p>	 <p><b>Scissors</b></p>	 <p><b>Ladder</b></p>
 <p><b>Tape Measure</b></p>	 <p><b>Drill</b></p>	 <p><b>2mm Drill Bit</b></p>	 <p><b>Level</b></p>		

## Installing The S-Fold Curtain Track

**Warning:** Check that whatever material you are securing your curtain track into can sufficiently support the combined weight of the curtains and tracks.

**Brackets must be fixed into studs, brick or timber to ensure sufficient support.**


**A stud finder must be used to locate wall studs.**

### Positioning The S-Fold Curtain Track

#### **1. CHOOSE WALL MOUNT OR CEILING MOUNT:**

The S-fold track system includes bracket options for both wall and ceiling mount.

Choose your preferred option. Your ceiling height may determine this as ready made curtains come in set lengths.

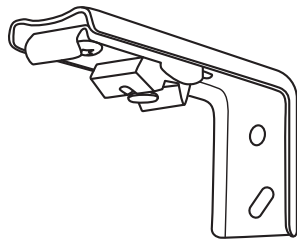

**Wall Mount**





**Ceiling Mount**

#### **2. POSITION YOUR TRACK:**

There are 2 options: Choose one and find the centre.


- **Middle of window:** If the window is in the centre of the wall, this will be your preferred method. We recommend that the curtain track overhangs the window by a minimum of 15cm.
- **Centred to wall:** A good option if the window is off-centred or you are using the S-fold curtain to cover some of the wall as well as the window.

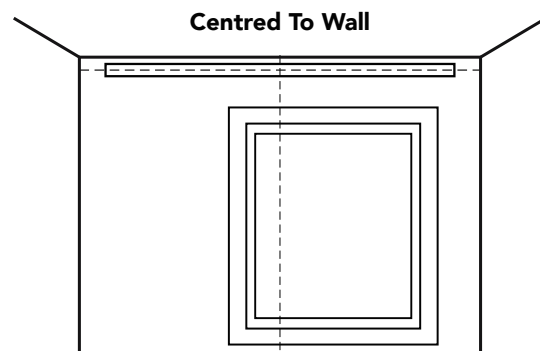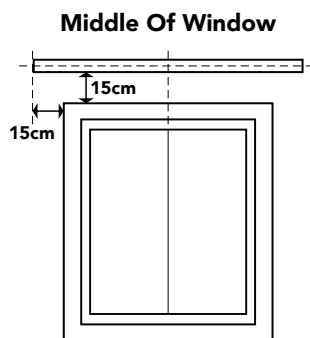


#### **3. POSITION YOUR BRACKETS:**

Beginning from the outer ends of the track, position the first bracket 10cm or 15cm in from the end. The remaining brackets should be spaced as recommended in the chart below to ensure the curtain weight is evenly supported.

- Using the pencil mark the drill holes.

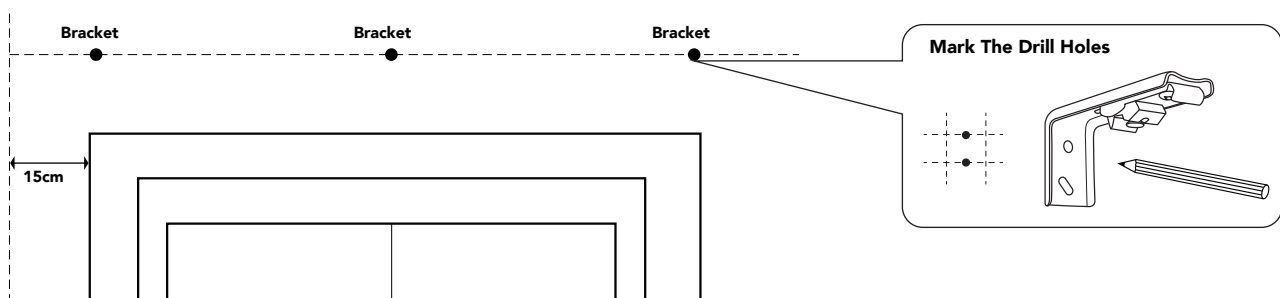

## Recommended bracket positions:

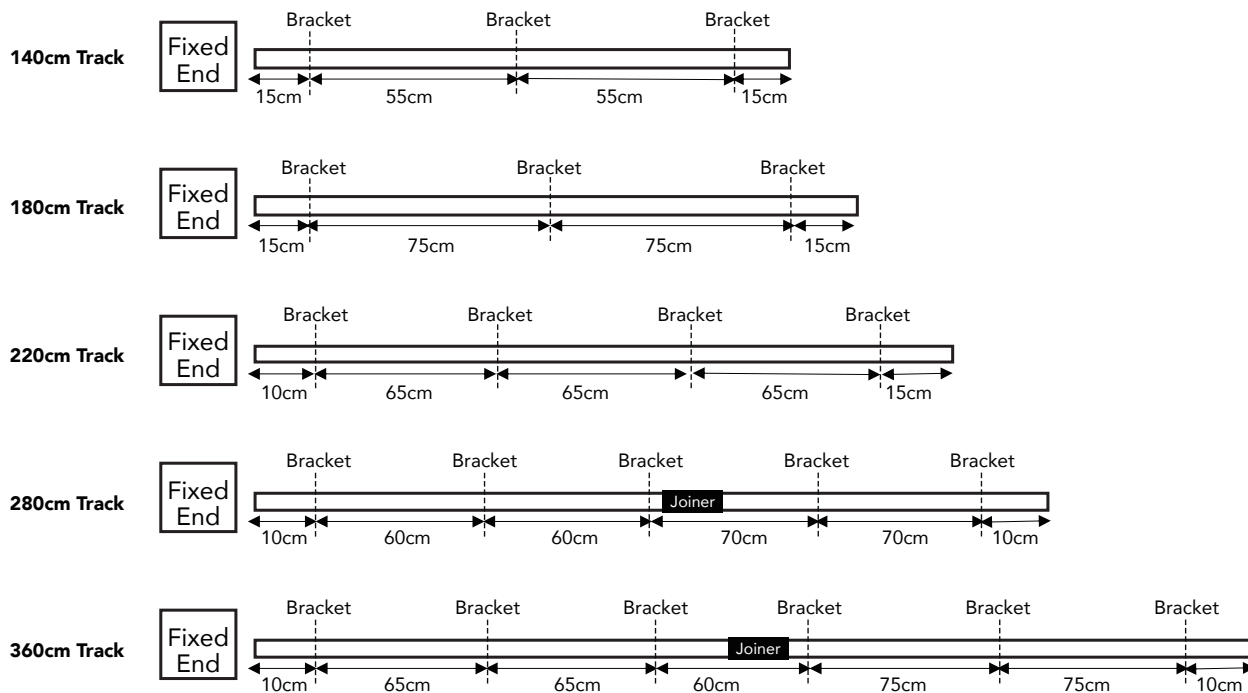


## 4. DRILL YOUR PILOT HOLES:

The S-fold track needs to be level to operate correctly.


Before drilling any holes use your stud finder to ensure that screws will be secured into wall/ceiling timber. You may need to move your brackets slightly to ensure they are going into secure points.

**TIP:** Pilot holes are smaller than the screw size. This allows you to easily insert the screws however still has enough timber for the the screws to grip into. Drill tight fitting holes to accommodate the wall plugs (provided). Plugs not needed for timber wall or window frame.

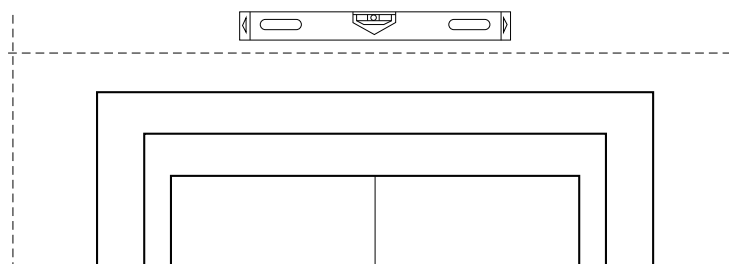



## 5. SECURE YOUR BRACKETS:

Using your phillips head screw driver attach your brackets to the wall or ceiling using the screws provided.

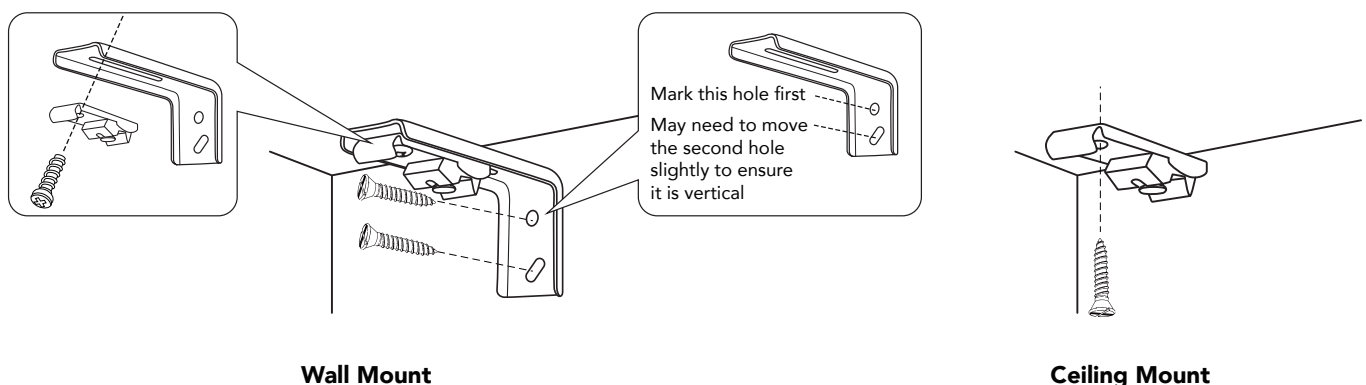


## 6. INSTALLING THE TRACK INTO THE BRACKETS:


Loosen the screw securing the plastic track holder. For 280cm track or longer please see step 6a on how to use the track joiner.

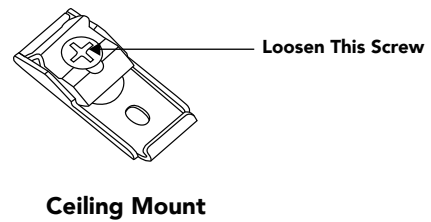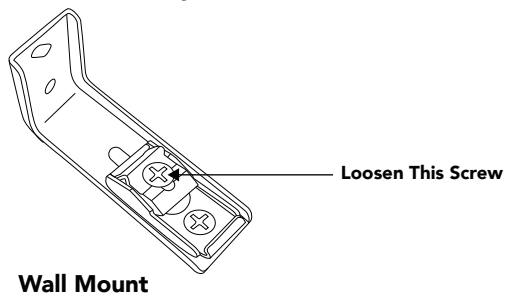


Tilt the track so the ridge fits under the plastic holder. Straighten the track and push the other edge under the curved metal edge of the bracket.

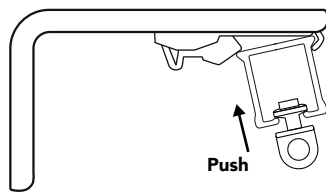


Side Profile of Bracket

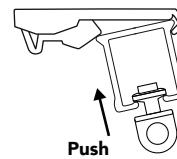

Finally push the plastic track holder forward and tighten screw to secure the track. Repeat for all remaining brackets. Ensure the track is installed into each bracket securely.

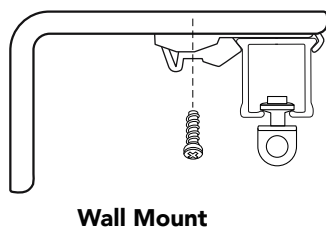



Side Profile of Bracket

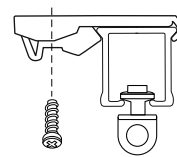

### 6a. Using The S-Fold Track Joiner

280cm and 360cm S-fold tracks comprise of 2 track pieces with 1 joiner included in the pack. Follow steps 1-5 as instructed.

At step 6 connect the 2 tracks together using the joiner. Insert the plug screws into the holes in the joiners and tighten with the allen key provided. Secure the track into the brackets.

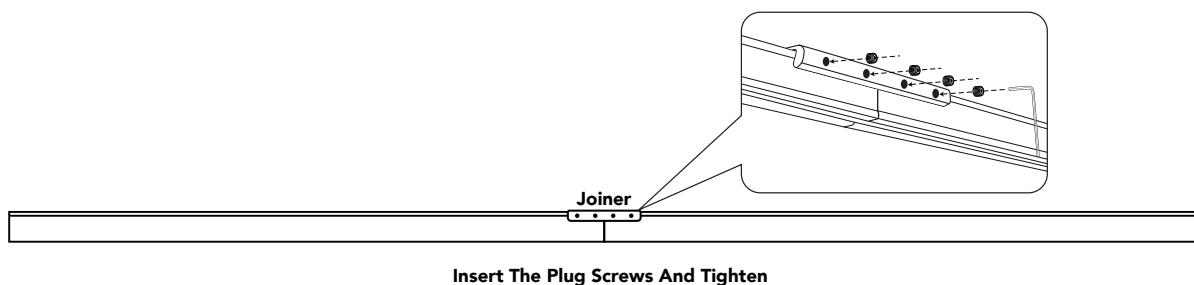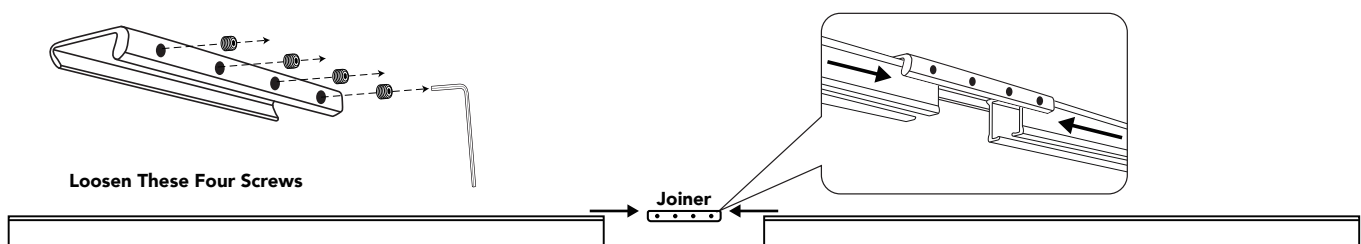

**Your S-Fold Track is Now Ready For Curtains.**

### **SECTION 2: S-FOLD SHEER & BLOCKOUT Curtain Installation Instructions.**


Your S-fold track system should now be installed following the instructions above. Please take time to check all screws have been tightened and components are fitted correctly.

#### **1. PREPARE CURTAINS**

Lay your curtain on a flat surface with the face side down with the curtain tape facing up.

#### **2. INSERTING CURTAIN HOOKS**


Beginning with the 2nd pocket, insert the curtain hooks into the pocket with the pointed end facing up towards the top of the curtain. Turn the curtain hook over 180° so the pointed end of the curtain hook is now facing downwards.

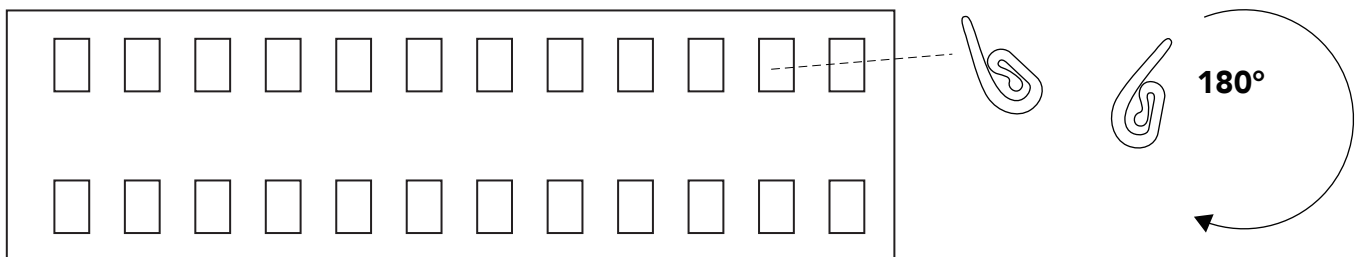

**Note:** beginning with the 2nd pocket ensures the plastic carriers are hidden at the end of your track, giving you a neater look.

#### **S-Fold Curtains**

Insert hooks every 8th pocket

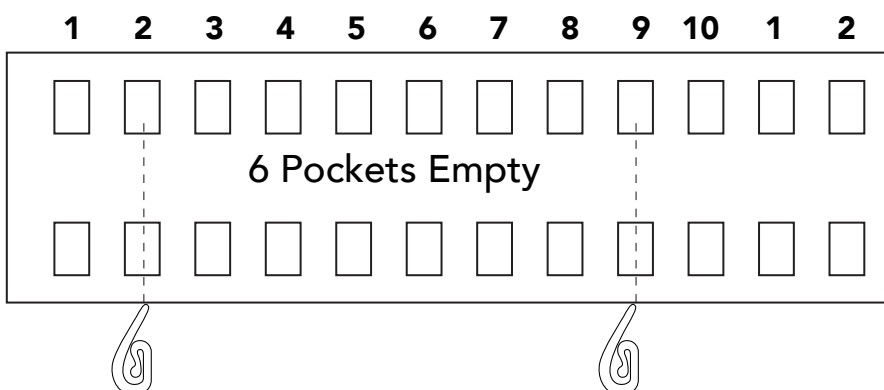


#### **3: CREATING THE PERFECT CURTAIN FOLDS:**

Each curtain fold must have 2 sides. To create 2 sides there needs to be 2 hooks (ie: all the folds need to be even). S-FOLD Curtain Track may contain extra curtain hooks.

To ensure the perfect fold for each curtain, **you must use an 'even' quantity of hooks along the width of the curtain.** (Continued over page)

**Note:** The curtain tape pockets may be slightly uneven, so you may need to adjust the curtain hook positioning slightly as you make your way towards the middle edge of the curtain (ie: the side of the curtain that will meet the other curtain). Therefore the curtain hooks may need to be located every 7th or 9th pocket for the last several pockets. **Ensure the last pocket has a curtain hook.**

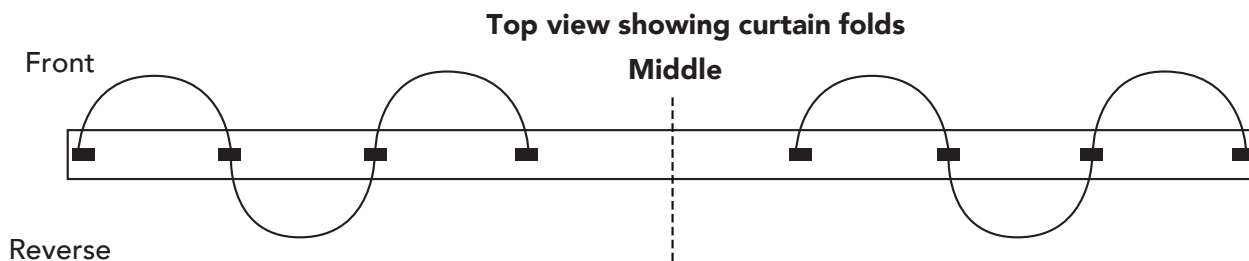

#### **4. HANGING YOUR CURTAINS**

Two people recommended for install. One to hold the curtain, one to insert the curtain hooks to the carriers.

Face the fabric side of the curtain towards the room. For each curtain, begin at the **fixed end** of the curtain track and make your way towards the middle. Insert the pointed end of the curtain hook through the hole of the S-FOLD track carrier. Make sure the pointy end of the hook is facing downwards after inserting the hook. Continue along the track, inserting all curtain hooks into the carriers.

#### **5. ADJUST THE CURTAIN FOLDS**

Starting at one end adjust each curtain fold so that the entire curtain forms a series of perfect waves.

