
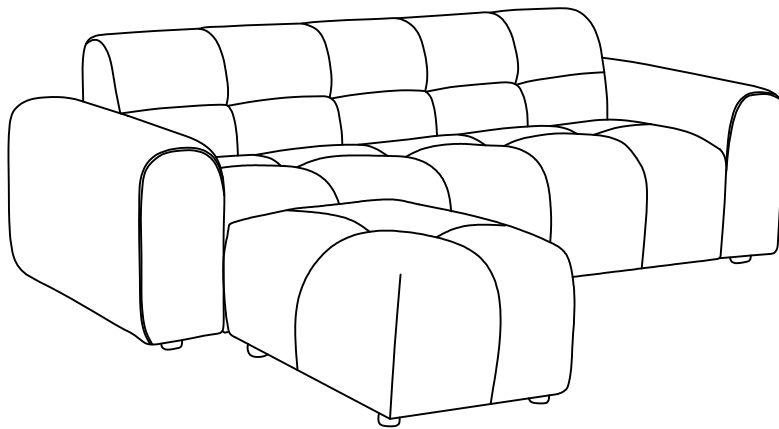


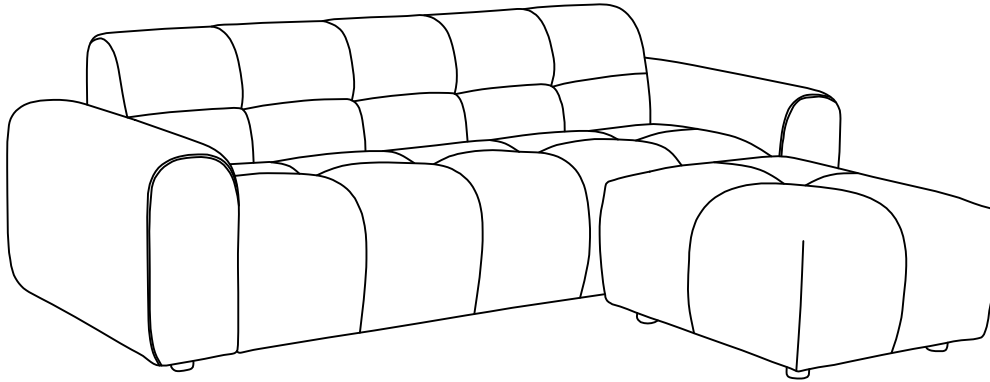

Quinn 3S plus Ottoman Set

Read first, enjoy forever

Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don't over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- To reduce the risk of injury, always secure storage furniture to walls and/or floors by using tip-over restraints.
- Never let children climb or hang on drawers, doors or shelves.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it's still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.



**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


Parts list






ASSEMBLY INSTRUCTIONS

Quinn 3S plus Ottoman Set

ATQN3SGN/ATQN3SBH



NUMBER OF PEOPLE REQUIRED FOR
ASSEMBLY:
2

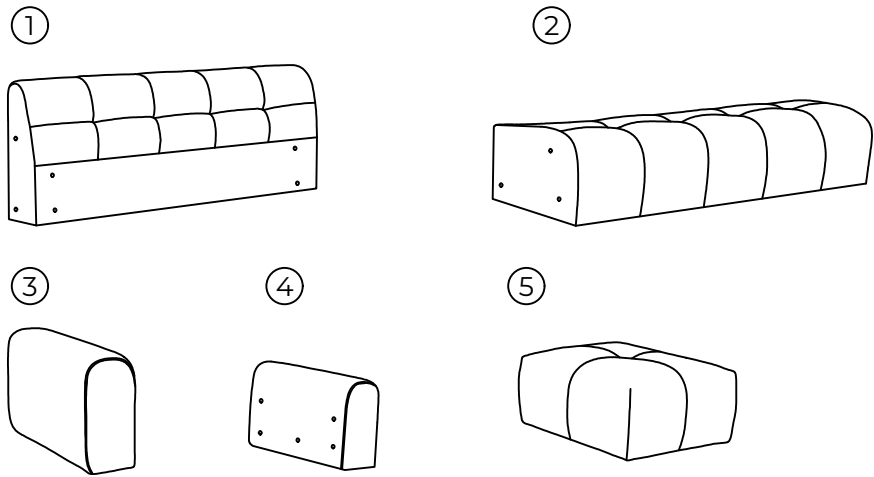

A	B	C	D	E	F
					
16 PCS Bolt M8x120	16 PCS Nut M8/12	16 PCS Washer ø9/ø25	1 PCS Spanner 12	9 PCS Washer ø50x2	9 PCS Leg ø55x50


1.

Hardware is located in a pocket underneath the Sofa.

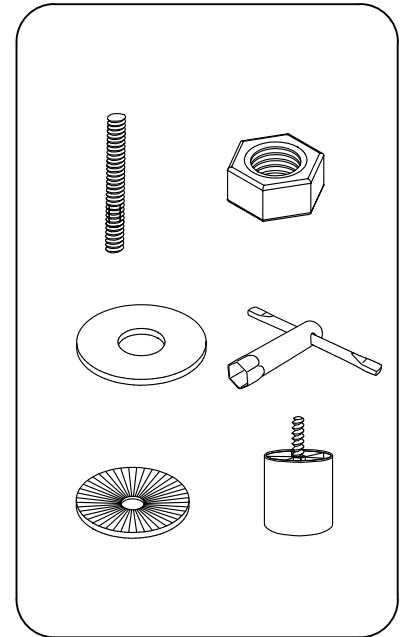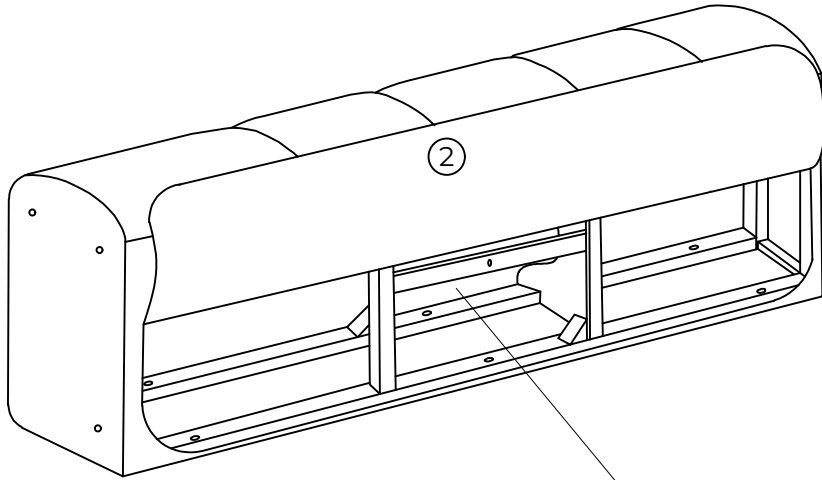


2.

Insert 6 x Bolt (A) into the sofa back (1)

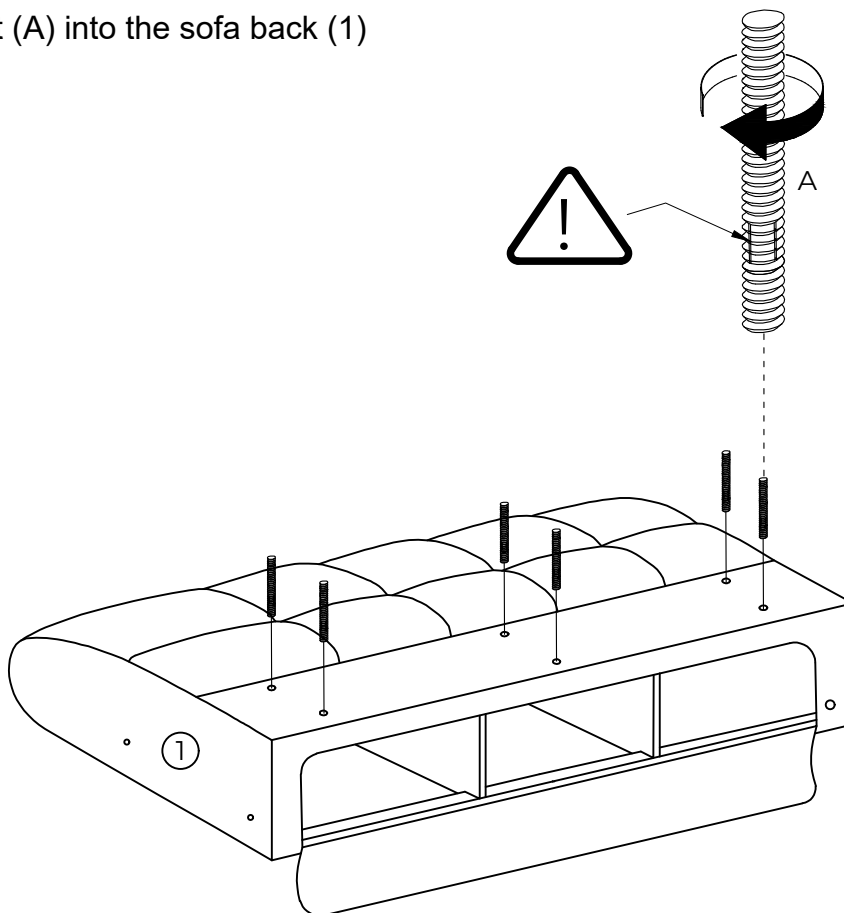

You will need:

Ax6




Bolt M8x120

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


3.

Install the back frame (1) on the seat frame (2).

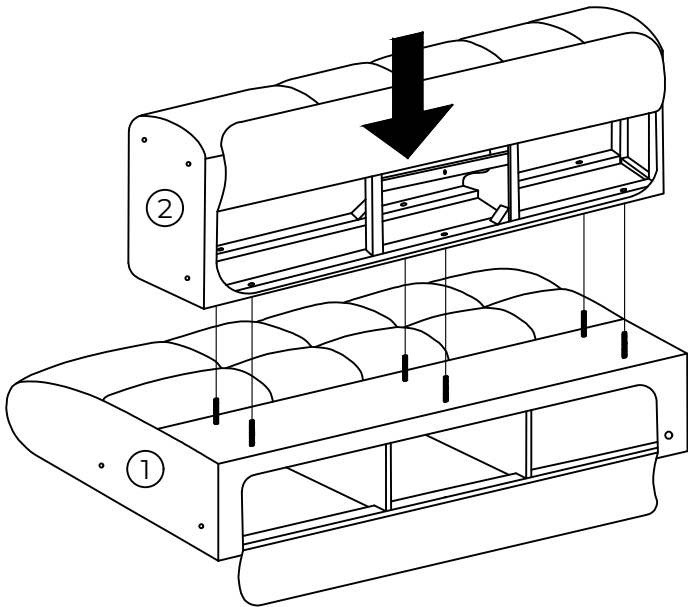

4.

Attache the sofa back (1) on the seat frame (2) by using 6 x washer (C) and 6 x Nut (B). Tighten with spanner (D).

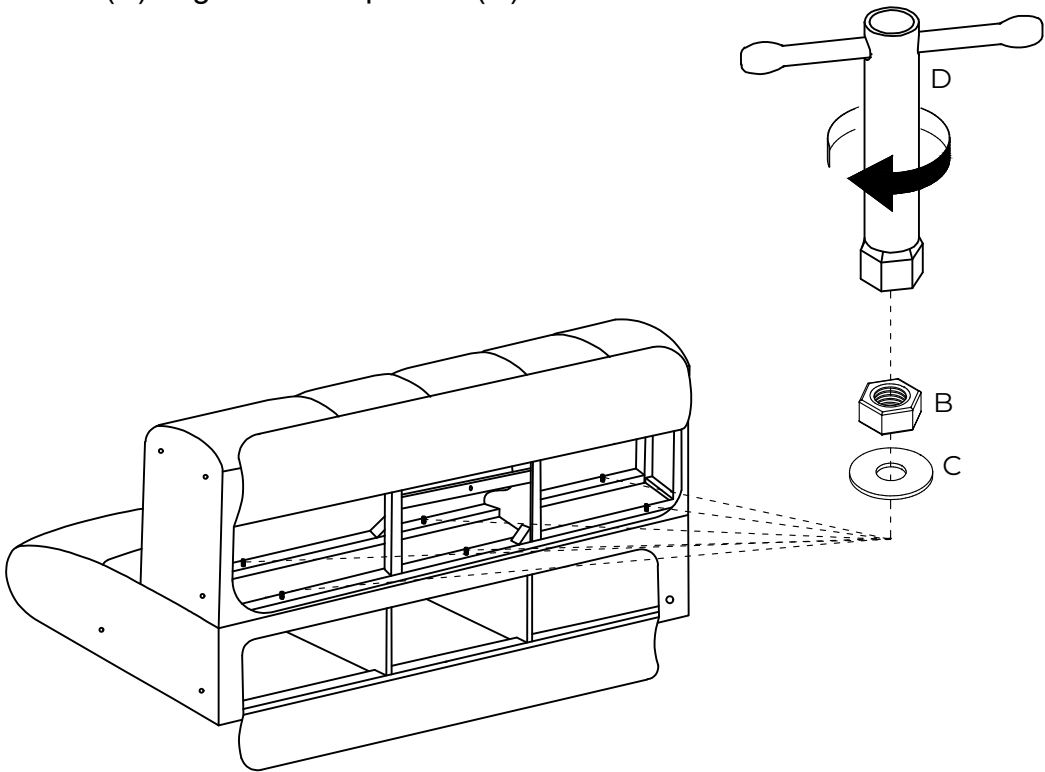


You will need:

Bx6




Nut M8/12

Cx6



Washer ø9/ø25


Dx1



Spanner 12


5.

Insert 5 x Bolt (A) into both the armrest (3) and (4).

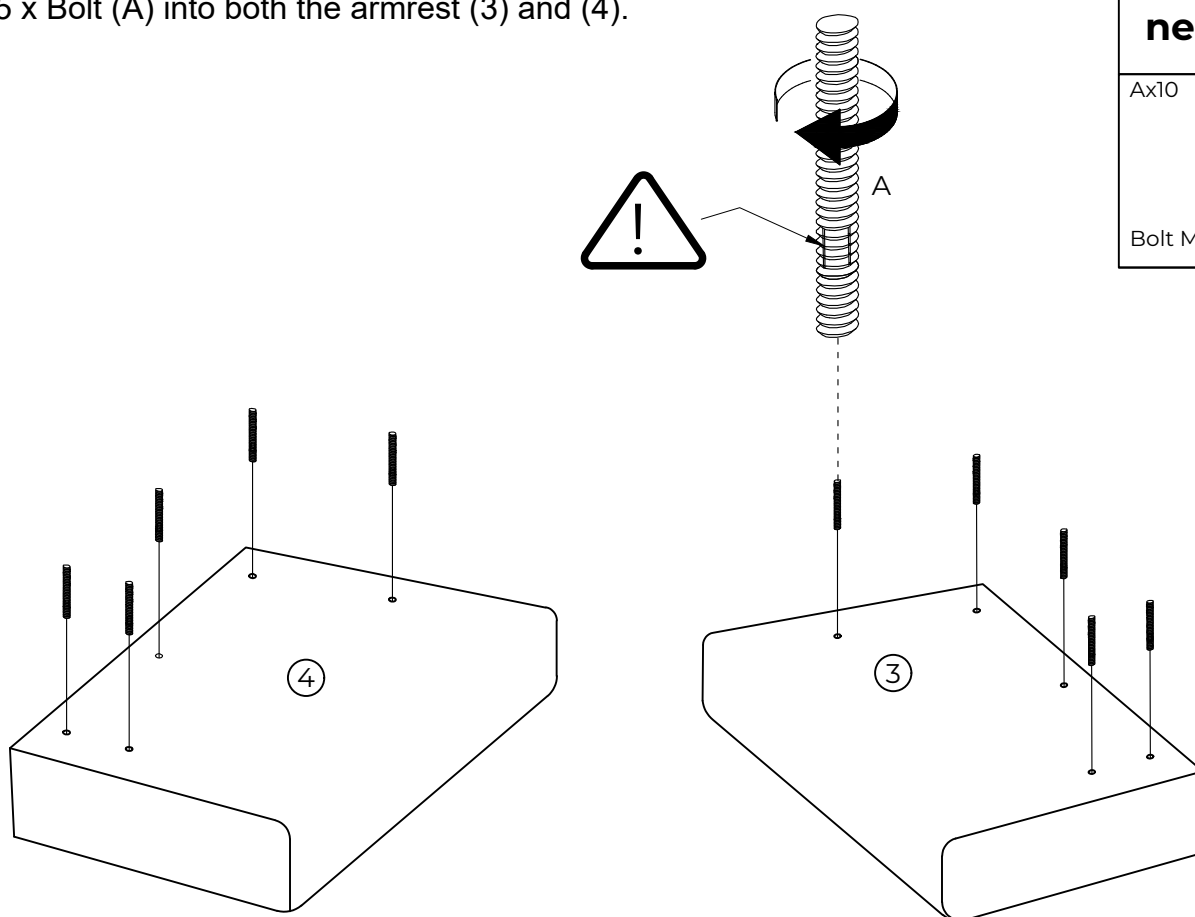

6.

Install the armrest (3) on the seat frame (2) and back (1)

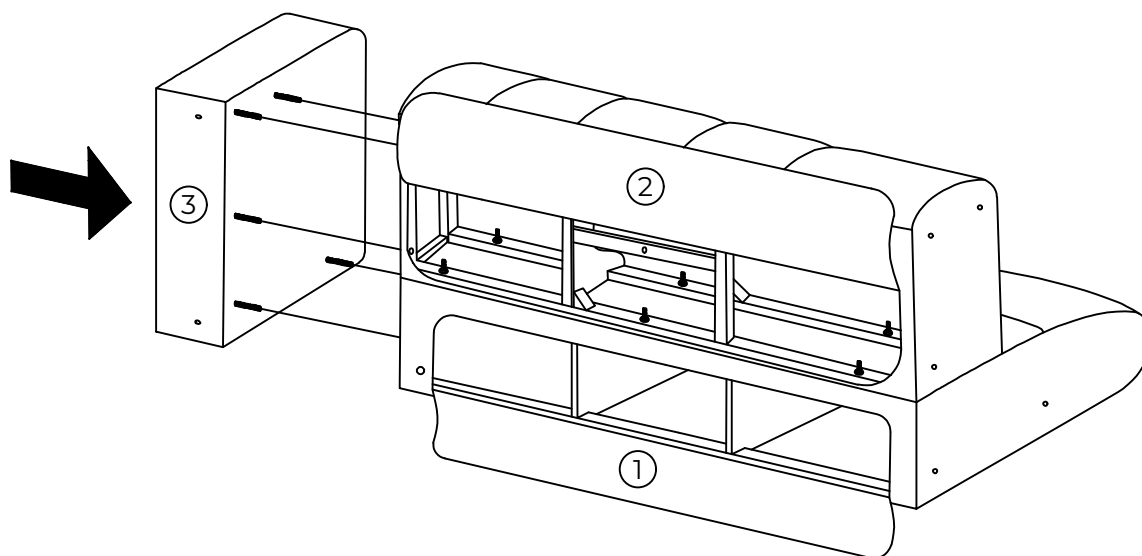


**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


7.

Attach the armrest (3) on the seat frame (2) and sofa back (1) by using 5 x washer (C) and 5 x Nut (B). Tighten with spanner (D).

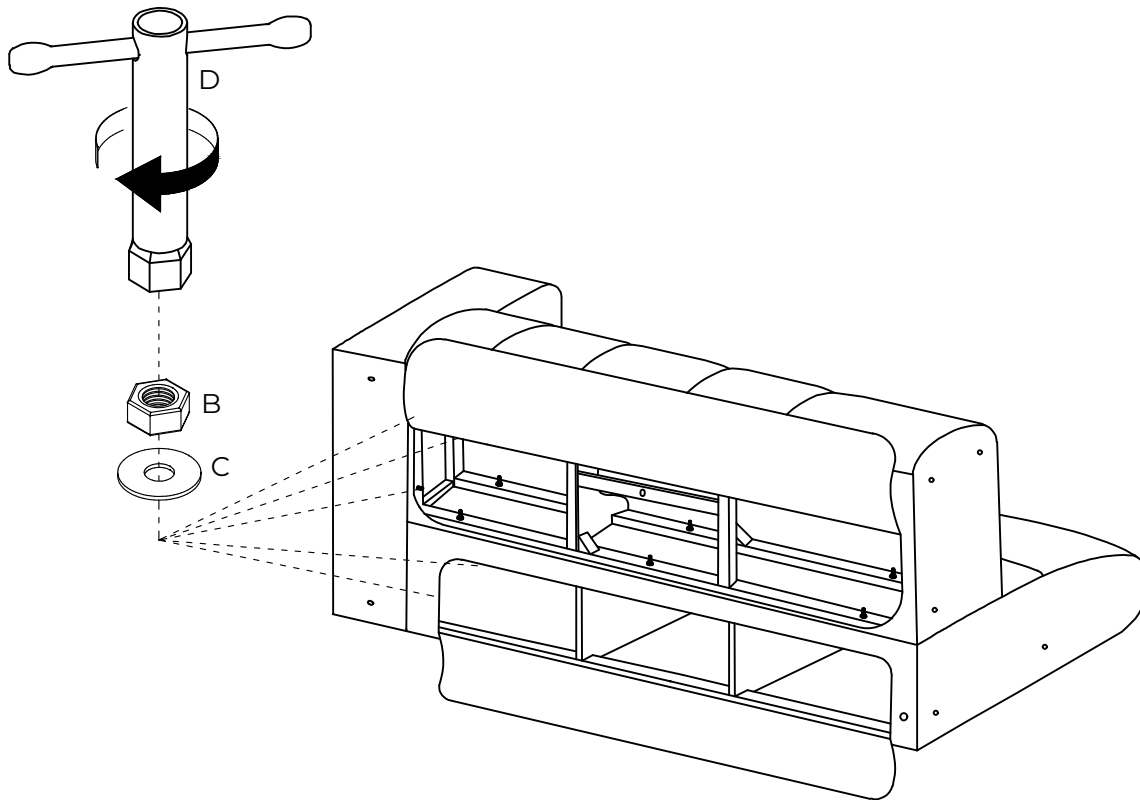


You will need:

Bx5




Nut M8/12

Cx5



Washer $\varnothing 9/\varnothing 25$


Dx1



Spanner 12

8.

Install the armrest (4) on the seat frame (2) and back (1)

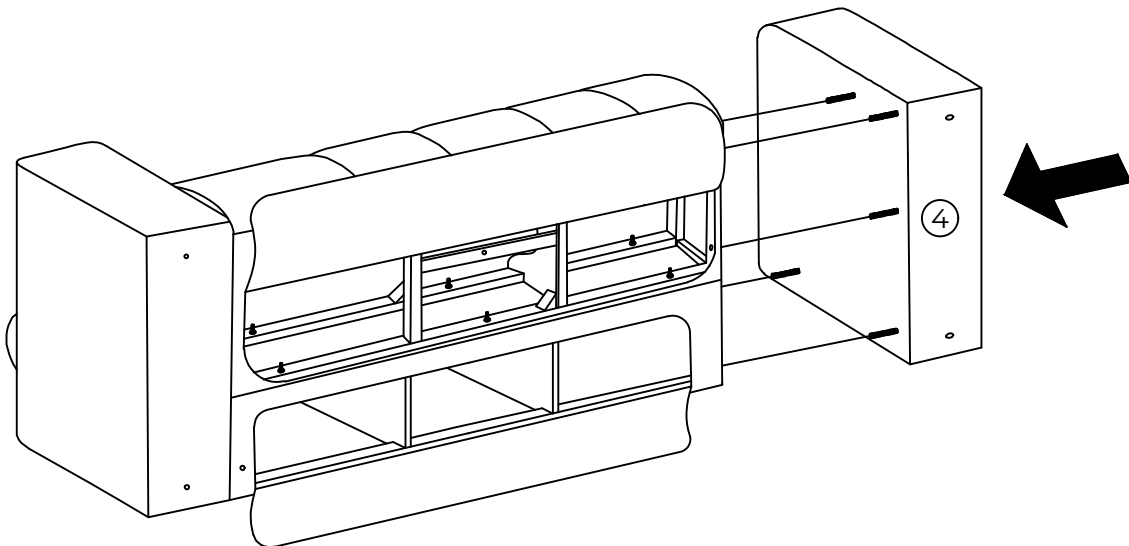


**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

9.

Attach the armrest (4) on the seat frame (2) and sofa back (1) by using 5 x washer (C) and 5 x Nut (B). Tighten with spanner (D).

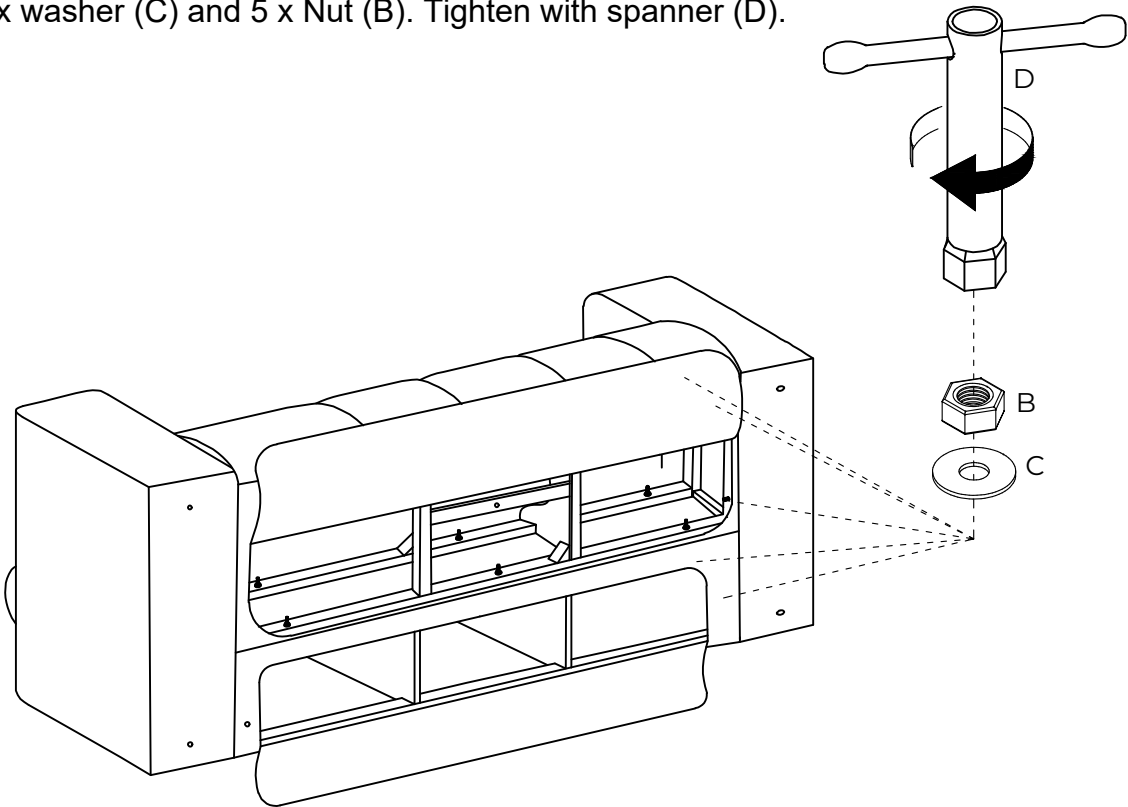


You will need:

Bx5




Nut M8/12

Cx5



Washer $\varnothing 9/\varnothing 25$


Dx1



Spanner 12


10.

Install 5 x plastic legs (F) and 5 x washers (E) on armrest, seat and back.

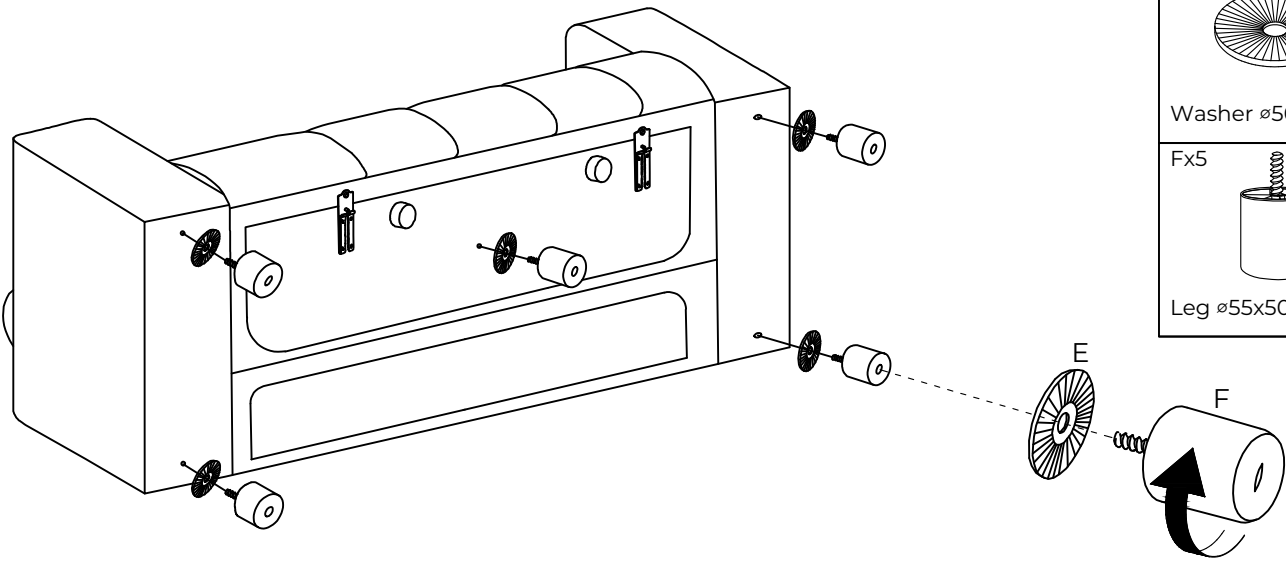

You will need:

Ex5



Washer $\varnothing 50 \times 2$

Fx5




Leg $\varnothing 55 \times 50$

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


11.

Hardware is located in a pocket underneath the ottoman (5).

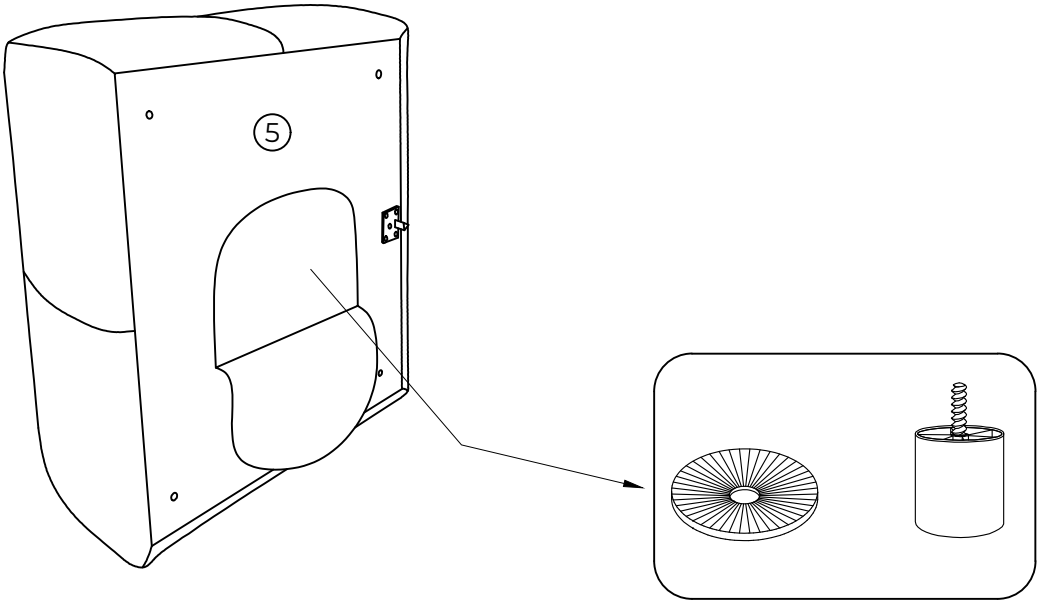


12.

Install 4 x plastic legs (F) and 4 x washers (E) on the ottoman (5).

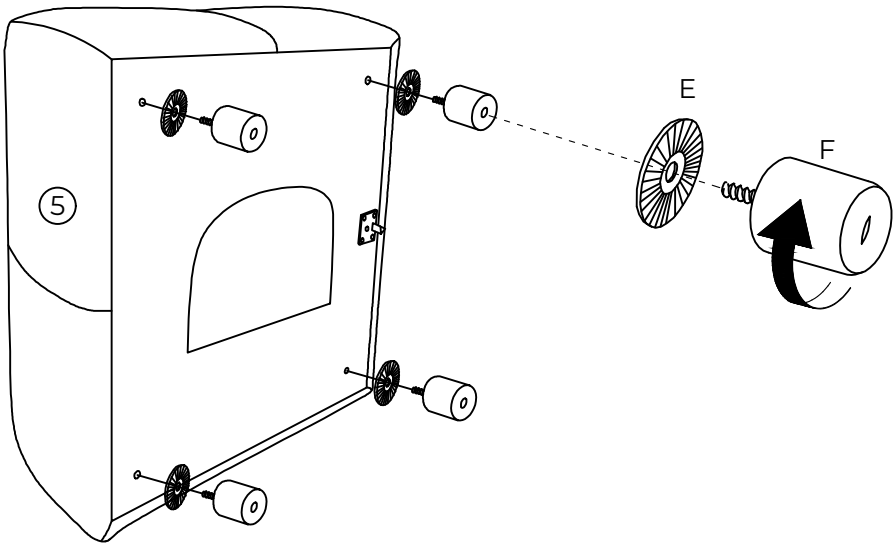


You will need:

Ex4



Washer $\varnothing 50 \times 2$





Fx4



Leg $\varnothing 55 \times 50$

13.

Move the connection fitting into position placed under seat (2).

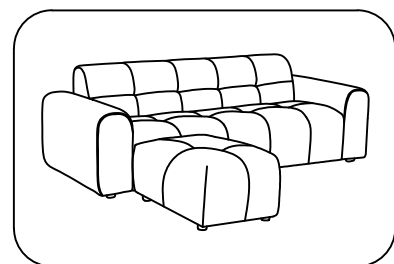
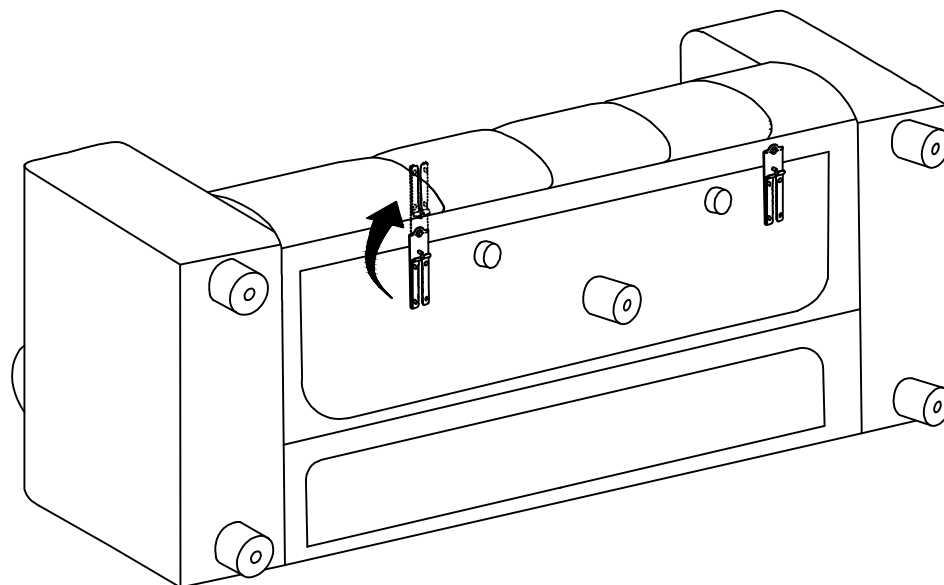
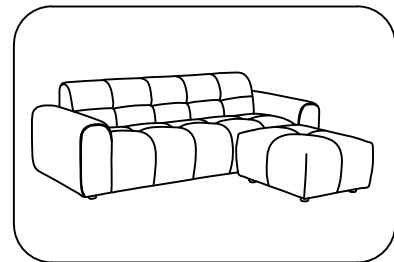
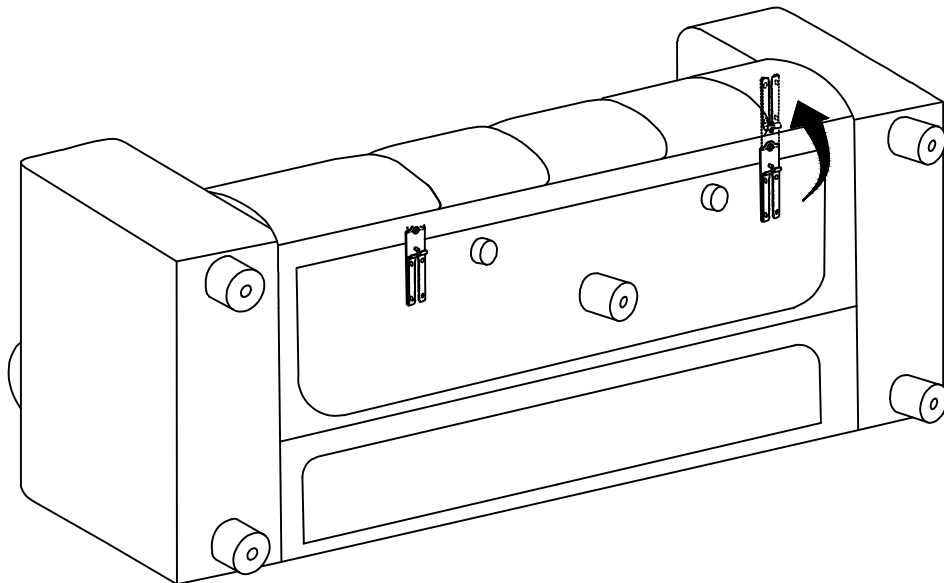


**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

14.



Push the ottoman (5) into position up against seat (2).

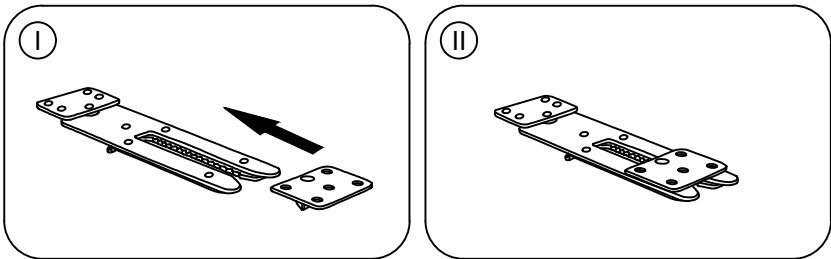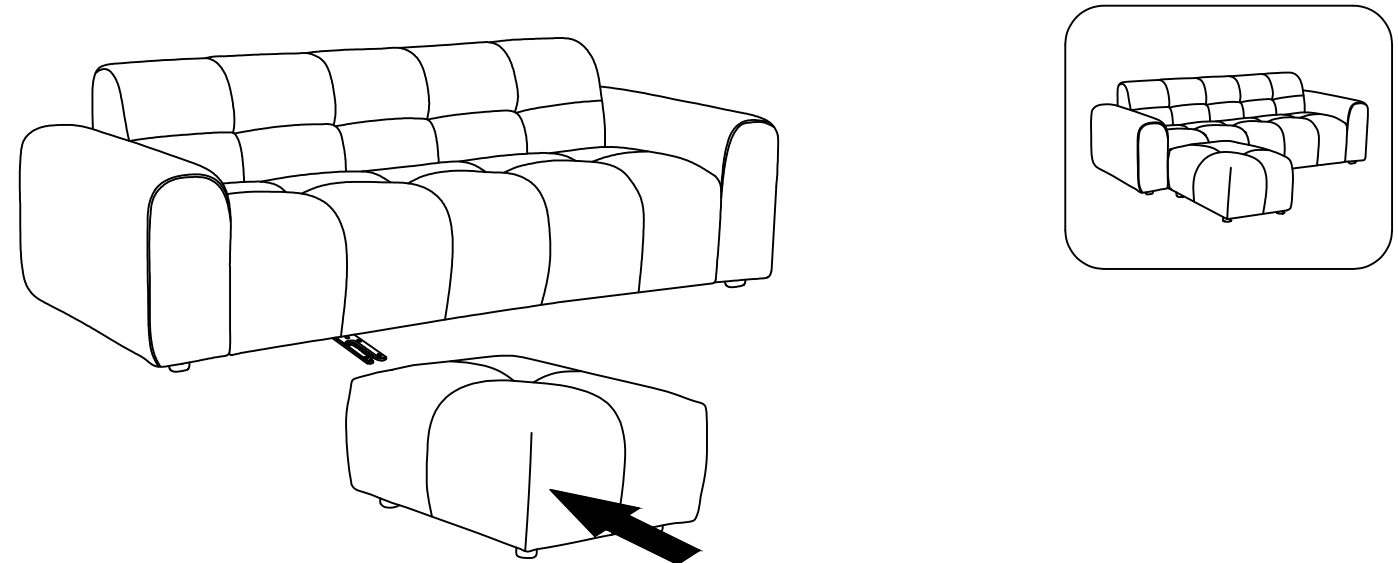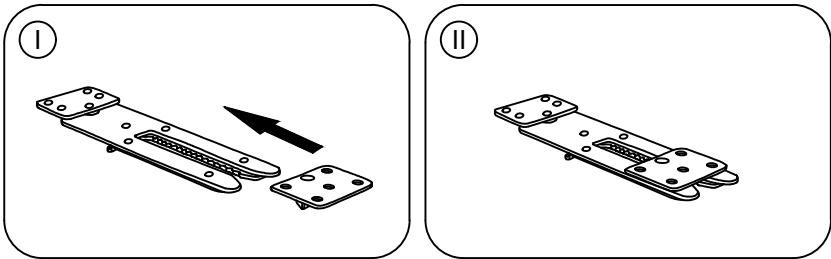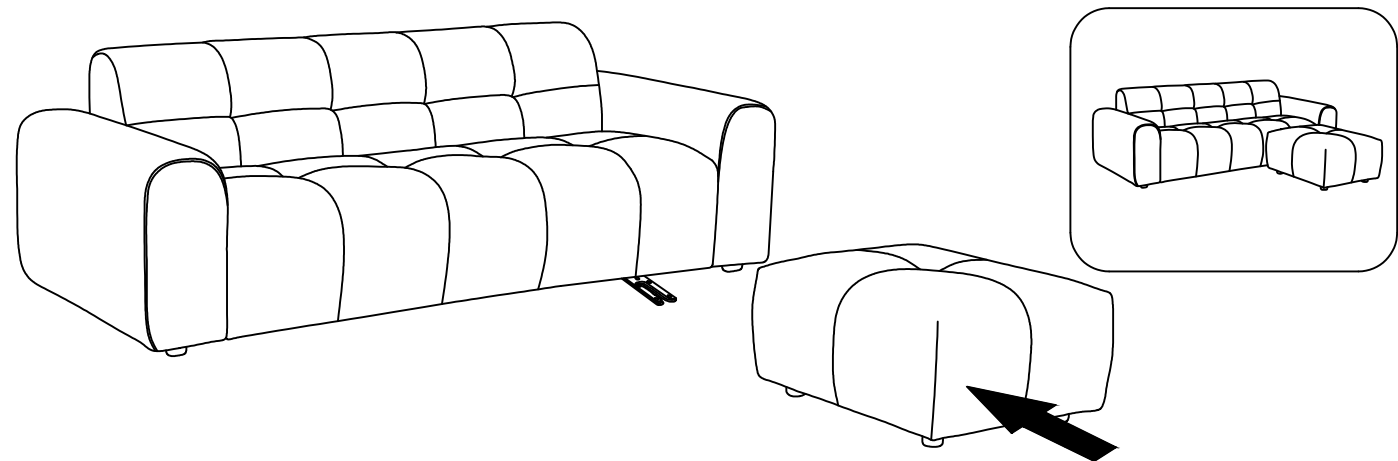

TEMPLE &
WEBSTER


Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

15.

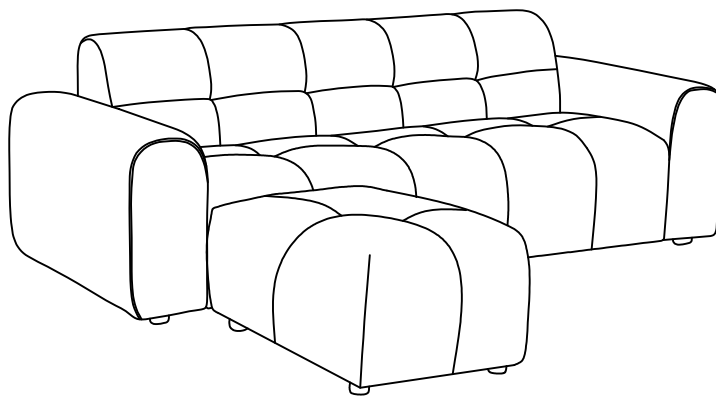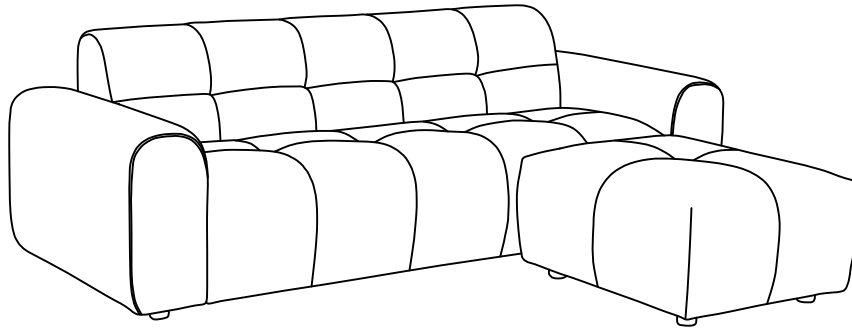



16.

To unmount the ottoman (5) from seat (2), lift the ottoman (5) up and move away from seat (2)

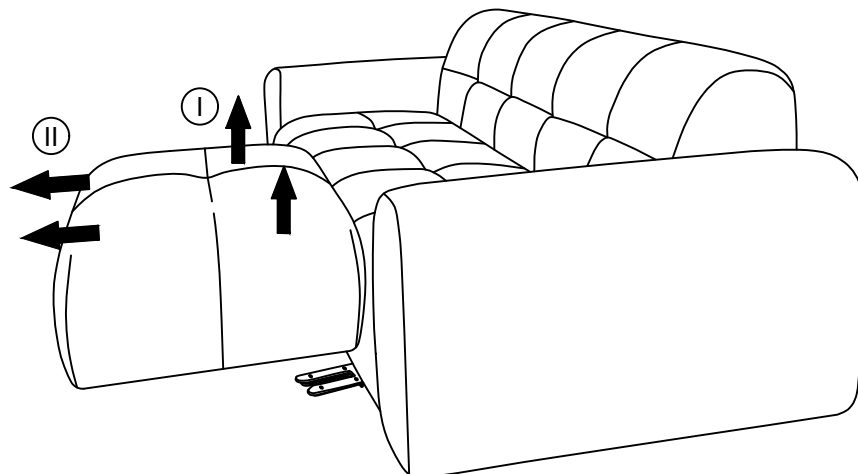

17.

Sofa assembly finished.

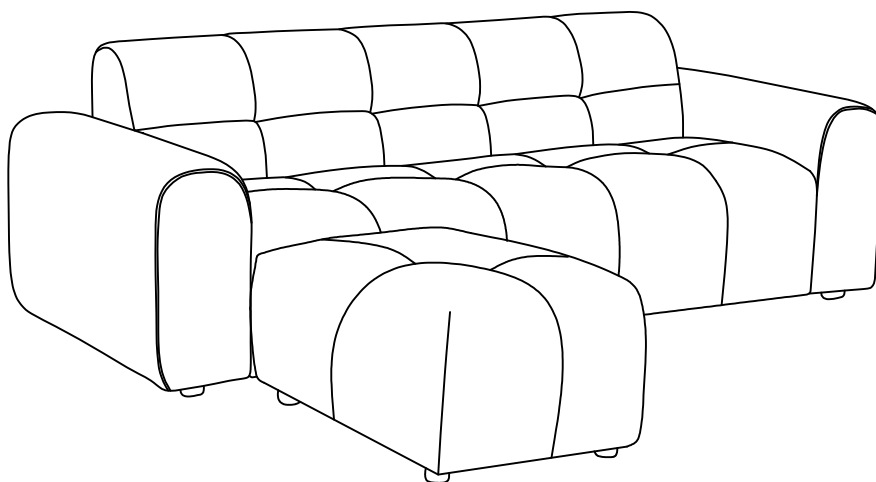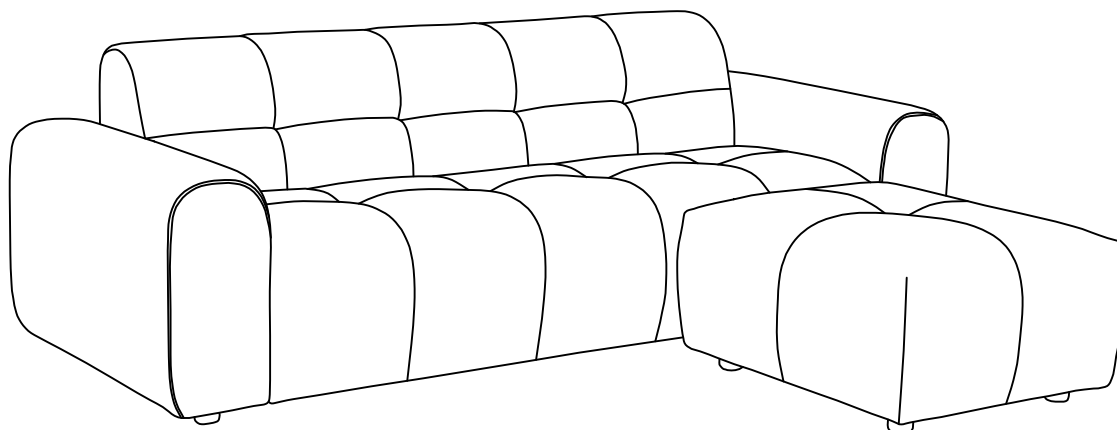

**TEMPLE &
WEBSTER**

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au