


TEMPLE & WEBSTER

ASSEMBLY INSTRUCTIONS

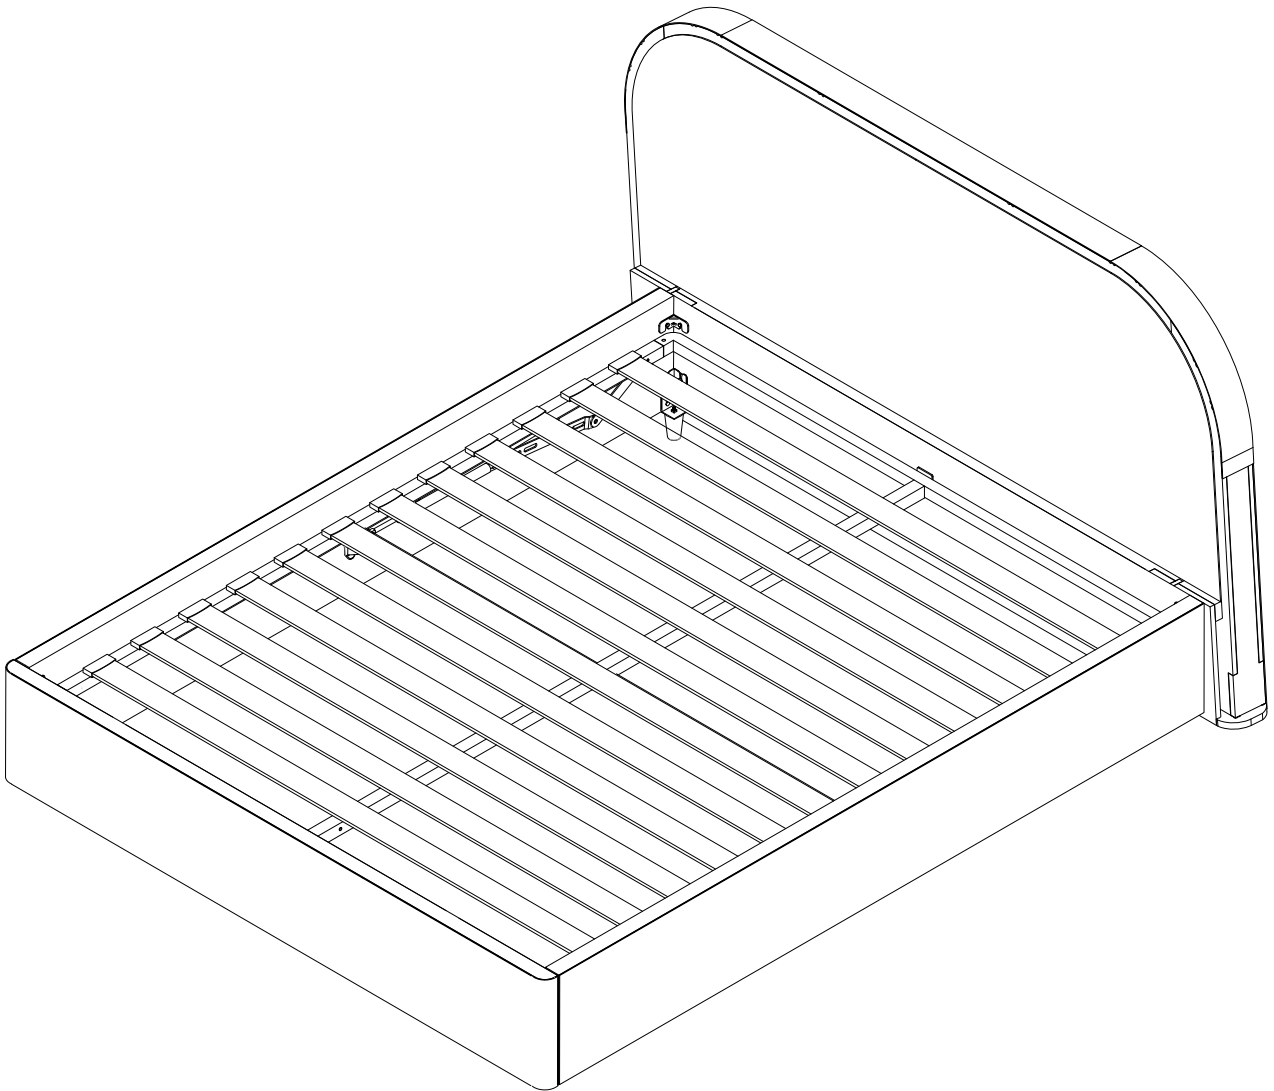

Emery Tooless Upholstered Gas Lift Bed

Read first, enjoy forever

Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don't over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- To reduce the risk of injury, always secure storage furniture to walls and/or floors by using tip-over restraints.
- Never let children climb or hang on drawers, doors or shelves.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it's still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.



Parts list Emery Toolless Upholstered Gas Lift Bed Double

XIEMDTLSBN




4#

① X1



M8


② X4

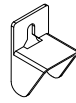


③ X3

NUMBER OF PEOPLE REQUIRED FOR
ASSEMBLY:

2

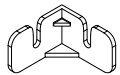


④ X2

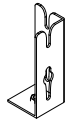

⑤ X4



⑥ X6

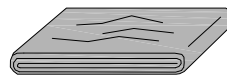


⑦ X1




⑧ X28/30




⑨ X1

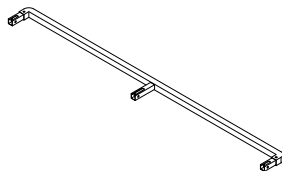


⑩ X2

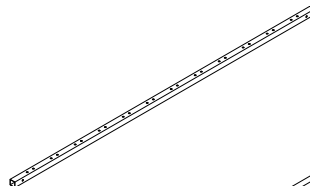


⑪ X2

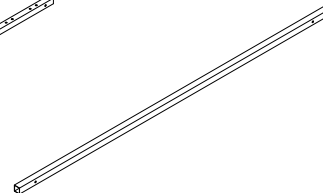


⑫ X1

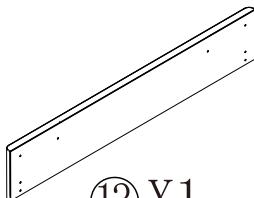


⑬ X1

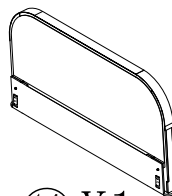


⑭ X1

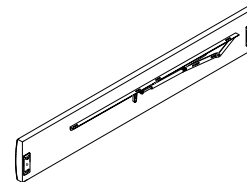


⑮ X1

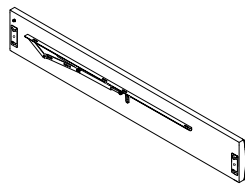

⑯ X1

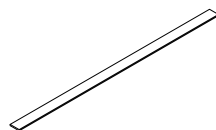

⑰ X14/15

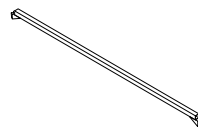

⑱ X1


A



M6*20

11+1 pcs

B




M6*35

8+1 pcs

1.

step 1


Attach the metal rails (parts 15 and 16) to the brackets (part 5) using the four connectors (part 6), ensuring they lock into place securely.

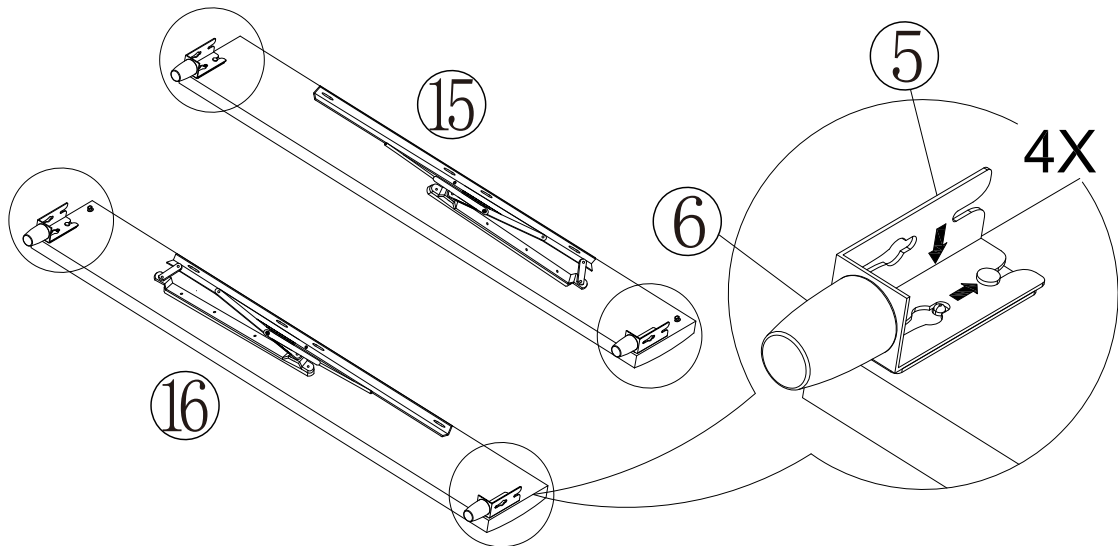

2.

step 2

Attach the metal bracket (part #3) to the back of the piece using four M6*20 screws (part A).

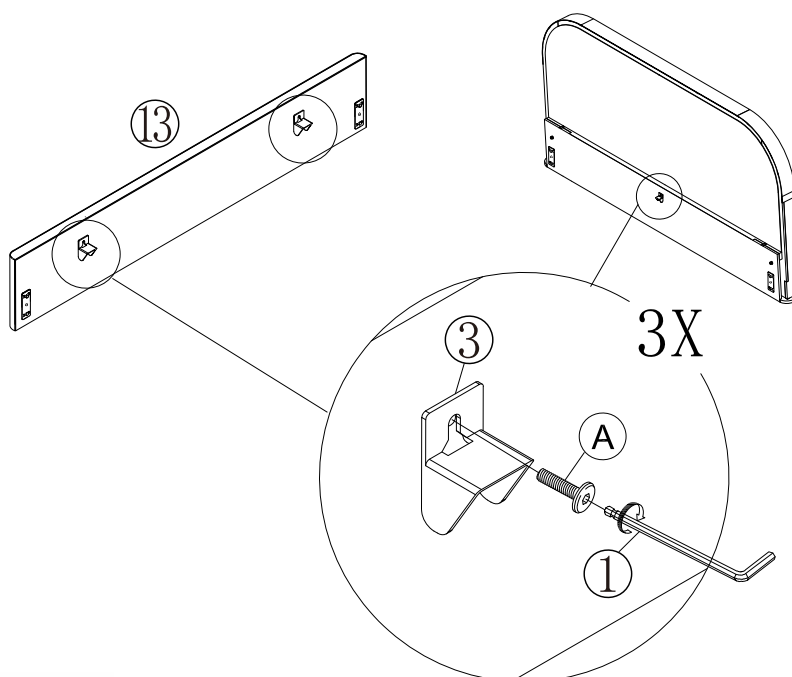

You will need:

A




M6*20

3 pcs

3.

step 3


Attach the two metal brackets (part 6) to the back of the piece (part 14) using the provided screws, ensuring they are securely fastened.

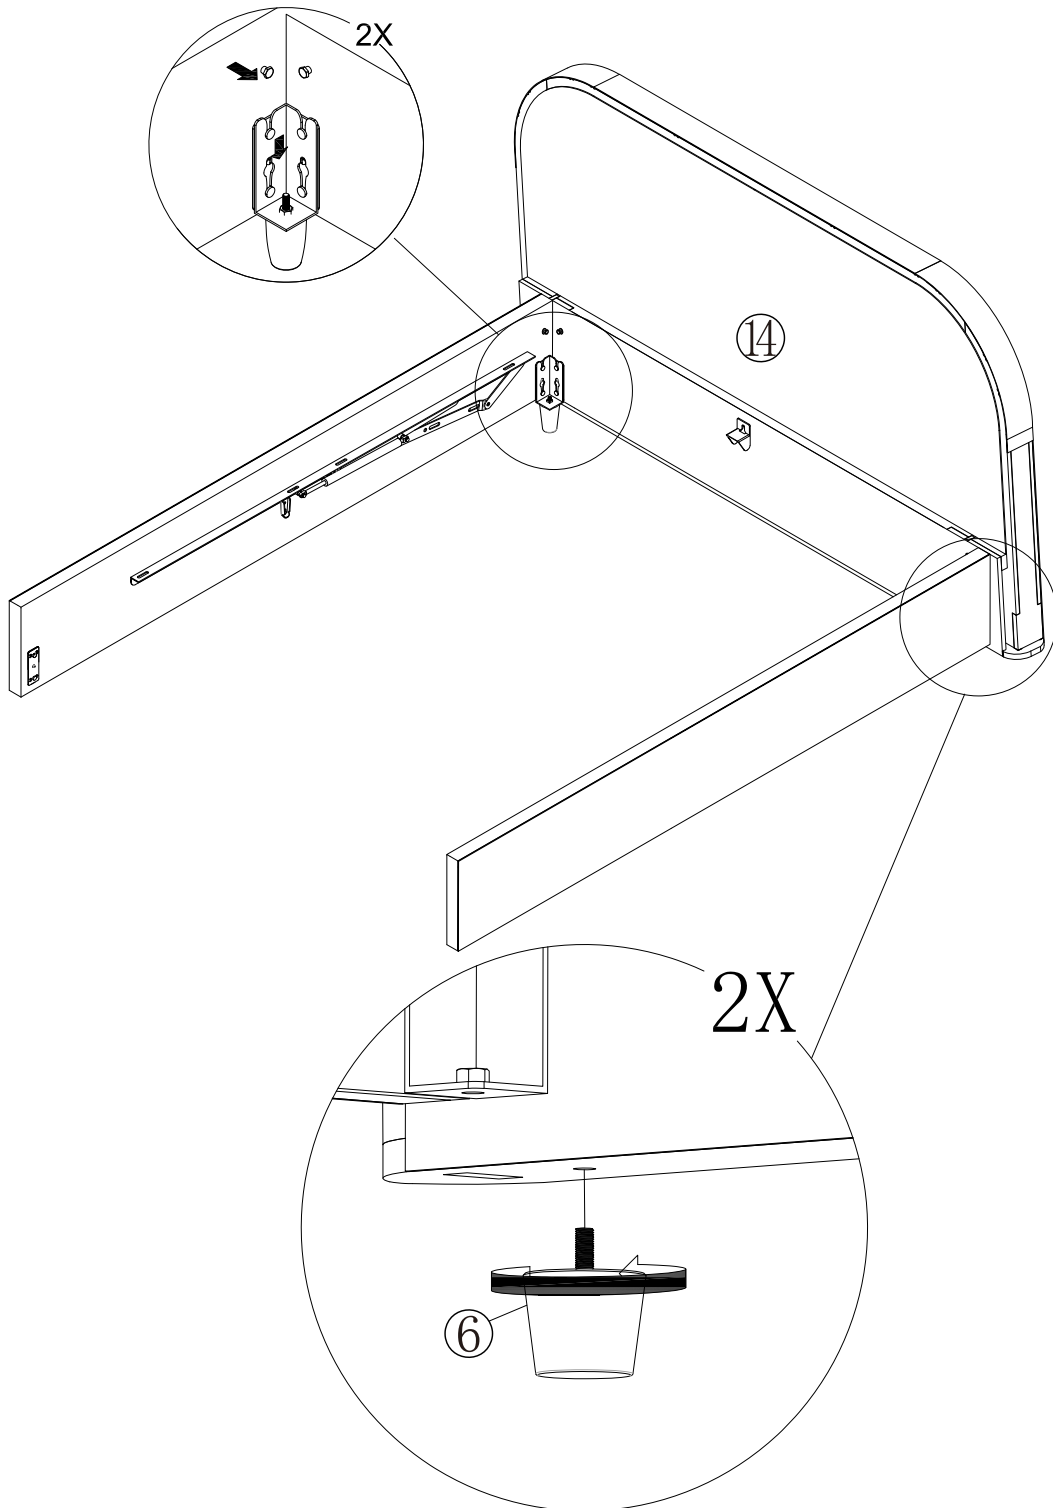

4.

step 4


As shown in the diagram, attach the footboard side panels to the footboard frame using 2 pieces of component 5. After that, install the small metal corner brackets to secure the footboard.

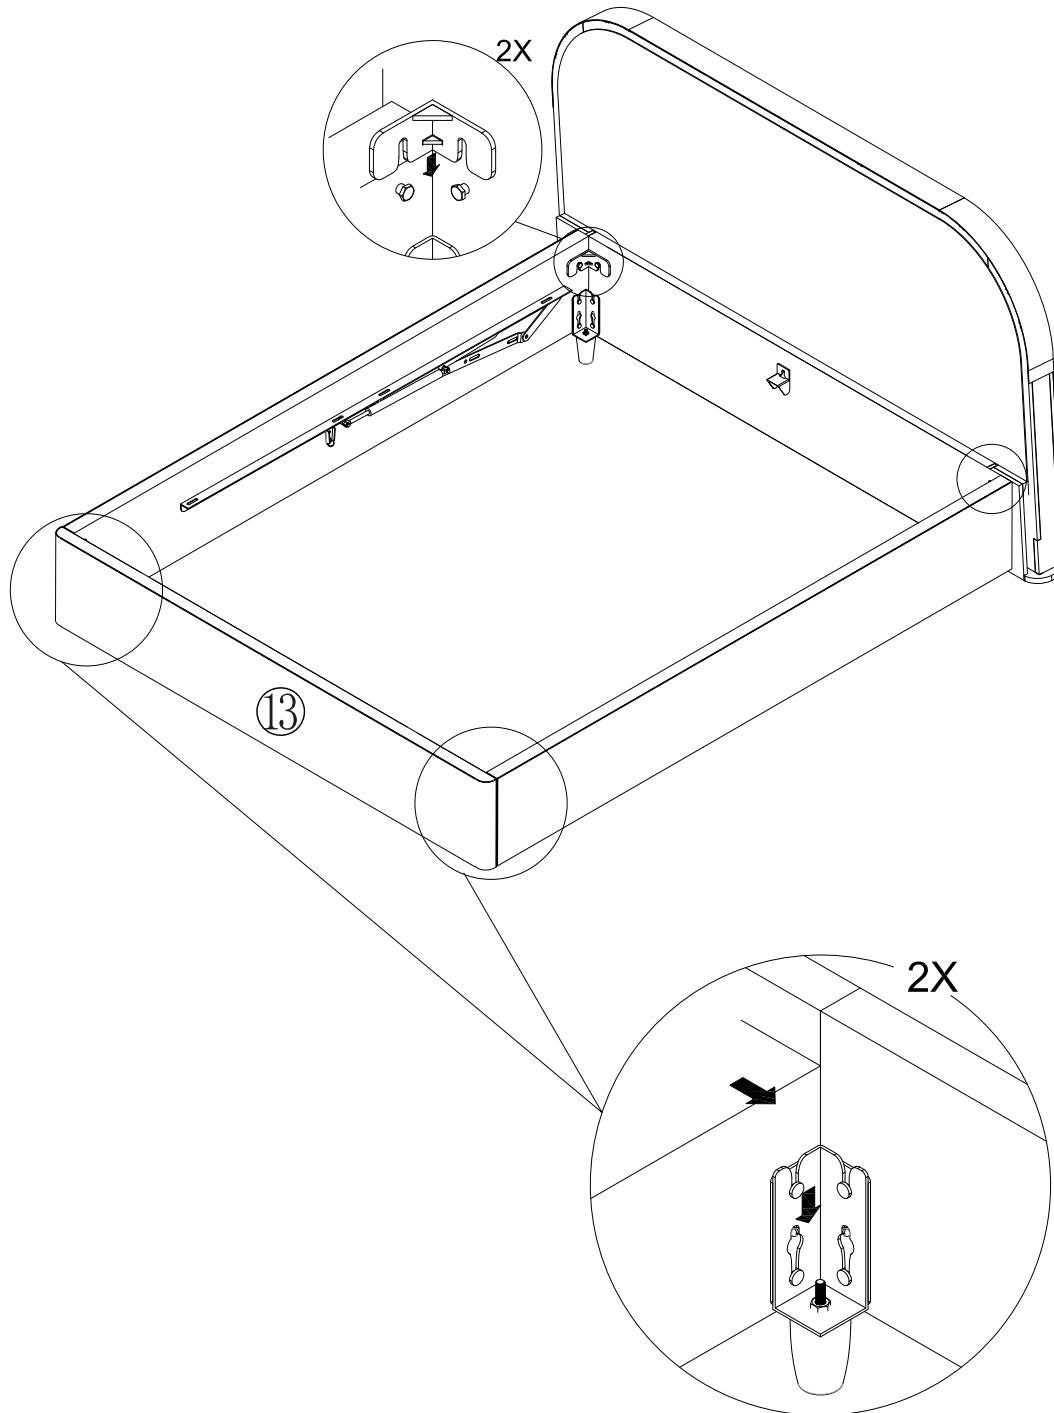

5.

step 5

Install the two gas springs on each side (2X) by attaching them to the brackets. Be sure to tighten the spring connectors carefully. Then install the center horizontal bracket using 2 pieces of component 18. Ensure the bracket is securely fixed in place.

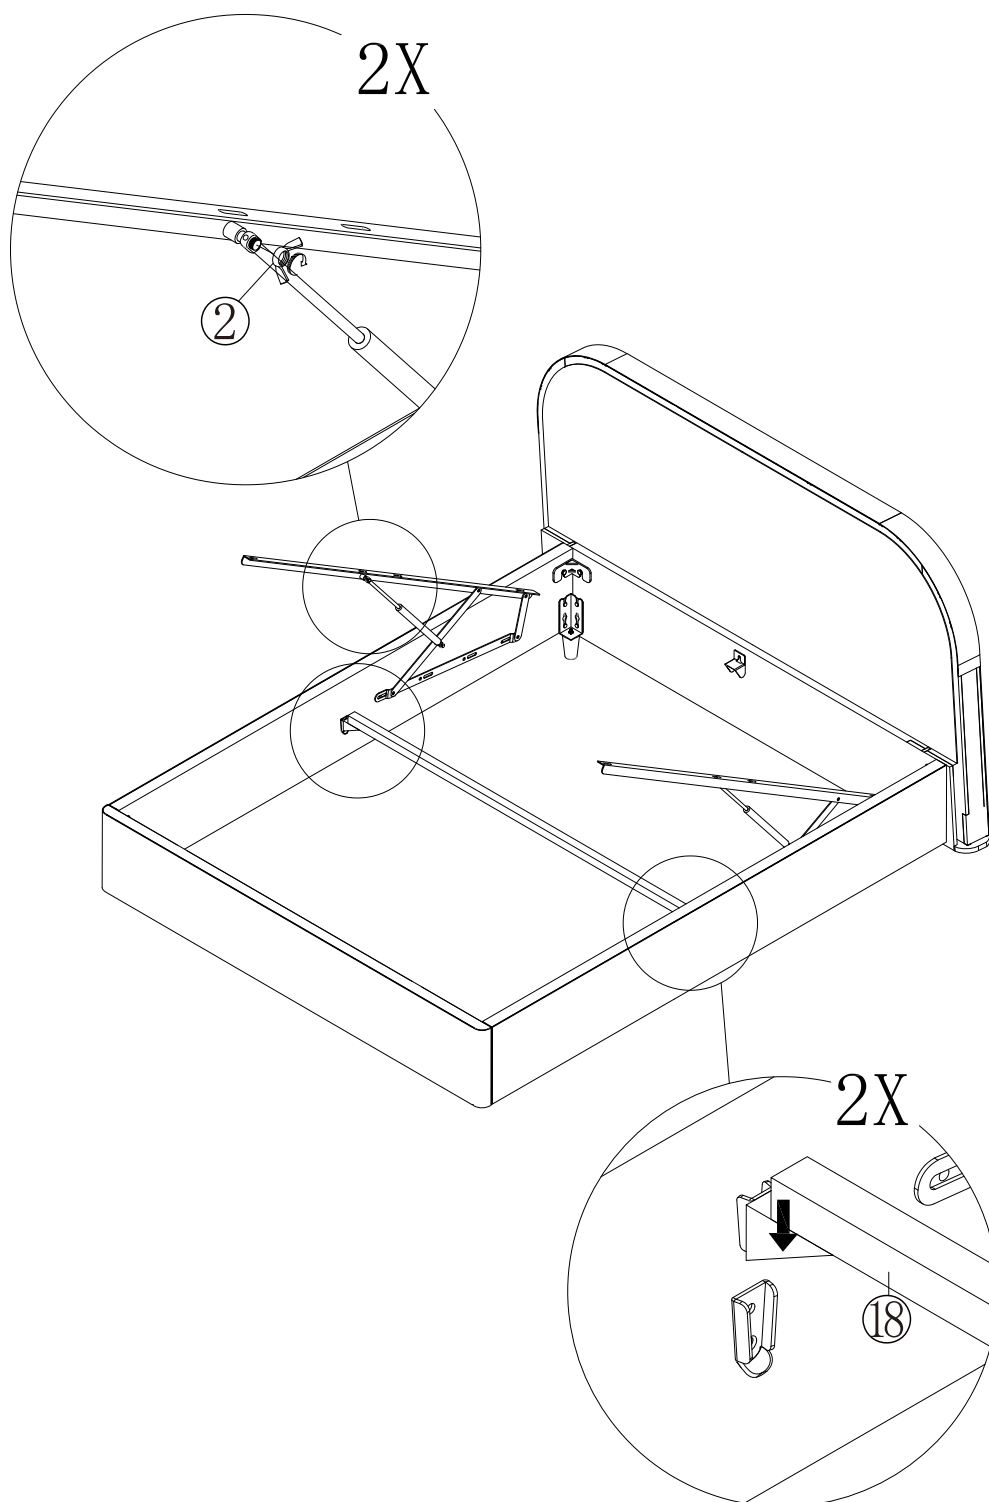


6.

step 6

Slide the Puller into the iron rack, and then complete the whole process, as indicated by the arrows. Tighten the Screws B as pictured.


You will need:

B



M6*35

8 pcs

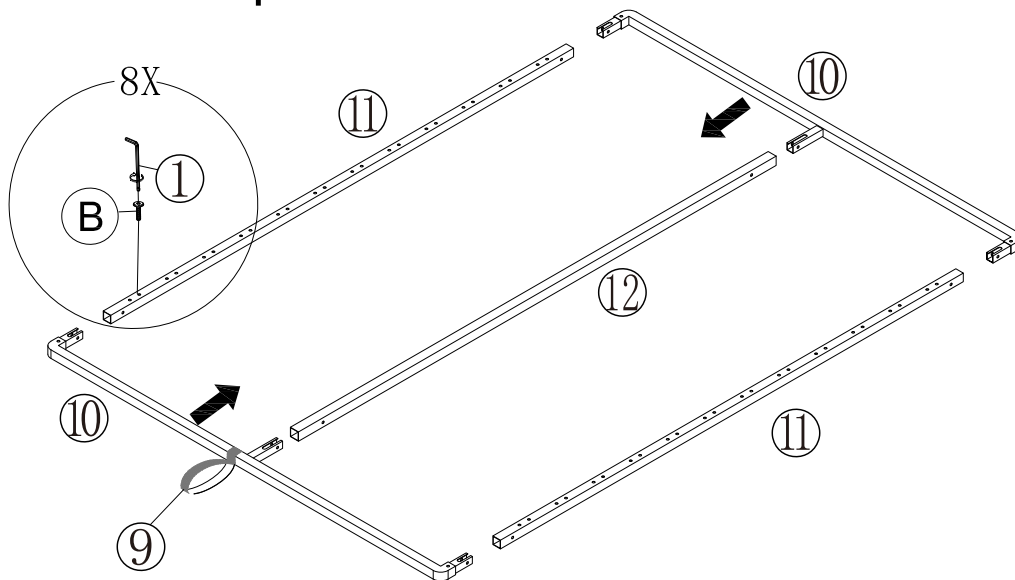


Attention: The assembly location is at the foot of the bed.

7.

step 7

As shown in the image, install the slats and slat clips.

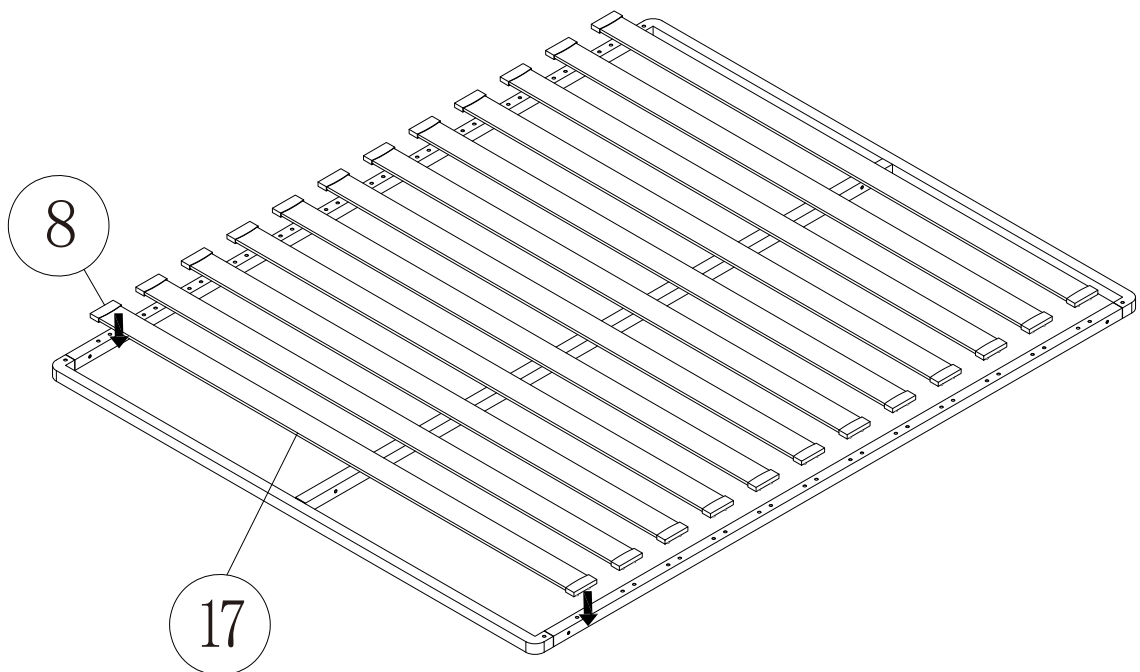

8.

step 8

As shown in the diagram, connect the slats to the gas spring support frame using 8 of the component A connectors.



You will need:

A



M6*20

8 pcs

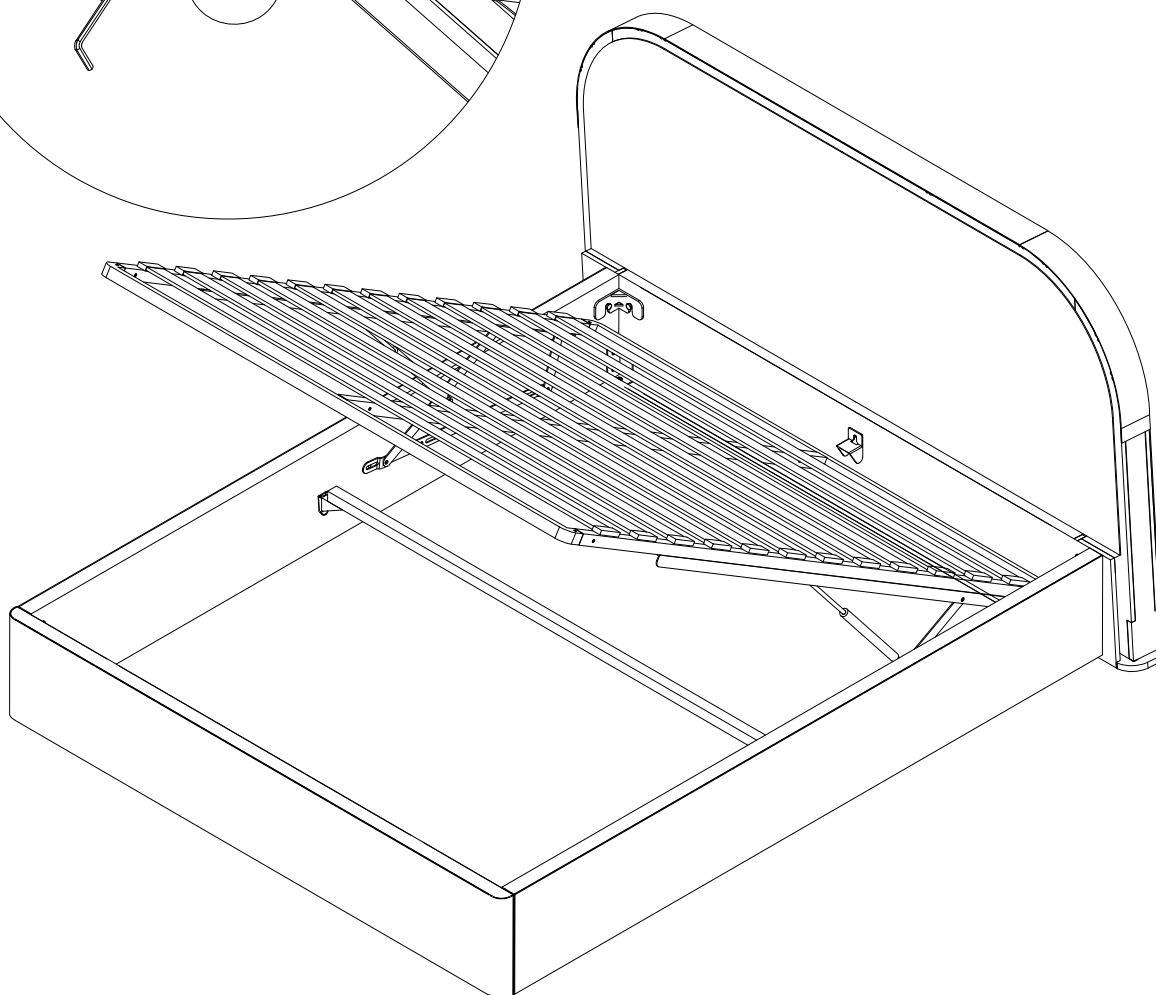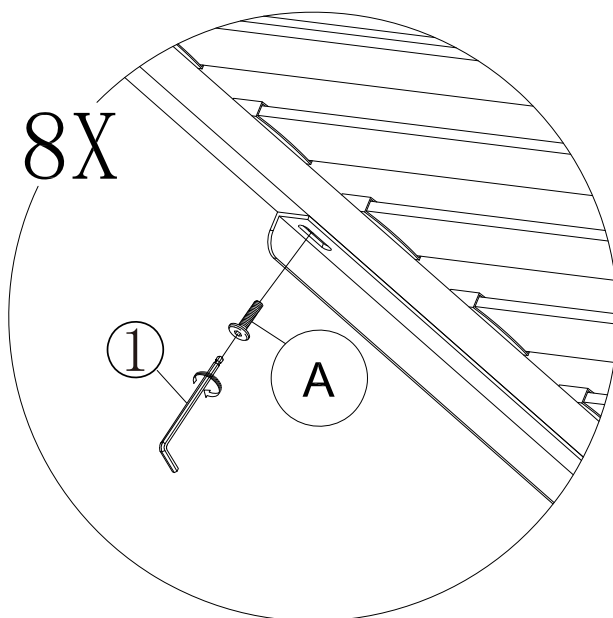

9.

step 9

Unfold the bottom cover , and install it under the bed.

