
TEMPLE & WEBSTER

ASSEMBLY INSTRUCTIONS

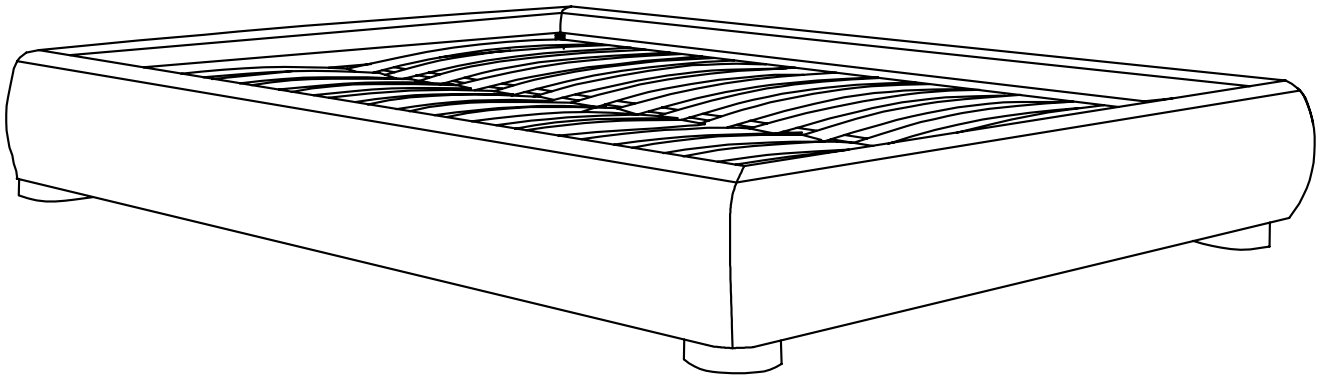

Paloma cream queen bed base

Read first, enjoy forever

Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don’t over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard.
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- To reduce the risk of injury, always secure storage furniture to walls and/or floors by using tip-over restraints.
- Never let children climb or hang on drawers, doors or shelves.
- To protect your product and your home, we recommend using coasters, placemats, rugs and other protective items.
- Screws may loosen over time. We recommend setting a reminder to tighten up every six months.
- Remove any liquid spills immediately using a clean cloth with mild detergent. Do not use bleach or abrasive cleaners. Always test any cleaning agent in an inconspicuous spot first to know if it is suitable.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it’s still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.

Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.

TEMPLE & WEBSTER


Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

Parts list

ASSEMBLY INSTRUCTIONS

Paloma cream queen bed base

AAPALBBQC

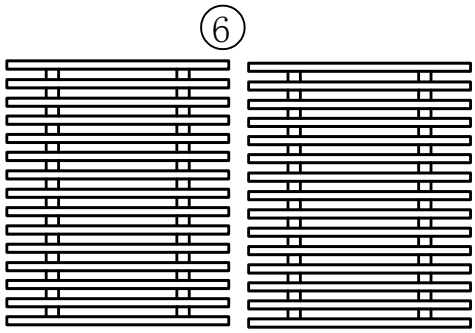








NUMBER OF PEOPLE REQUIRED FOR ASSEMBLY:

2

TOOLS REQUIRED FOR ASSEMBLY



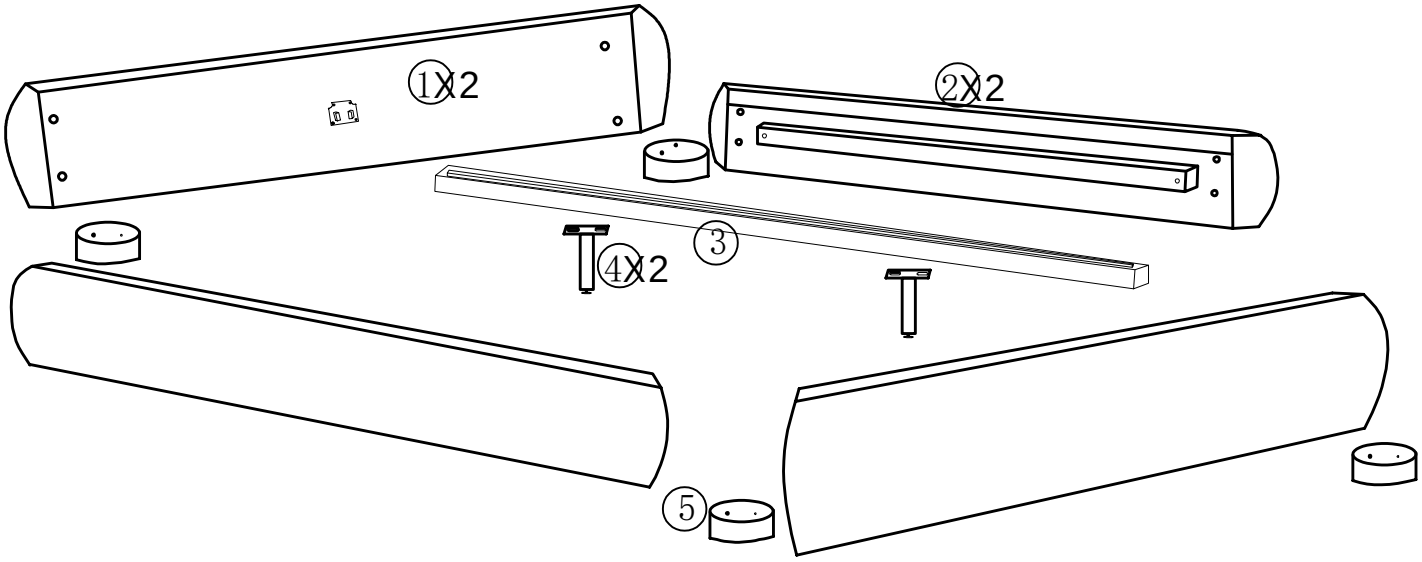

AX16  M8X30mm	BX4  120mm	CX8  M6X20mm	DX4  130X47X47mm	EX8  M8X20mm	FX20  Ø4X30mm
GX2  68X33X30mm	HX1  5mm	IX1  5mm	JX8  M8X45mm	KX4  Ø4X16mm	


TEMPLE & WEBSTER


Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


1.

Attach 8x Bolts (A) into Headboard (1) and Footboard(1).


You will need:
HX1  5mm
AX8  M8X30mm

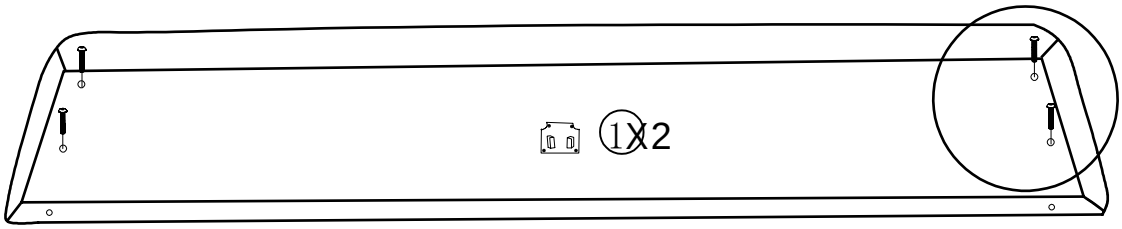

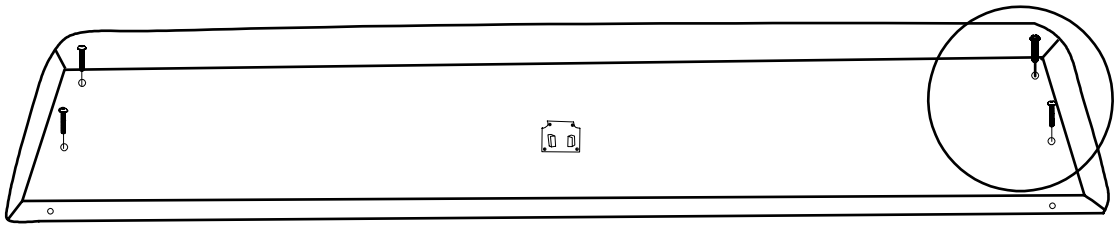

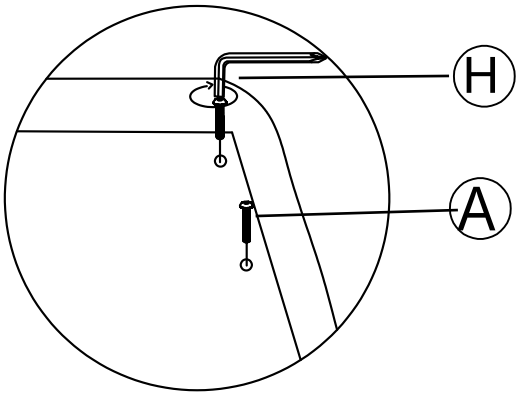

Be careful not to tighten the Bolts,just to 70%.

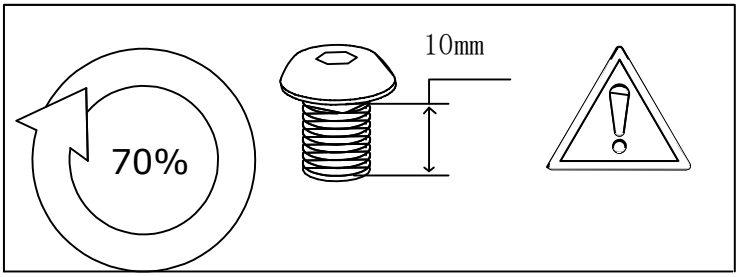

TEMPLE & WEBSTER


Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

2.

Attach 4x Indices(D) to Left and Right Sideboard (2) with 8x Bolts(A).

You will need:

HX1




5mm

AX8





M8X30mm

DX4



130X47X47mm

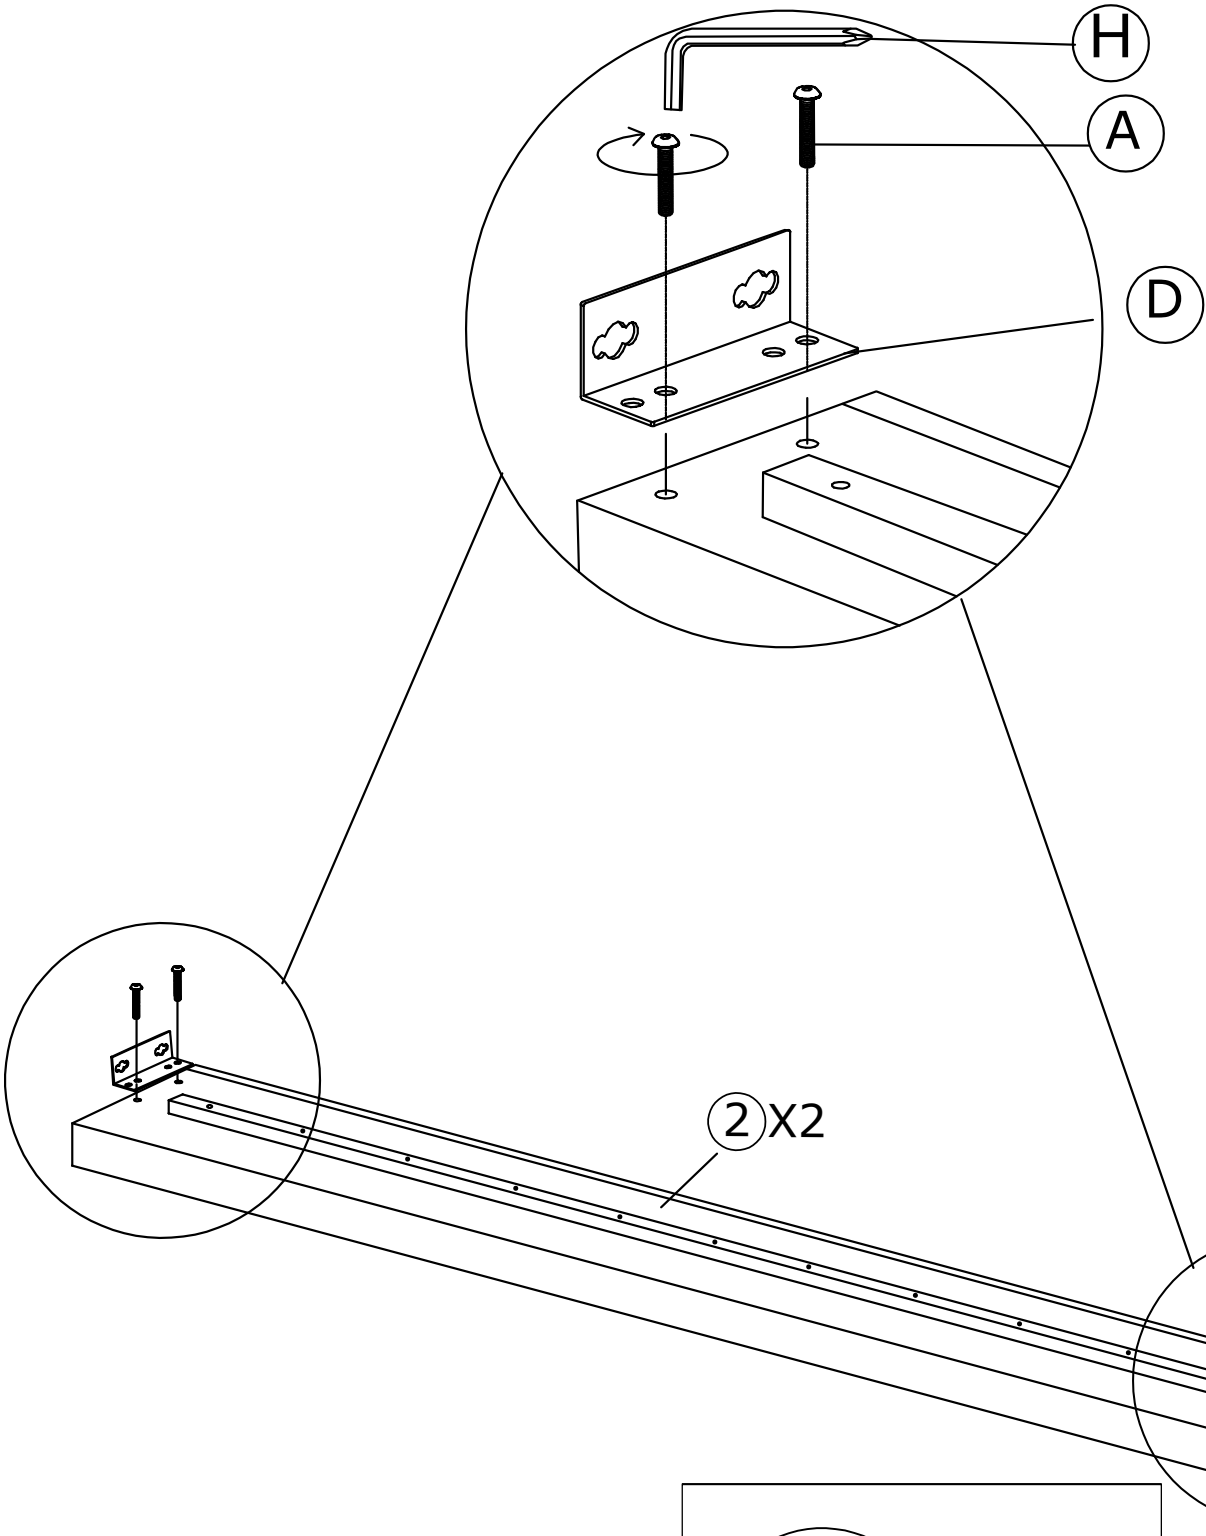


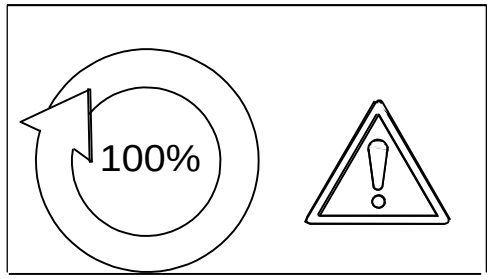

TEMPLE & WEBSTER

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

3. Attach 2x Sideboard(2) to Headboard(1) and Footboard (1) with Bolts have been installed.

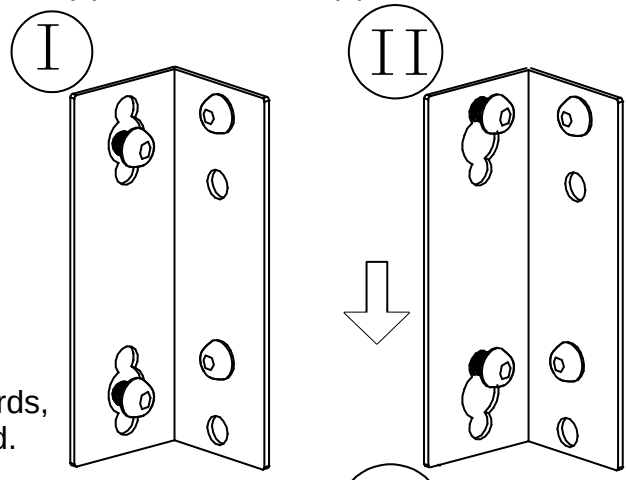



You will need:

HX1



Noted:After hanging, press down sideboards, the bolts reach the top, and then tightened.

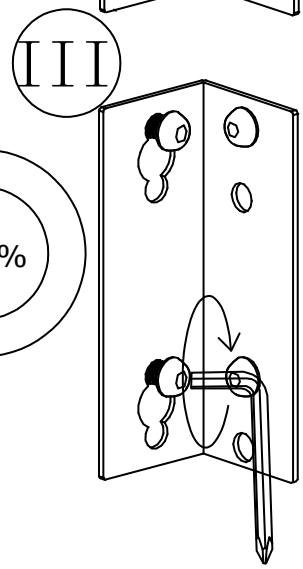


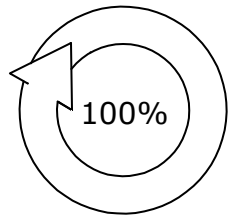



4.

1) Attach 4x Legs(5) to Bed Base with 8x Bolts (J) and 8 x plates(E) .

2) Glue the 4xFelt (B) to the bottom of the installed wooden foot.

You will need:
BX4  Ø120MM
IX1  5mm
JX8  M8X45mm
EX8  M8X20mm

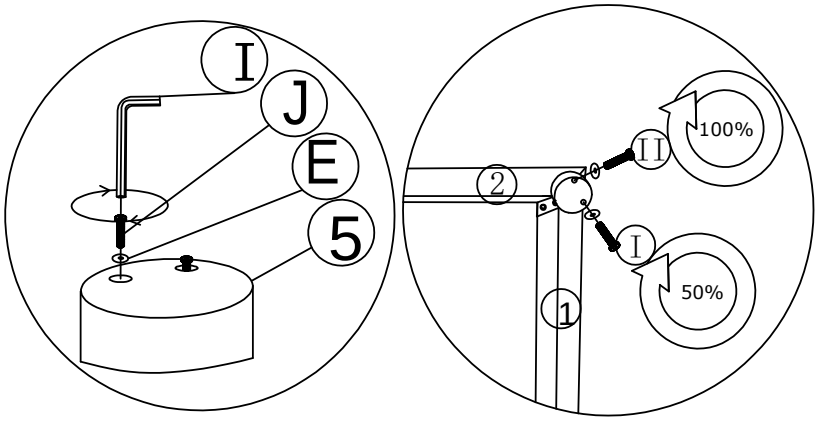




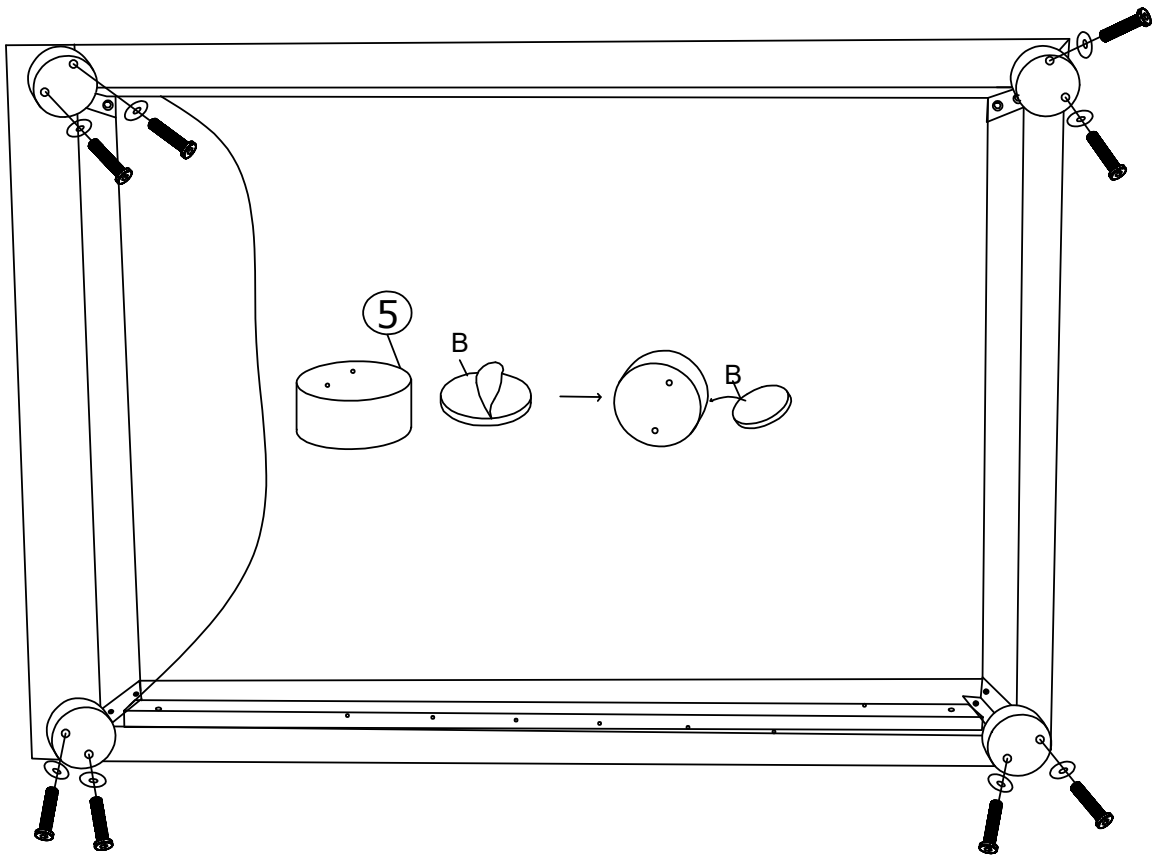


5.

1).Attach 2x Support Legs(4) to 1x Middle Support(3) with 4x Bolts (C).


2).Attach 2x Pendant (G) to 1x Middle Support(3) with 2x Bolts (C) and 4x Screws(K).

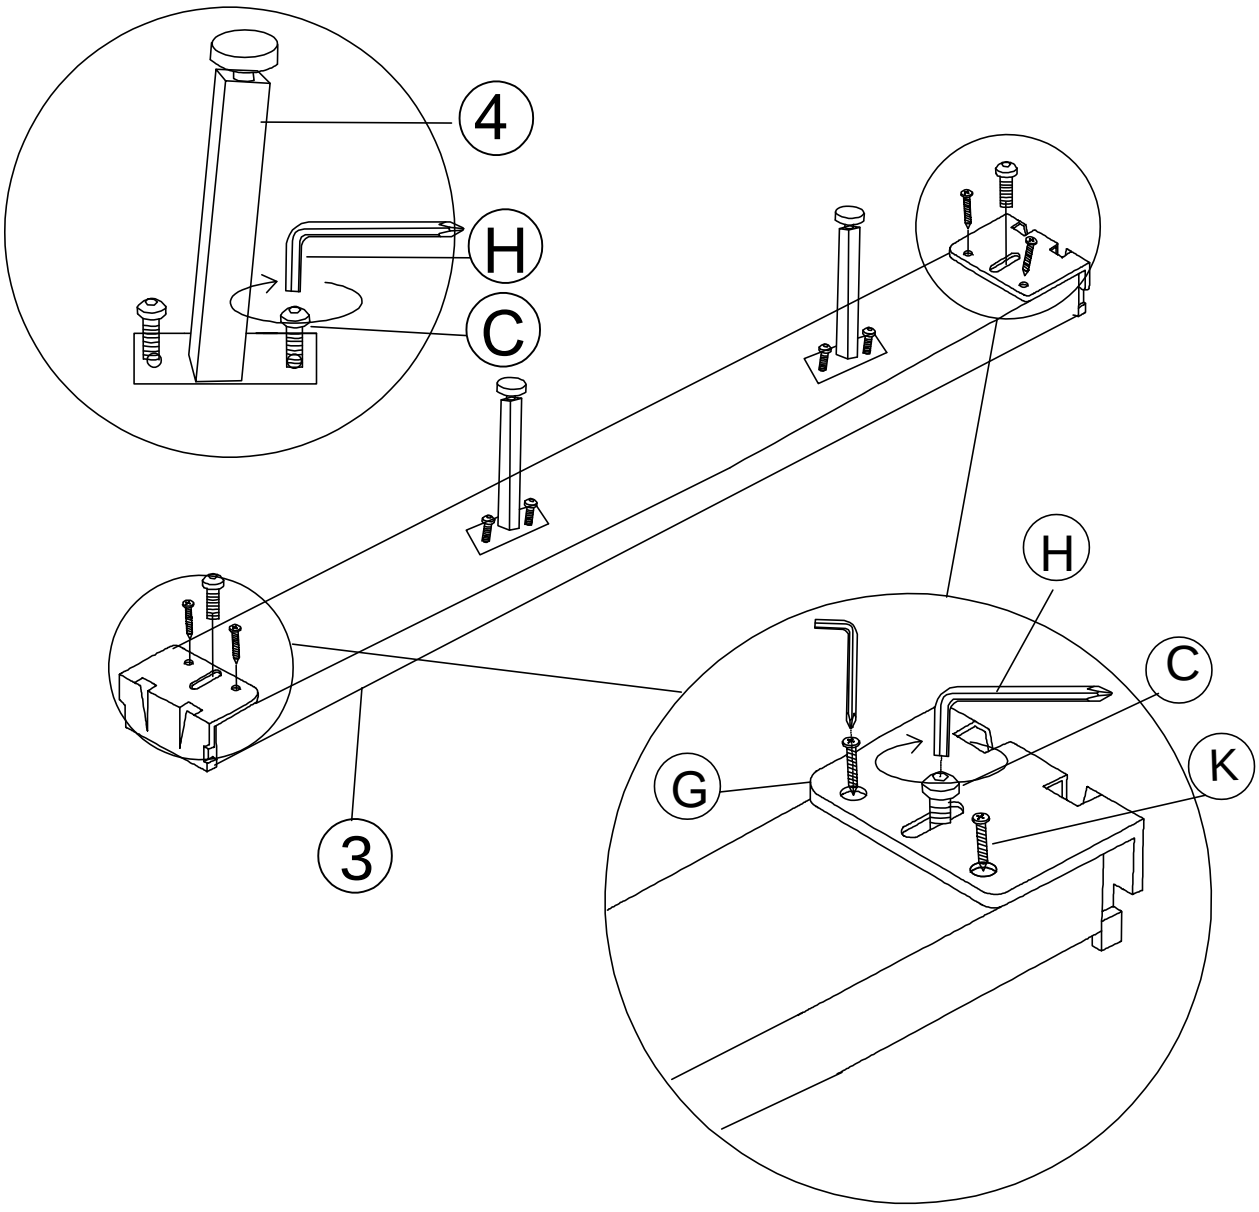

You will need:
GX2  68X33X30mm
CX6  M6x20mm
HX1  5mm
KX4  Ø4x16mm

6.

Attach 1x Middle Support (3) to Bed Base with 2x Pendants have been install on it.

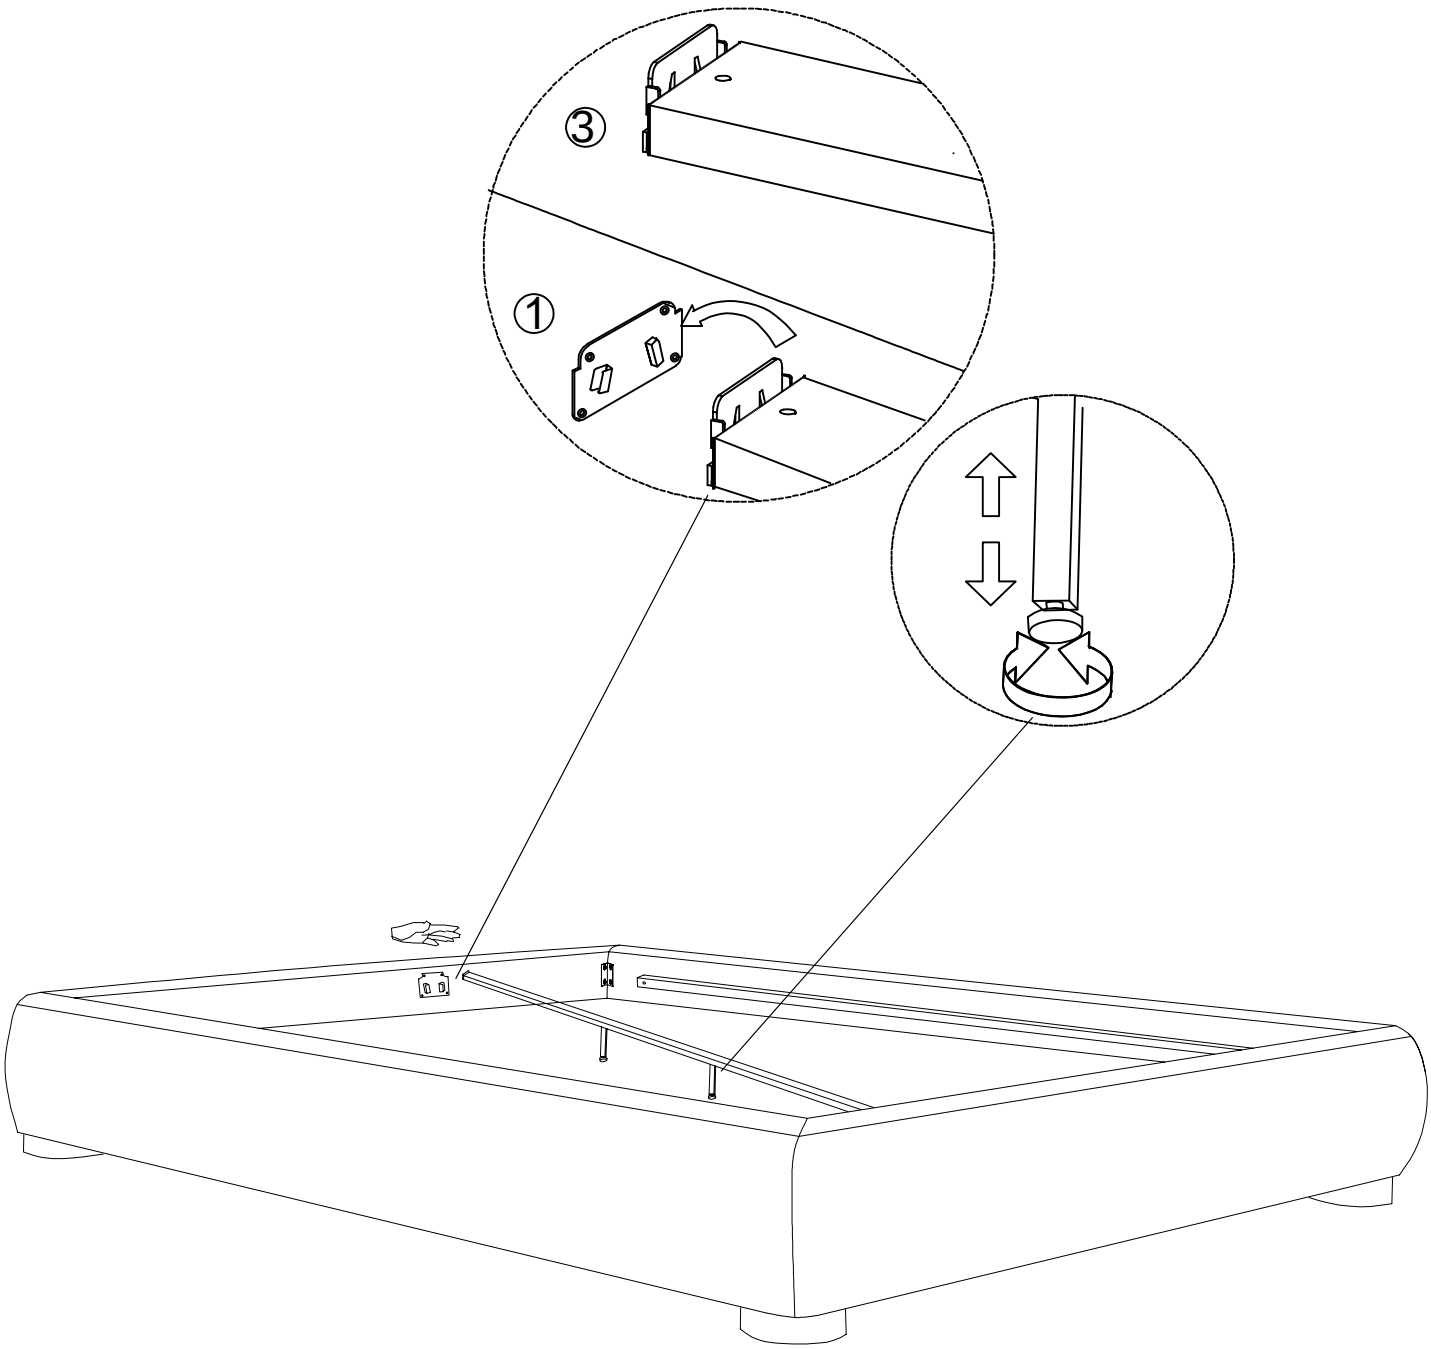

7.

Attach Plates to Bed with 20x Screws (F).

You will need:
HX1  5mm
FX20  Ø4X30mm

