
TEMPLE & WEBSTER

ASSEMBLY INSTRUCTIONS

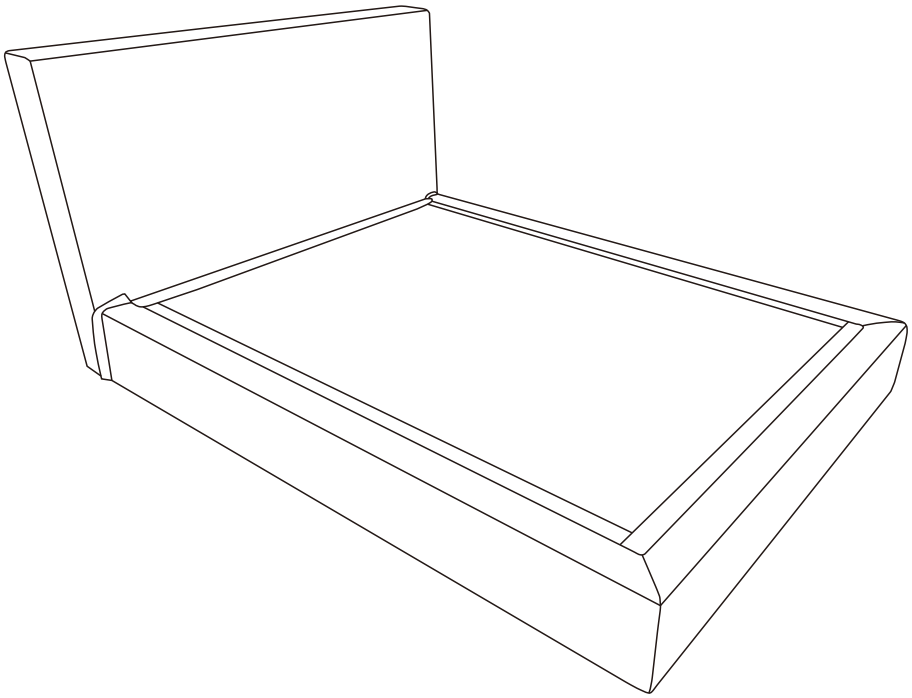

Mallo Upholstered bed Queen

Read first, enjoy forever

Assembly tips

- Assemble your product on a level surface and lay something soft underneath to protect potential floor damage.
- Don’t over tighten screws. During assembly we recommend tightening to approximately 70% tightness. Only tighten hardware 100% when fully assembled.
- Keep children away from assembly area as bags and small parts can pose a choking hazard
- Make sure you have enough space to layout parts before starting. We recommend assembling your item in its final location.
- Do not stand on or put weight on the parts as it may warp or damage product.
- We do not recommend the use of drills or power tools (unless specified) as it may damage the product or hardware. Use hand held screwdrivers only.
- It is best that two people assemble the product as some products may be too heavy for one person. Check this booklet for guidance.

Safety, care and maintenance

- To reduce the risk of injury, always secure storage furniture to walls and/or floors by using tip-over restraints.

Recycling

We hope that you love your product forever, but we know situations change. In the event that you wish to dispose of your product please consider some creative ways to give it a new home:

- If it’s still in great shape, sell it on your favourite online marketplace!
- Give it a second life by affording it a fresh coat of paint.
- If you must dispose of it, why not donate it to your local charity or shelter for someone else to enjoy.


Please dispose of this product and packaging responsibly and recycle where possible. Scan the QR code to read more about Temple and Webster's commitment to a more sustainable future.

TEMPLE & WEBSTER

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

Parts list


ASSEMBLY INSTRUCTIONS
Mallo Upholstered bed Queen
HEMAQBGR HEMAQBNT

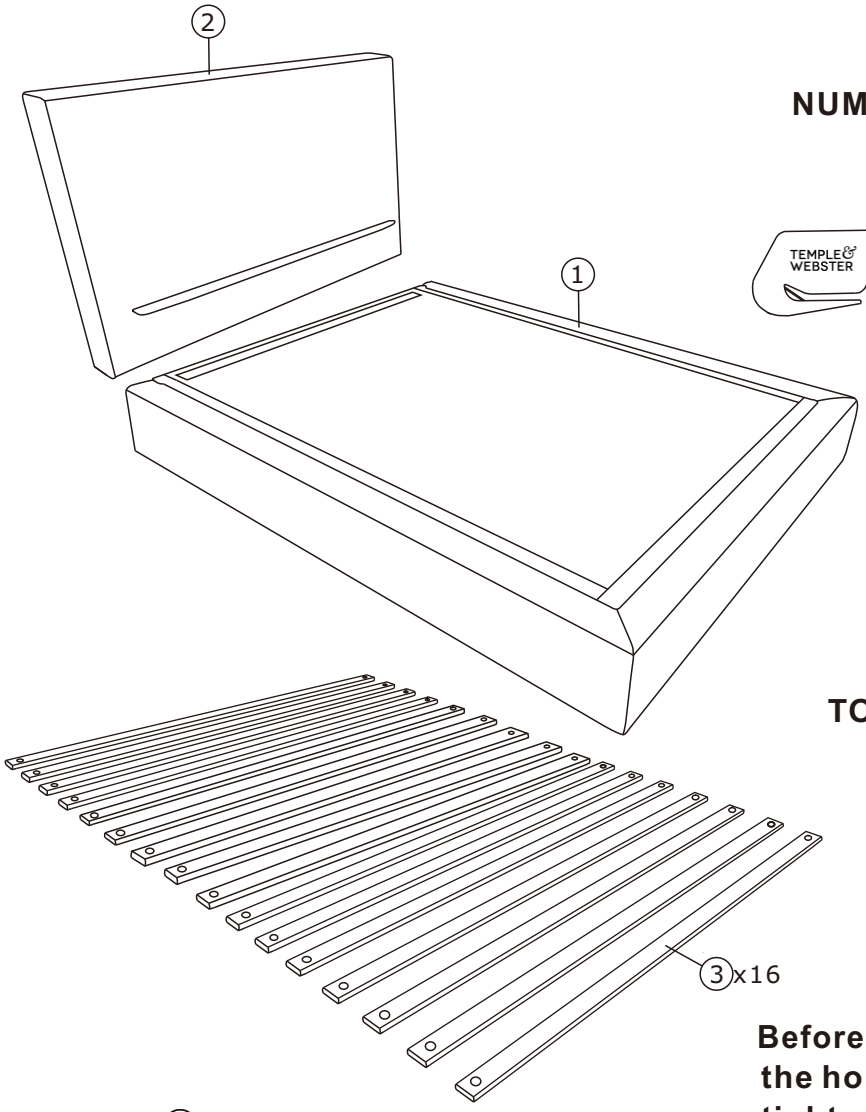

NUMBER OF PEOPLE REQUIRED FOR ASSEMBLY:
2

Note: The blade is packed with the instruction manual.

TOOLS REQUIRED FOR ASSEMBLY


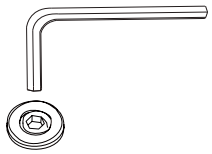


Before installation,insert the screws into the holes and tighten them,but do not tighten them to100%,70%to 80%is sufficient.Finally,after all screws are installed,tighten all screws to100%.

TEMPLE & WEBSTER


Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

Parts list

A	B	C	D
 M6x20mm	 M6/Ø16mm	 5mm	 80x20x200mm
54pcs	32pcs	1pc	8pcs


1.

The first step is to use a small knife to cut open the plastic film.

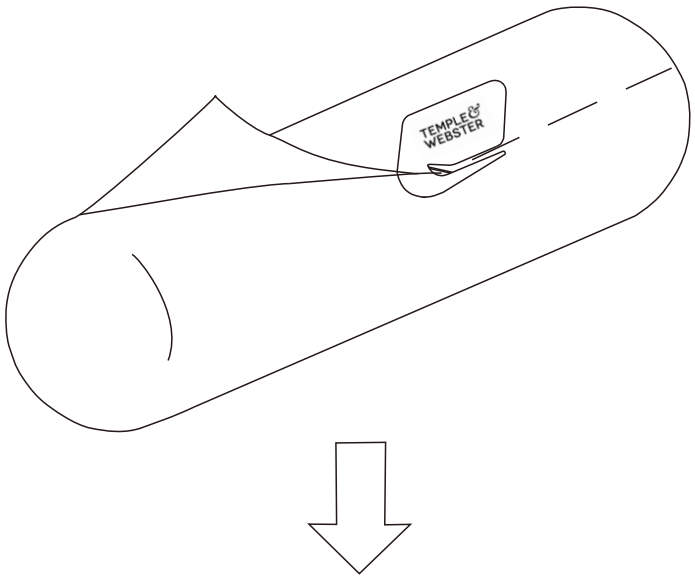


2.

The second step is to unfold and flatten the compression bag.

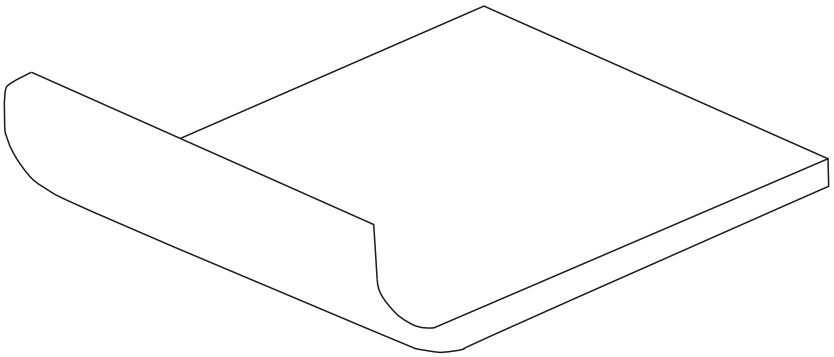


3.

The third step is to use a small knife to cut open the compression bag.

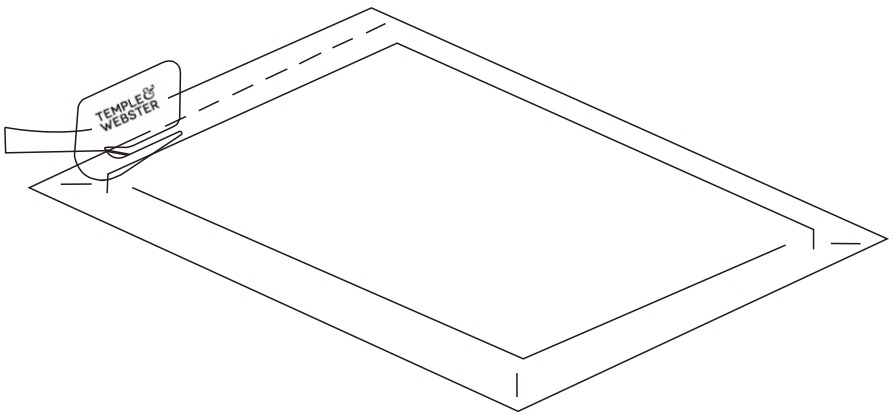

4.


Insert head/foot bracket ④ into the front and rear sides of side rail bracket ⑤

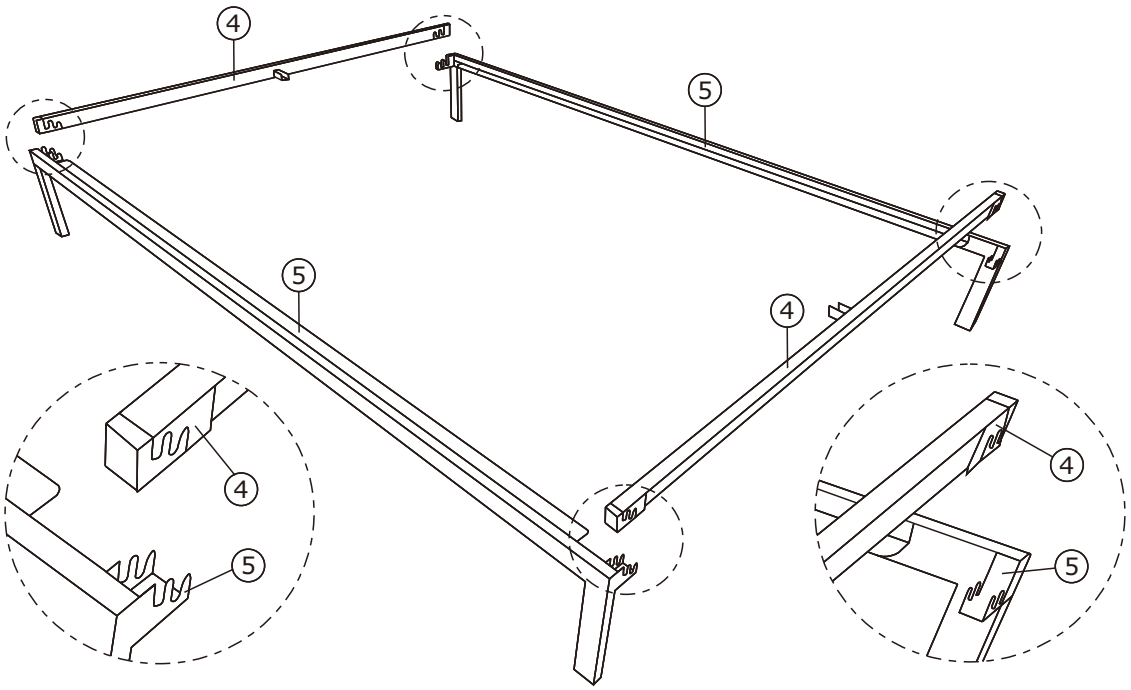

5.

Place middle support bracket ⑥ onto head/foot bracket ④, then fasten all bed brackets with screws

You will need
Ax6  M6x20mm
Cx1  5mm

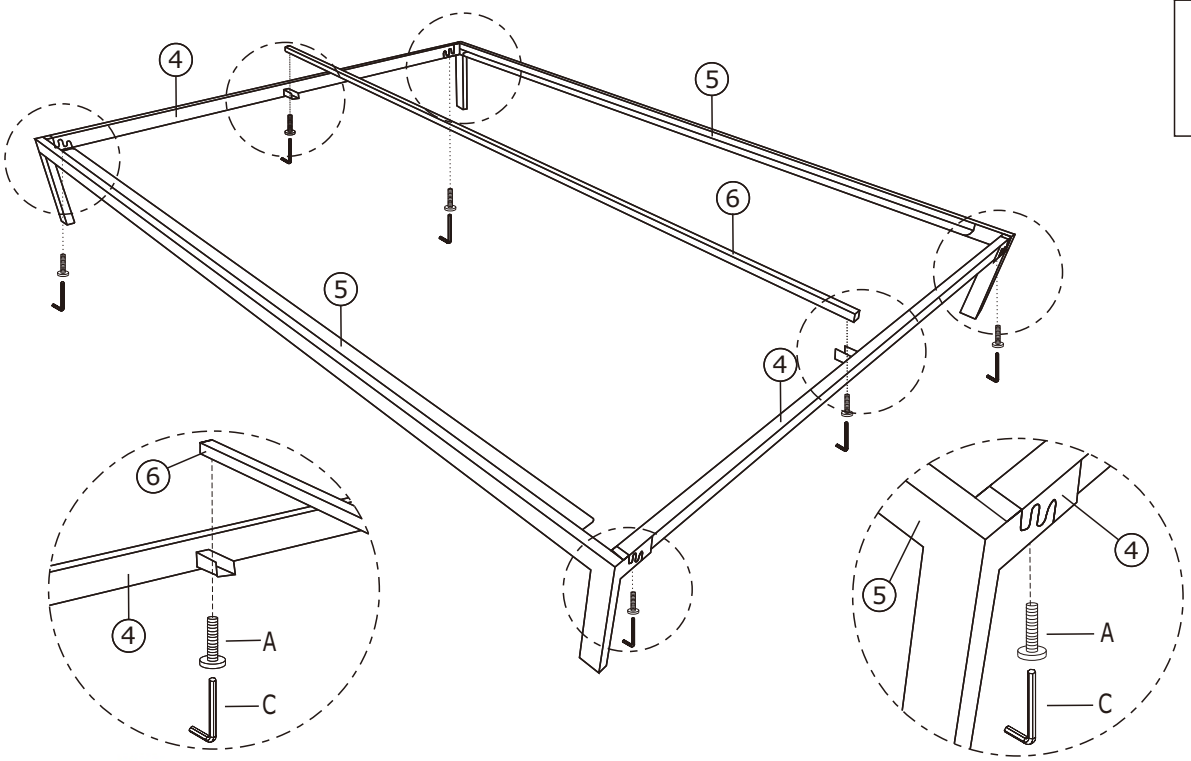


TEMPLE & WEBSTER

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au

6.

Once the bed frame brackets are fully secured,flip the entire assembly over.Attach hardware feet (D) to Head & Foot Brackets ④, Side Rail Brackets ⑤, and Centre Support Bracket ⑥.


You will need
Ax16  M6x20mm
Cx1  5mm
Dx8  80x20x200mm

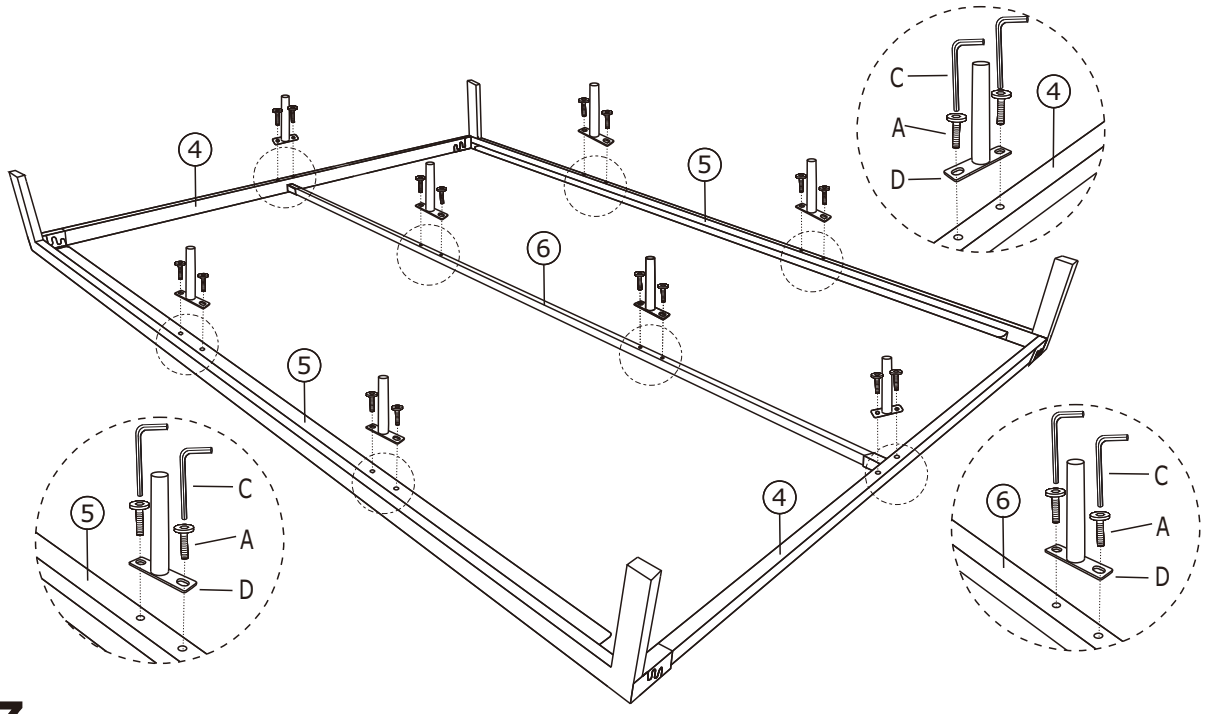

7.

Once all metal feet are installed, flip the frame back over, then install slats ③

You will need
Ax32  M6x20mm
Bx32  M6/Ø16mm
Cx1  5mm

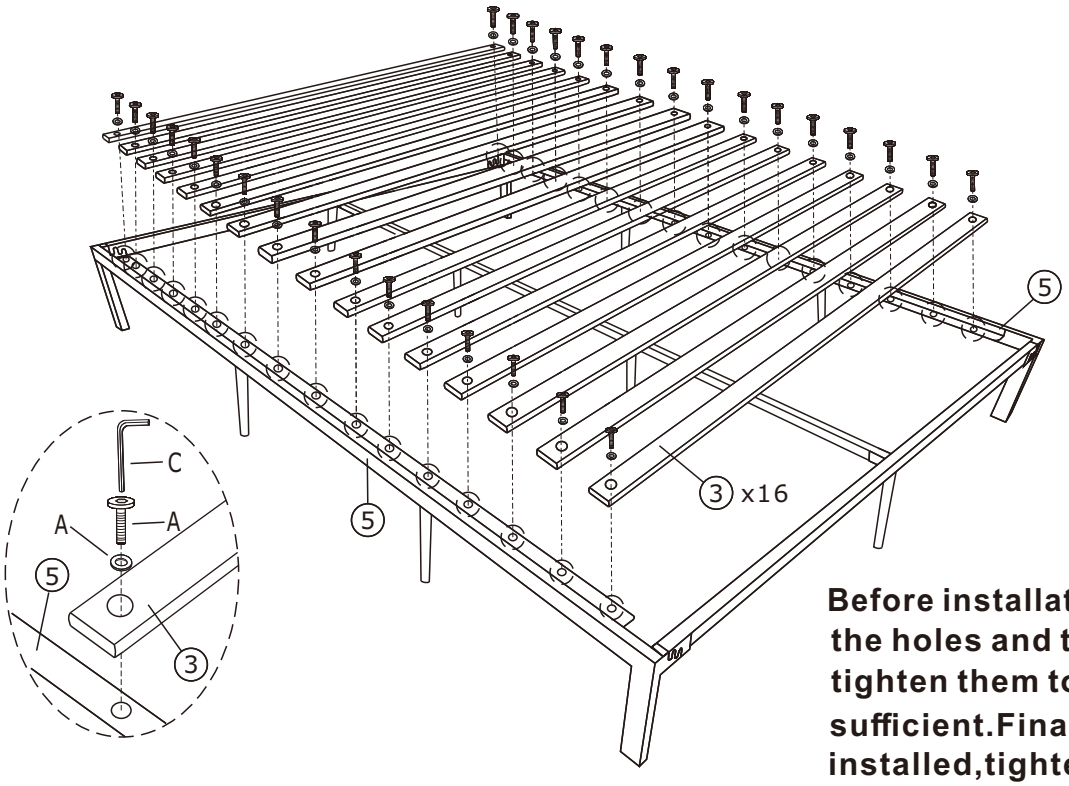


Before installation,insert the screws into the holes and tighten them,but do not tighten them to100%,70%to 80%is sufficient.Finally,after all screws are installed,tighten all screws to100%.

TEMPLE & WEBSTER

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


8.

Cut open the bed upholstery cover ①,
and slip it over the pre-assembled metal frame.

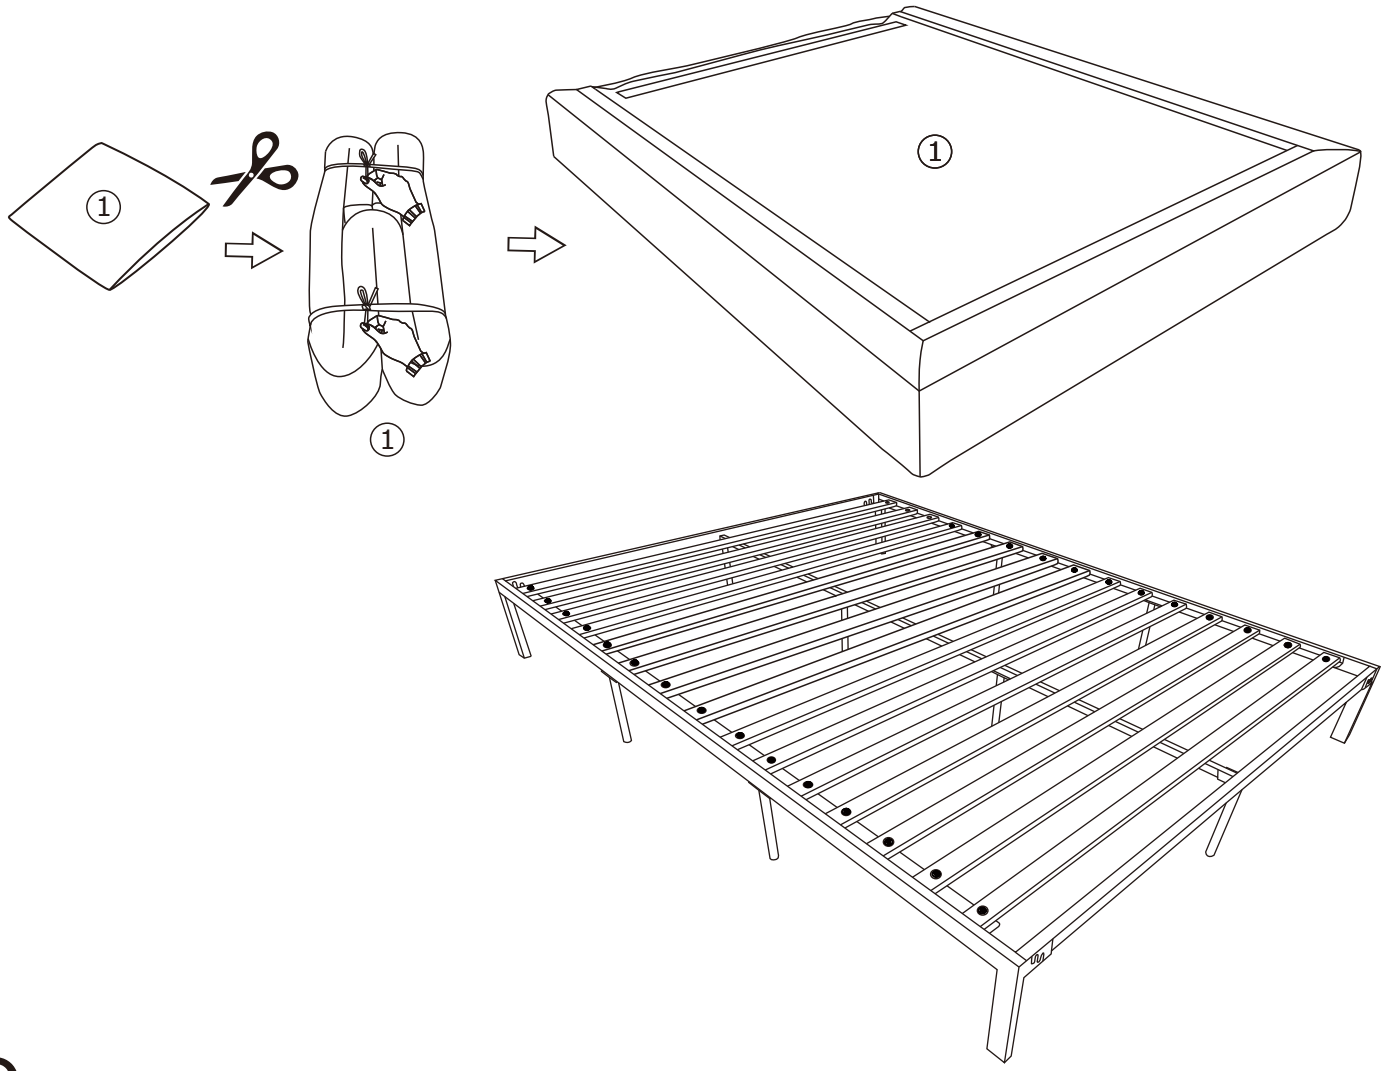

9.

Peel back the soft loop side of the Velcro (hook-and-loop fastener)
on the underside of the bed cover ①.

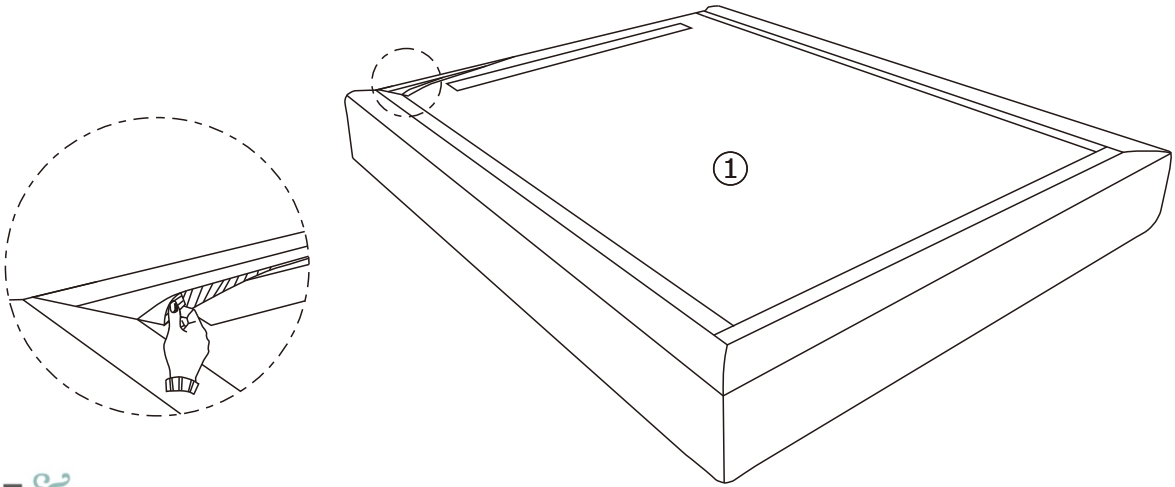


TEMPLE & WEBSTER

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


10.

Align and press the loop side of the Velcro on the bottom rear of bed cover ① onto the hook side on the metal frame.

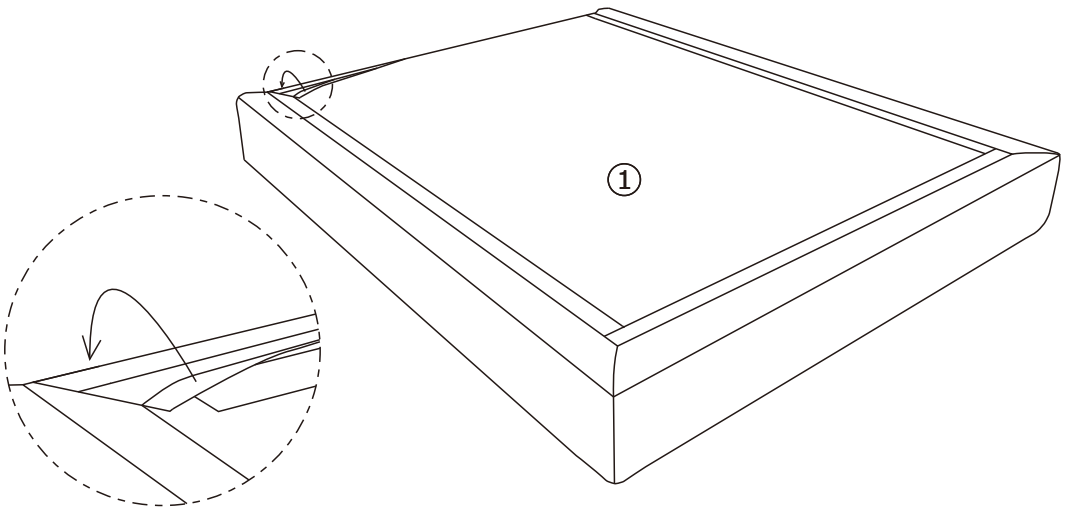

11.

Cut open the headboard cover ②, align it with the rear and side of the bed base, then zip it up.

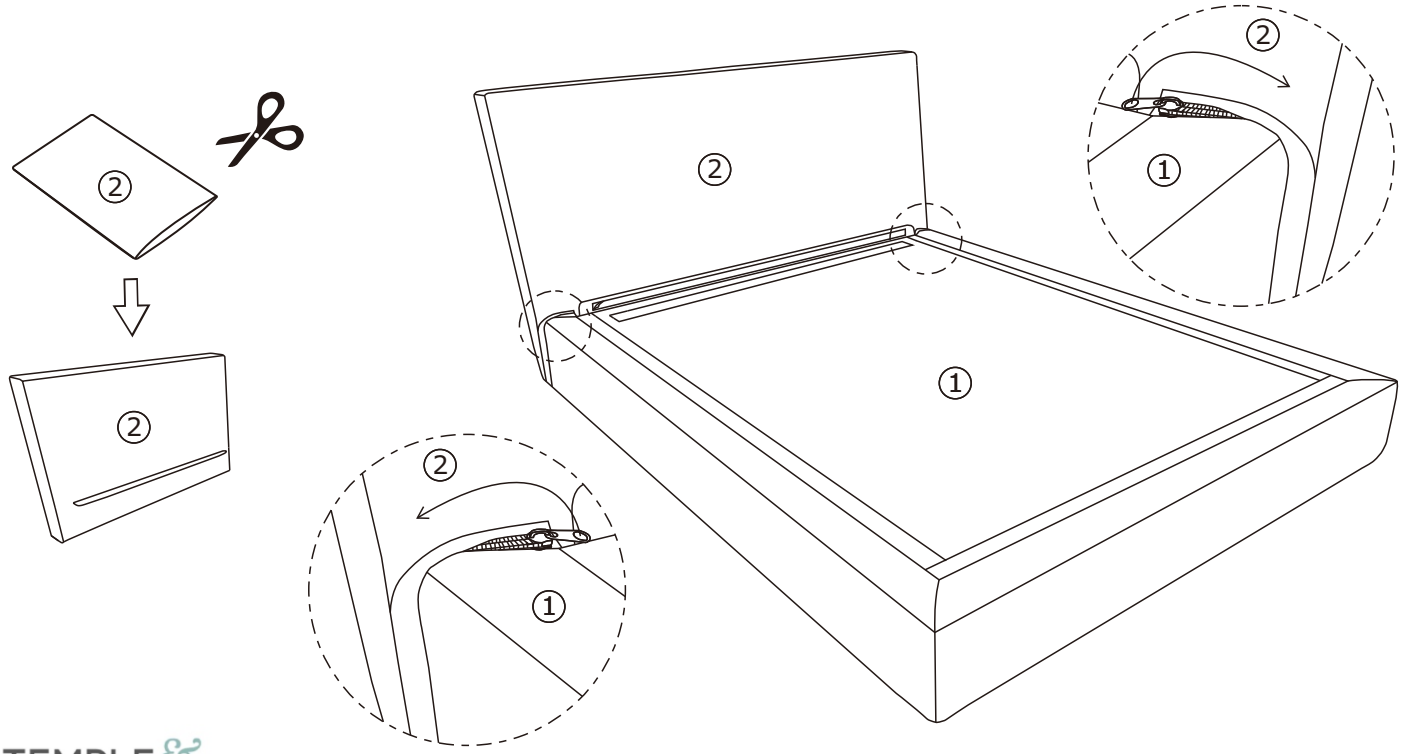


TEMPLE & WEBSTER

Damaged or missing parts? Or just need help?
Contact us on service@templeandwebster.com.au


12.

Peel off the protective backing from the loop Velcro on the front of the headboard ②.

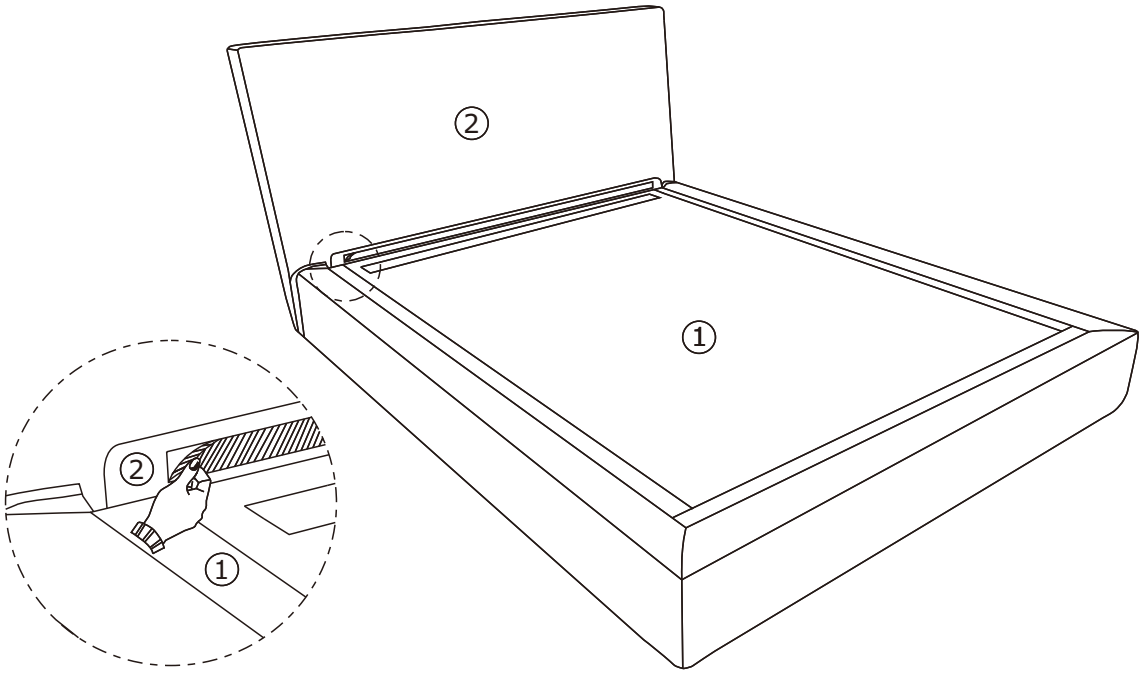


13.

Press the exposed loop Velcro on the headboard ②
firmly onto the hook Velcro on the rear of the bed base.

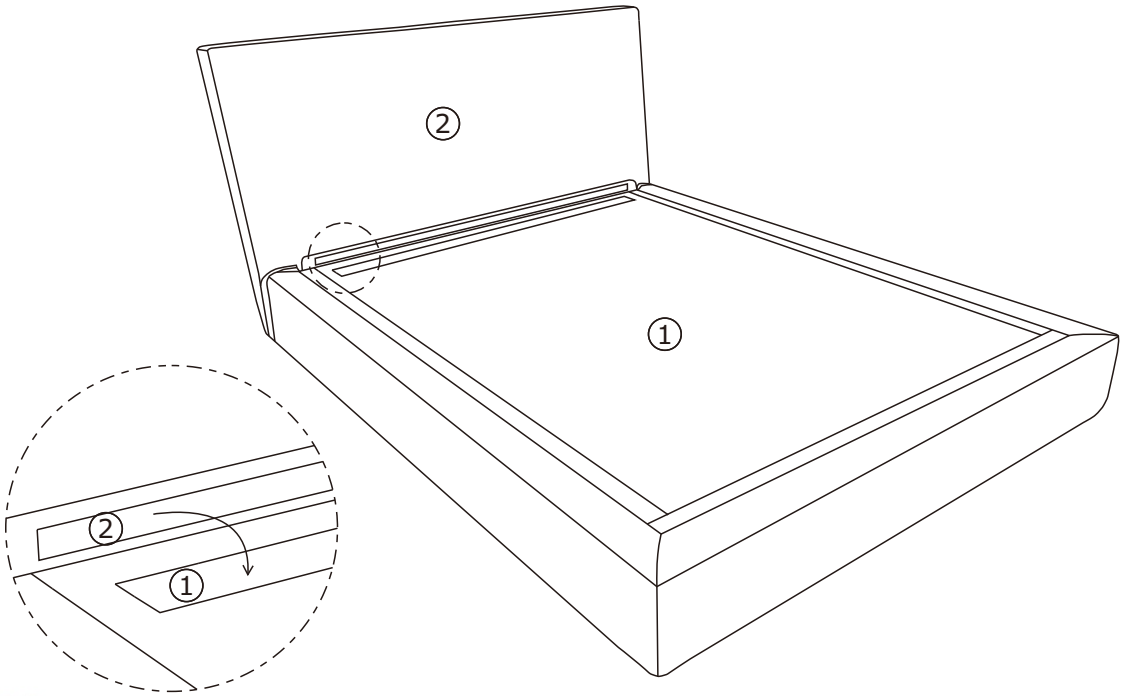


14.

old up the bed side panel. Route and arrange the securing cords,
placing one cord above and one cord below each Side Rail Bracket ⑤.

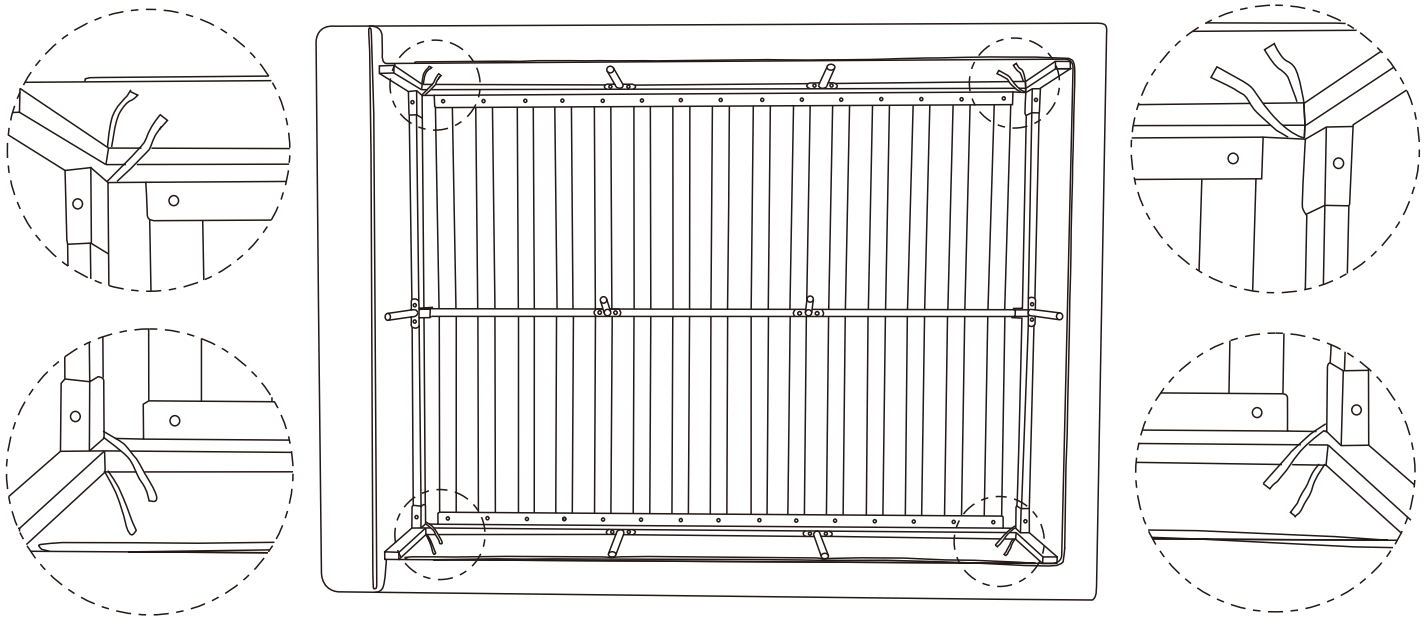

15.

Tie and fasten all cords securely. Once confirmed stable,
you may flip the bed frame to its upright final position.

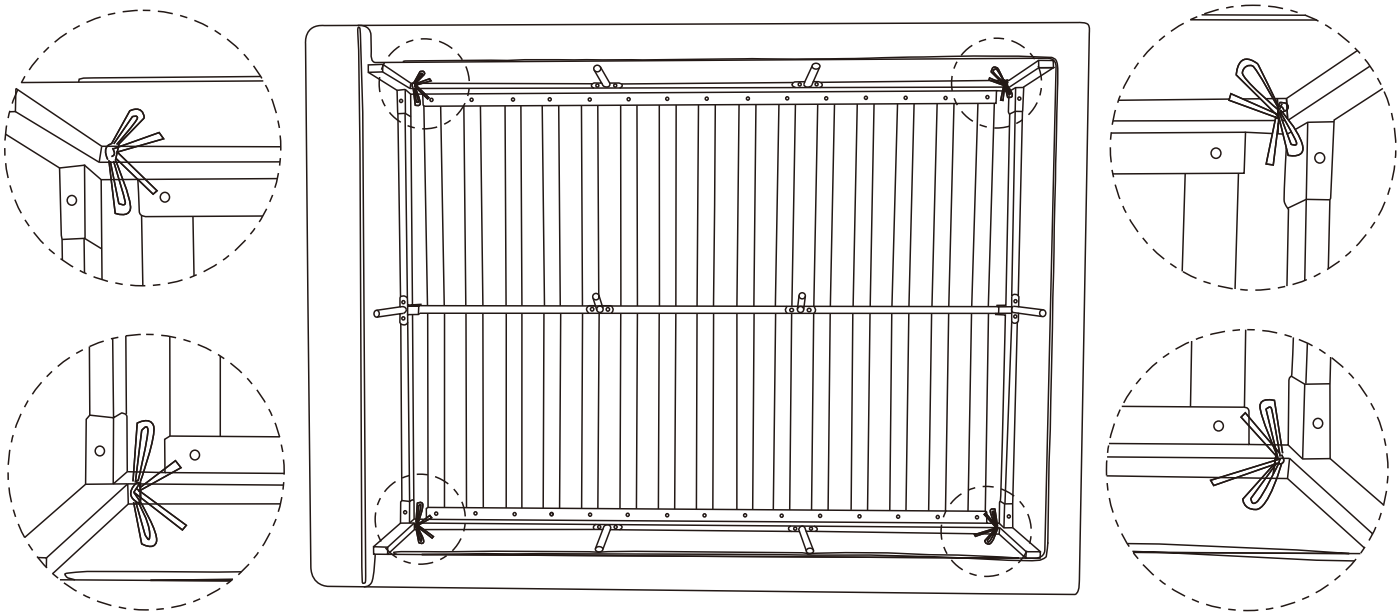

16.

Every thing is finished now,please enjoy your bedhead.

