


DG05-S0212W Side Cabinet

ASSEMBLY INSTRUCTION

DG05-S0212W Side Cabinet should be packaged in 1 cartons.
The cartons should be marked as 1 of 1.

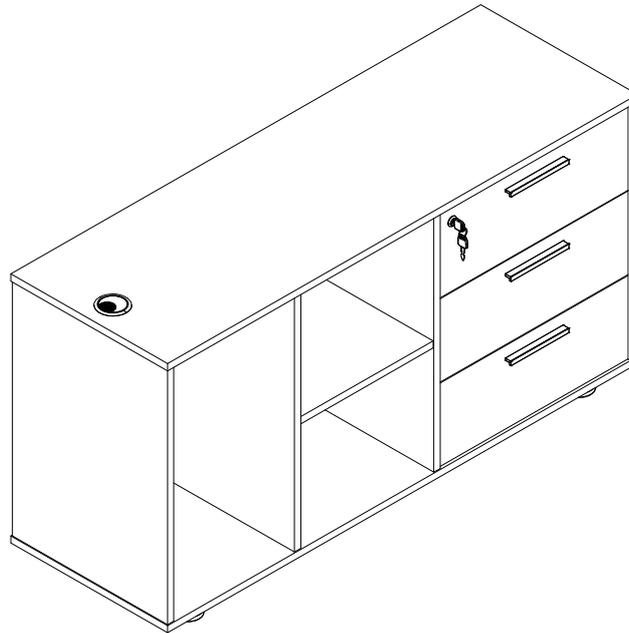

DG05-S0212W Side Cabinet	Model No.	Dimension	Package Qty
	DG05-S0212W	1200W*400D*630Hmm	1


120 MINS

**2 PERSONS
ASSEMBLY**


REQUIRED ASSEMBLY TOOLS




POZI SCREWDRIVER



HAMMER



MEASURING TAPE



DRILL

EMERY SIDE CABINET


ITEM NO: DG05-S0212W

Tips before you start:

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.





Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot item (e.g. hot drinks) directly on to the wood surface.
- Please do not drag or pull your furniture.

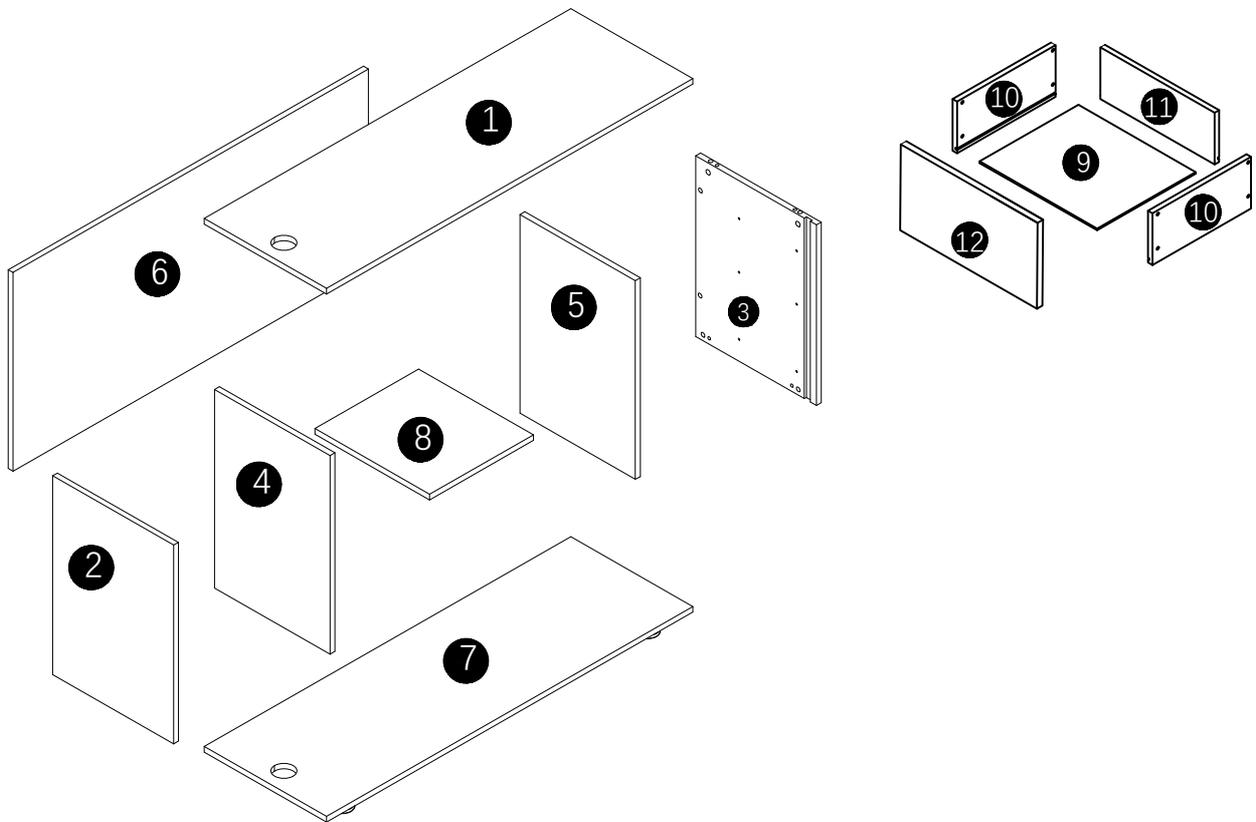


■ Parts list

NO.	Description	Dimension	QTY	Drawing
1		1000*400*16	1	
2		568*396*16	1	
3		568*396*16	1	
4		568*378*16	1	
5		568*378*16	1	
6		964*568*16	1	



NO.	Description	Dimension	QTY	Drawing
7		1000*400*16	1	
8		238*378*16	1	
9		356*344*4	3	
10		350*120*16	6	
11		346*120*16	3	
12		400*180*16	3	

■ Fixing List

NO.	Description	Size(MM)		QTY	NO.	Description	Size(MM)		QTY
A	Cam	Ø15*11.5		34	B	Pin	Ø6*32		34
C	Wood plug	Ø8*30		16	D	Drawer sliders			6
E	Self tapping screw	5*20		10	F	Round Screw	4*20		6
G	Handle			3	H	Coded lock			1
I	Self tapping screw	3.5*12		50	J	Self tapping screw	3.5*35		12
K	Self tapping screw	4*16		2	L	Round			5
M	Shelf pin			4	N	Round wire case			2
O	Lock bar			1	P	board finish sticker			38
Q	Lock bar sheet			2	R	Lock sheet			3

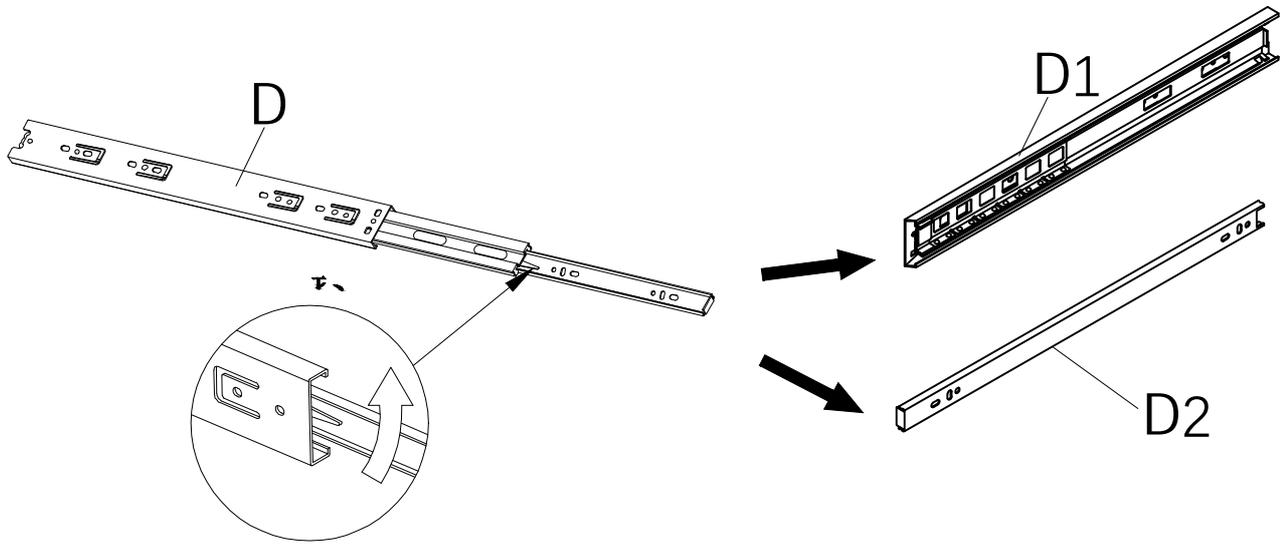


CAM BOLT INSTALLATION AS BELOW:

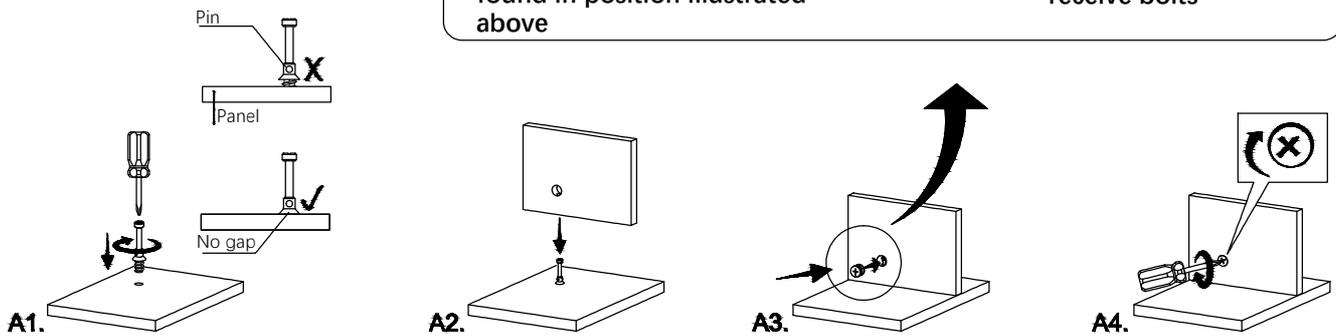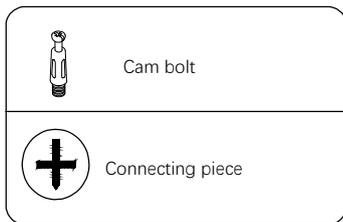



Warm Notice:

Left and right storage can be exchanged before assembly. Pls ensure the direction of storage before installation.







Assembly Steps

1

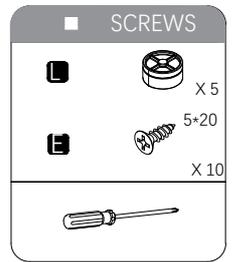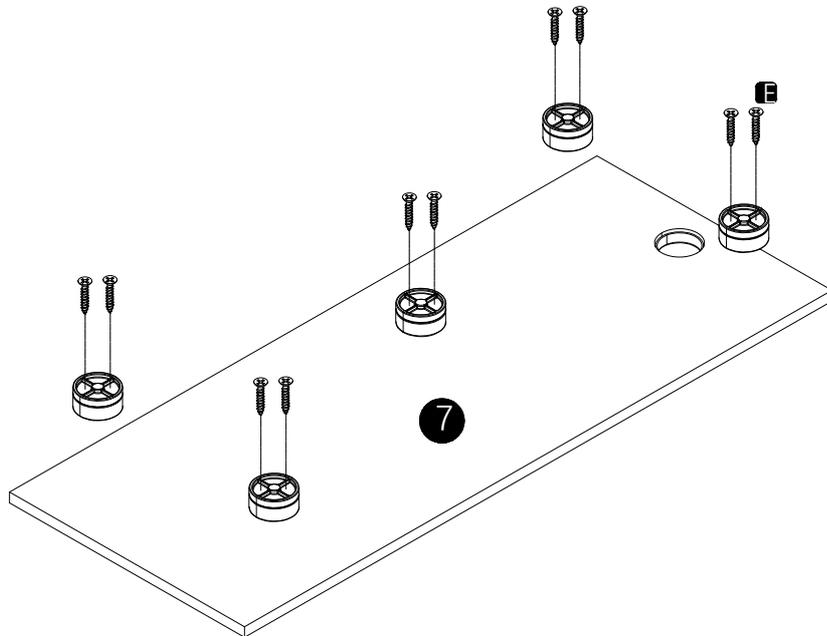


2

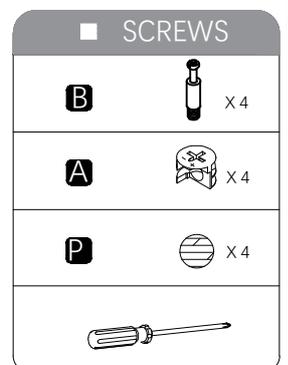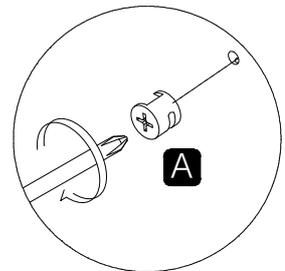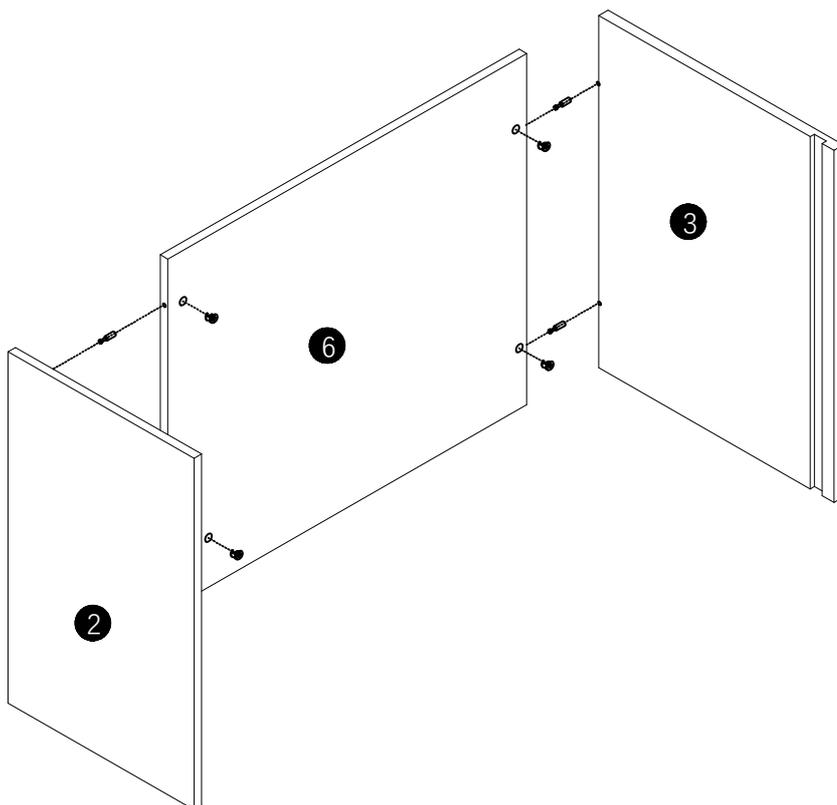





Assembly Steps

3

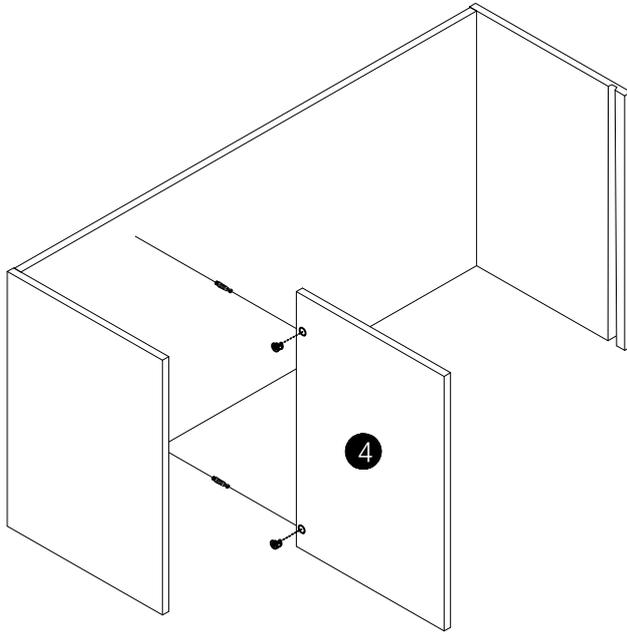



SCREWS	
B	 x2
A	 x2
P	 x2
	

4

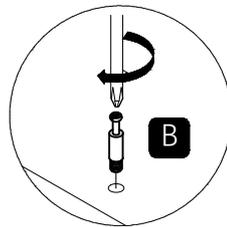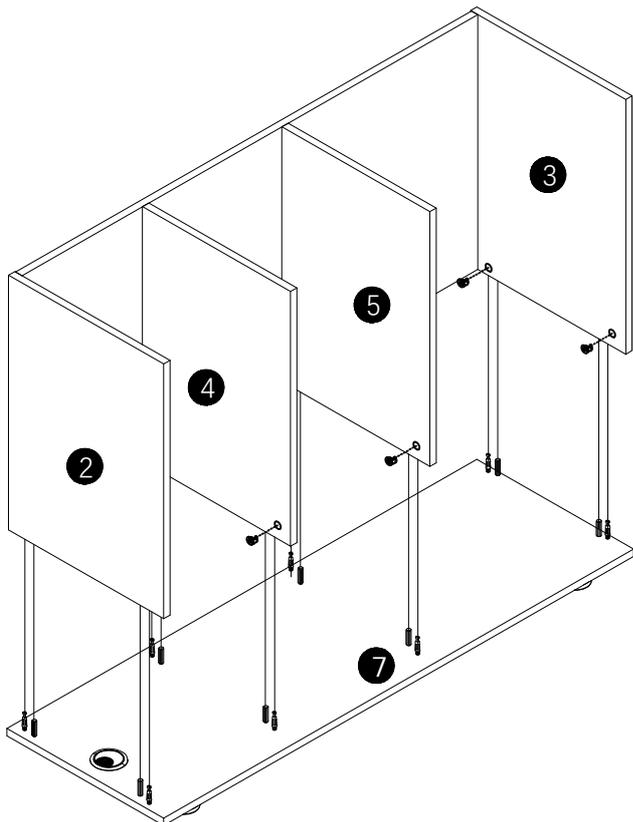



SCREWS	
B	 x8
C	 x8
A	 x8
P	 x8
	

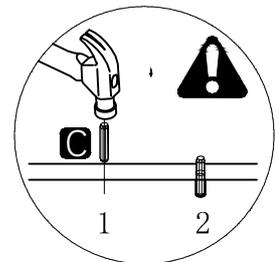





Assembly Steps



5

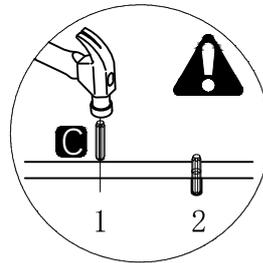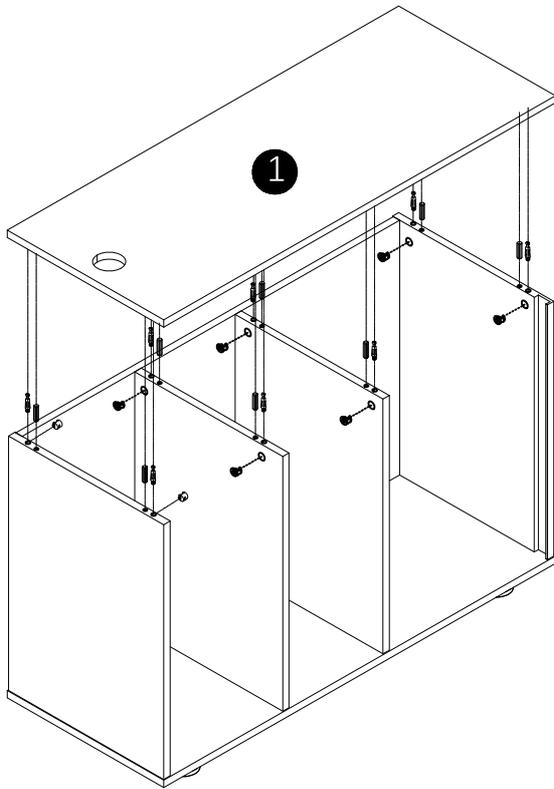

SCREWS	
B	 X 8
C	 X 8
A	 X 8
P	 X 8
	

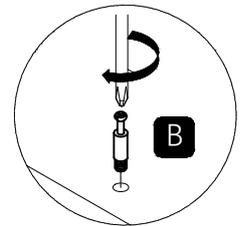


6

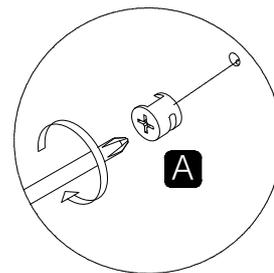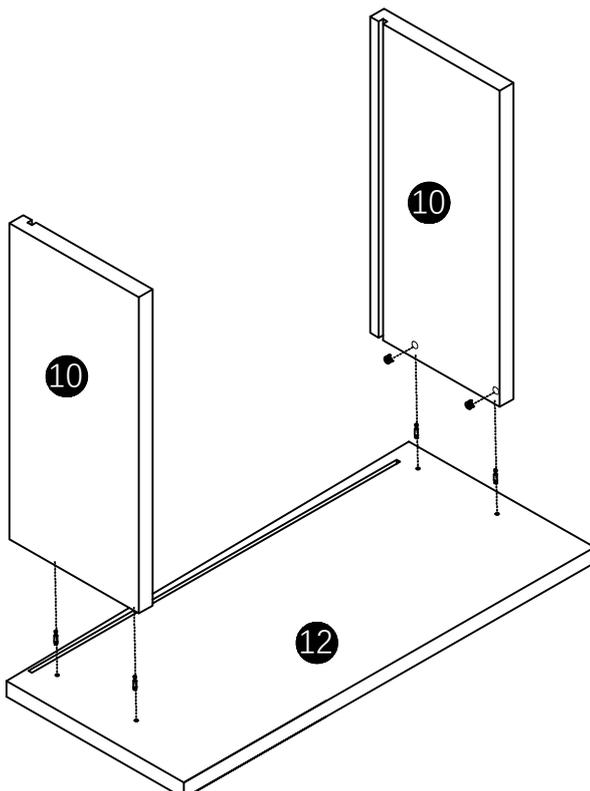


SCREWS	
B	 X 12
A	 X 12
P	 X 12
	

X 3




■ Assembly Steps

7

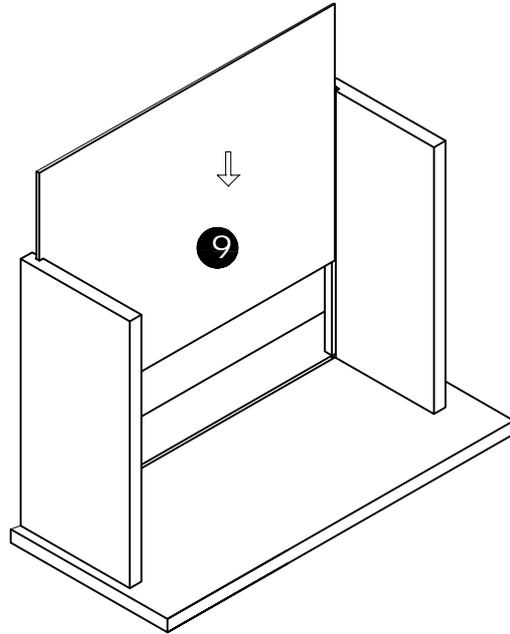

X 3

8

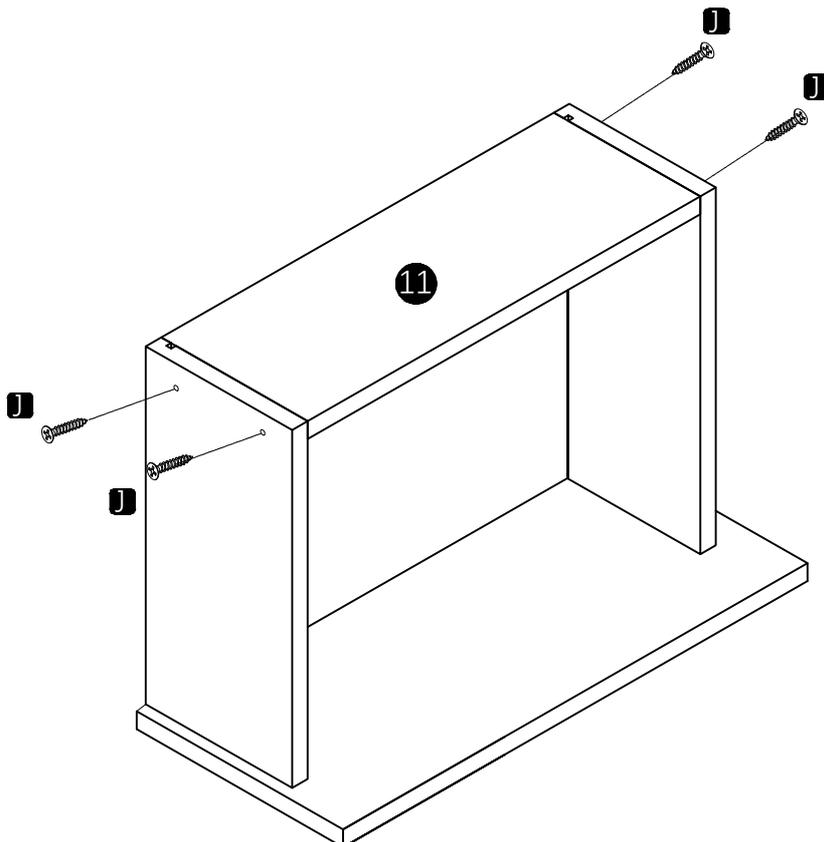


■ SCREWS	
J	 3.5*35
	X12
	

X 3

Assembly Steps


9

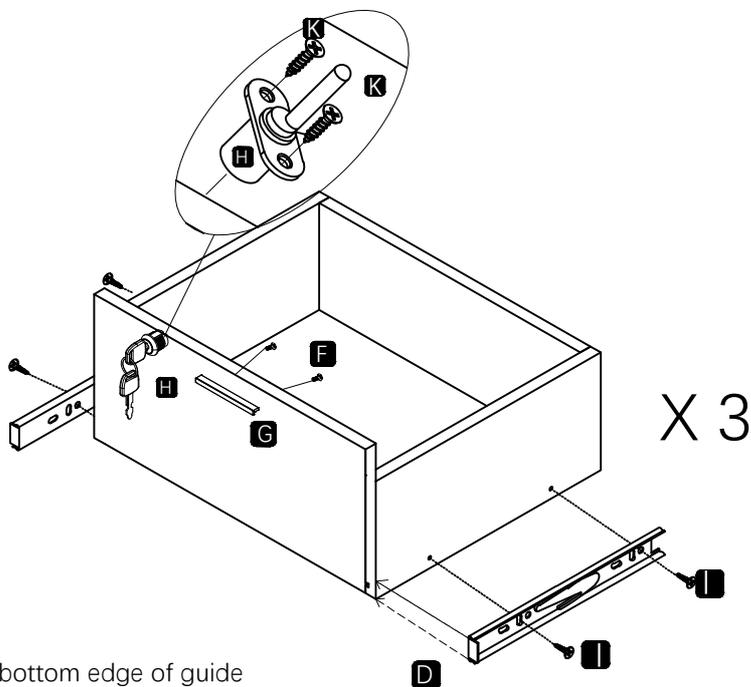


1. The bottom edge of guide rail should align at the bottom edge of the side board.
2. The end of the guide rail align at the front board.

SCREWS	
I	3.5*12 X12
D2	X6
K	4*16 X2
H	X1
G	X3
F	6*20 X6

10

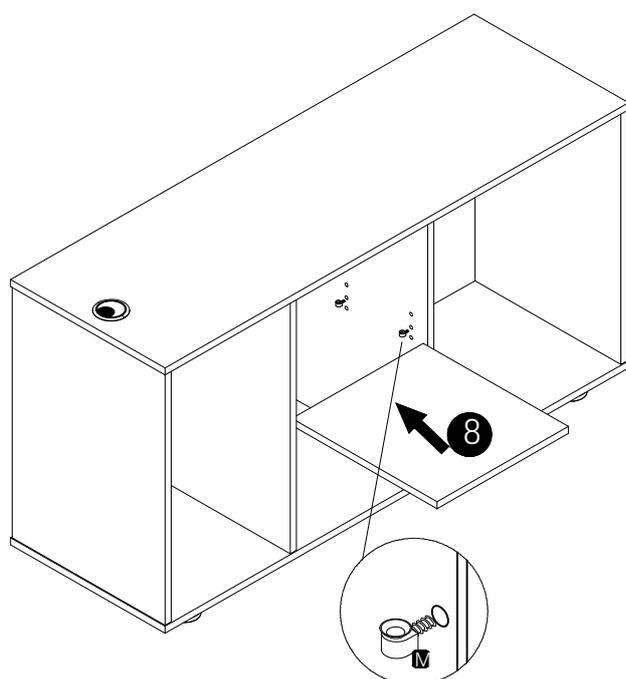


SCREWS	
M	X4



Assembly Steps


11

1. The distance between the top board and the top of the first strip is 20mm.
2. The lock sheets should align at the bottom of the second strip.

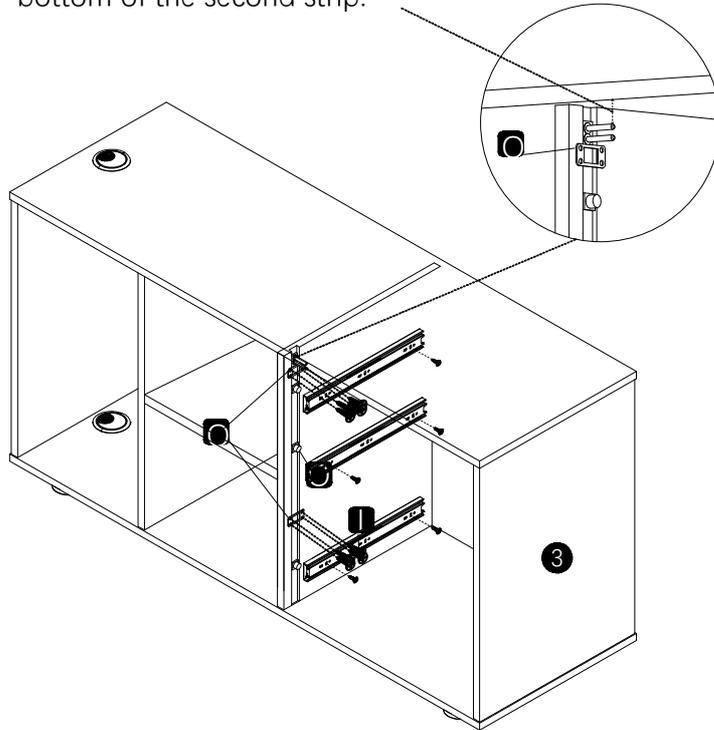


SCREWS	
	X1
	3.5*12 X8
	X2
	X3

12

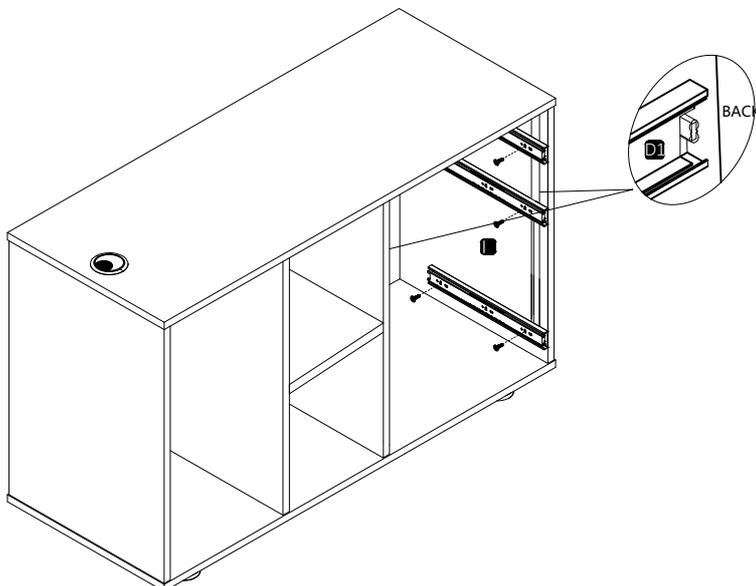


SCREWS	
	3.5*12 X12
	X3



■ Assembly Steps

13

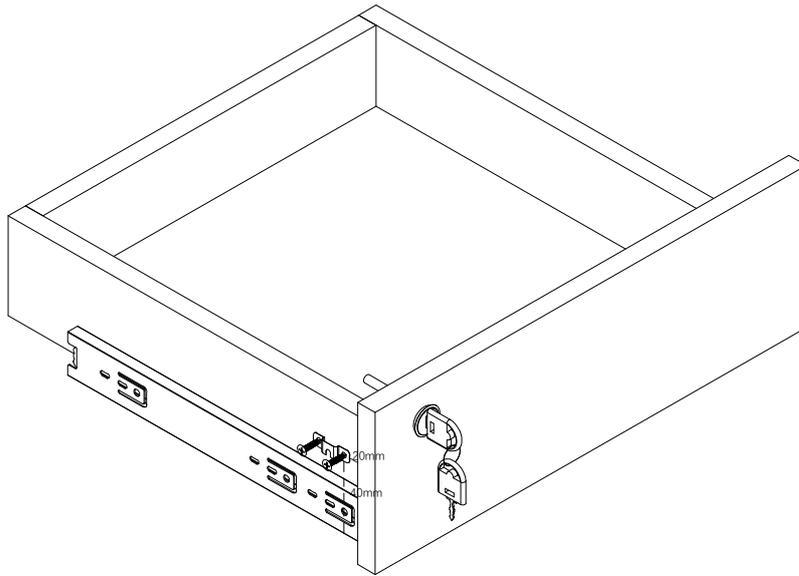


X 3

■ SCREWS

I		3.5*12
		X6
R		X3



14

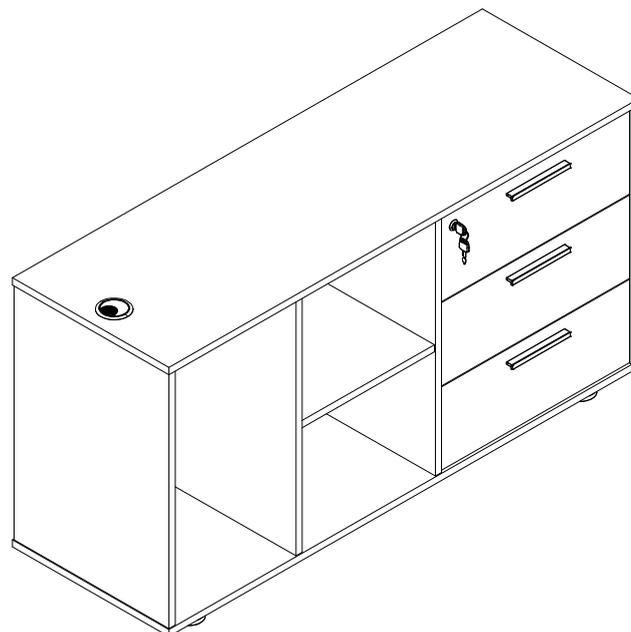

FINAL NOTE:

Do not drag the furniture as this may cause damage to the legs. Instead, ask at least 2 persons to lift carefully with caution from either end.

IMPORTANT: CARE GUIDE FOR YOUR MELAMINE BOARD FURNITURE

Please read up on important information regarding your furniture.

- Dust frequently with a clean damp, lint , free cloth.
- Avoid using chemicals or solvents when cleaning the furniture.
- Do not place hot objects on any furniture surface.
- Avoid exposing your furniture to strong sunlight.
- Do not expose your furniture to any liquids.
- Do not allow sharp or rough object scratch the surface of furniture.
- When moving furniture, do not drag it across the floor.