


# Assemble Instructions

## Cuppa Series

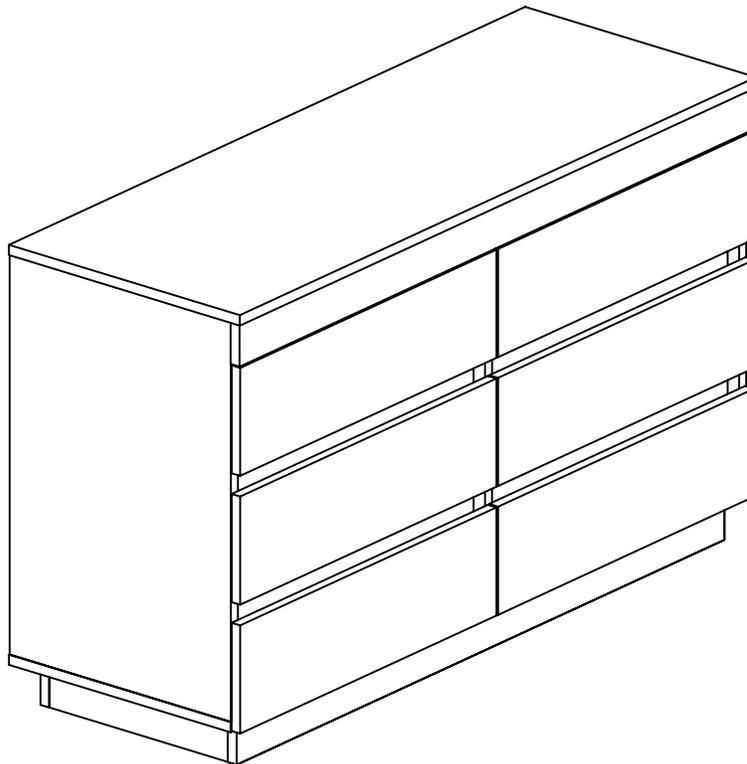

# Lifely\*

Product Code

CPA-T6DC1299-WOK

Cuppa 6 Chest Of Drawer

Dimensions(W x D x H)

1100\*400\*670mm


---

### Important

Please read through instructions carefully  
Before assembly and keep for future reference.

For our full catalogue of assembly instructions,  
Visit:[lifely.com.au/assembly](http://lifely.com.au/assembly).

## Important Tips and Maintenance

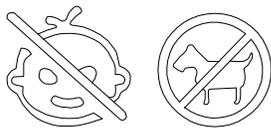


1. Keep children and animals away from working area as smaller parts may cause choking if swallowed




2. Never place liquids or anything damp upon furniture as it will mark, Ensure a coaster or running is beneath.



3. New use ammonia based cleaning products as it will damage the finish.

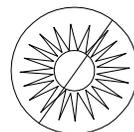


4. To avoid fading, keep furniture out of direct sunlight.

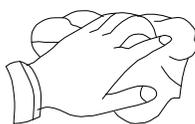

5. Use a soft or damp cloth (dry cloth) when wiping or cleaning surface.



6. Two person are required



7. Lay a soft matt down to protect the furniture pieces before and during assembly.

So your relationship is strong. But is it flat-pack furniture strong? Unless you're an aerospace engineer, assembling furniture can be slightly stressful. We recommend meditating quietly, pouring yourself a herbal tea (or slightly less herbal wine) and tackling things one step at a time. If you feel a passive aggressive remark coming on, try a compliment instead. E.g. "You're so good looking".


This 29-Step assembly should take around 60 minutes with an Allen Key-or 40 minutes with an electric drill. Godspeed.

Designed for everyday

# Components Hardware

Please check you have all the fittings part or tools are listed in below.

No.A  
Quantity:28Pcs  
Dowel 8\*40mm



No.B  
Quantity:57Pcs  
Cam Bolt




No.B  
Quantity:57Pcs  
Cam Nut



No.C  
Quantity:60Pcs  
Screw M3.5\*14mm



No.D  
Quantity:24Pcs  
Screw M3.5\*35mm



No.E  
Quantity:12Pcs  
Drawer Runner



No.G  
Quantity:4Pcs  
Dowel 8\*60mm




No.H  
Quantity:2Pcs  
Article H




No.I  
Quantity:8Pcs  
Ground Nail



No.J  
Quantity:2Pcs  
Anti Collapse




No.K  
Quantity:12Pcs  
Back Plate Clamp

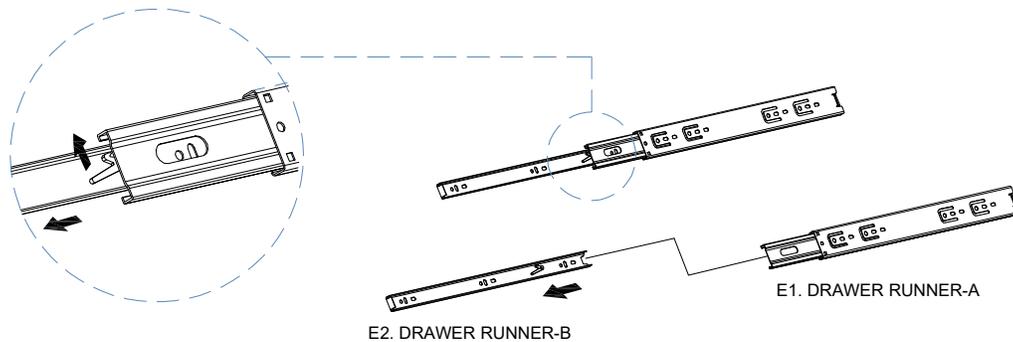


## Components Panels & Part List

Please check you have all the panels are listed below.

- |                           |         |                          |                   |
|---------------------------|---------|--------------------------|-------------------|
| 1. Base -----x2           | CTN 1/2 | 10. Front panel -----x4  | CTN 1/2           |
| 2. Base side -----x2      | CTN 1/2 | 11. Brace panel -----x2  | CTN 1/2 & CTN 2/2 |
| 3. Drawer side_l -----x6  | CTN 2/2 | 12. Side panel_l -----x1 | CTN 1/2           |
| 4. Drawer side_r -----x6  | CTN 2/2 | 13. Side panel_r -----x1 | CTN 1/2           |
| 5. Drawer back -----x6    | CTN 2/2 | 14. Centre panel -----x1 | CTN 1/2           |
| 6. Drawer front_l -----x3 | CTN 2/2 | 15. Skirt panel -----x1  | CTN 1/2           |
| 7. Drawer front_r -----x3 | CTN 2/2 | 16. Back panel -----x4   | CTN 1/2           |
| 8. Top panel -----x1      | CTN 1/2 | 17. Drawer base -----x6  | CTN 2/2           |
| 9. Bottom panel -----x1   | CTN 1/2 |                          |                   |

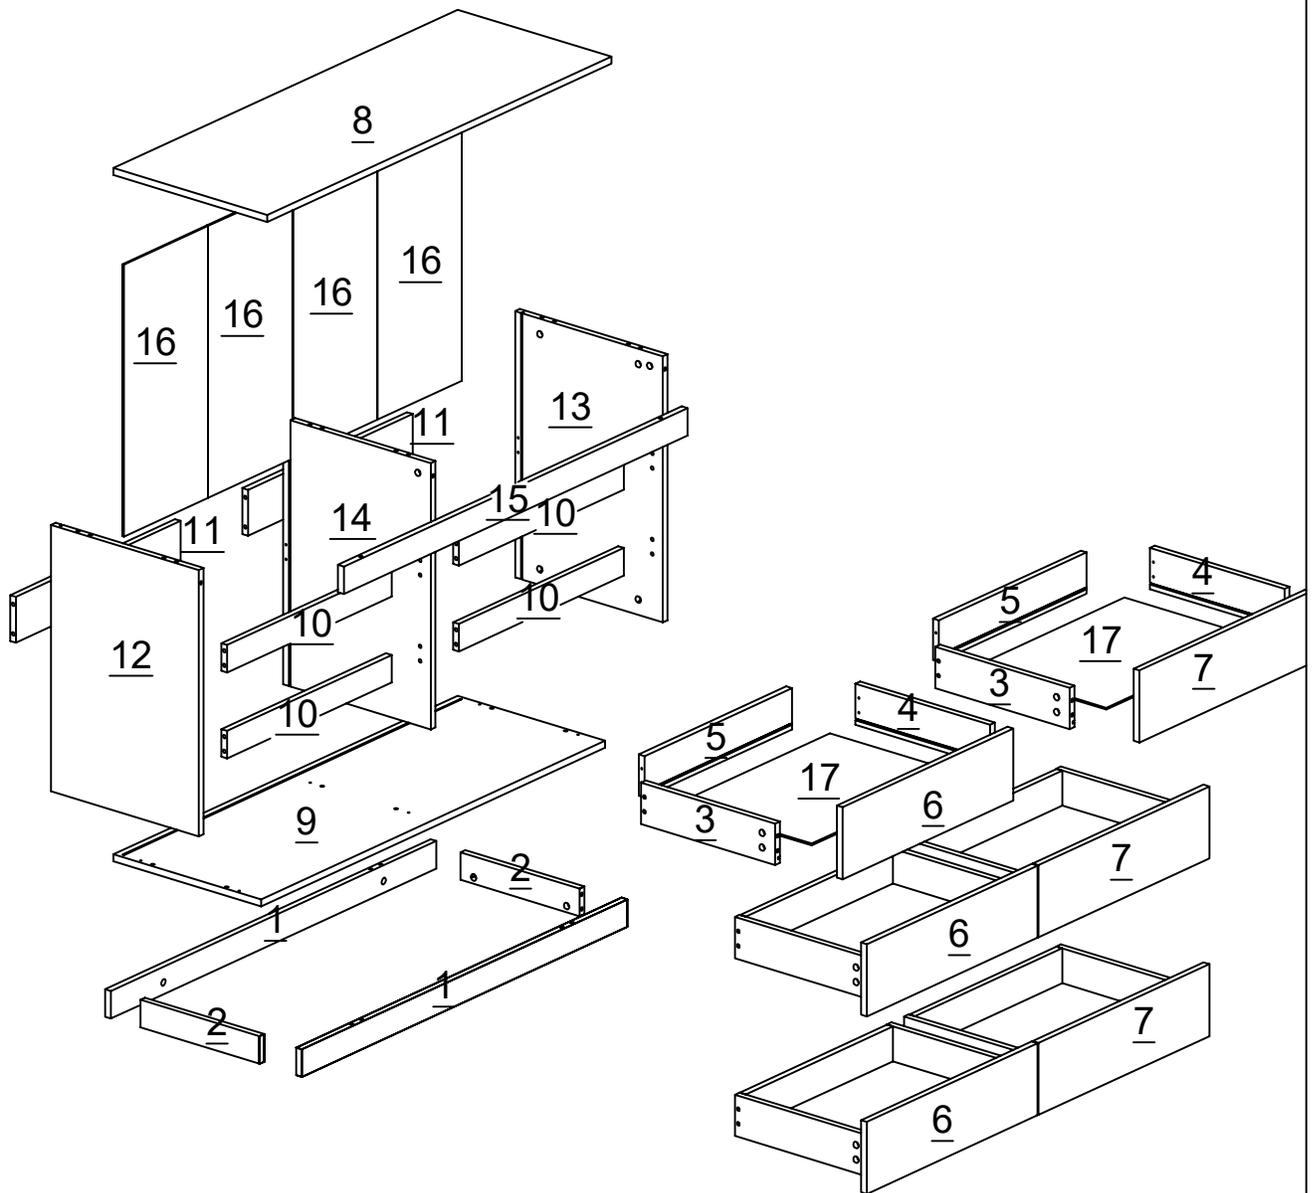

## STEP1

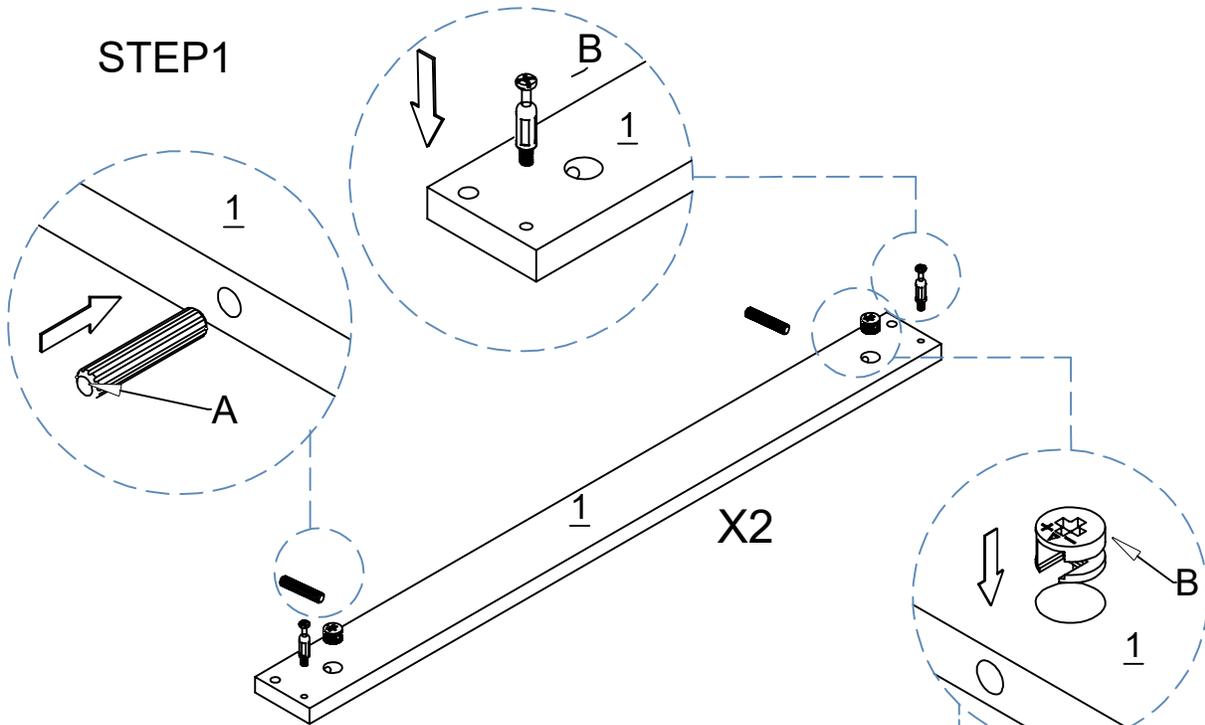

No.A  
Quantity:4Pcs  
Dowel



No.B  
Quantity:4Pcs  
Cam Bolt




No.B  
Quantity:4Pcs  
Cam Nut



ARROW ON  
LOCKING  
NUT MUST POINT  
TOWARDS HOLE IN  
EDGE OF PANEL

## STEP2

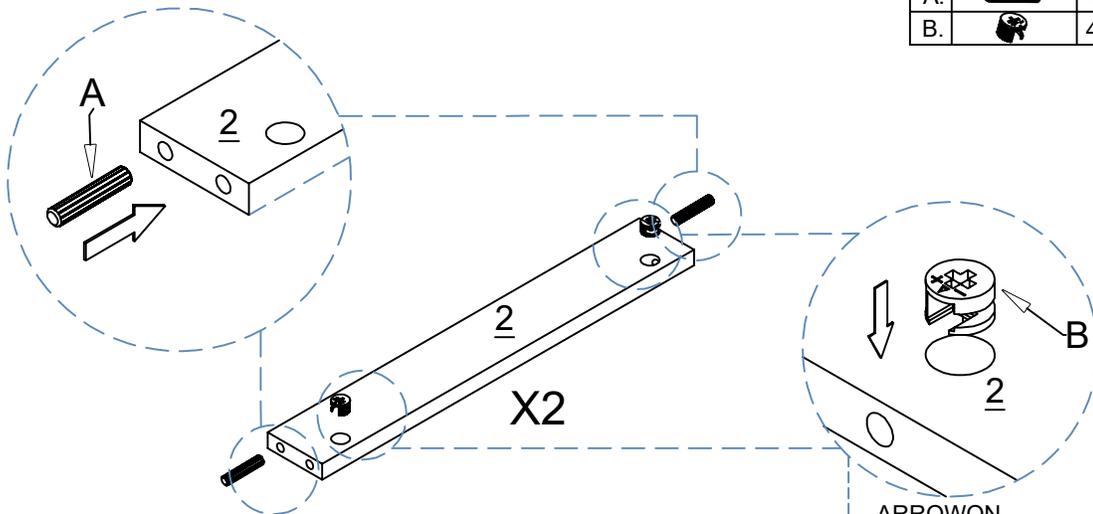

HARDWARE NEEDED:

A.		4PCS
B.		4PCS

No.A  
Quantity:4Pcs  
Dowel




No.B  
Quantity:4Pcs  
Cam Nut




ARROW ON  
LOCKING  
NUT MUST POINT  
TOWARDS HOLE IN  
EDGE OF PANEL

### STEP3

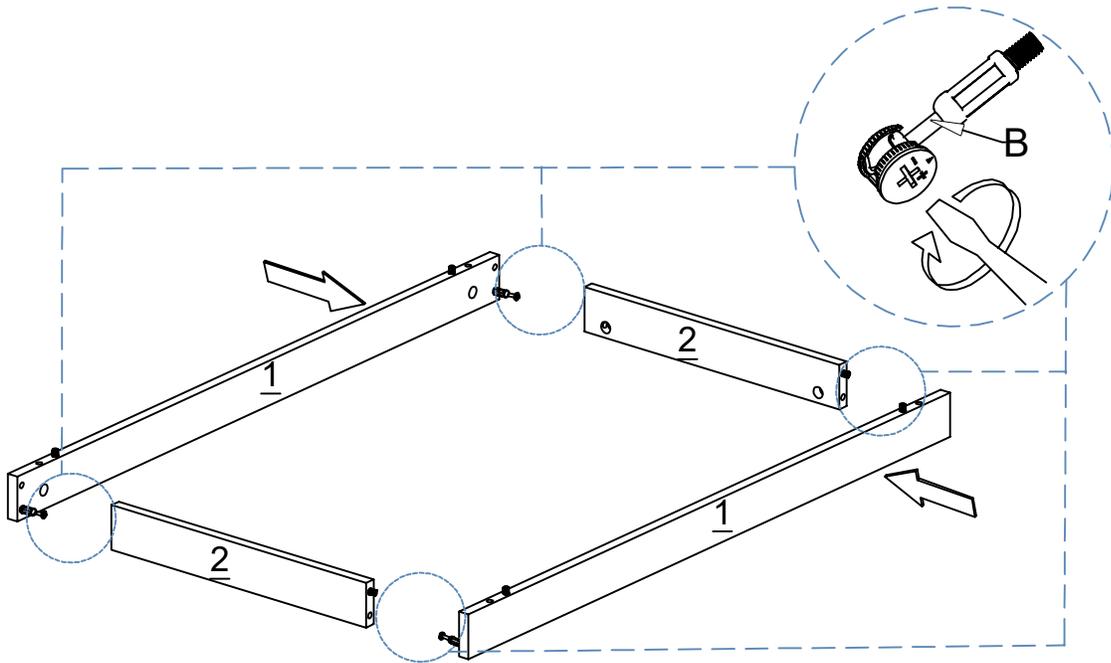


### STEP4

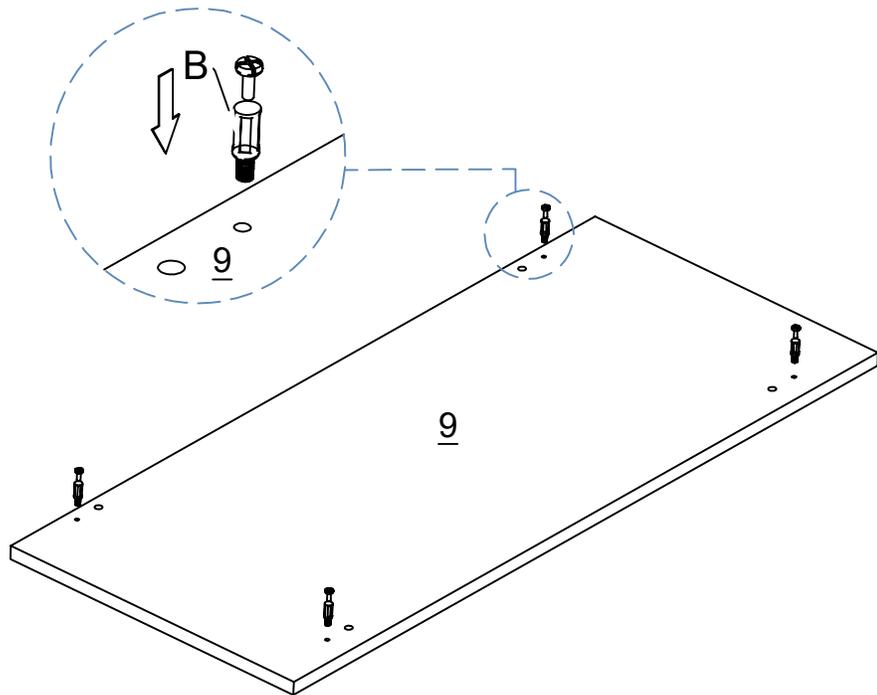

No.B  
Quantity:4Pcs  
Cam Bolt




### STEP5

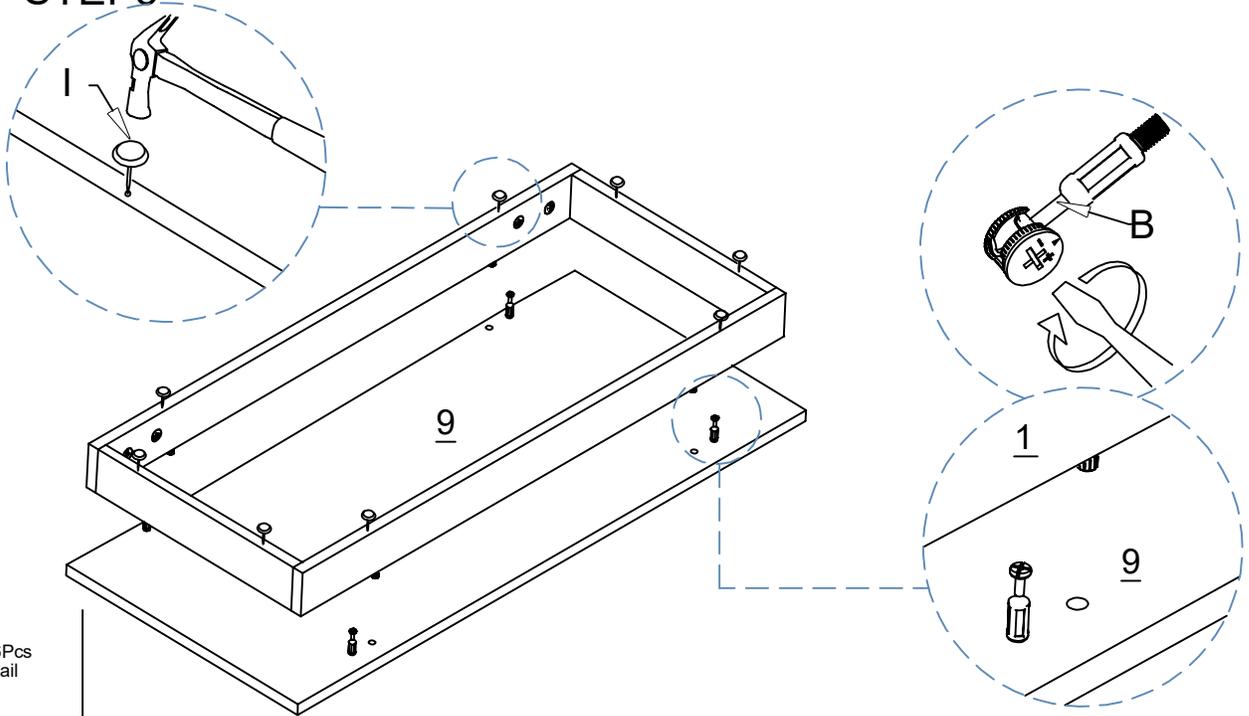

No.H  
Quantity:6Pcs  
Ground Nail




### STEP6

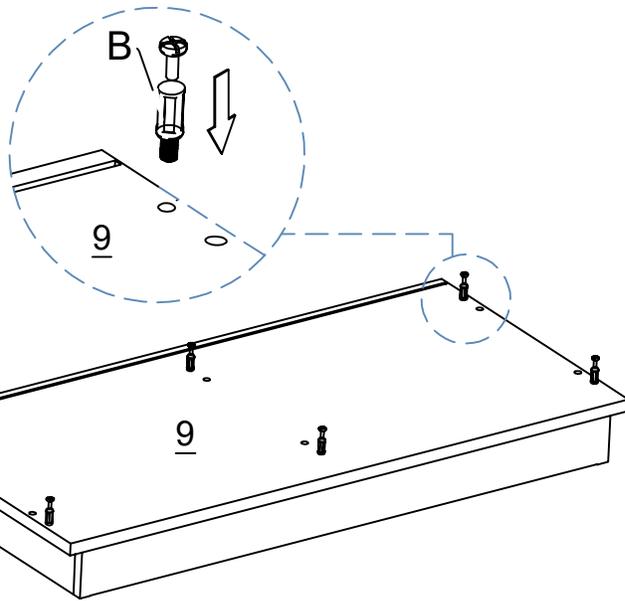

No.B  
Quantity:6Pcs  
Cam Bolt



# STEP 7

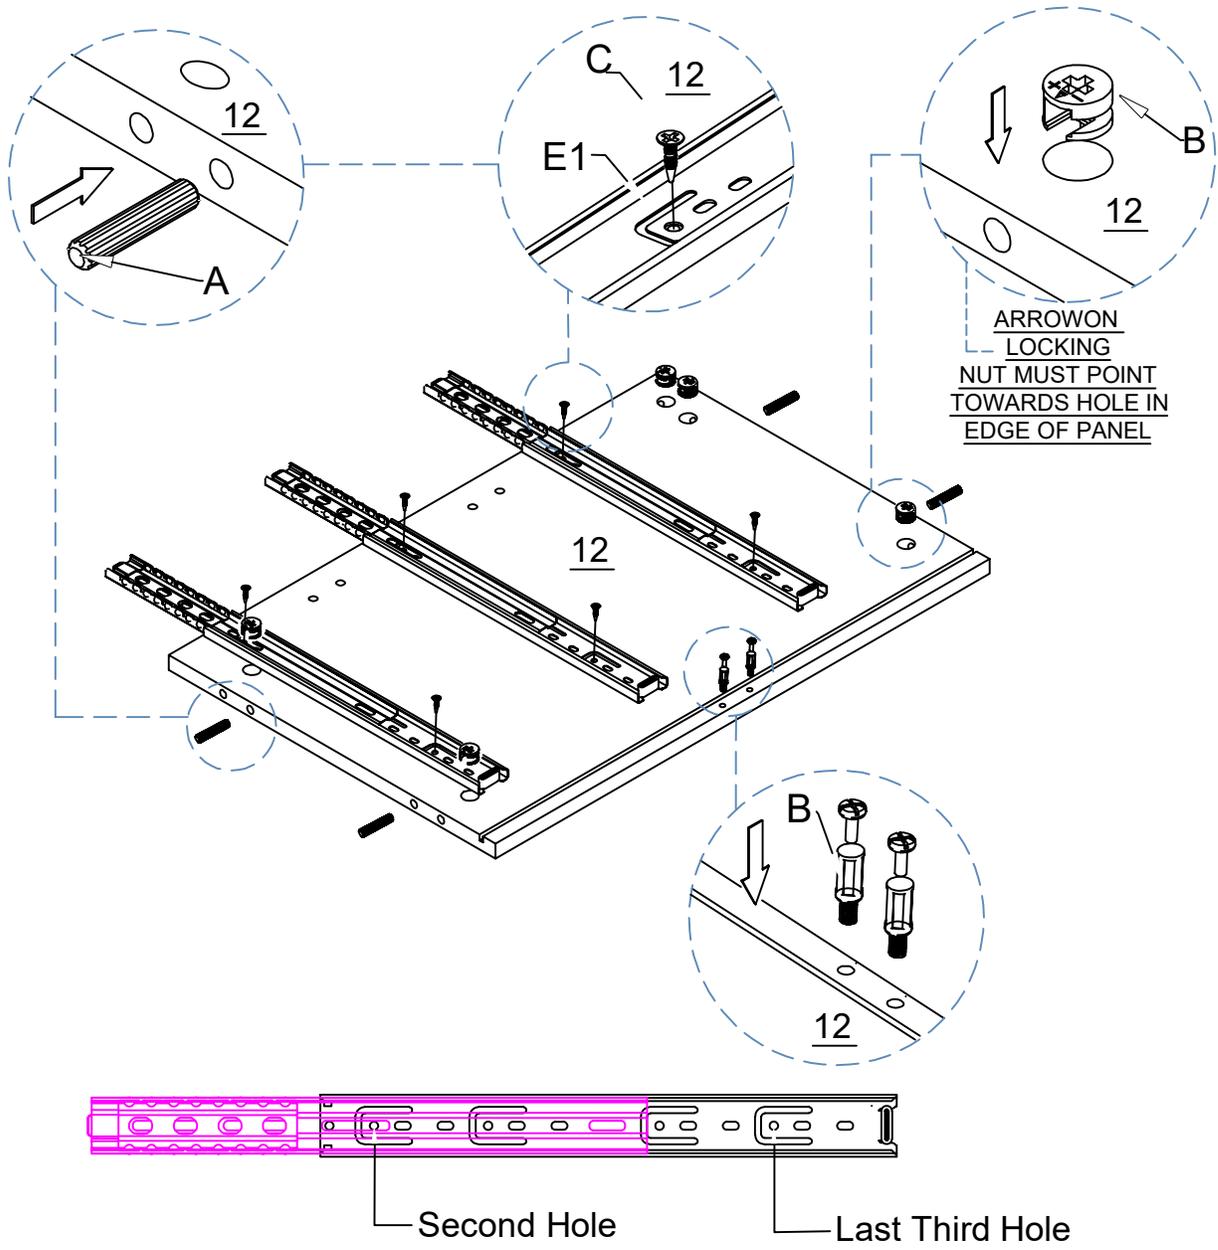

**SCREW MUST BE INSERTED  
IN THE SECOND HOLE ON THE  
DRAWER RUNNER**

No.A  
Quantity:4Pcs  
Dowel



No.B  
Quantity:5Pcs  
Cam Nut



No.C  
Quantity:6Pcs  
Screw M3.5\*14mm





No.E  
Quantity:3Pcs  
Drawer Runner



No.B  
Quantity:2Pcs  
Cam Bolt



# STEP 8

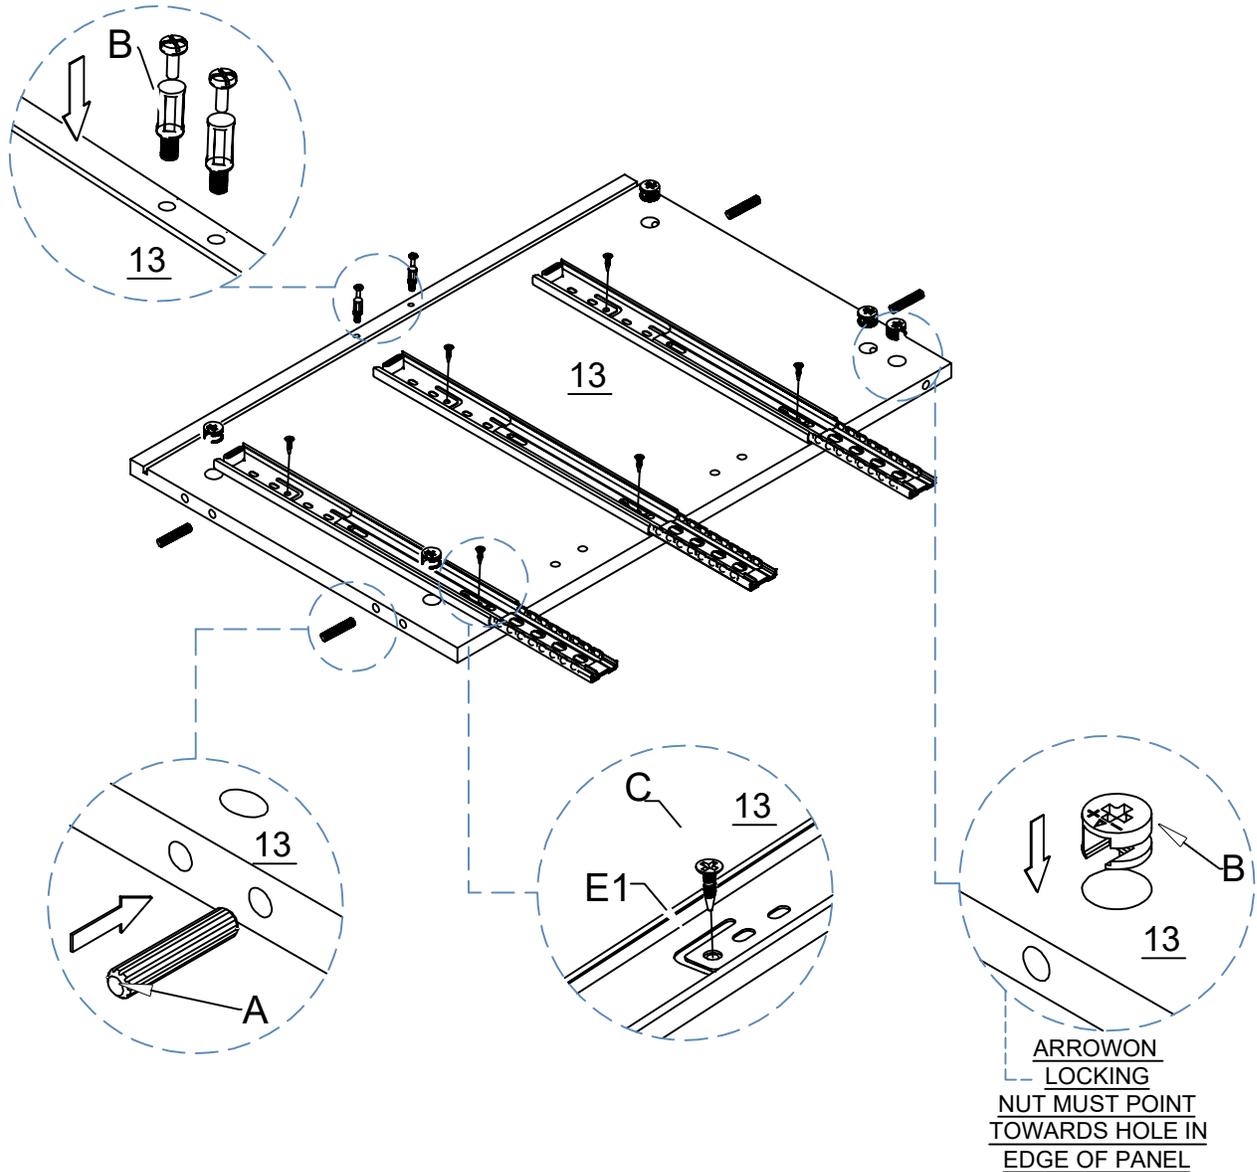

Second Hole

Last Third Hole

**SCREW MUST BE INSERTED IN THE SECOND HOLE ON THE DRAWER RUNNER**

No.A  
Quantity:4Pcs  
Dowel



No.B  
Quantity:5Pcs  
Cam Nut



No.C  
Quantity:6Pcs  
Screw M3.5\*14mm



No.E  
Quantity:3Pcs  
Drawer Runner




E1

No.B  
Quantity:2Pcs  
Cam Bolt





# STEP 10

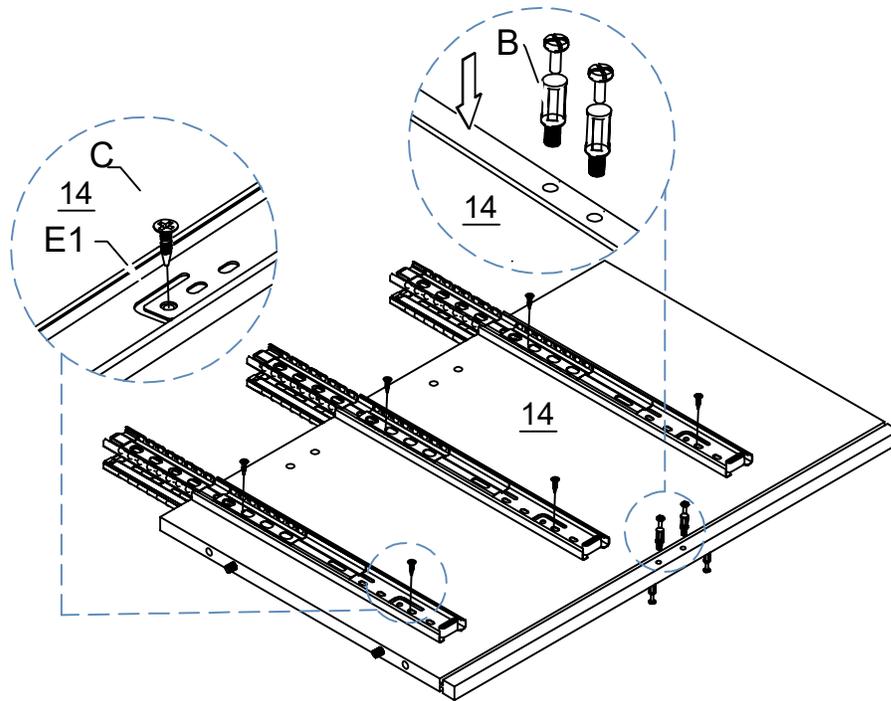

**SCREW MUST BE INSERTED  
IN THE THIRD HOLE ON THE  
DRAWER RUNNER**

Third Hole

Last Second Hole

No.C  
Quantity:6Pcs  
Screw M3.5\*14mm




No.E  
Quantity:3Pcs  
Drawer Runner



No.B  
Quantity:2Pcs  
Cam Bolt




# STEP 11

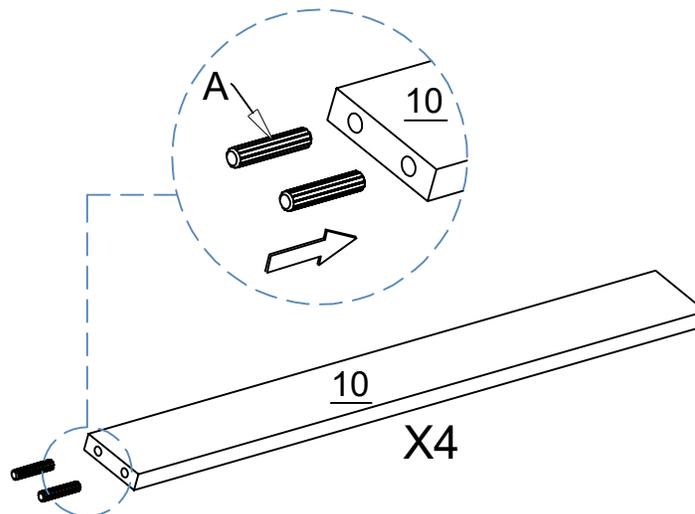


No.A  
Quantity:8Pcs  
Dowel




## STEP 12

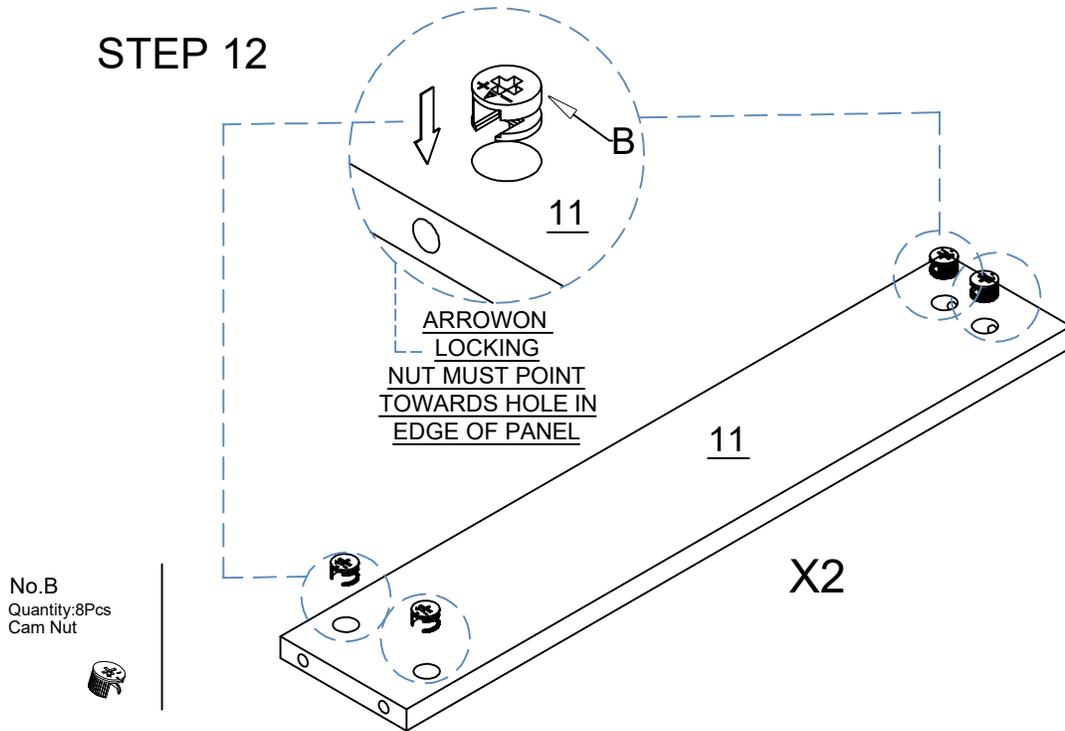


## STEP 13

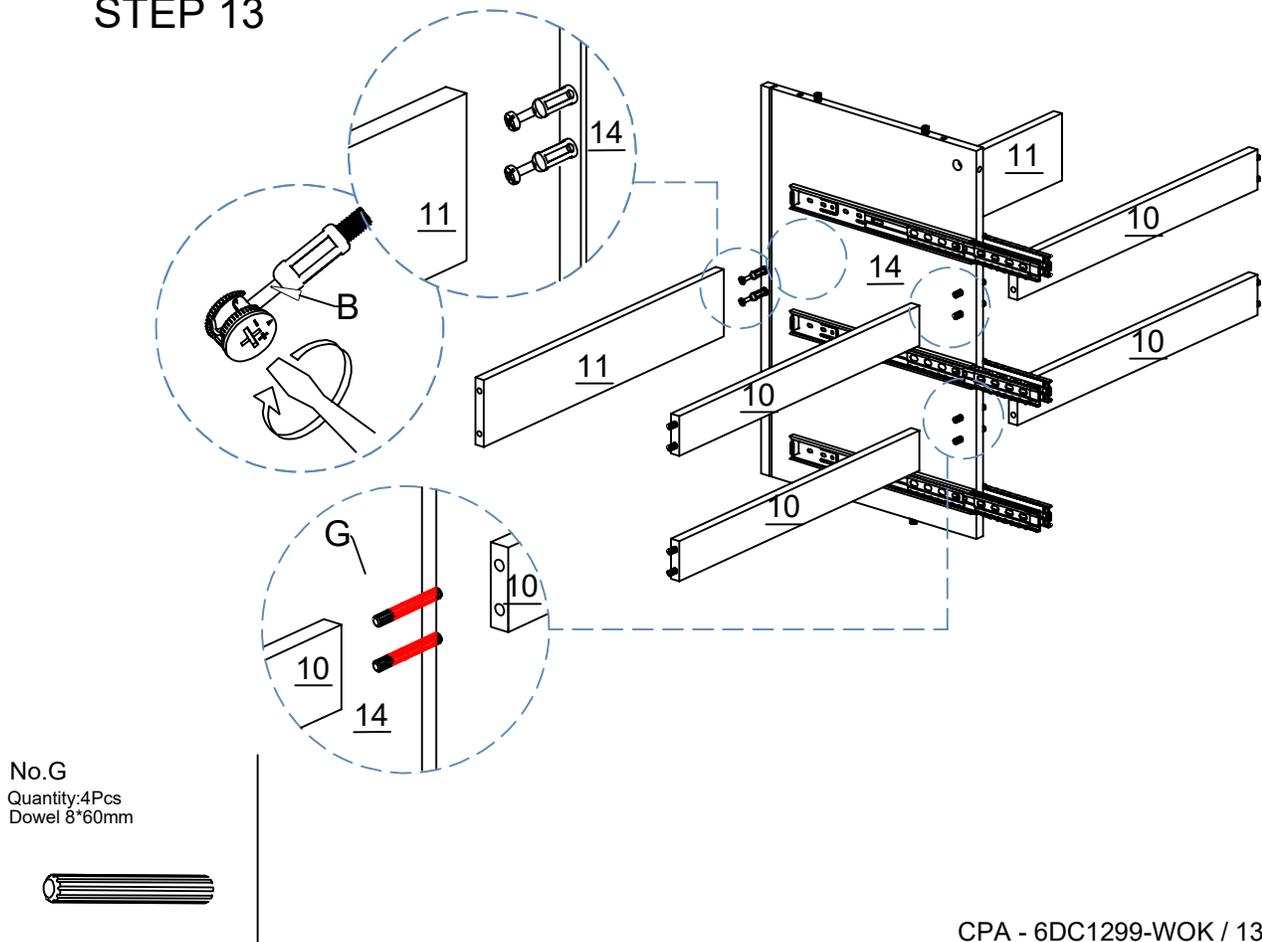


# STEP 14

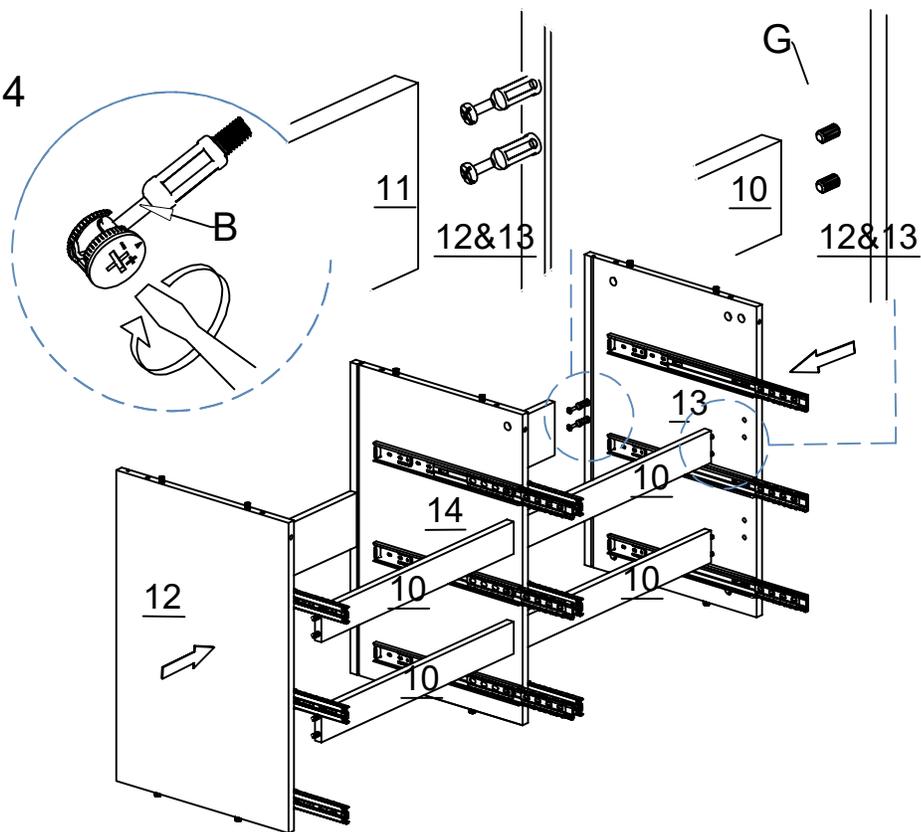

# STEP 15

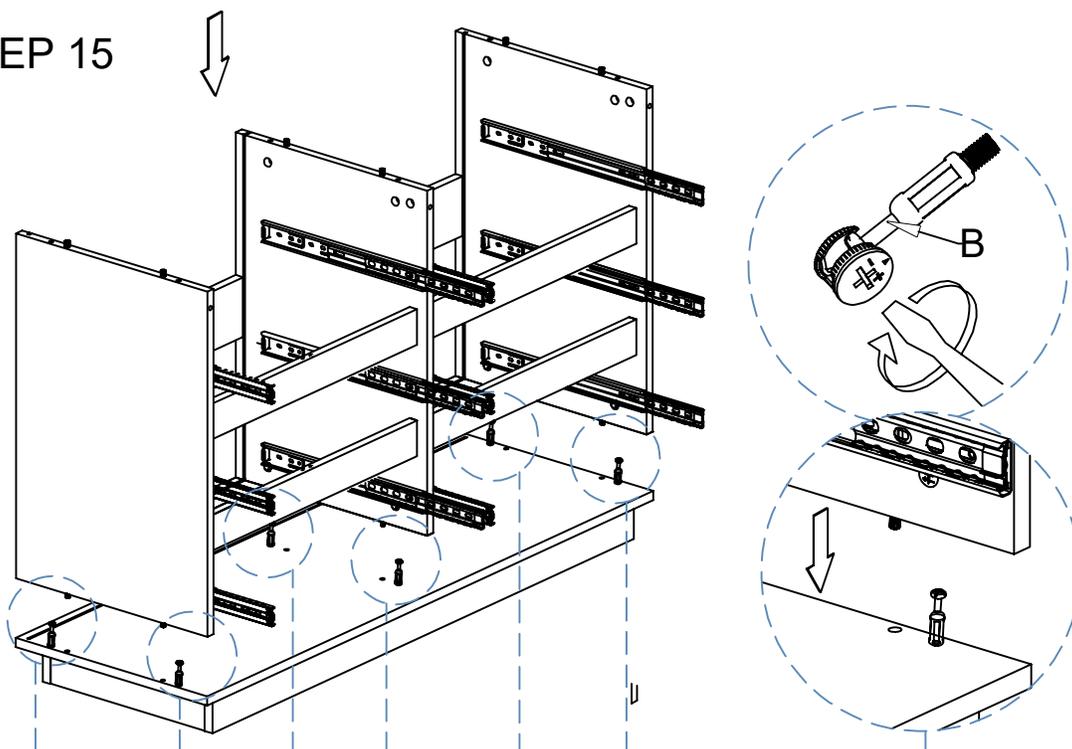


# STEP 16

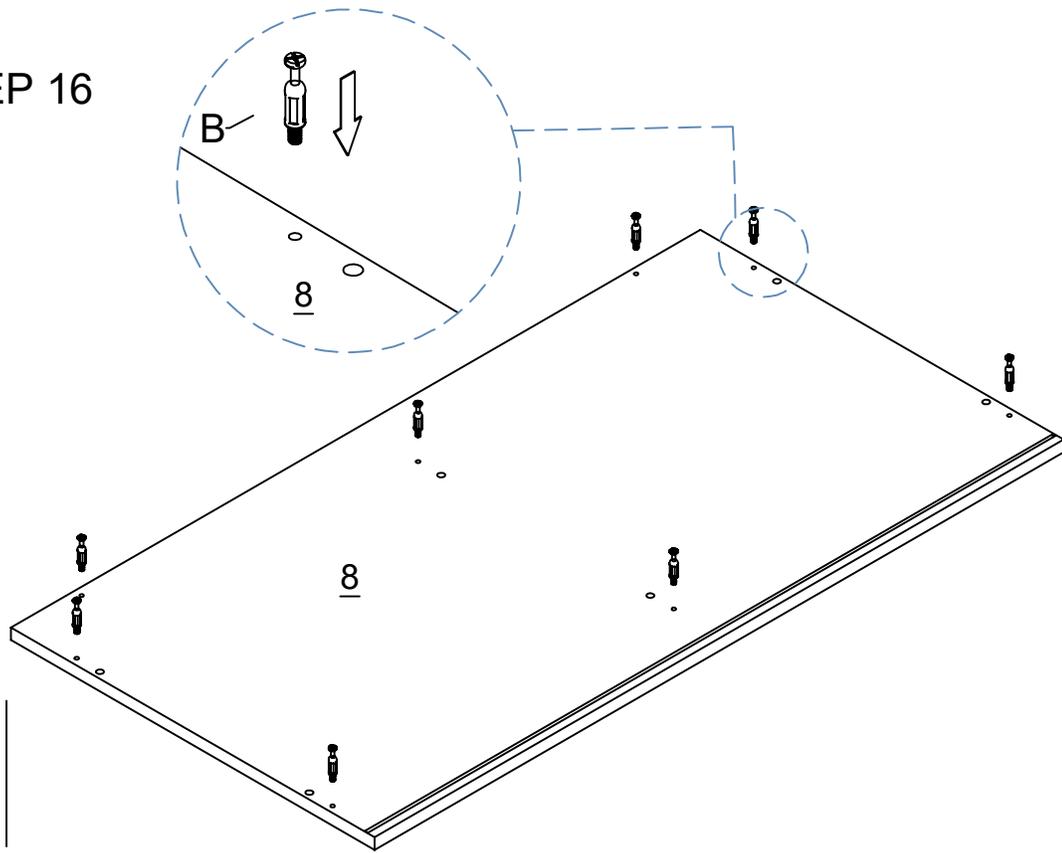

No.B  
Quantity:8Pcs  
Cam Bolt



# STEP 17

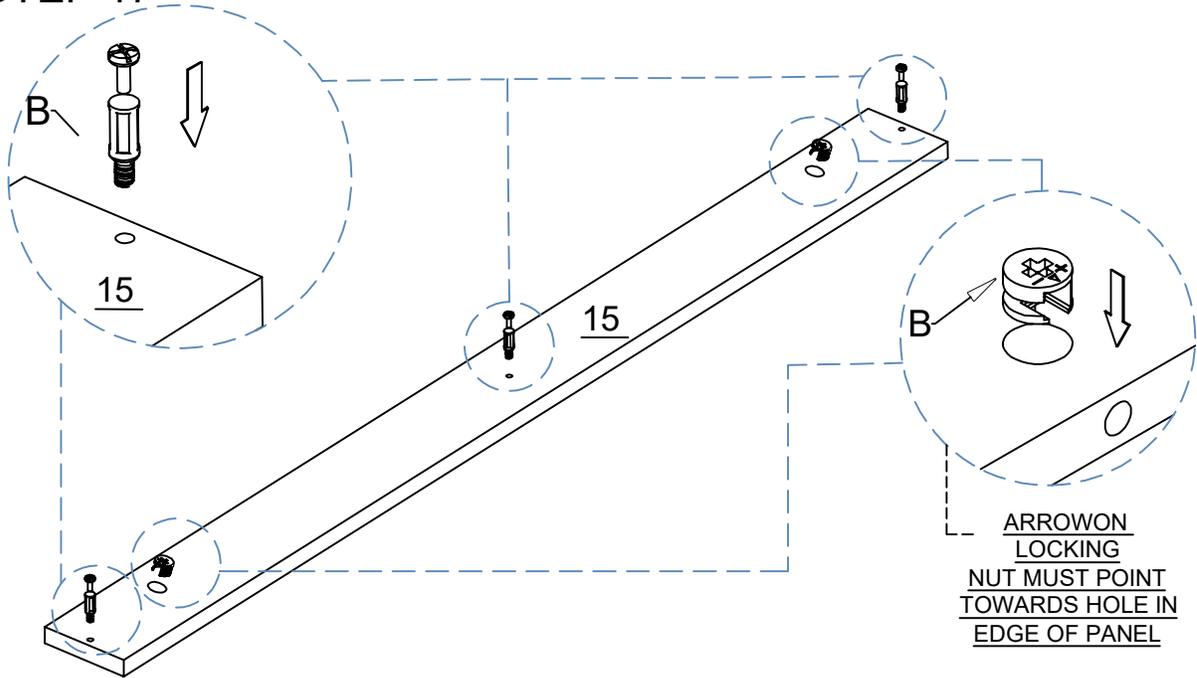

No.B  
Quantity:3Pcs  
Cam Bolt




No.B  
Quantity:2Pcs  
Cam Nut




ARROW ON  
LOCKING  
NUT MUST POINT  
TOWARDS HOLE IN  
EDGE OF PANEL

# STEP 18

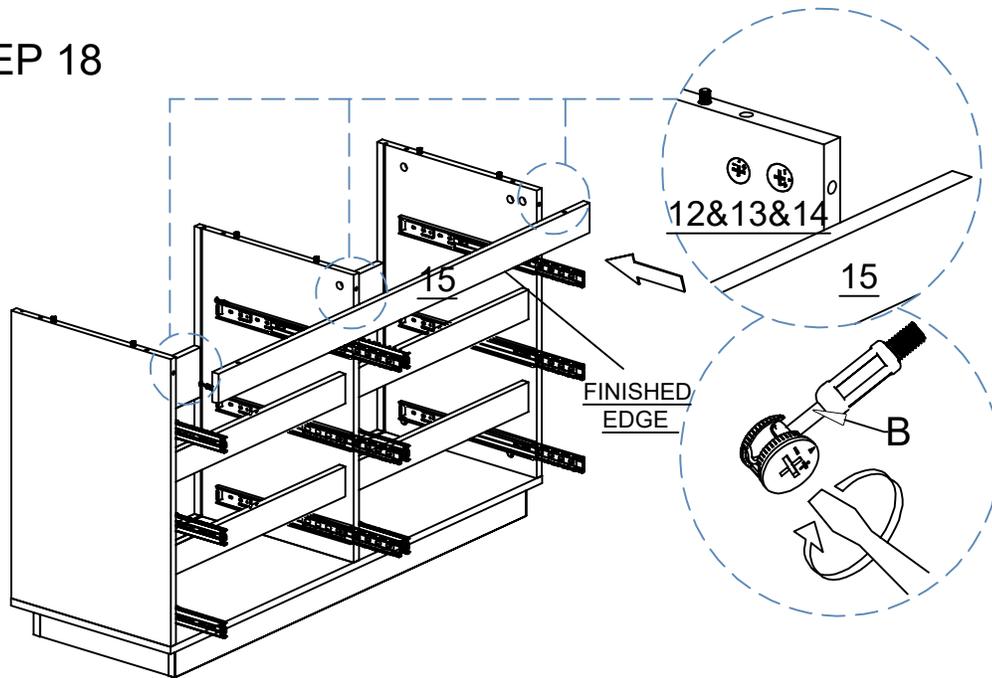


# STEP 19

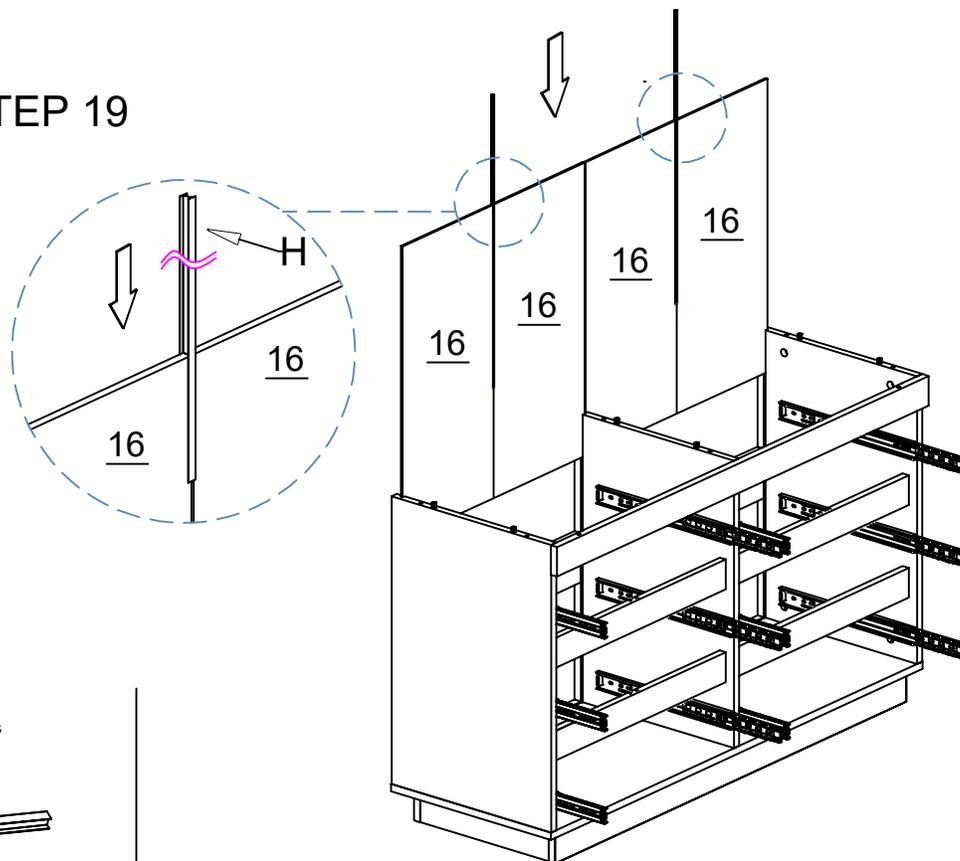


No.H  
Quantity:2Pcs  
Article H



## STEP 20

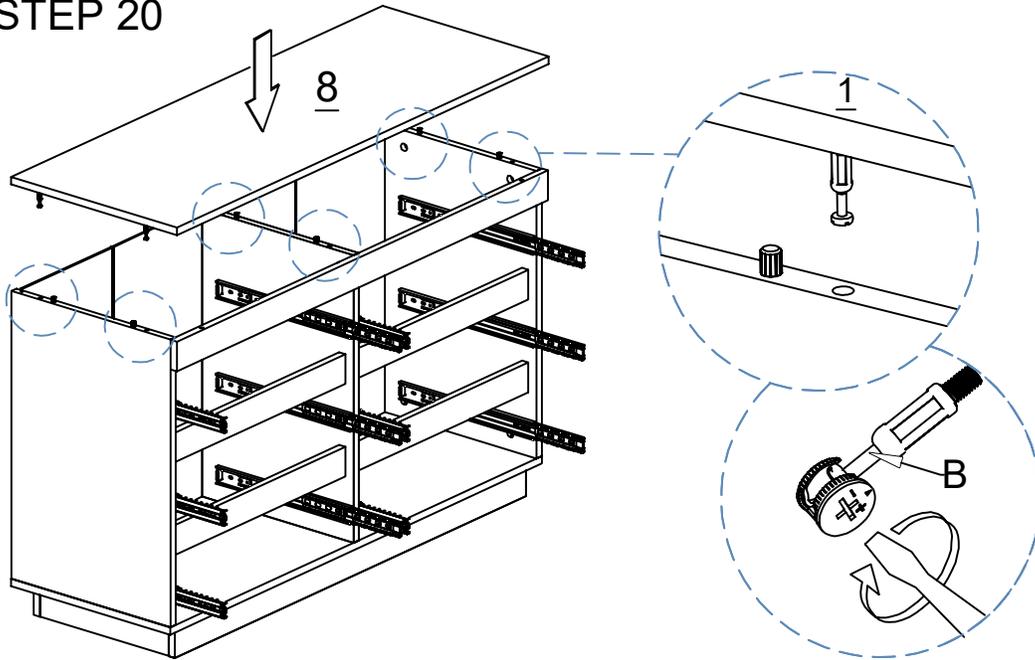

## STEP 21

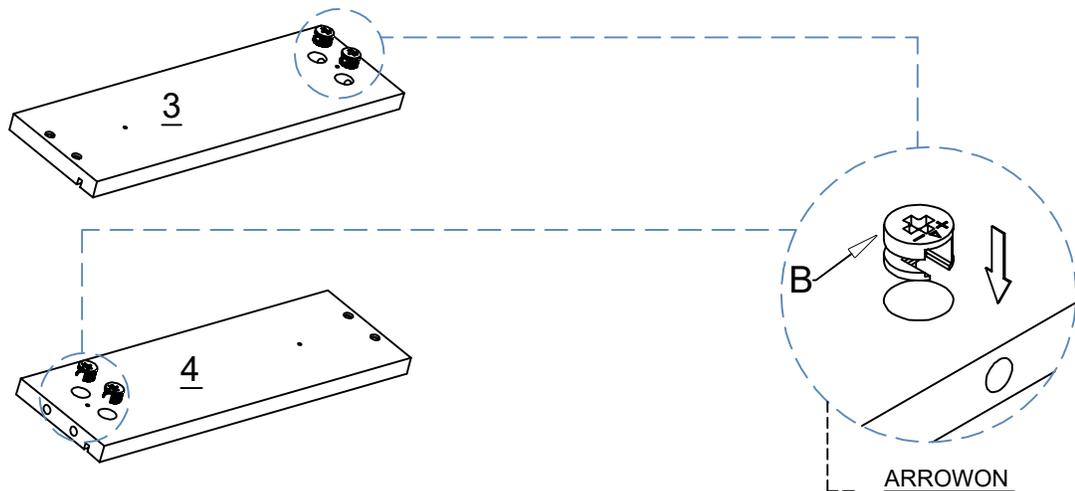


ARROW ON  
LOCKING  
NUT MUST POINT  
TOWARDS HOLE IN  
EDGE OF PANEL

## DRAWER X6

No.B  
Quantity:24Pcs  
Cam Nut



# STEP 22

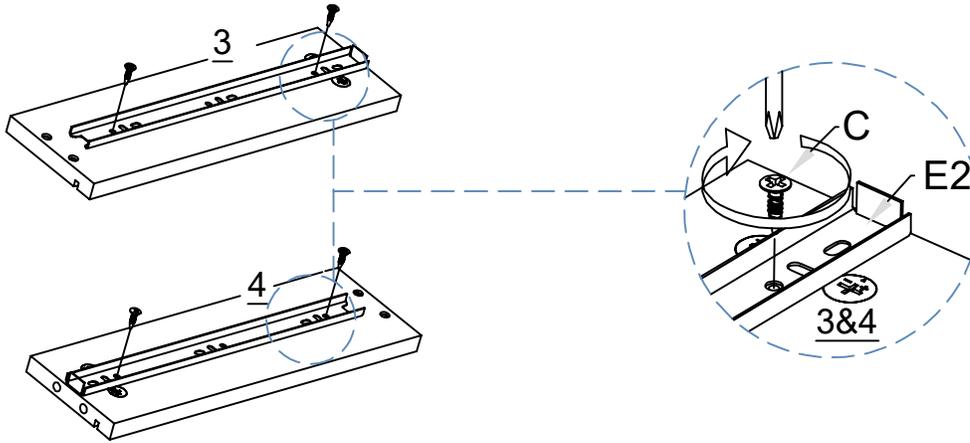

No.C  
Quantity:24Pcs  
Screw M3.5\*14mm



No.E  
Quantity:12Pcs  
Drawer Runner


E2

Third Hole

Last Hole

## DRAWER X6

# STEP 23

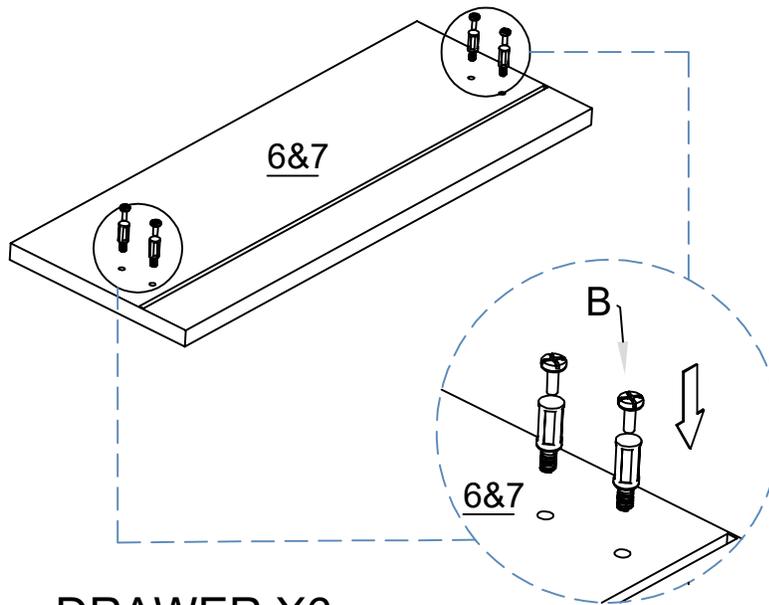


## DRAWER X6


No.B  
Quantity:24Pcs  
Cam Bolt




STEP 24

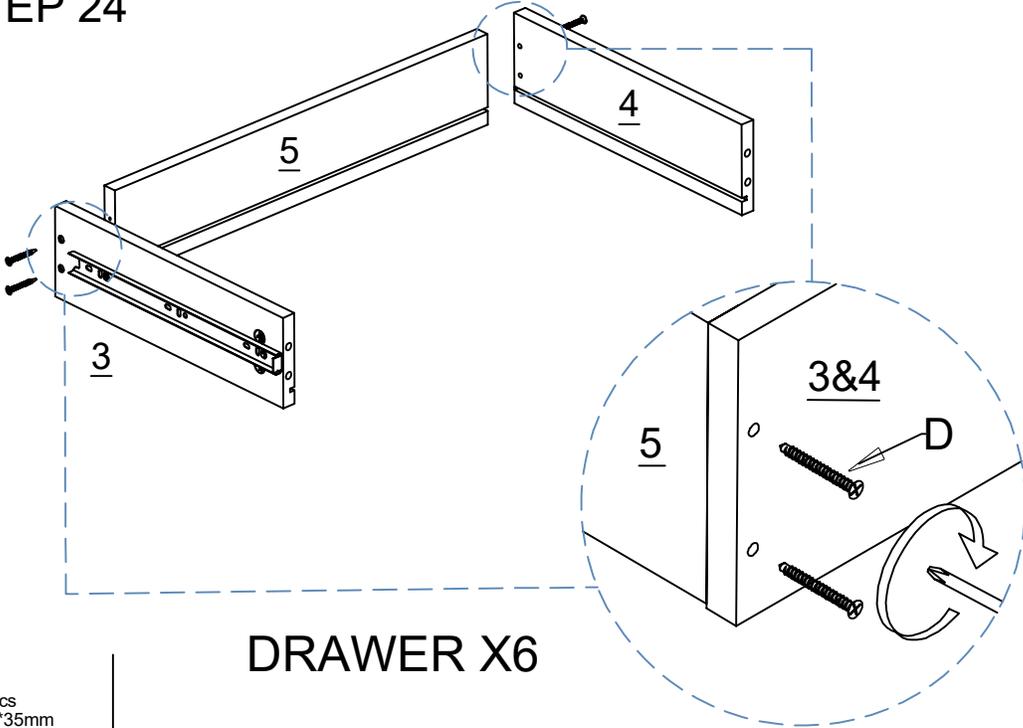

No.D  
Quantity:24Pcs  
Screw M3.5\*35mm




STEP 25

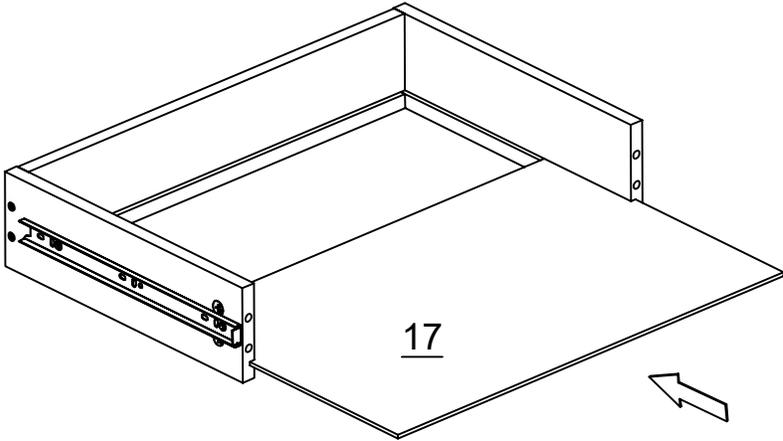


DRAWER X6

STEP 26


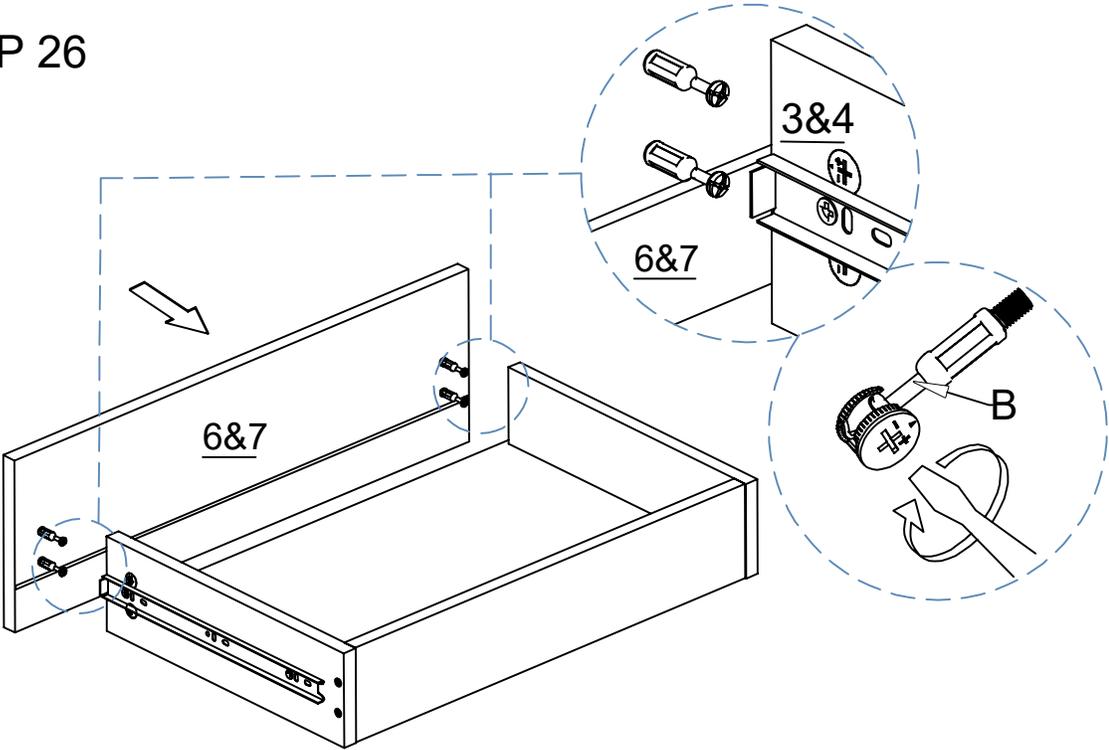


DRAWER X6

STEP 27

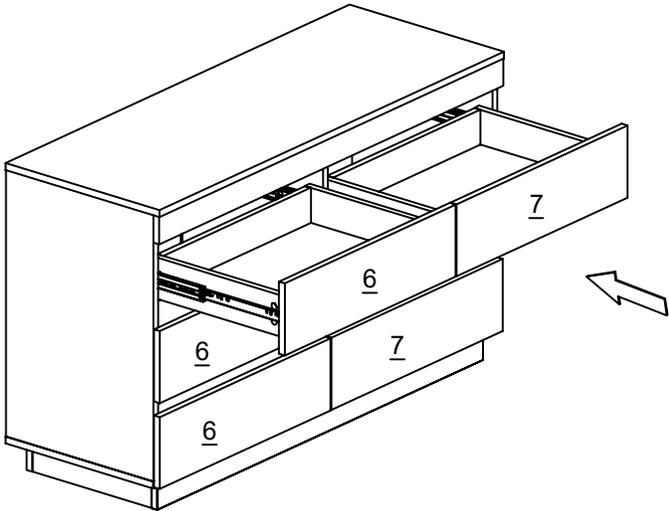

# STEP 28

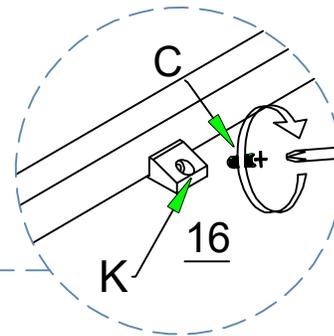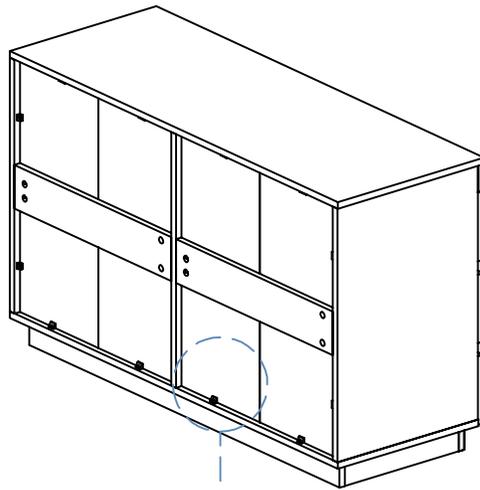






No.C  
Quantity:12Pcs  
Screw M3.5\*14mm




No.K  
Quantity:12Pcs  
Back Plate Clamp



# STEP 29

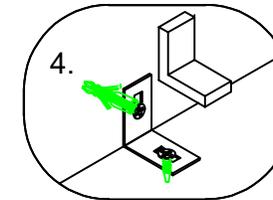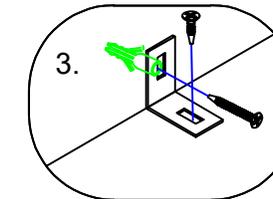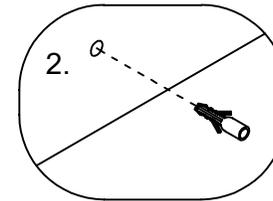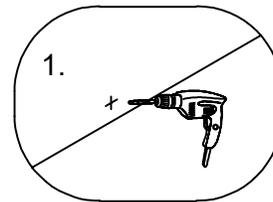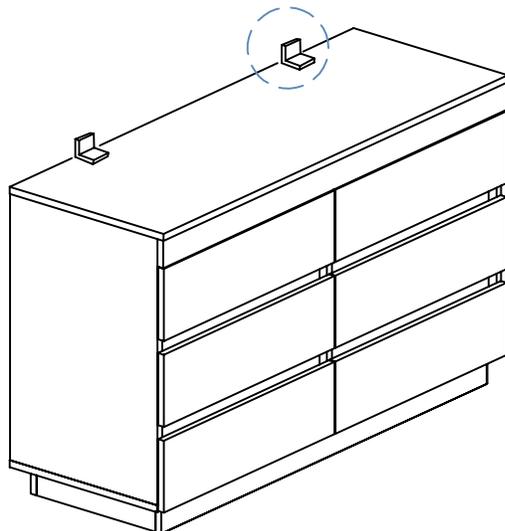

No.J  
Quantity:2Pcs  
Anti Collapse



lifely.com.au

**Great Job, You're done!**

Don't forget to share how it looks in  
your space and tag us on Instagram.

@lifelyhome#homewithlifely!