

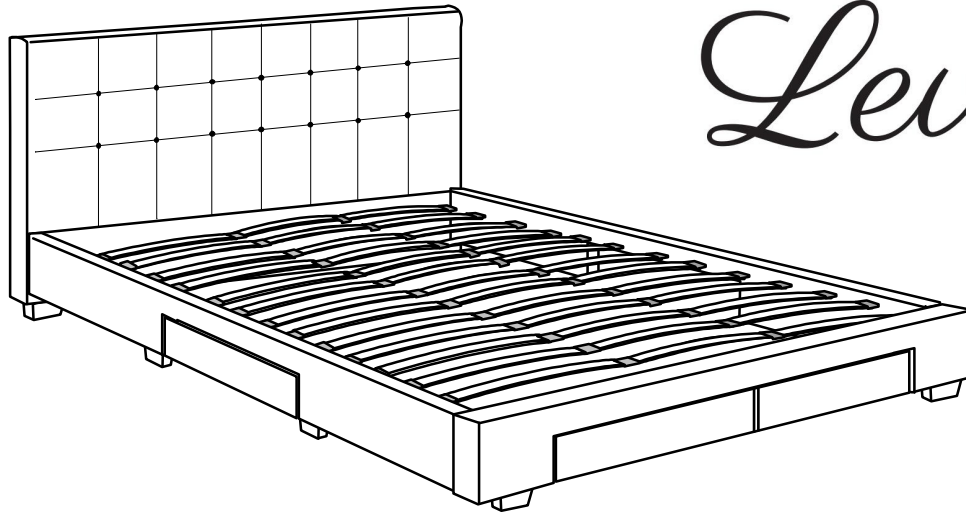

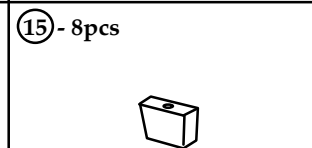
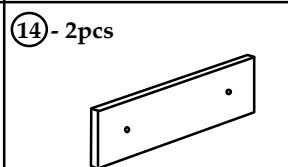
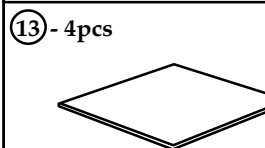
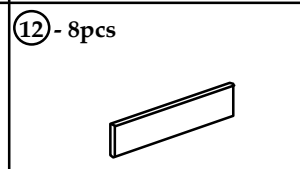
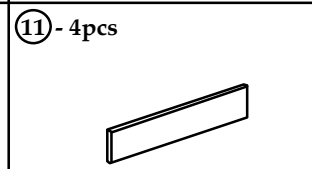
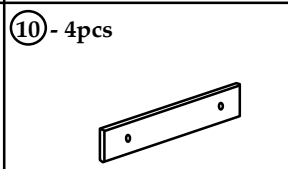
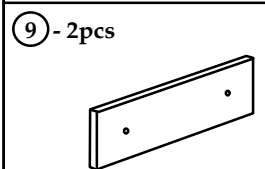
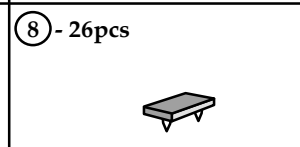
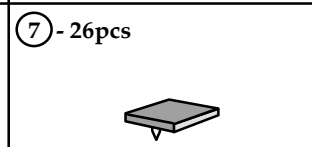
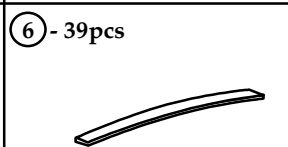
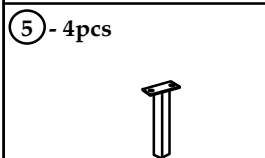
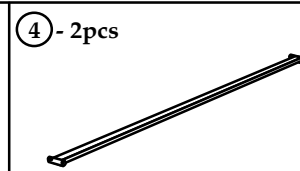
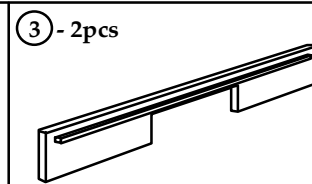



Assembly Instructions - BF1012

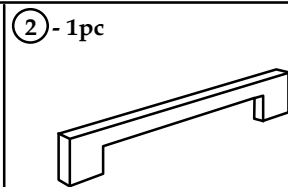


Levede[®]

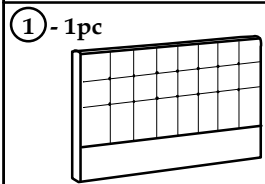

M8 x 25mm
x 24pcs



M8 x 30mm
x 8pcs




M8 x 45mm
x 8pcs



Washer
x 16pcs




Hex Nut
x 8pcs



30mm
Wood Screw
x 32pcs



20mm
Wood Screw
x 48pcs



wheel
x 16pcs





M5 Allen Key
x 1pc





Spanner
1pc








10mm
Wood Screw
x 32pcs

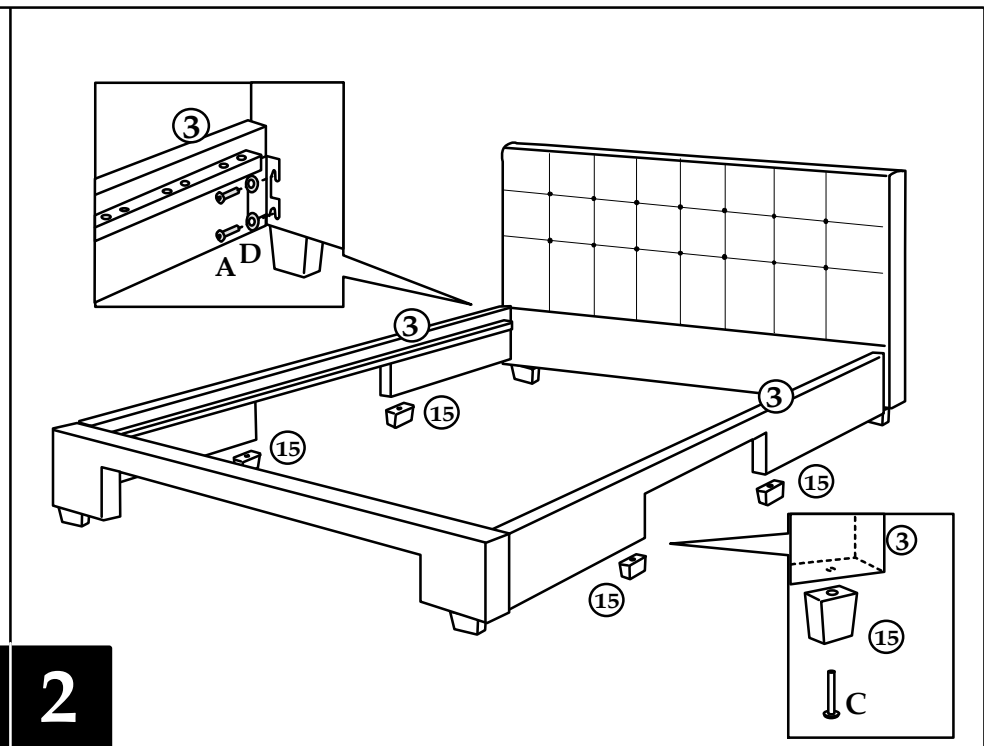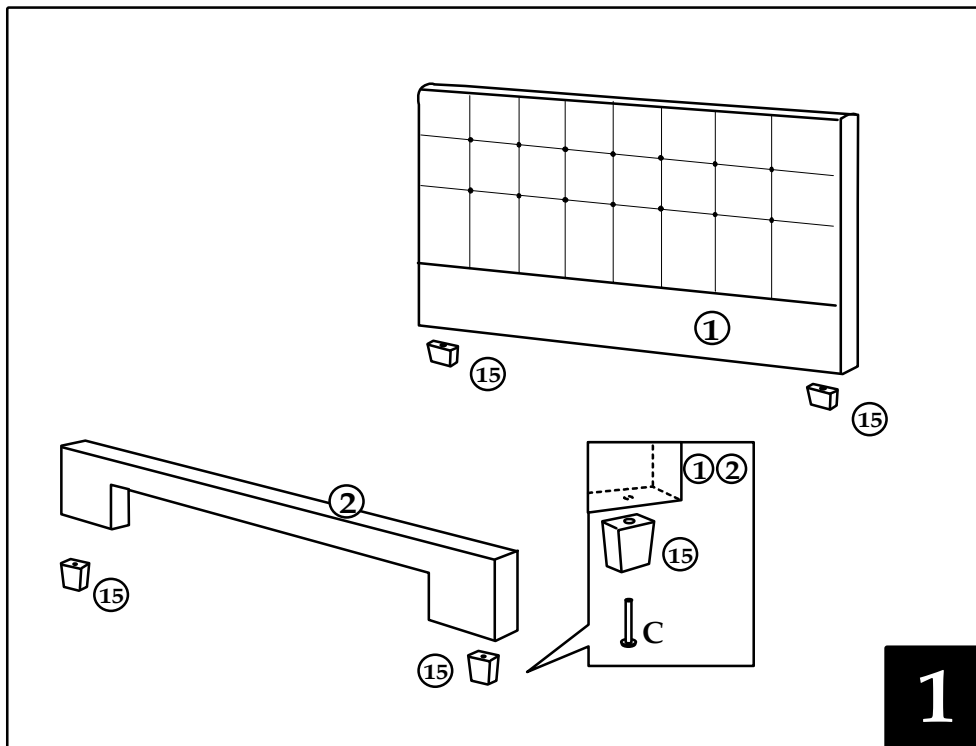

1 2
3 4

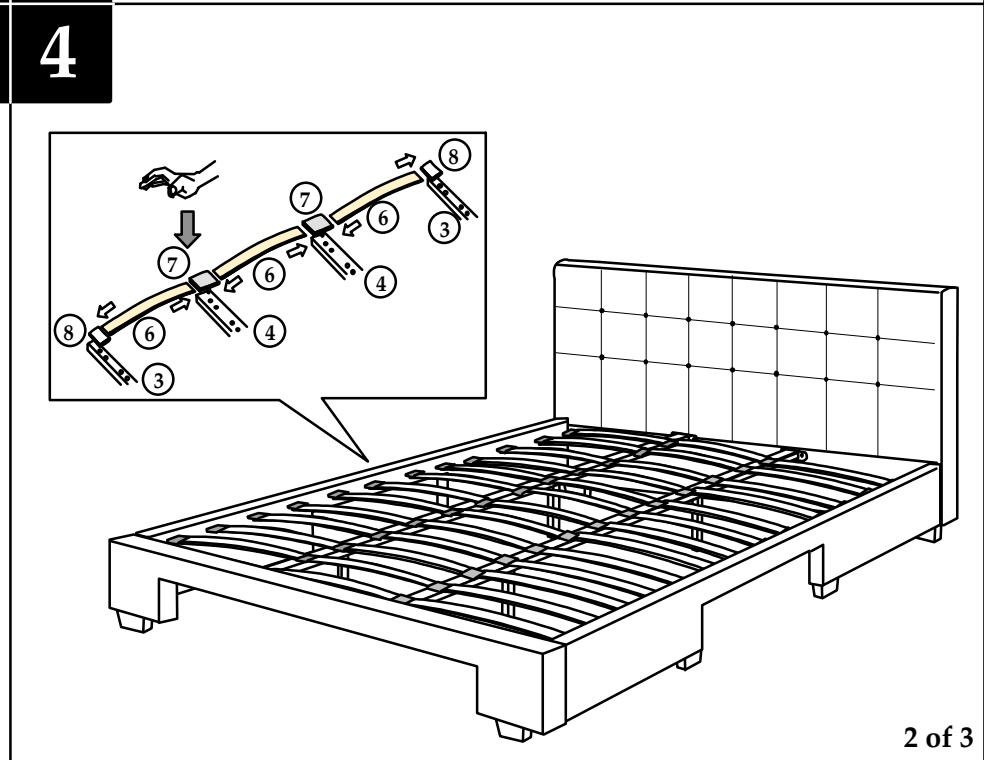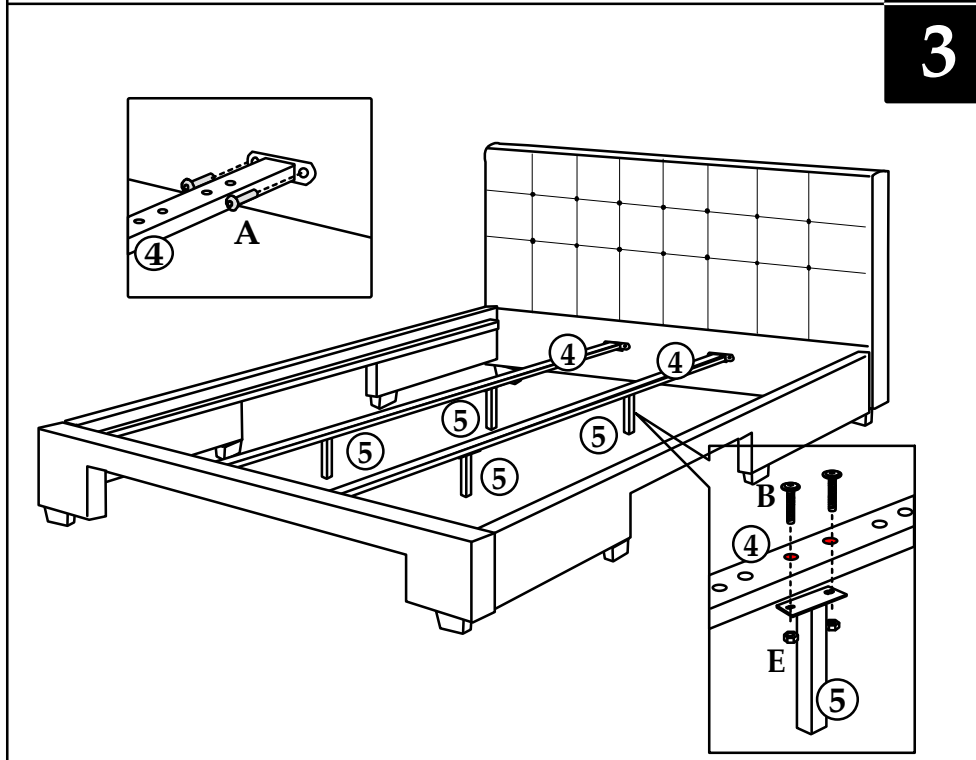

5 2 x Drawers of sideboard

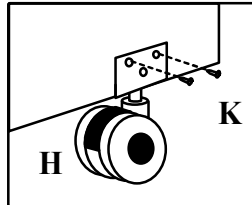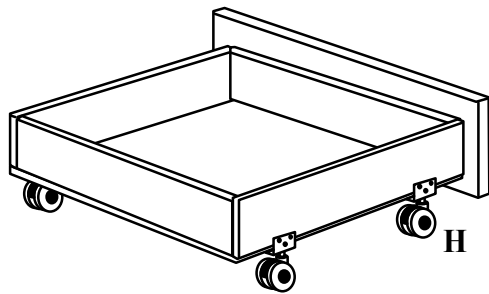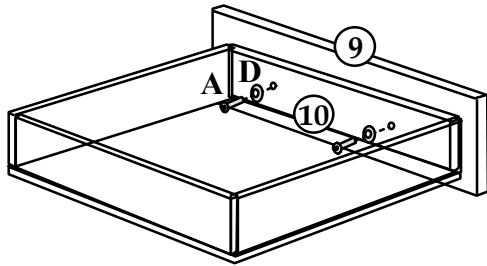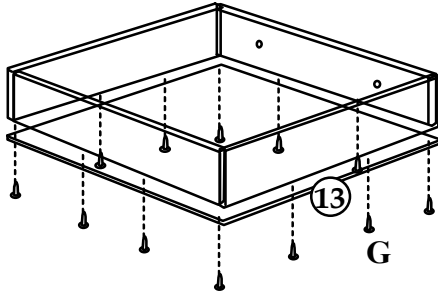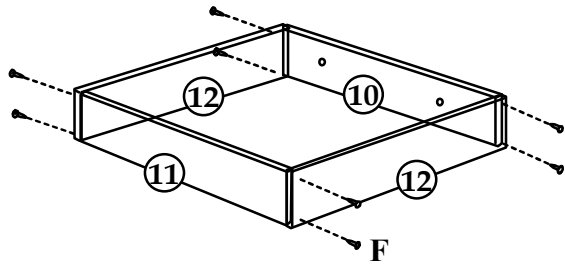

6 2 x Drawers of Footboard

