


# Assembly Instruction

*Levede*<sup>®</sup>

Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

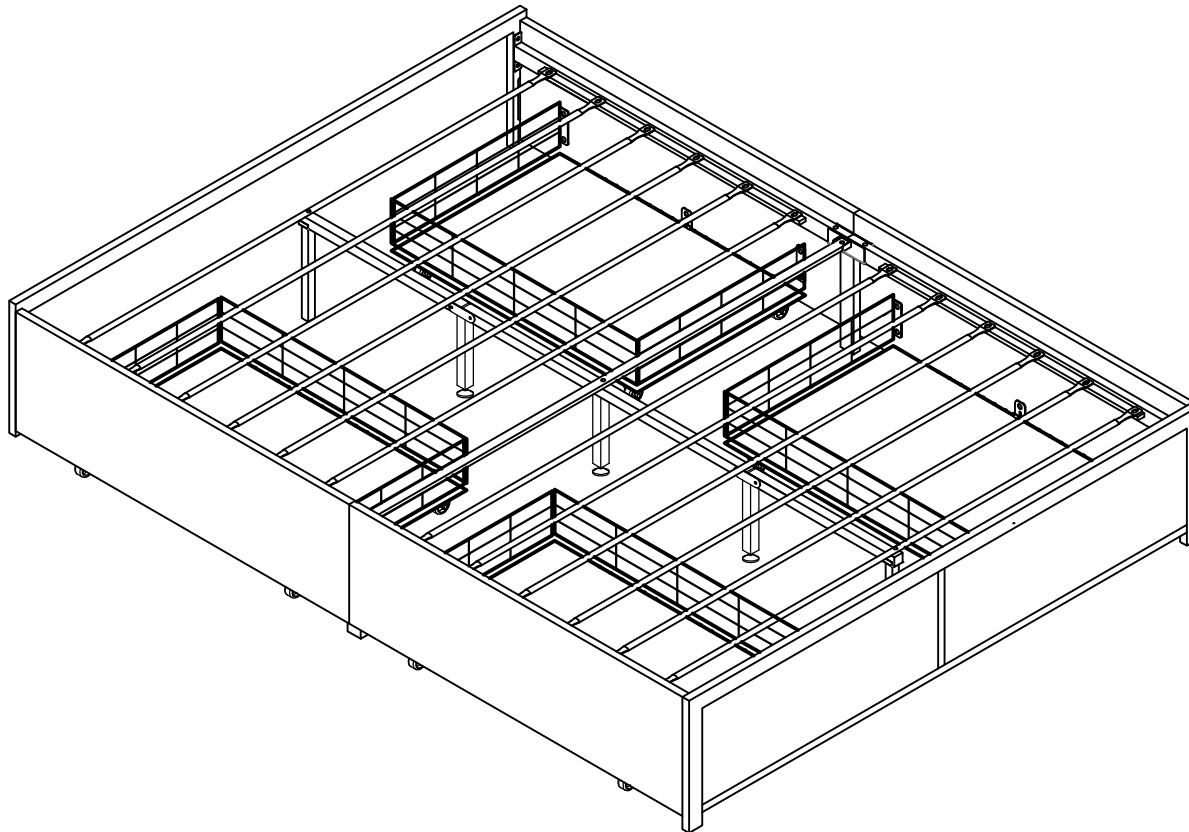


**It needs at least two people to install.**



Before starting the assembly, you must read the whole manual and follow the instructions

# Assembly Instruction of Bed

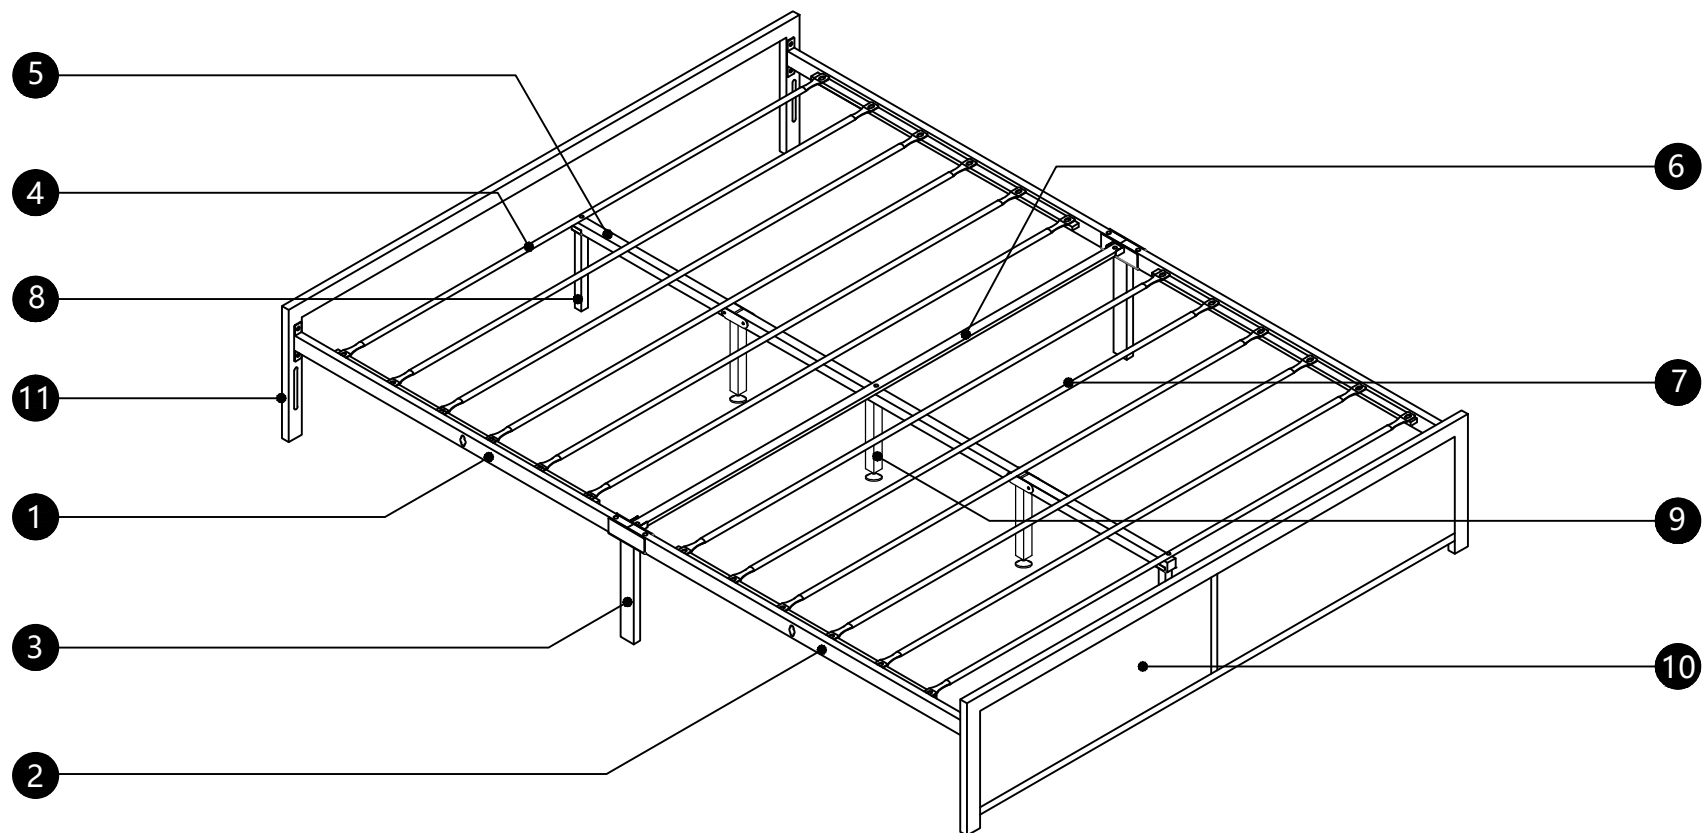

# Assembly Instruction of Bed

## Hardware parts



M6\*15

**A** 24PCS




M8\*13

**B** 24PCS




M8\*20

**C** 10PCS



M8\*55

**D** 7PCS



M6


**E** 1PC




M8

**F** 1PC


## Part list

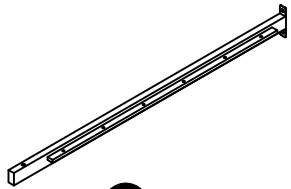


**1** 2PCS

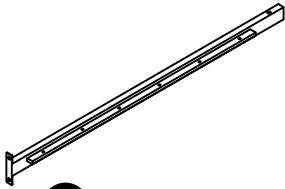


**2** 2PCS




**3** 2PCS

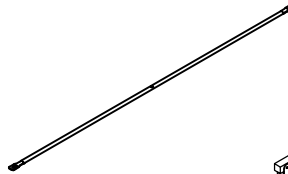


**4** 2PCS

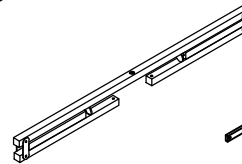

**5** 1PC

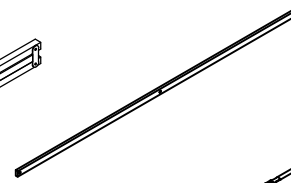


**6** 1PC

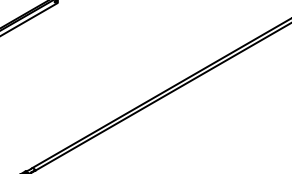


**7** 10PCS




**8** 2PCS



**9** 1PC

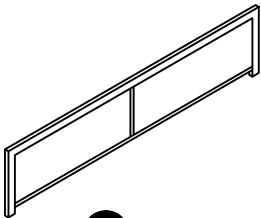

**10** 1PC

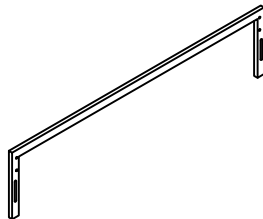

**11** 1PC



Crash pads

**20** 2PCS



Double faced  
adhesive tape


**21** 4PCS

# Assembly Instruction of Bed

Step:1


Please pay attention to the direction arrow in the illustration to avoid reverse installation

 **D** X 4PCS  
M8\*55

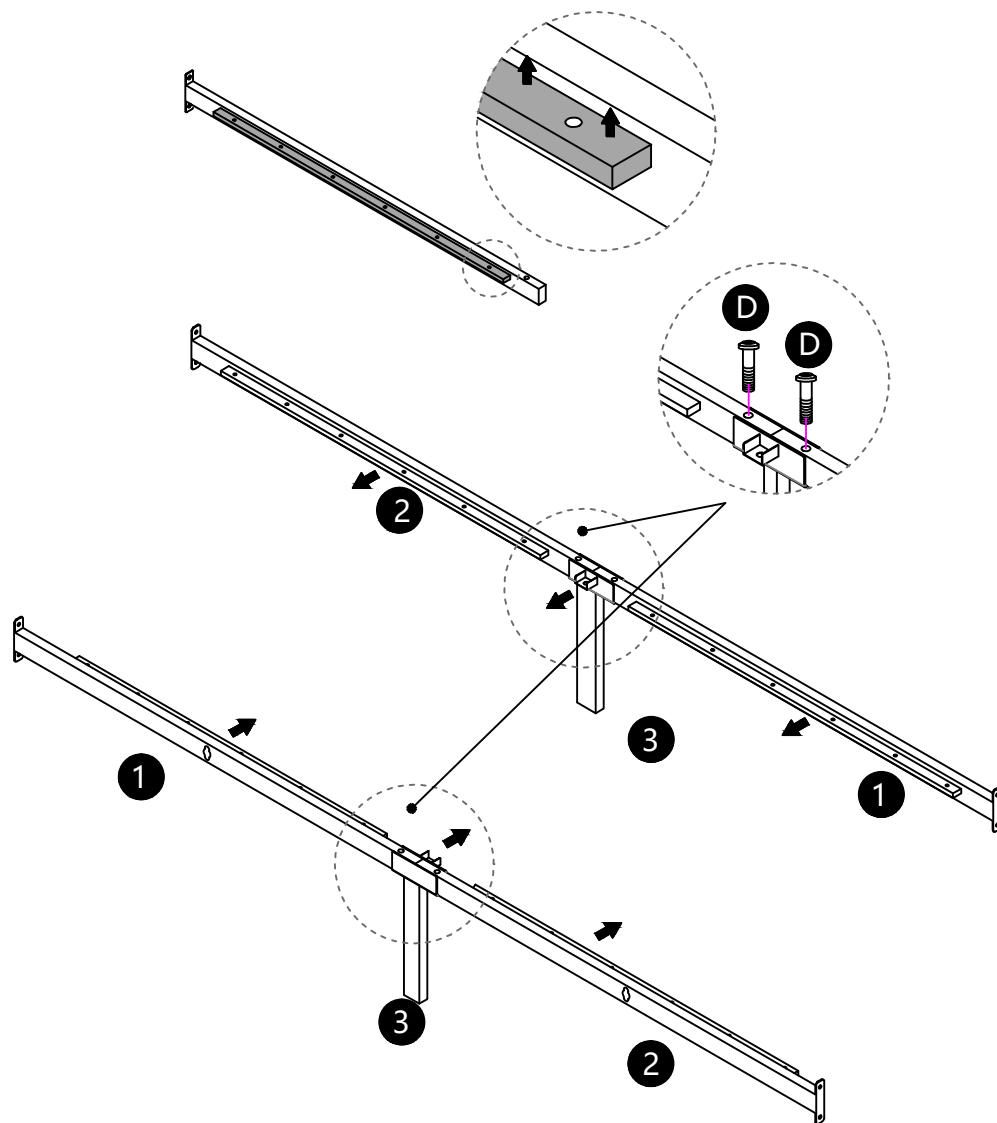


Step:2

 **C** X 8PCS  
M8\*20

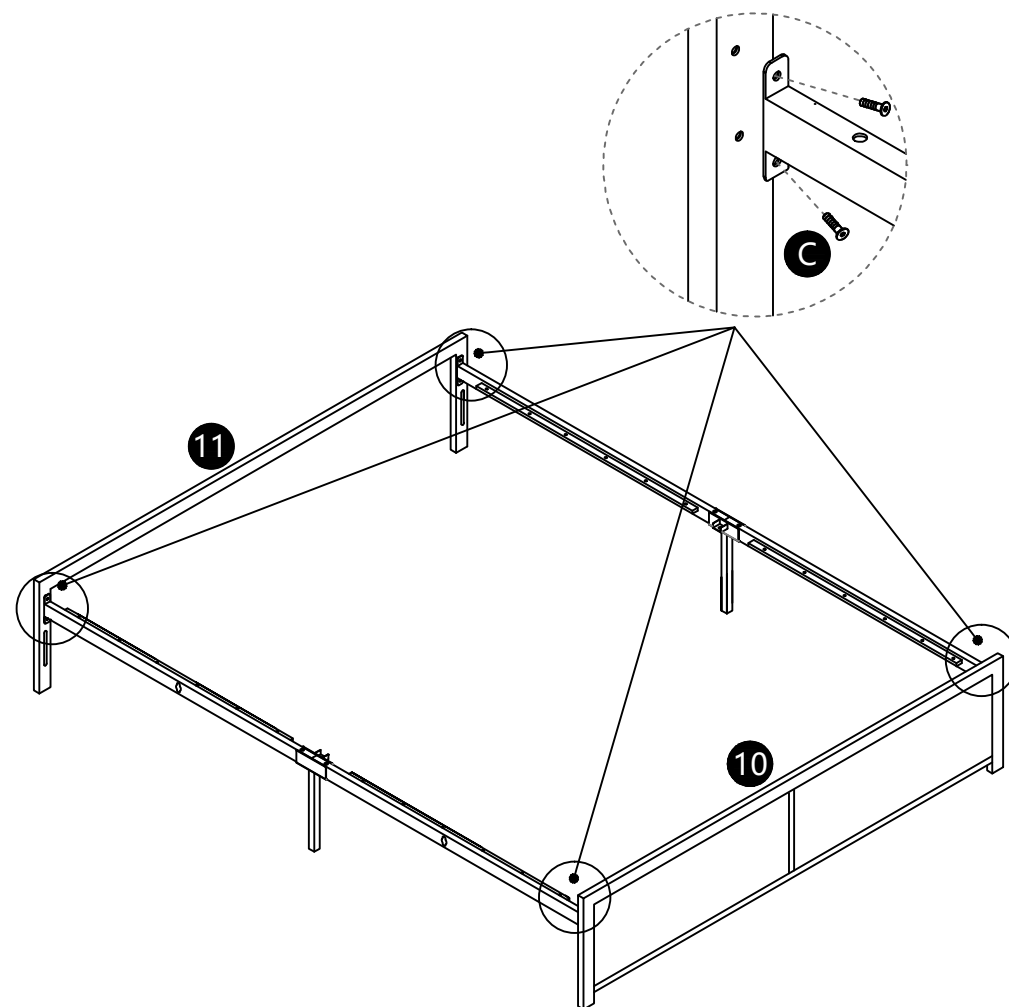


# Assembly Instruction of Bed

Step:3

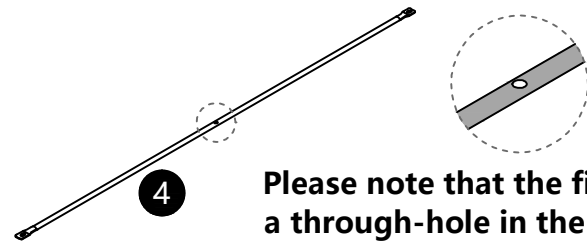


 **A** X 4PCS  
M6\*15

 **C** X 2PCS  
M8\*20

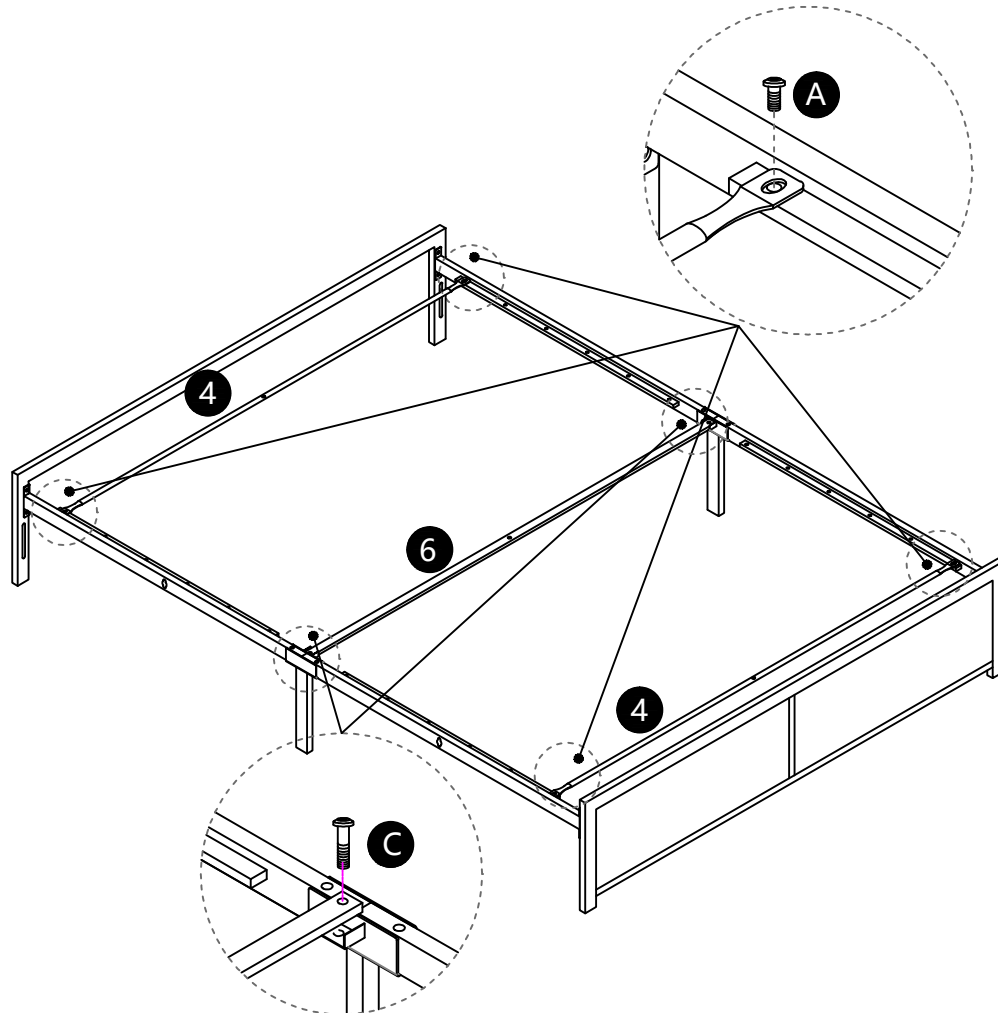


Step:4

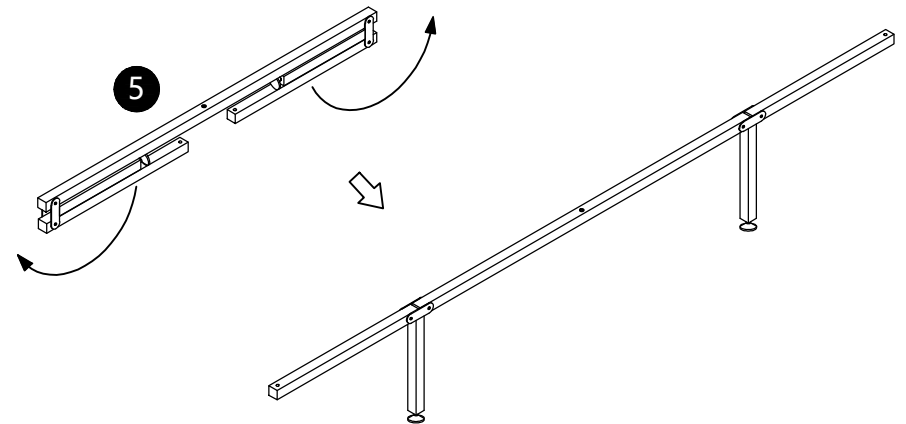

# Assembly Instruction of Bed


Step:5

 **D** X 3PCS  
M8\*55

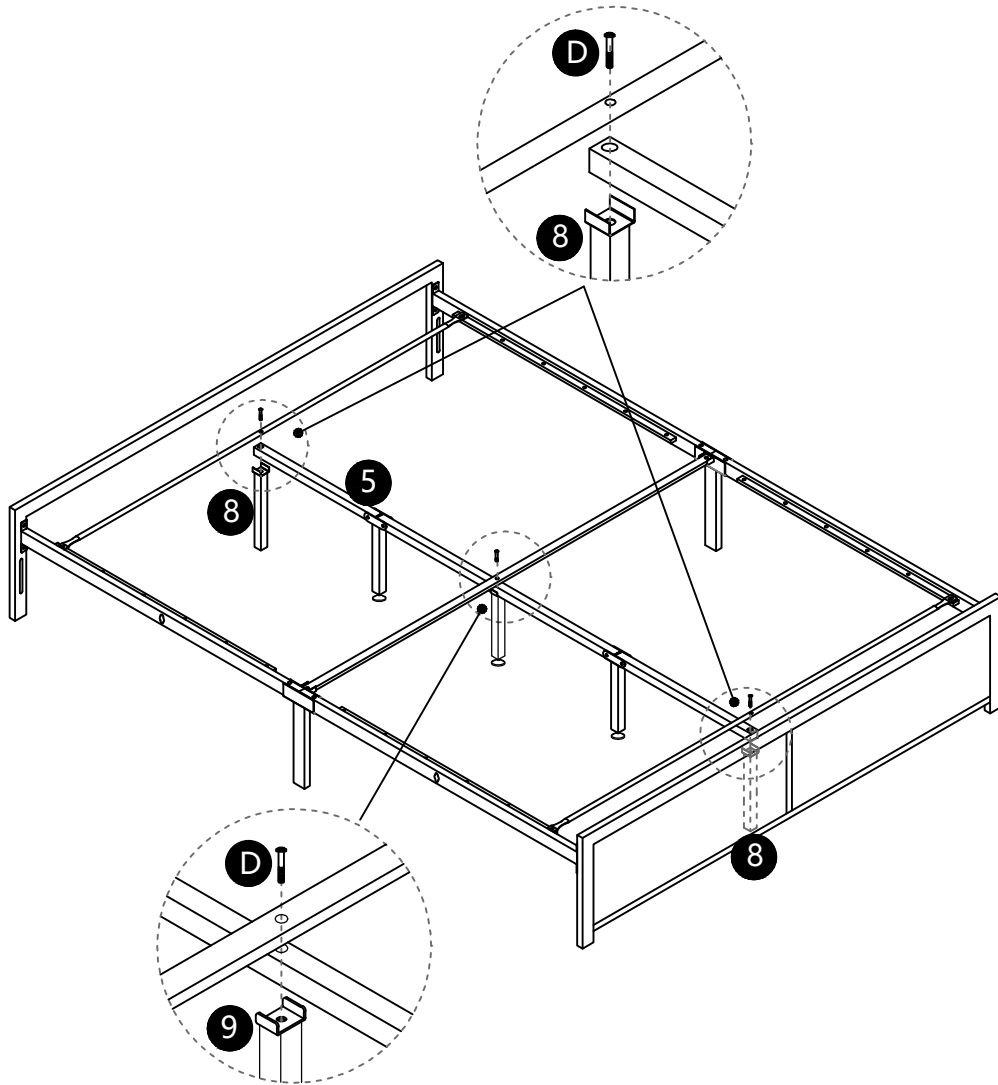


Step:6

 **A** X 20PCS  
M6\*15

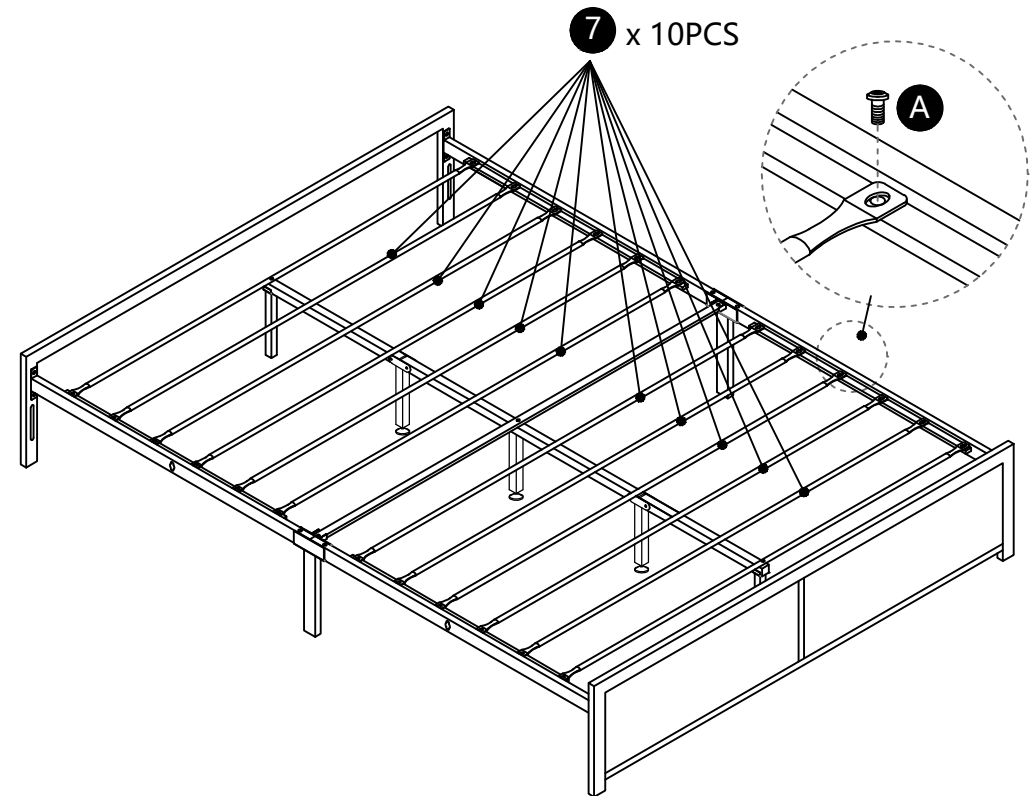

# Assembly Instruction of Bed

There is a small sealing pocket in the package. There are two pieces of double-sided adhesive tape and two crash pads in the sealing pocket. As shown in the figure below.

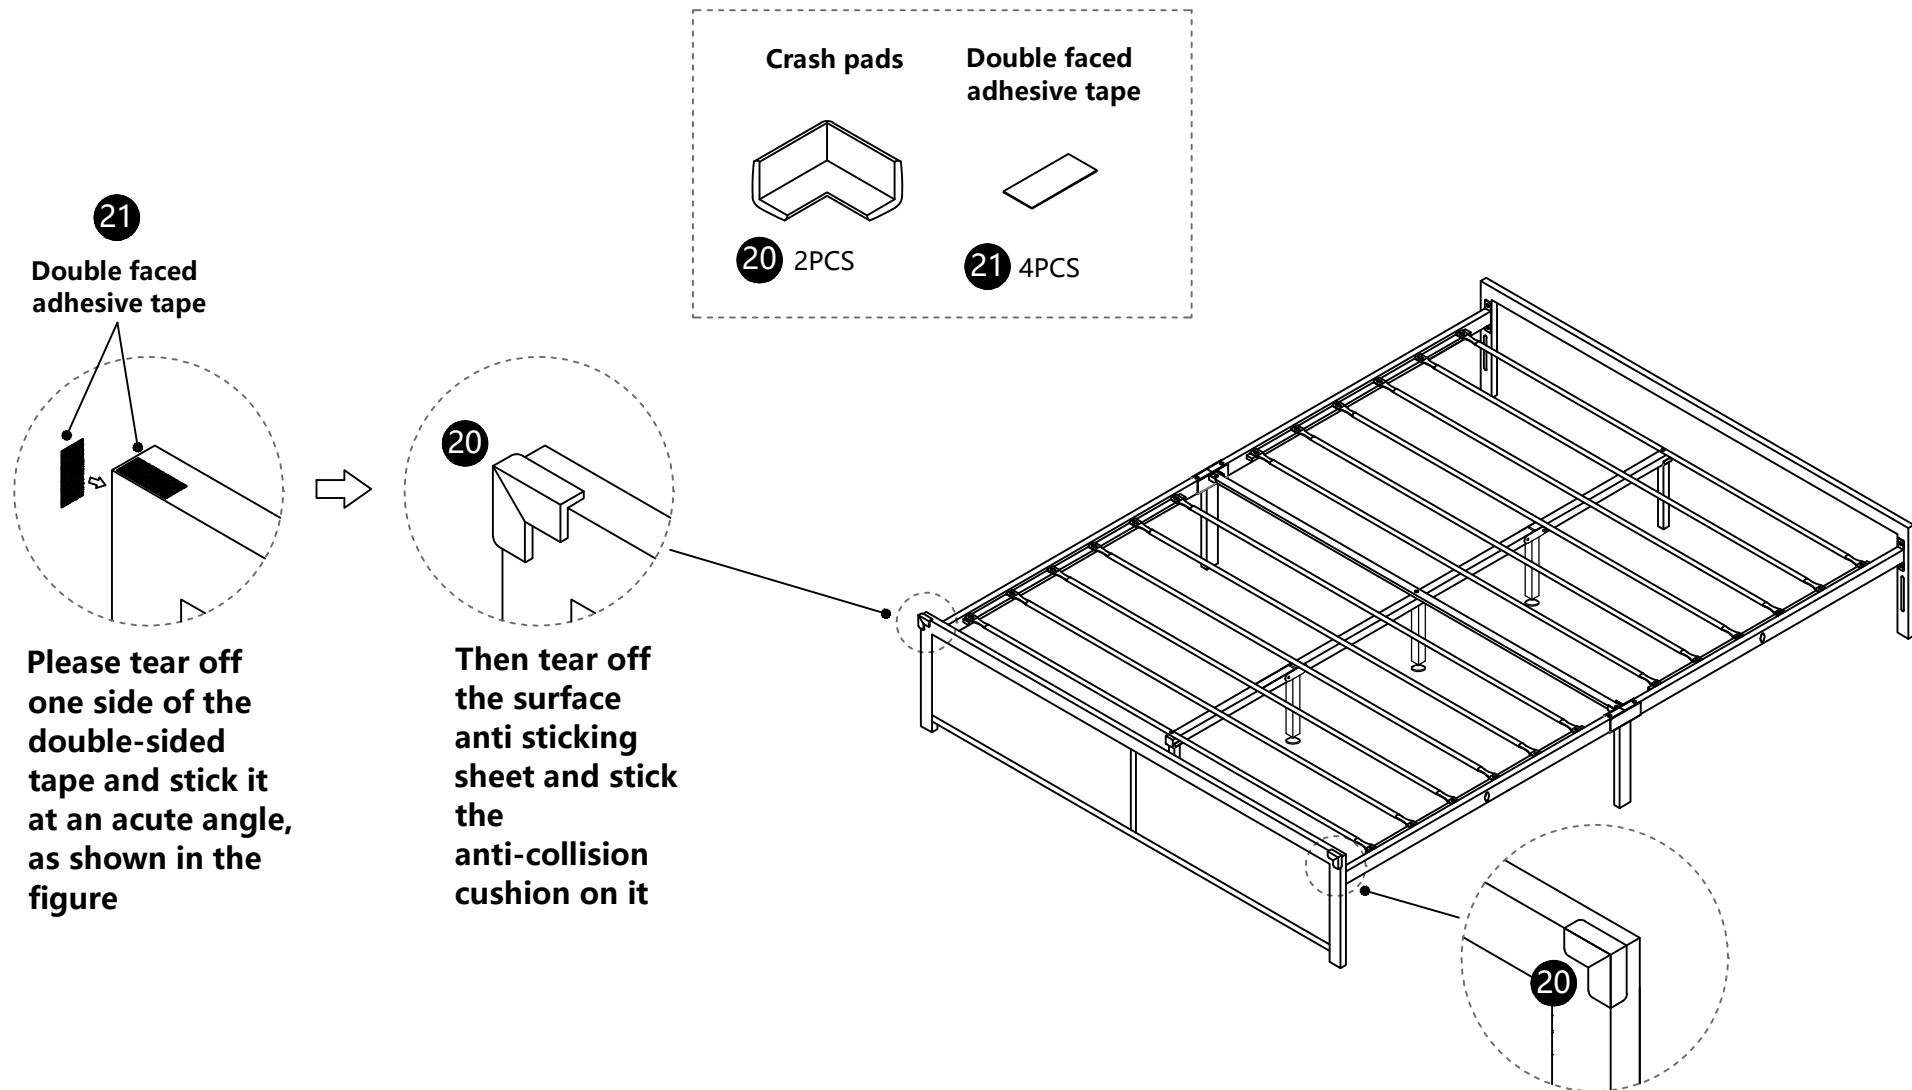

# Assembly Instruction of drawer

## Hardware parts


### Accessories in hardware box



Pulley x 16



Black plastic buckle (A) x 36




Black plastic buckle (B) x 36



Screw x 24


Note the **A** in the hardware blister pack

## Part list

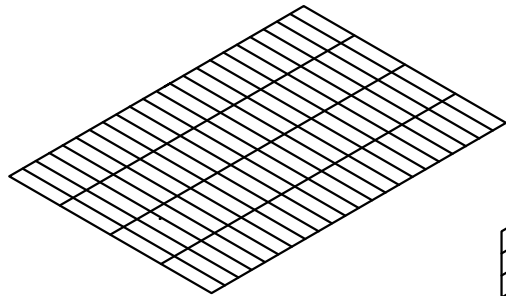


**Drawer base**

**14** 4PCS

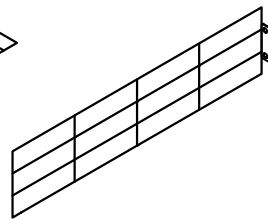


**Drawer flank**

**15** 8PCS

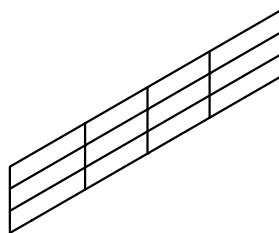


**Drawer rear wall**

**16** 4PCS

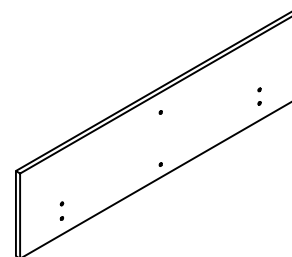


**Drawer board**

**17** 4PCS

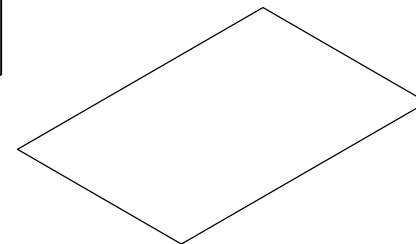

**Drawer pad**

**18** 4PCS






**Iron buckle**

**19** 5PCS






# Assembly Instruction of **drawer**

## **Black plastic buckle** instructions for assembling drawer mesh

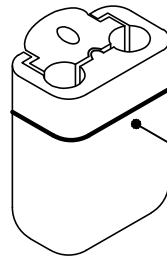

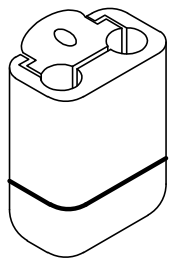


Remember this  
convex coil




Reverse  
direction

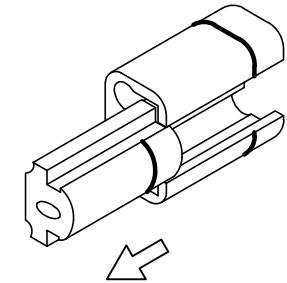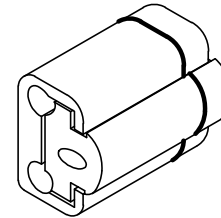

You can pull the buckle out by  
following the direction indicated  
by the arrow

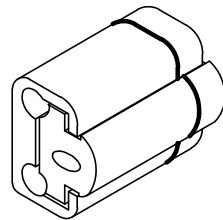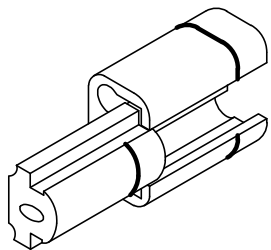

**So** This is the only direction that  
can be locked

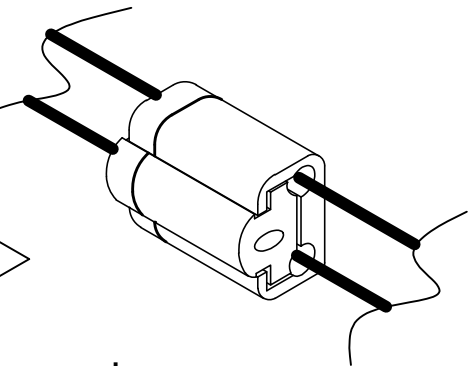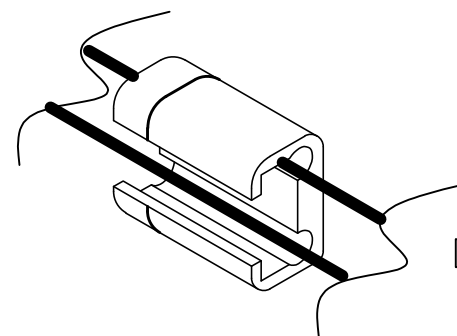

Place round iron tube as shown  
for better drawer assembly



# Assembly Instruction of **Drawer base**




Please note that  
this drawer base  
(14) has front  
and back sides!  
Please see the  
instructions  
clearly before  
assembling!!!

As shown in the  
figure  
Clip the pulley into  
position first

Then push the pulley to the side  
At the same time, clamp the iron  
wire at the edge  
It takes a little strength

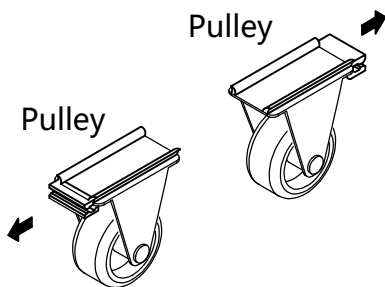
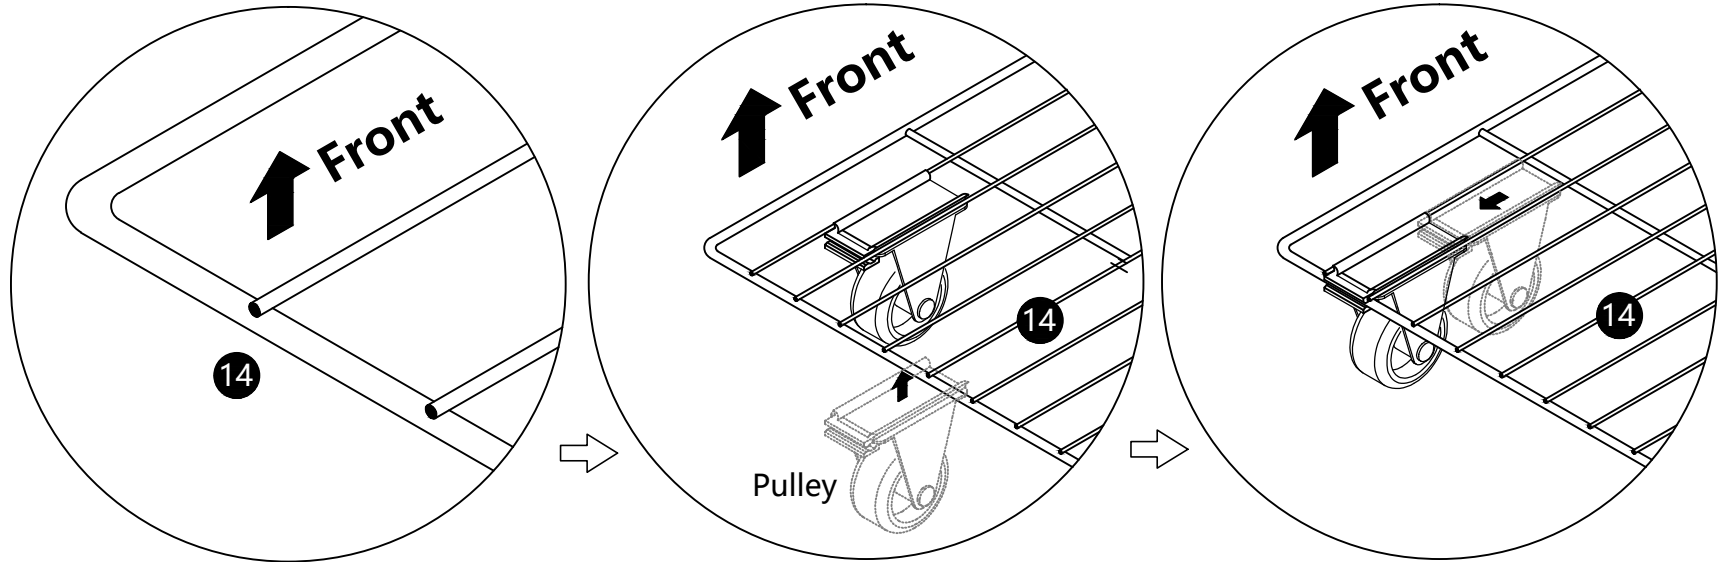


**Pay attention to  
the orientation  
before clamping in**

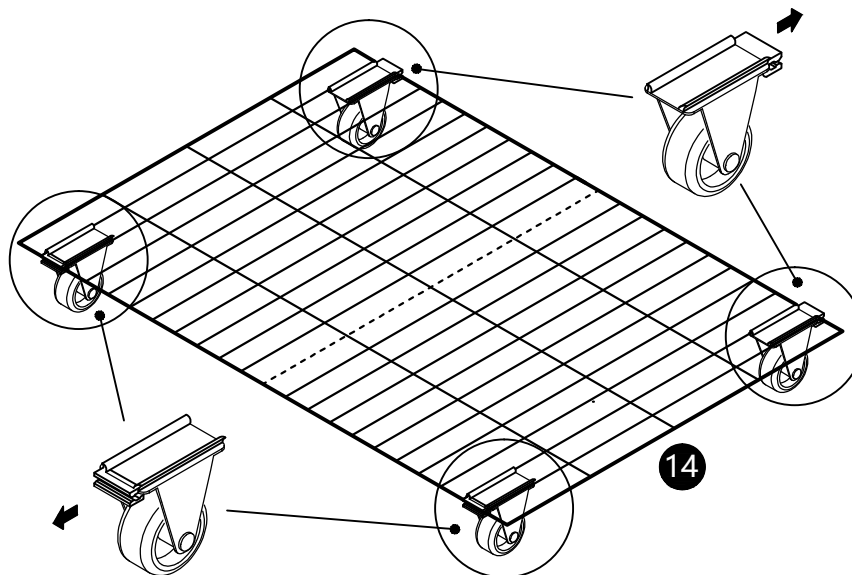

# Assembly Instruction of drawer

Step:1

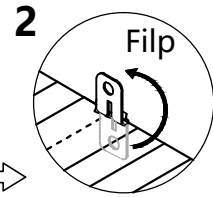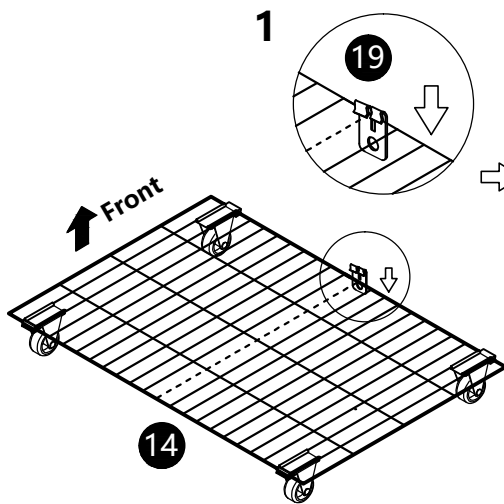



**1:** Buckle the accessories into the iron mesh as shown in the figure. The 11th one counted on the side is the middle.

**2:** Buckle it and turn it over





Step:2



Please note that the direction of this lock plate should be as shown in the figure and the same side as the middle lock plate.

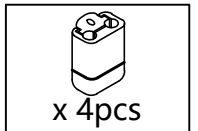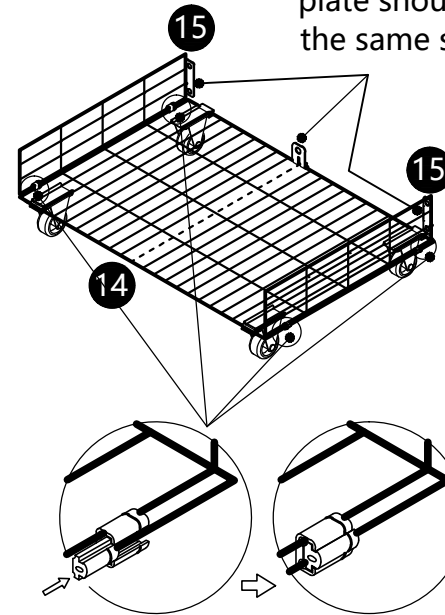

Step:3

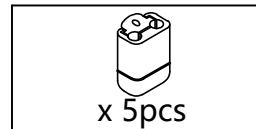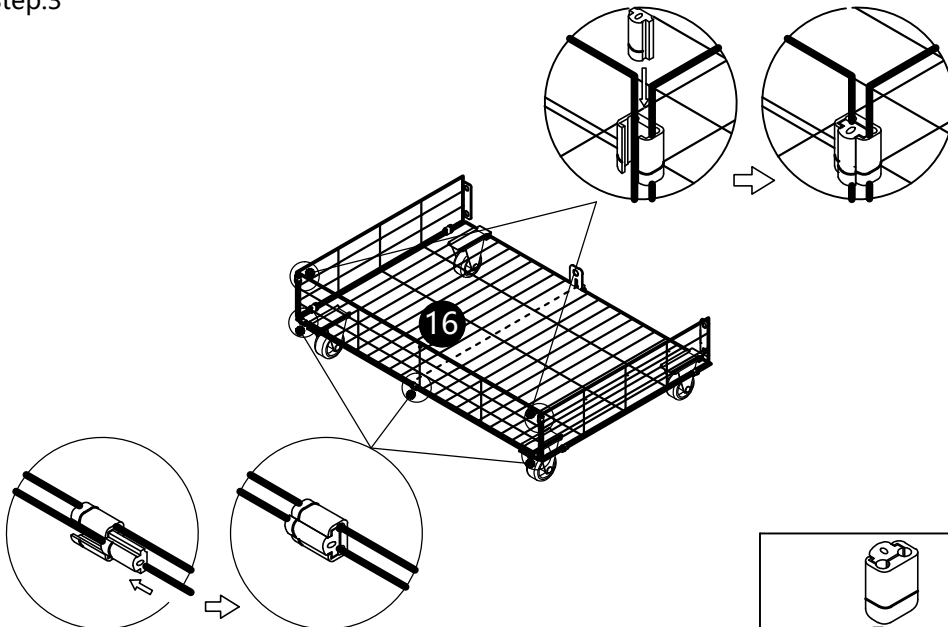


Step:4

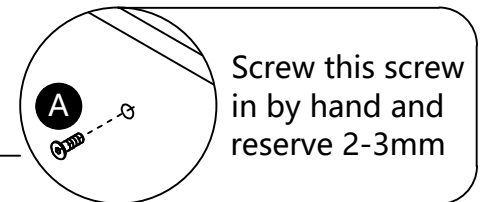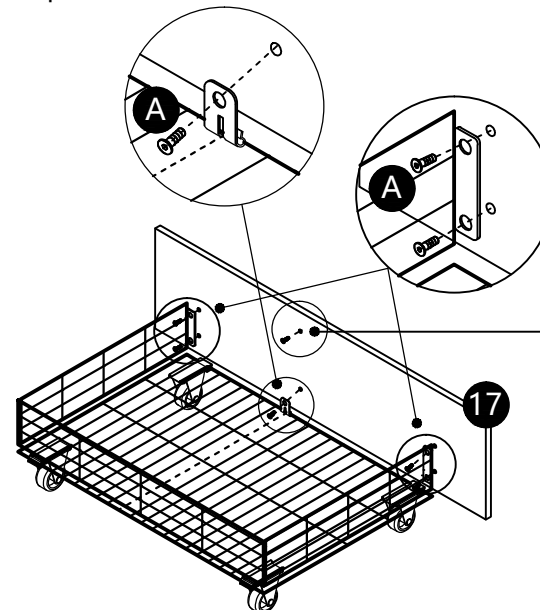

Assemble the other three drawers in this way. 4 drawers in total.

# Assembly Instruction

You must put the drawer pad  
(18) in the drawer

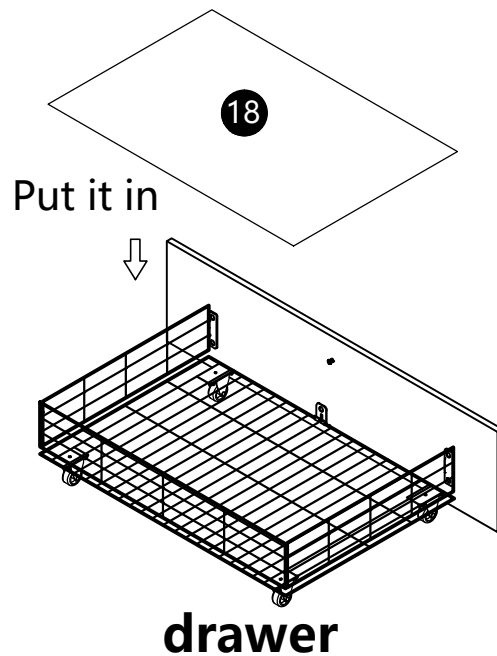

When pushing into the drawer,  
Lift the drawer gently,  
Align the screw with the gourd  
hole and push in  
When pulling out the drawer,  
Lift the drawer gently,  
Align the screw with the gourd  
hole, and then pull it out

