

ASSEMBLY INSTRUCTION

DESCRIPTION


9907

Chelsea 6 Drawer Chest


1.5hr

APPROXIMATE ASSEMBLY TIME




2 PERSON ASSEMBLY

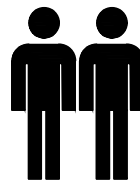

FLOOR AREA
2MX2M

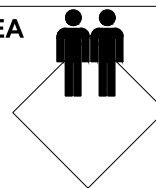


REQUIRED ASSEMBLY SPACE

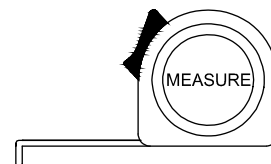

REQUIRED ASSEMBLY TOOLS

ASSEMBLED DIMENSIONS

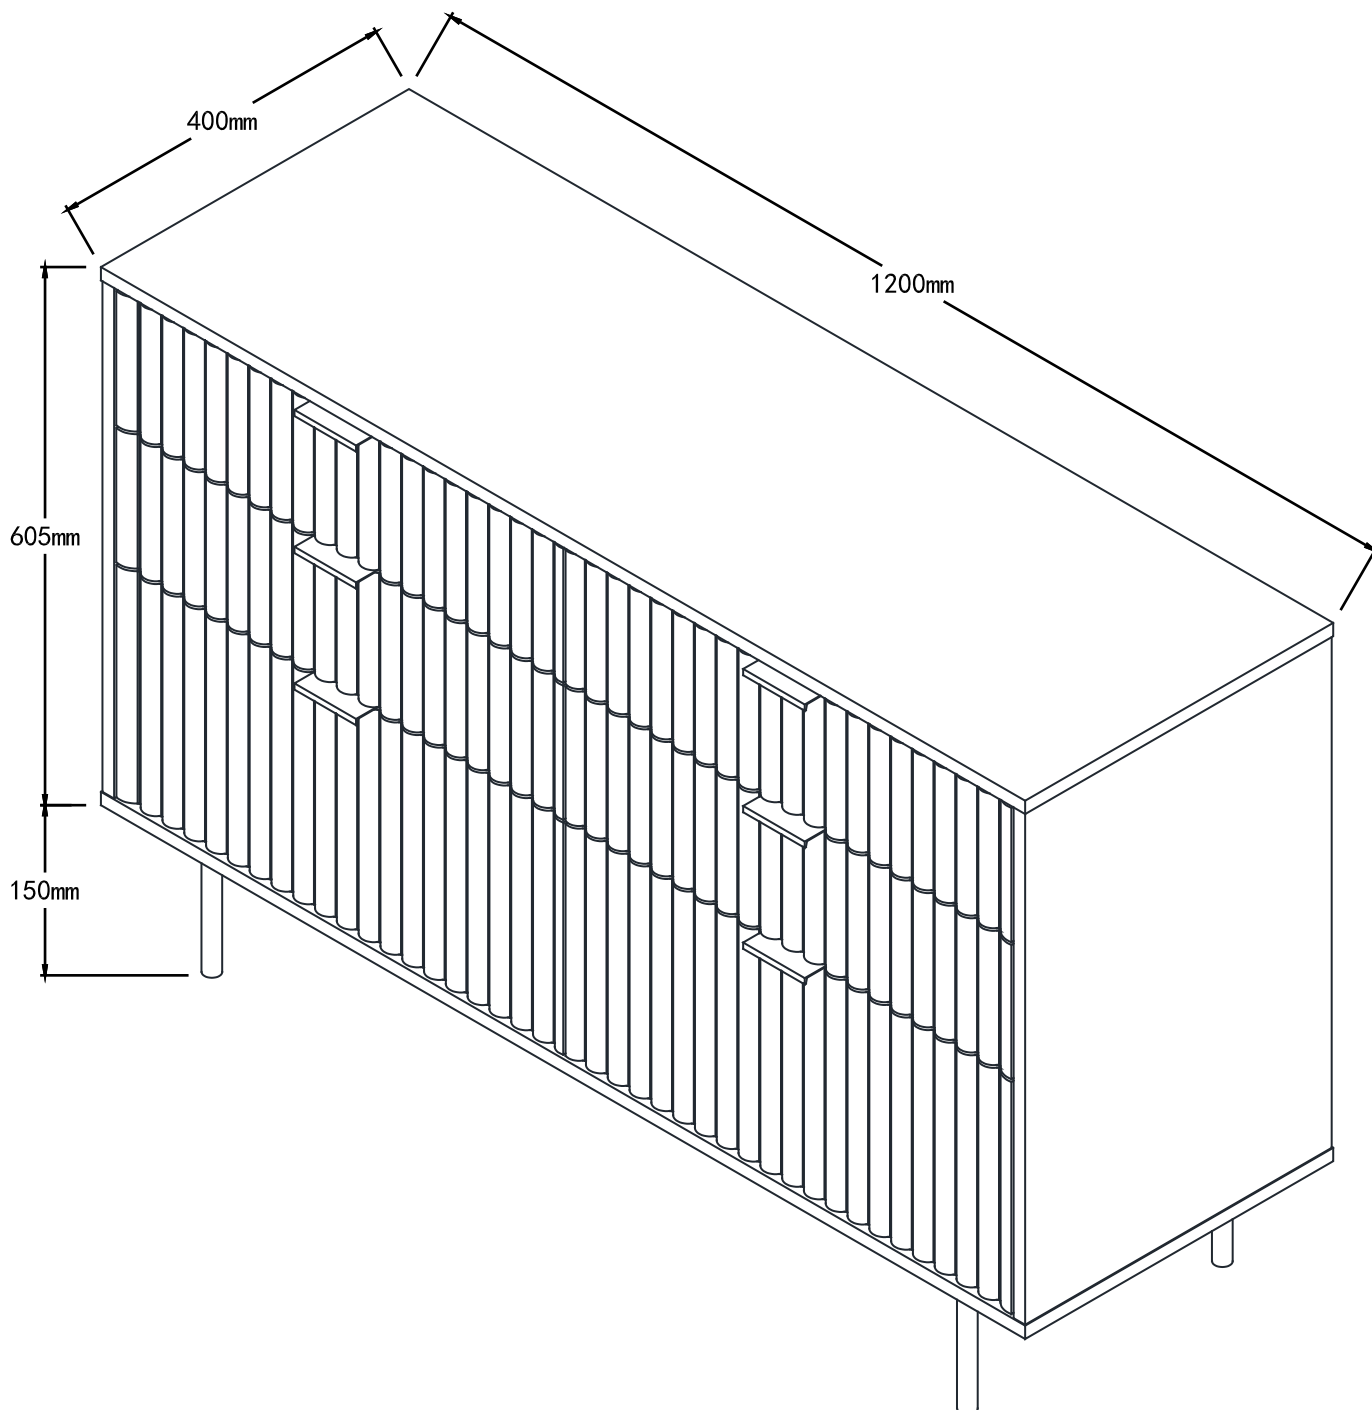


ASSEMBLY INSTRUCTION

DESCRIPTION

9907

Chelsea 6 Drawer Chest

PARTS LIST

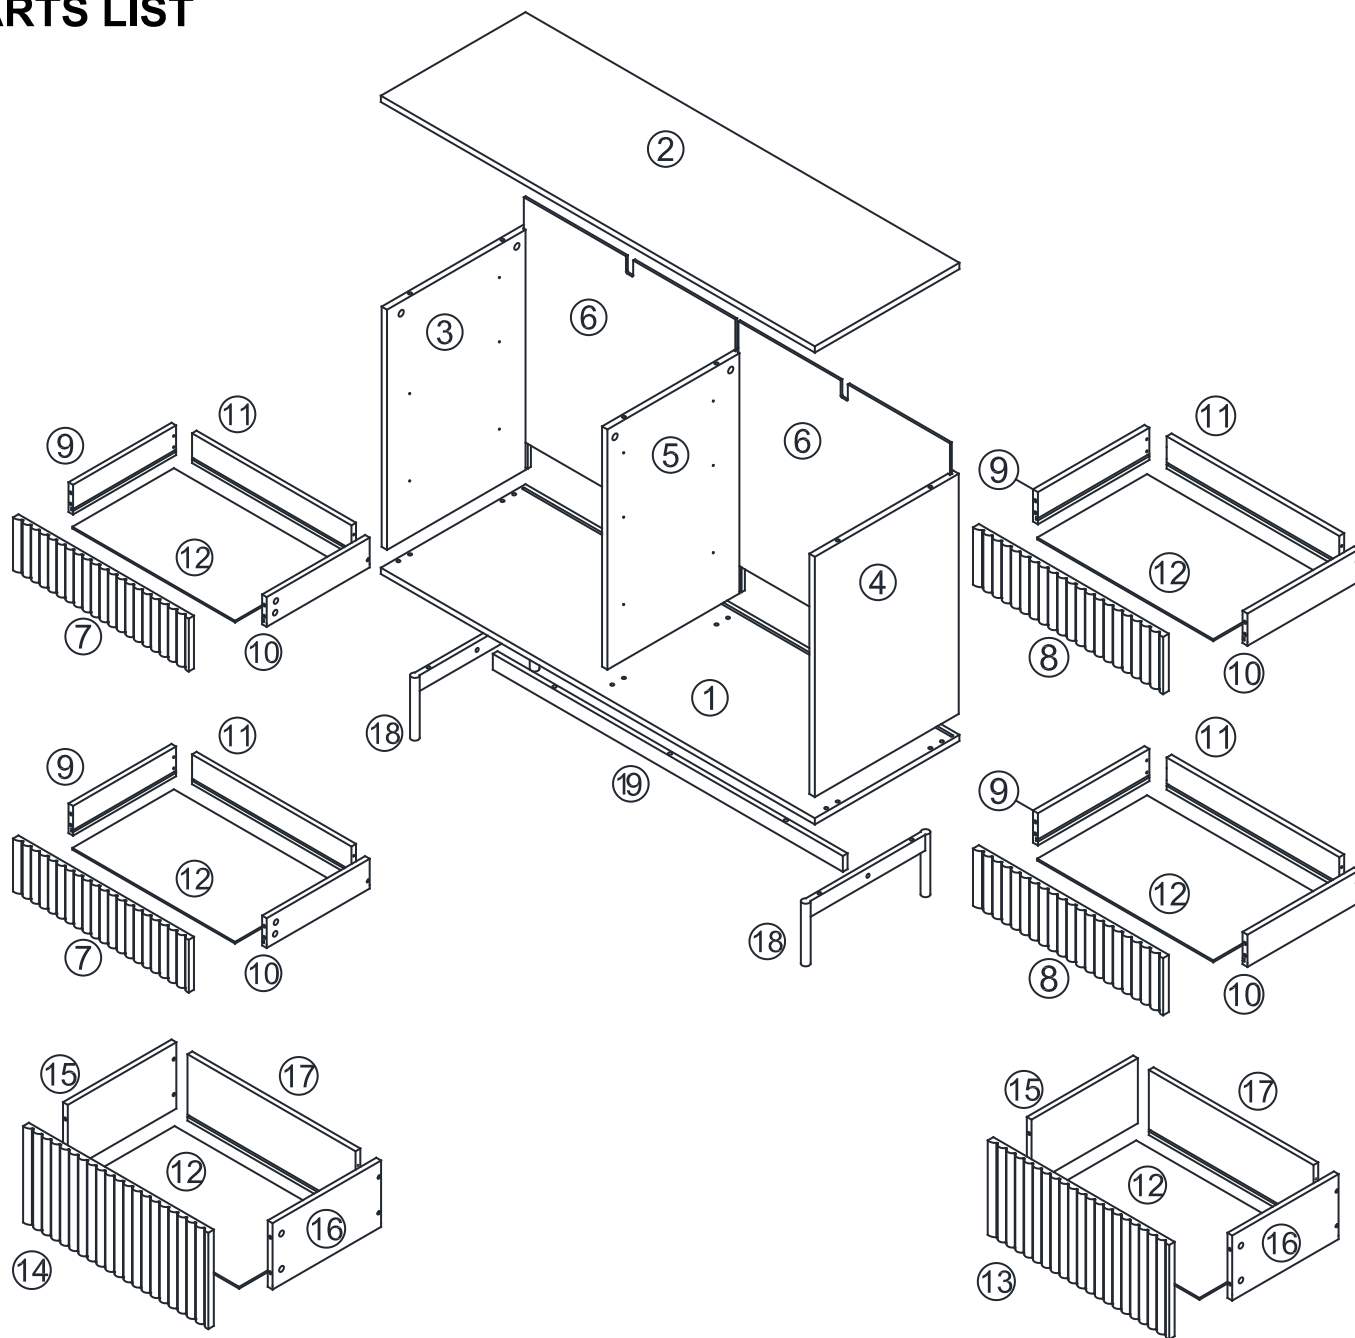

NO. PARTS LIST

QTY

(1)	Part1	1
(2)	Part2	1
(3)	Part3	1
(4)	Part4	1
(5)	Part5	1
(6)	Part6	2
(7)	Part7	2
(8)	Part8	2
(9)	Part9	4

NO. PARTS LIST

QTY

(10)	Part10	4
(11)	Part11	4
(12)	Part12	6
(13)	Part13	1
(14)	Part14	1
(15)	Part15	2
(16)	Part16	2
(17)	Part17	2
(18)	Part18	2
(19)	Part19	1





















ASSEMBLY INSTRUCTION

DESCRIPTION

9907

Chelsea 6 Drawer Chest

HARDWARE LIST

A	x30	B	x30	C	x12	D	x6	E	x56	F	x24	G	x8
													
M6*35mm		Ø15mm		Ø8*30mm		7*50mm		Ø3.5*14mm		Ø4*35mm			
H	x2	I	x7	J	x6	K	x1	L	x24	M	x12	N	x12
													
M6*30mm		M6*50mm		80*38*19mm				Ø20		340mm		340mm	
O	x2	P	x2	Q	x2	R	x2	S	x7	T	x 12		
													
Ø4.5*12mm		Ø4.5*45mm		75*30*15mm		Ø8*30mm		Ø13*6.5*1mm		Ø3.5*12mm			

Top Tips before you start!


1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.

Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- Please do not drag or pull your furniture.
- Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not sit or stand on this item.

SPECIAL TIPS FOR FITTING CAM-LOCKS AND CAM-BOLTS


CAM-LOCK

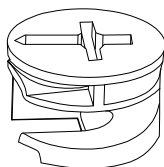

Align with long point of cross


WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-BOLTS
TURN CLOCKWISE UNTIL SECURE

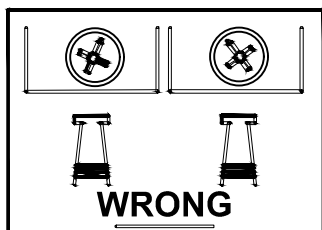

CORRECT


WRONG

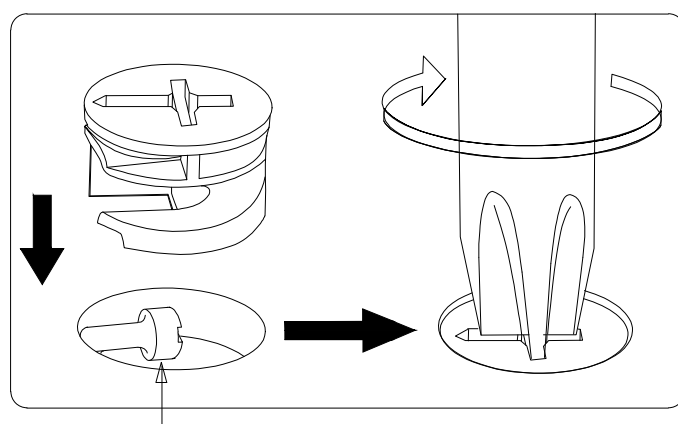


Lock head needs to be in centre

CAM-BOLT


Tighten until shoulder is flush
with panel. Do not overtighten
or undertighten (see example
below)

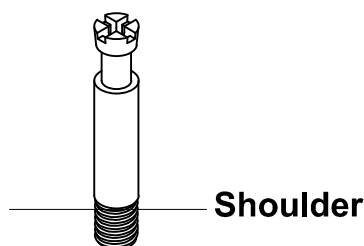

Shoulder

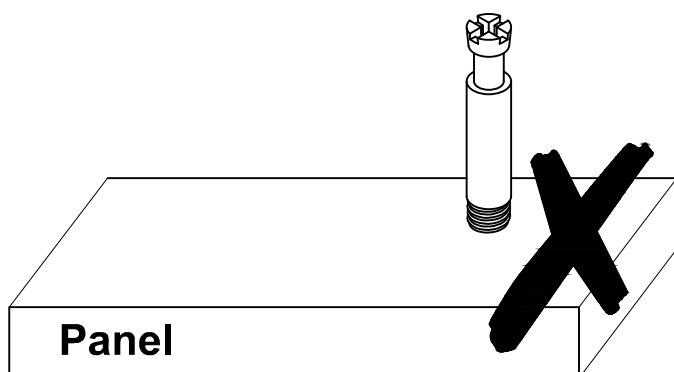

Panel

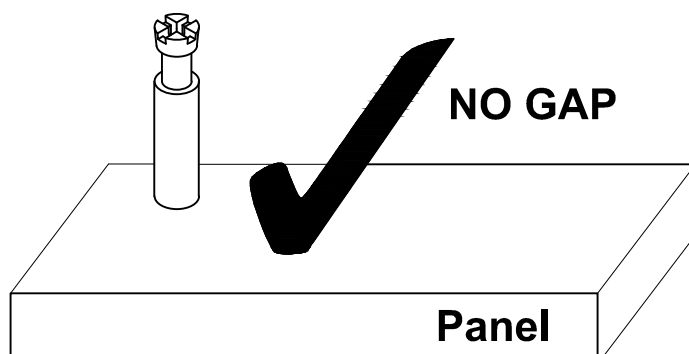

NO GAP

Panel


ASSEMBLY INSTRUCTION

DESCRIPTION


9907

Chelsea 6 Drawer Chest

STEP 1

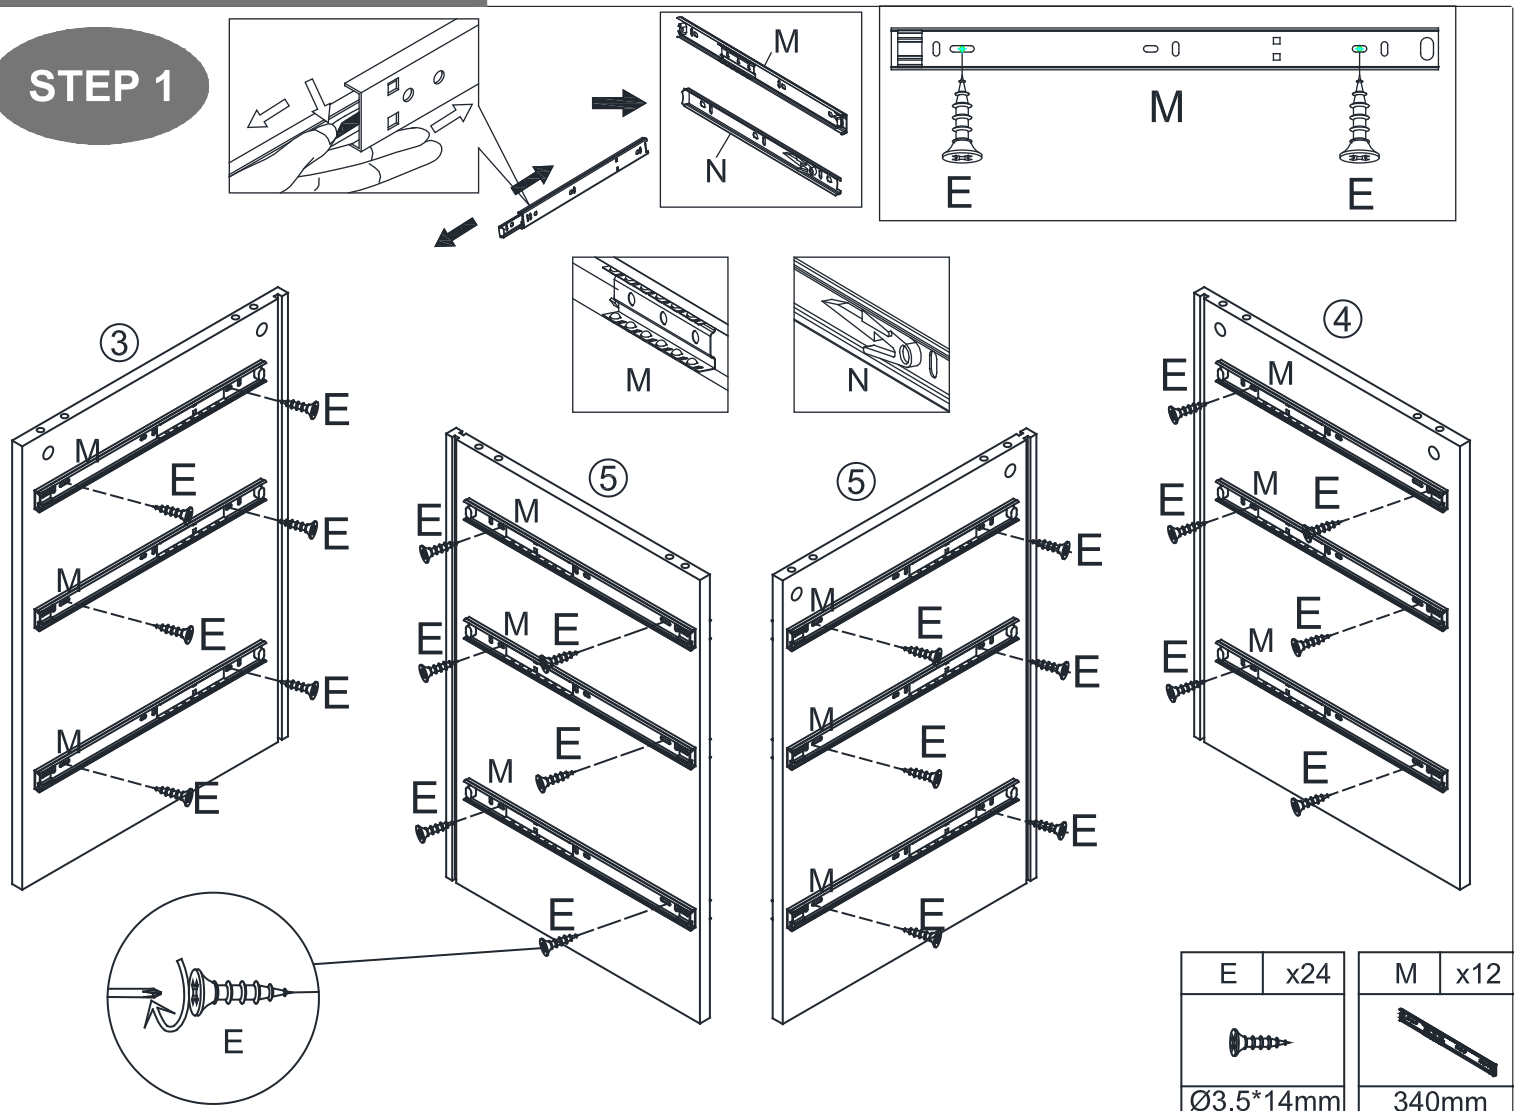

STEP 2

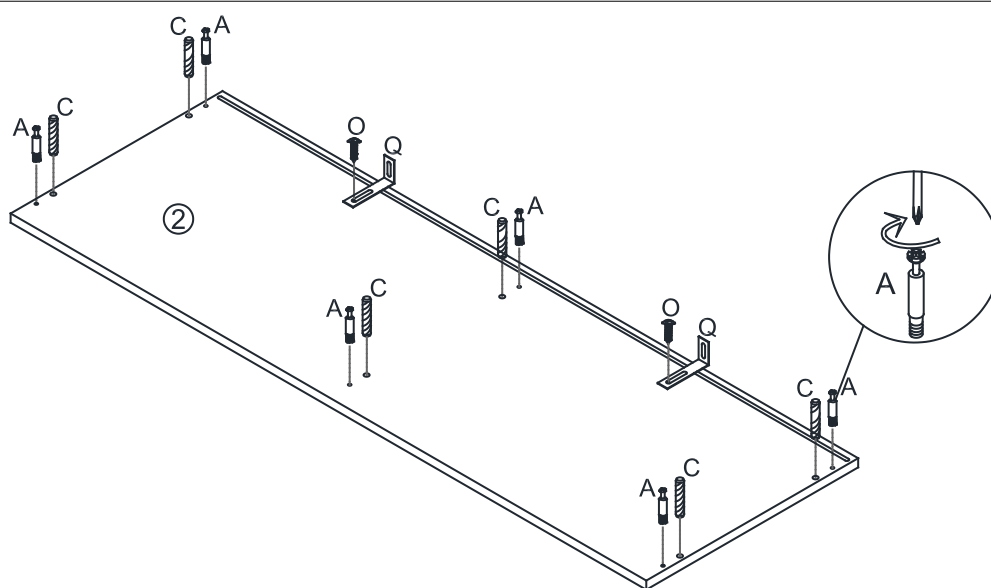


ASSEMBLY INSTRUCTION


DESCRIPTION

9907


Chelsea 6 Drawer Chest


STEP 3

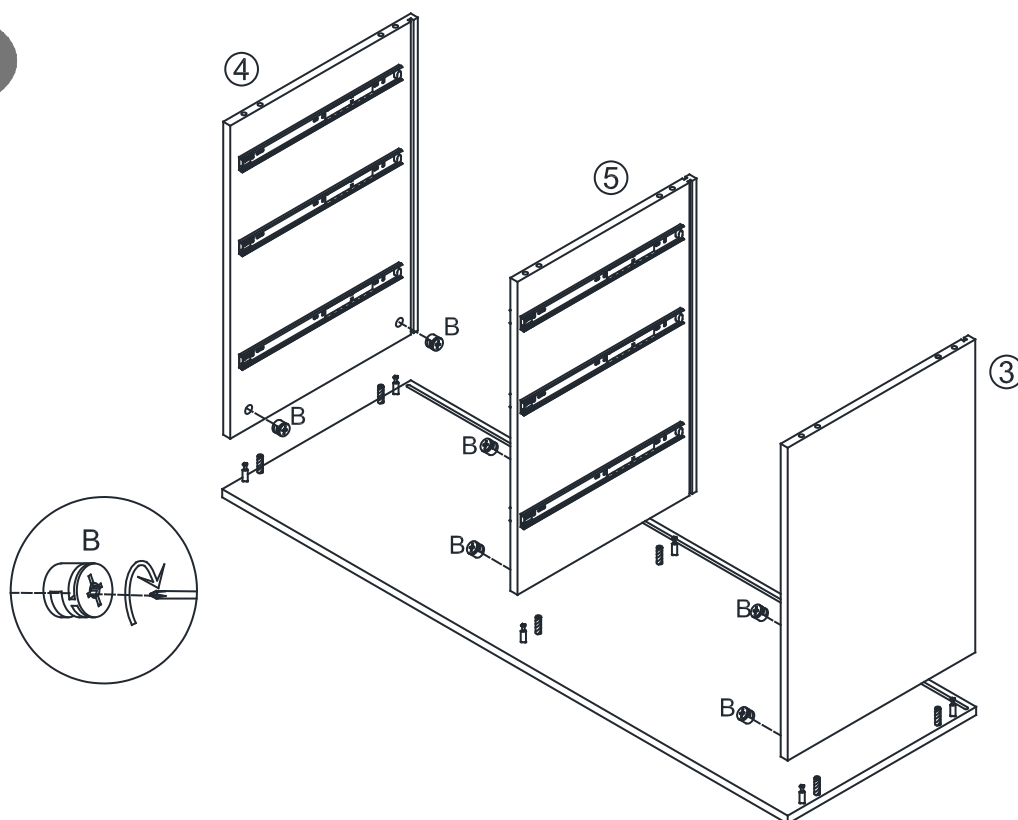

B	x6
	
Ø15mm	

STEP 4

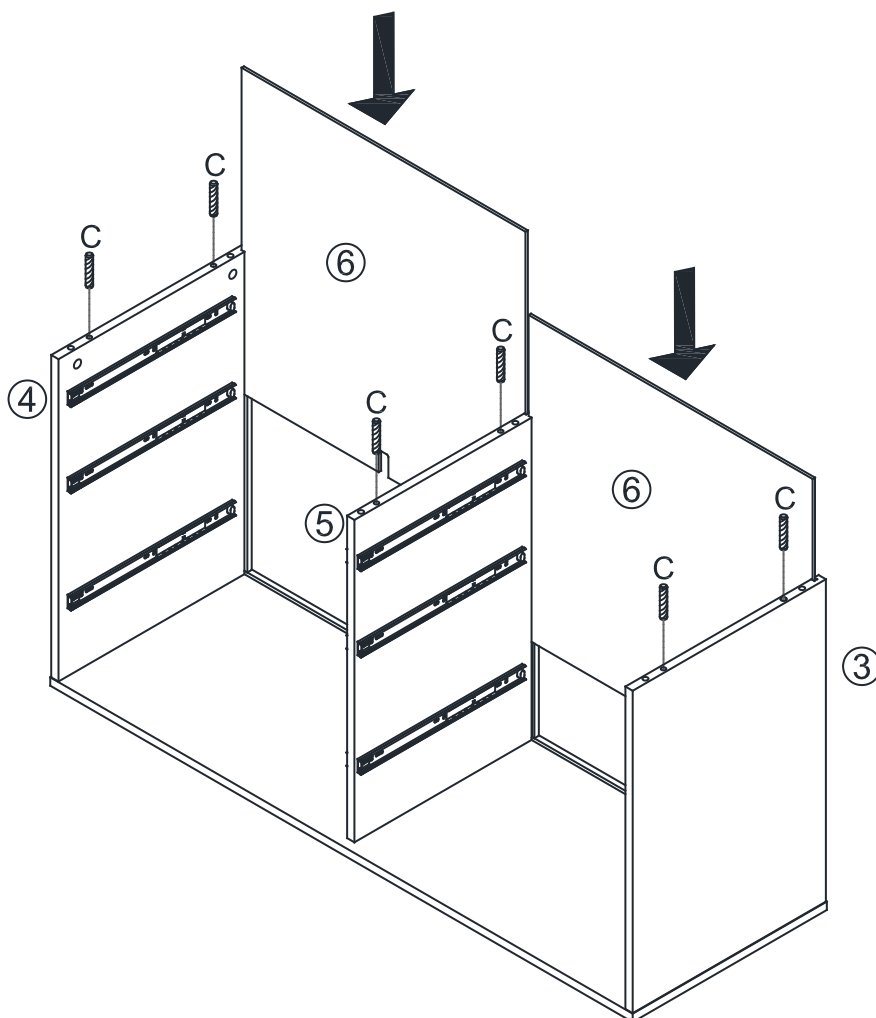

C	x6
	
Ø8*30mm	


ASSEMBLY INSTRUCTION



DESCRIPTION

9907


Chelsea 6 Drawer Chest

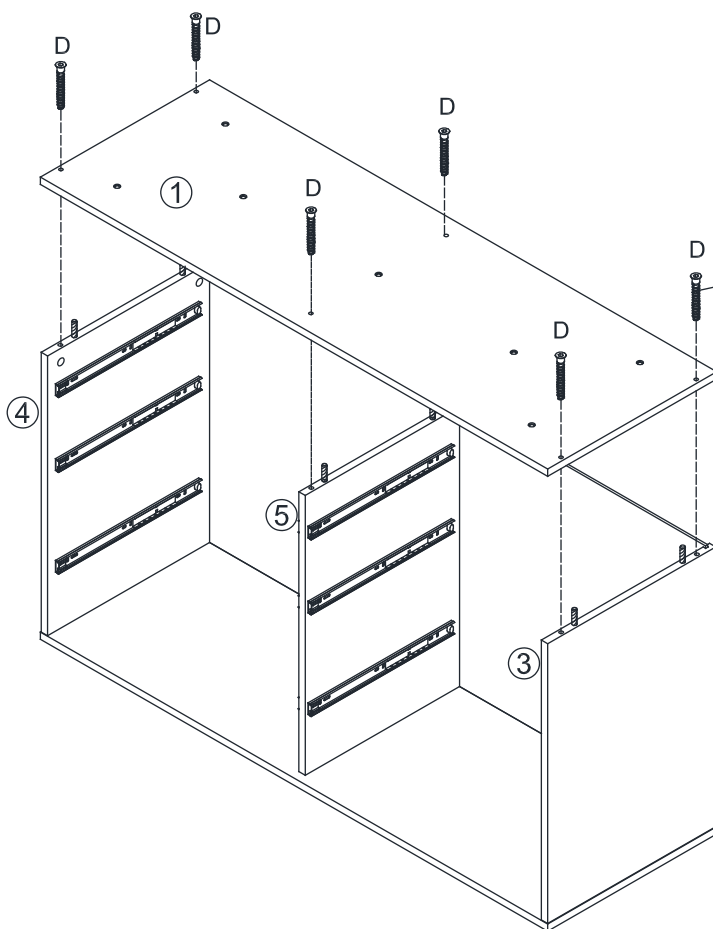

STEP 5



D	x6	K	x1
			
7*50mm		M4	

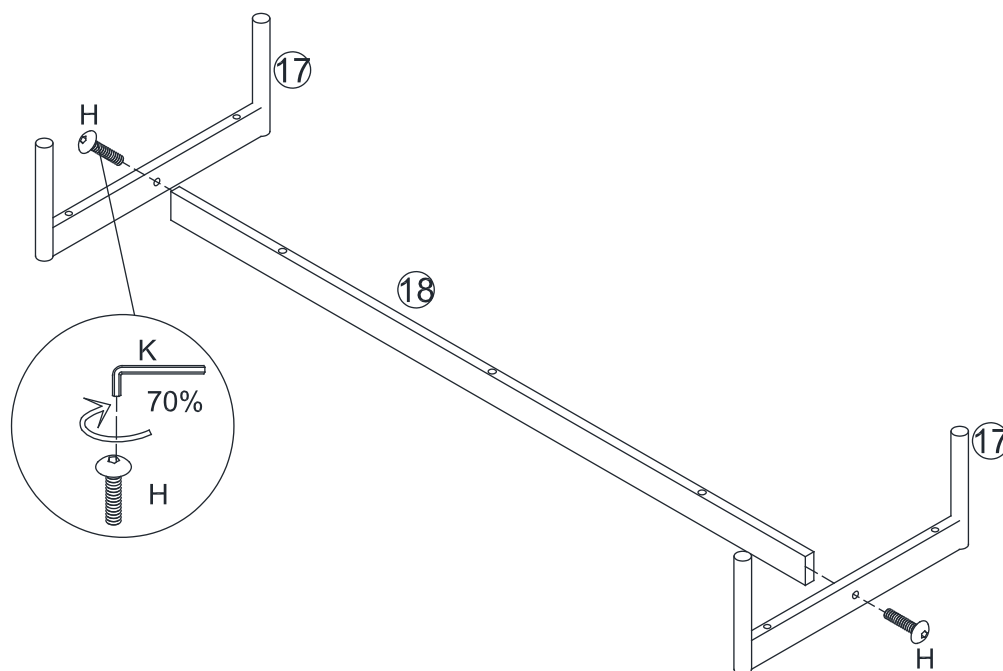STEP 6



H	x2	K	x1
			
M6*30mm		M4	


ASSEMBLY INSTRUCTION




DESCRIPTION

9907



Chelsea 6 Drawer Chest

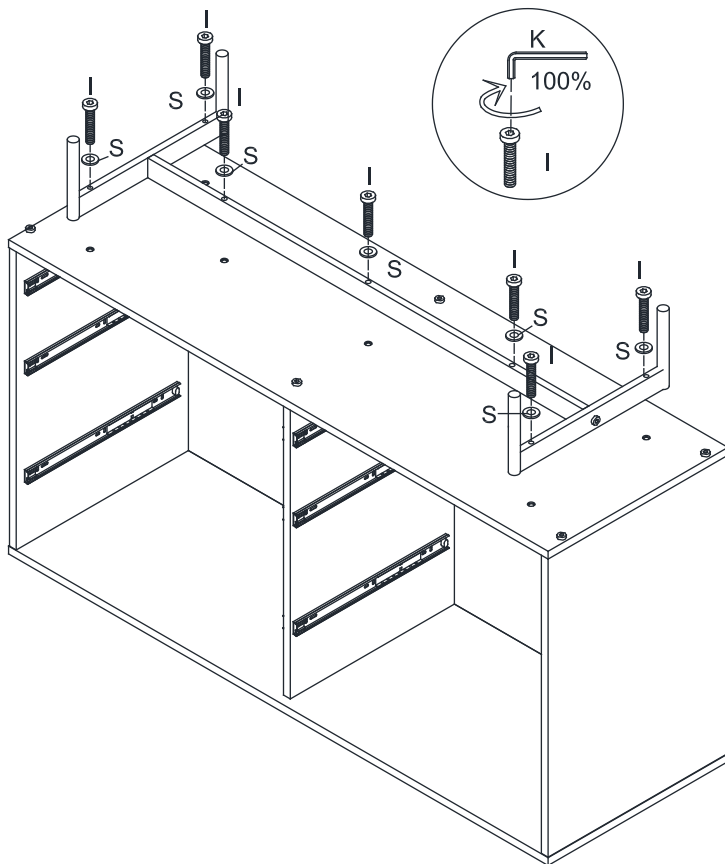

STEP 7



K	x1	I	x7	S	x7
					
M4		M6*50mm		Ø13*6.5*1mm	

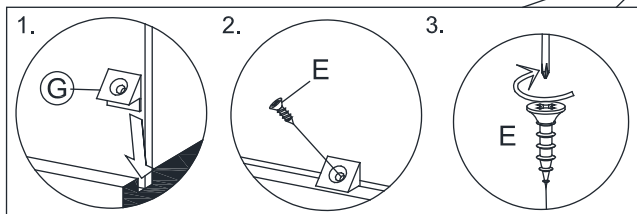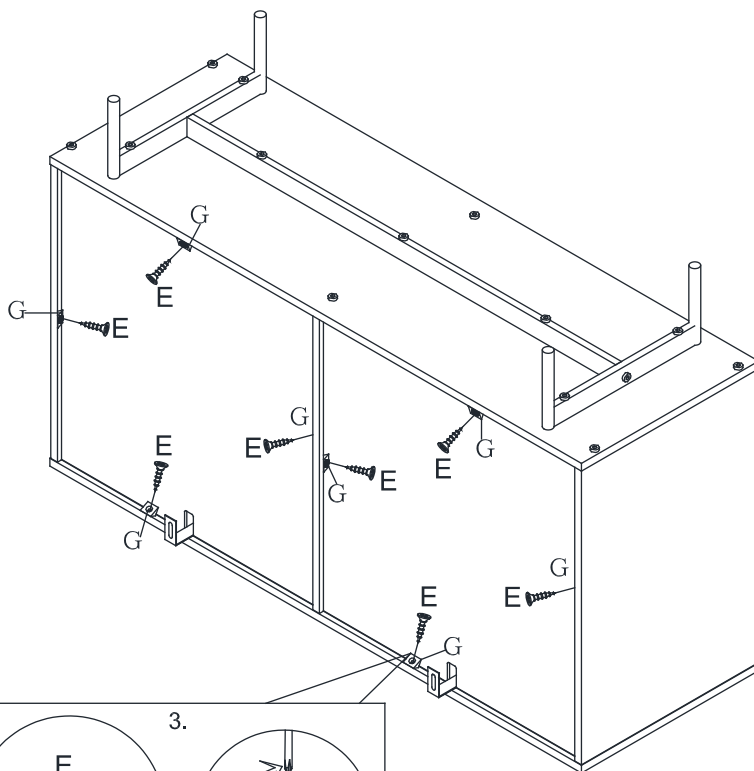STEP 8



E	x8	G	x8
			
Ø3.5*14mm			





ASSEMBLY INSTRUCTION

DESCRIPTION

9907






Chelsea 6 Drawer Chest

STEP 9

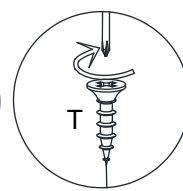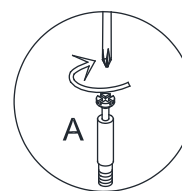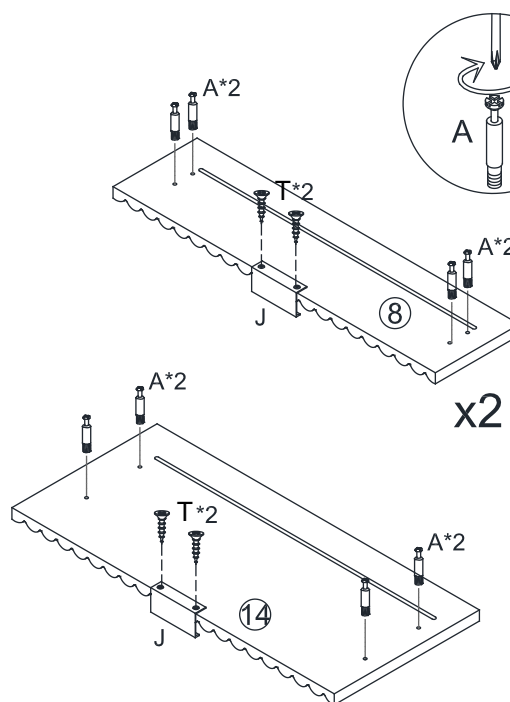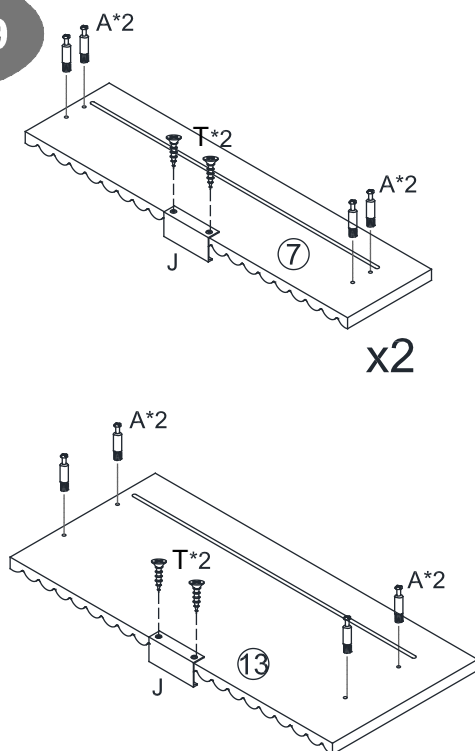

J	x6	T	x12	A	x24
80*38*19mm		Ø3.5*12mm		M6*35mm	

STEP10

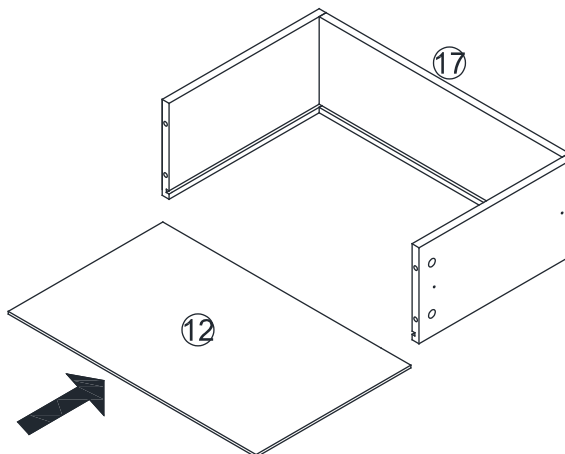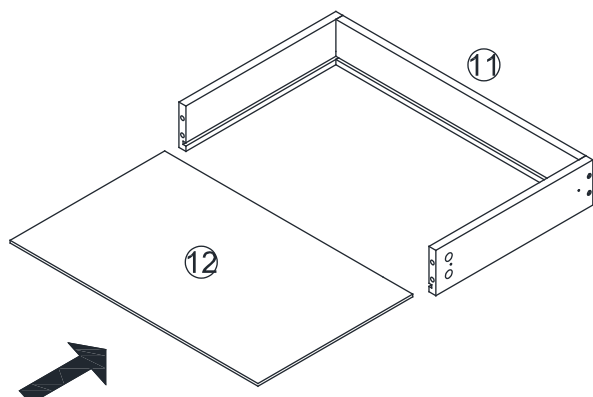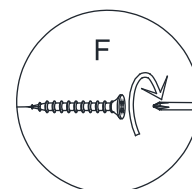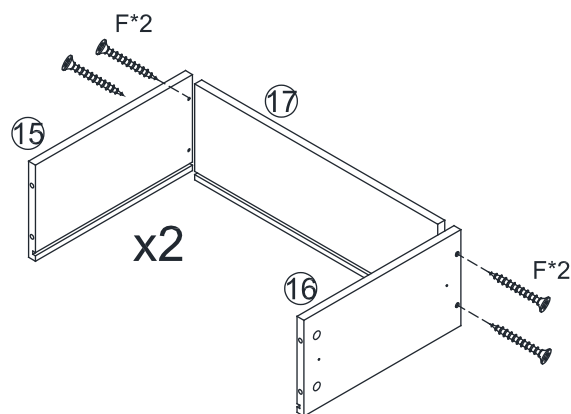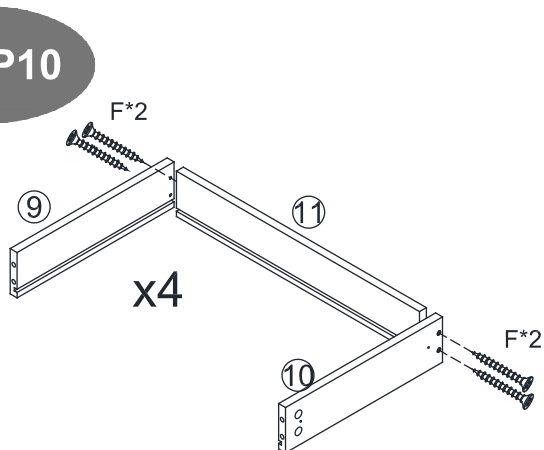

F	x24
Ø4*35mm	


ASSEMBLY INSTRUCTION

DESCRIPTION

9907

Chelsea 6 Drawer Chest



STEP 11

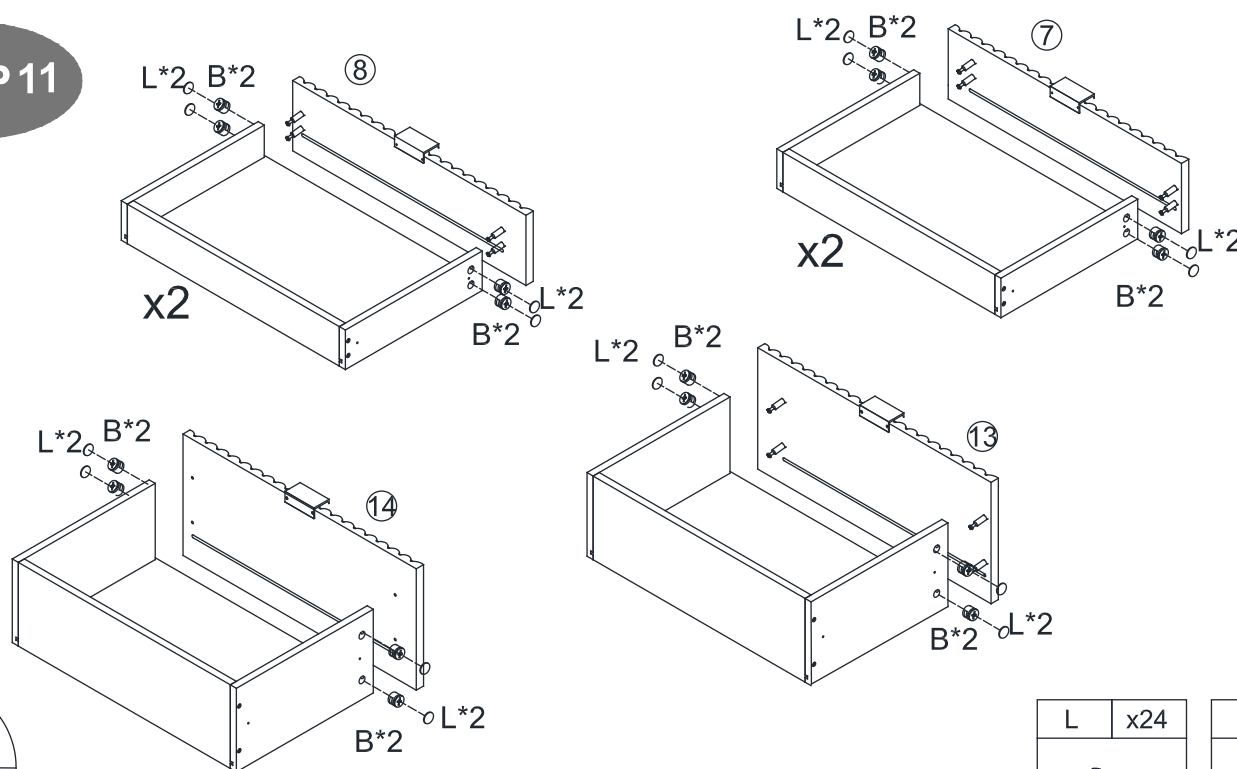

L	x24
Ø20	

B	x24
Ø15mm	

STEP 12

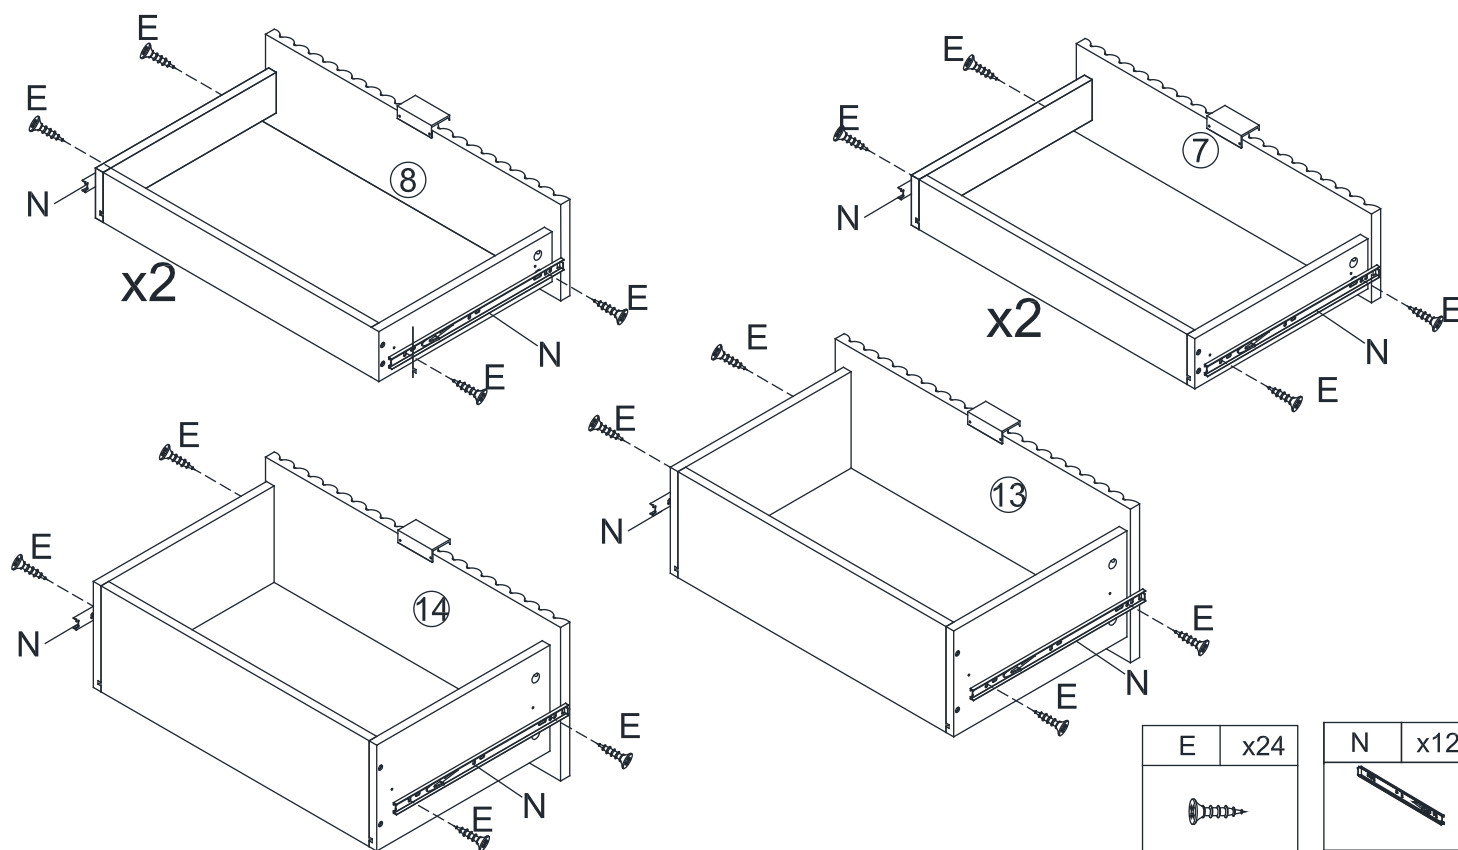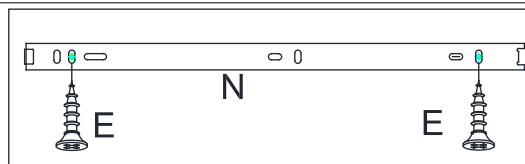

E	x24
Ø3.5*14mm	

N	x12
340mm	


ASSEMBLY INSTRUCTION

DESCRIPTION



9907

Chelsea 6 Drawer Chest

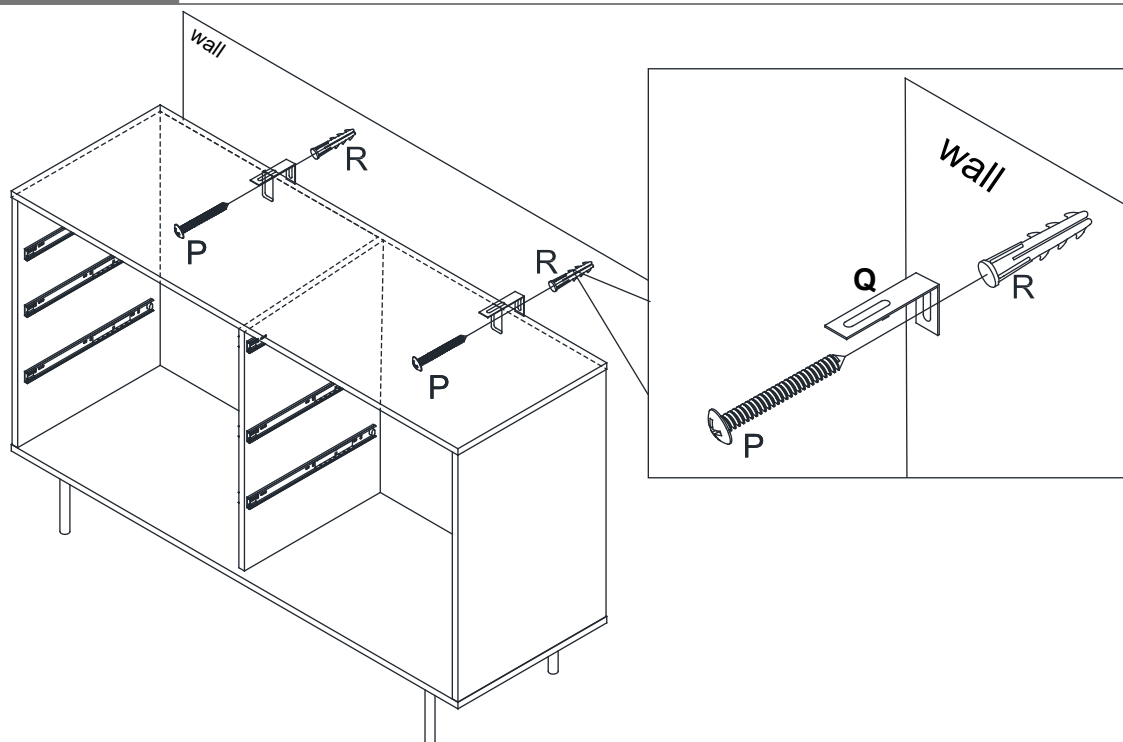STEP 13



Note: We recommend the use of the wall attachment bracket/strap provided for safety reasons. Secure the other end of the strap to the wall with an appropriate screw and wall plug for your wall type(not provided). To hide the strap behind the unit, drill the hole lower than the top of unit. Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes. NB: Wall fixings are not included-Please source suitable fixing for your wall type. If in doubt please consult a qualified trades person. Please ensure you secure your product to the wall for you and your family's safety before you use it.

P	x2	R	x2
			
Ø4.5*45mm		Ø8*30mm	

STEP 14

