


ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBORD


2.5 HR

APPROXIMATE ASSEMBLY TIME


2 PERSON ASSEMBLY

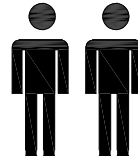

FLOOR AREA
1.4M X 2.5M

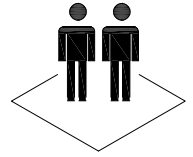


REQUIRED ASSEMBLY SPACE

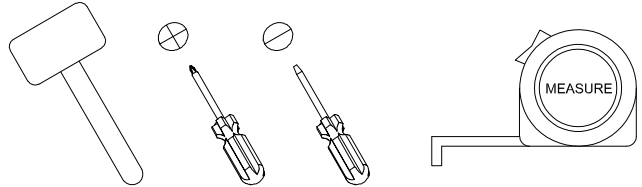

REQUIRED ASSEMBLY TOOLS (NOT PROVIDED)


ASSEMBLED DIMENSION

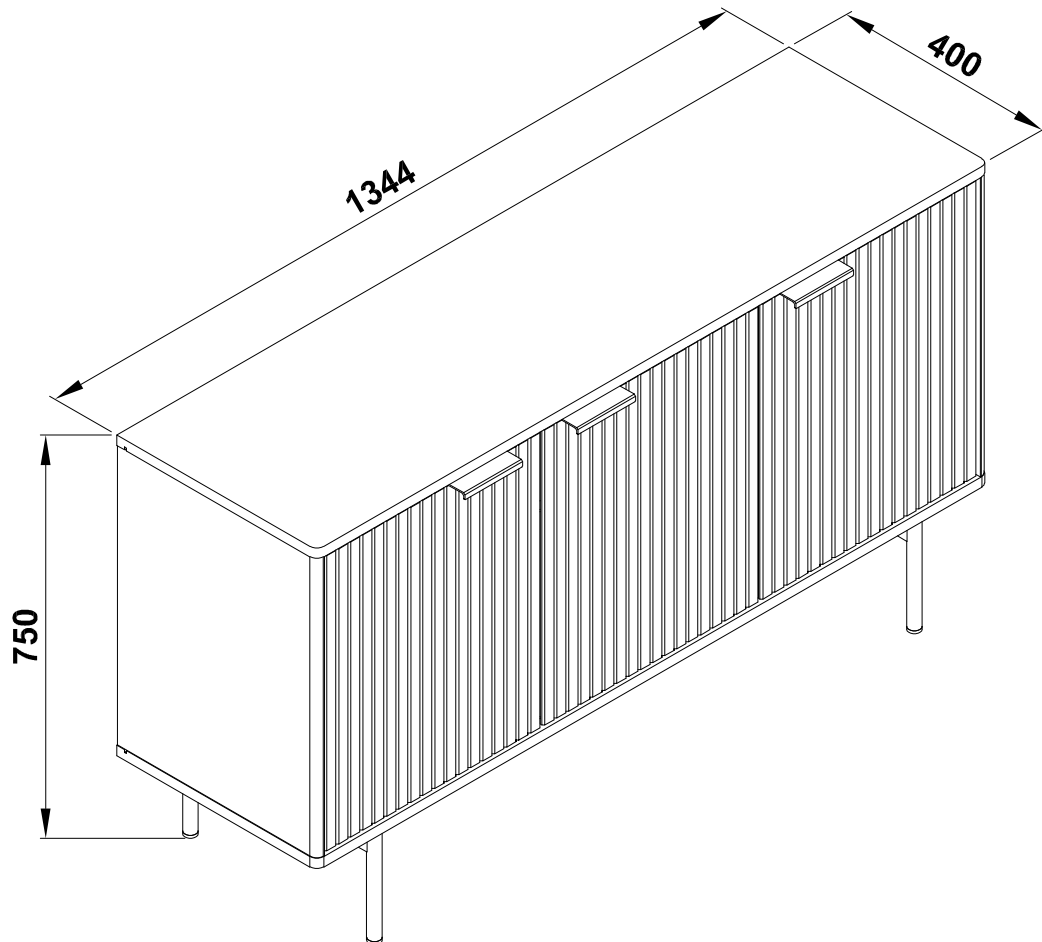

ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBOARD

PART LIST

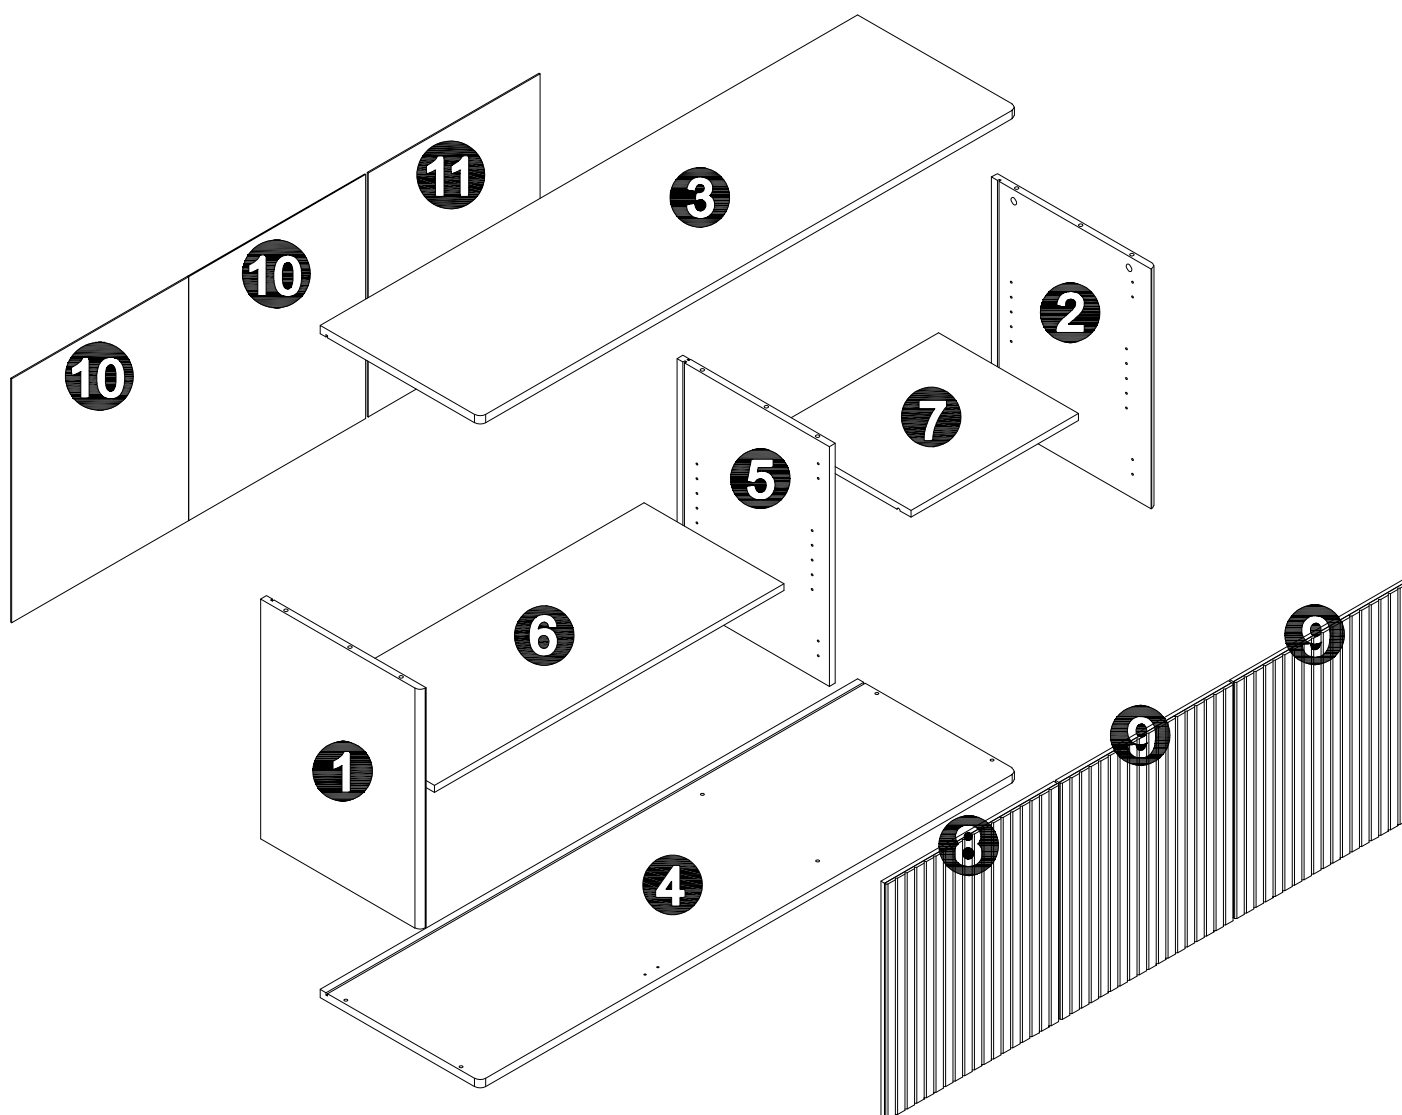

NO.	PART LIST	QTY	NO.	PART LIST	QTY
(1)	PART 1	1	(7)	PART 7	1
(2)	PART 2	1	(8)	PART 8	1
(3)	PART 3	1	(9)	PART 9	2
(4)	PART 4	1	(10)	PART 10	2
(5)	PART 5	1	(11)	PART 11	1
(6)	PART 6	1			


ASSEMBLY INSTRUCTION

DESCRIPTION:

5421

CORA 3 DOOR SIDEBOARD

HARDWARE LIST

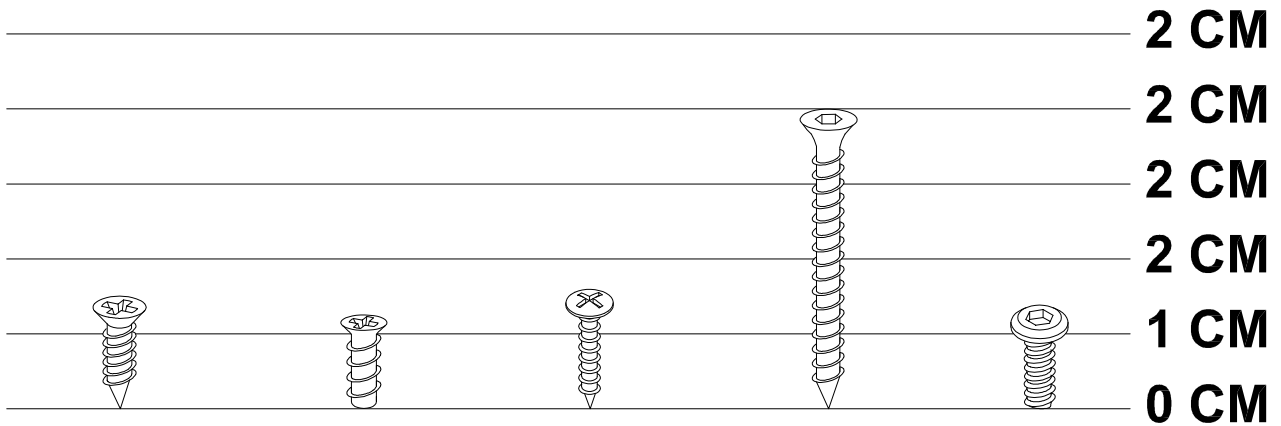

X24
M3.5 X 15MM

A
SCREW

X12
M6 X 13MM

B
SCREW

X2
M4 X 16MM


C
SCREW

X6
M6 X 40MM

D
SCREW

X2
M6 X 15MM

E
SCREW

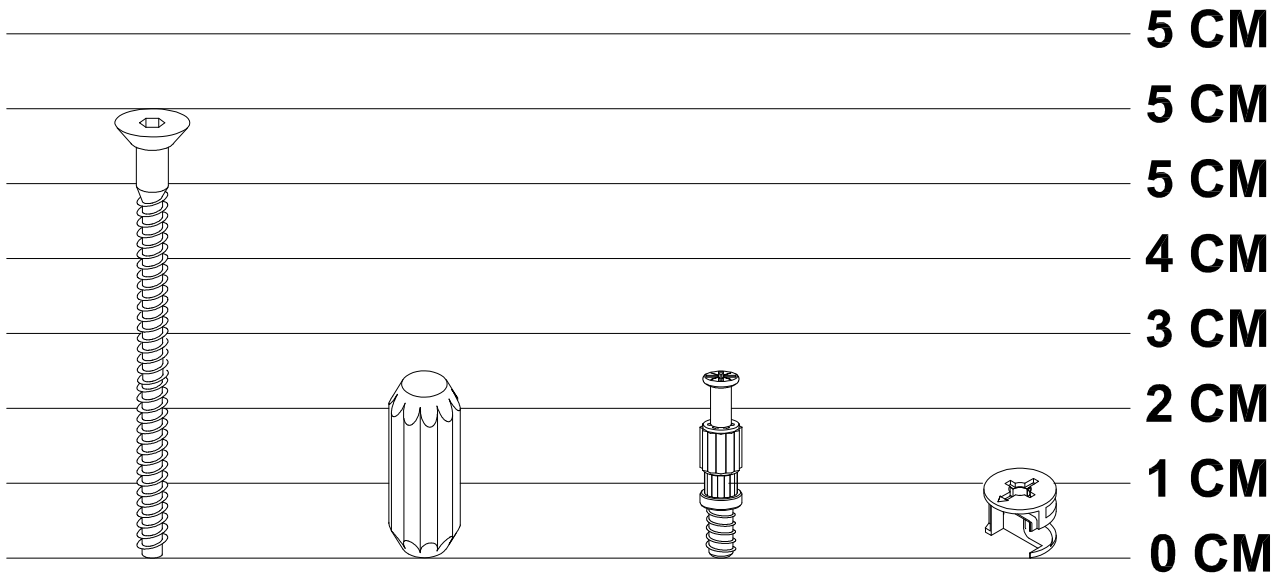

X7
M7 X 60MM

F
SCREW

X3
Ø8 X 25MM

G
WOOD
DOWEL

X6
20 X 5MM

H
BOLT
DOWEL

X6
Ø15 X 12MM

J
CAM

ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBOARD

HARDWARE LIST



X7

K


FLAT WASHER
1.5T X M7 X 18MM



X7

L


SPRING WASHER
M7



X6 SETS

M


METAL HINGES
(7/8") W / SPRING
(THIN CUP)



X3 SETS

N


ALUMINIUM U
SHAPE HANDLE



X2

P


PLASTIC DOOR
STOPPER

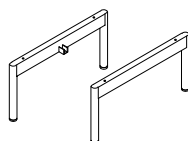

X2

Q


N SHP MTL LEG
(20X390X195XD22MM)



X1

R


MTL SUP. BAR
20X40X1058MM



X8

S


METAL ADJUSTABLE
SHELF STUD



X1

T

ALLEN KEY M4



X12

U

BACKPLY
STOPPER



X2

V

PP STRAP 12 X 150 X
1.2MM BLK 2 HOLE
WITH EYELEY

ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBOARD

Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for the step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.




Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- Please do not drag or pull your furniture.
- Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not sit or stand on this item.


Special Tips for Fitting Minifix Cam (Cam-Lock), and Minifix Bolt (Cam-Bolts)

CAM-BOLT



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below).

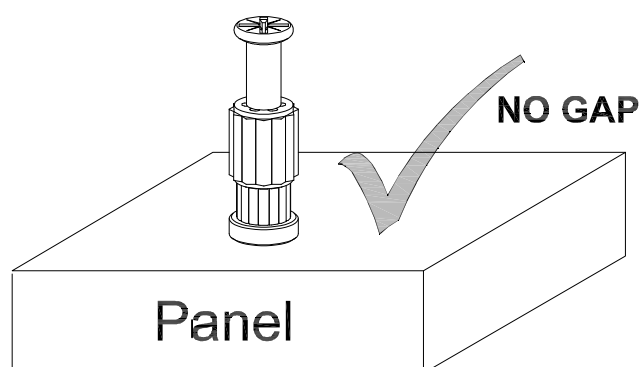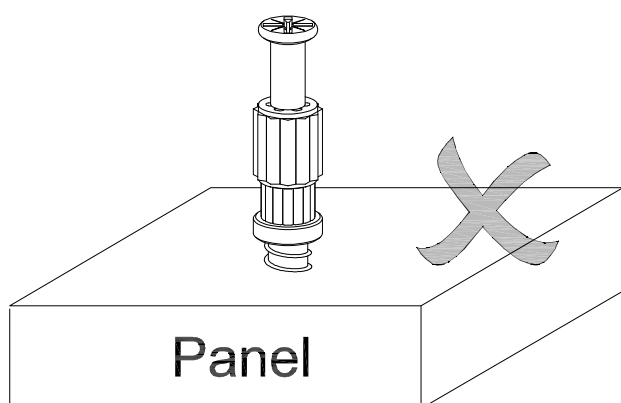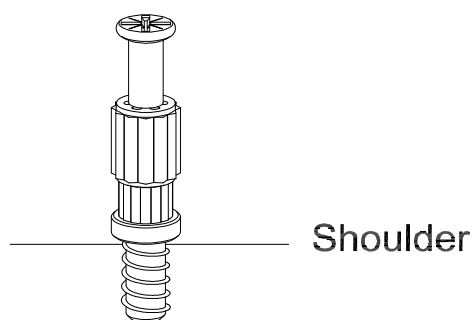

CAM-LOCK

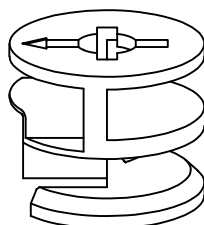








WHEN TIGHTENING CAM-LOCK
Turn The Cam-Lock Clockwise Until
The Arrow Points in The Position as Below !

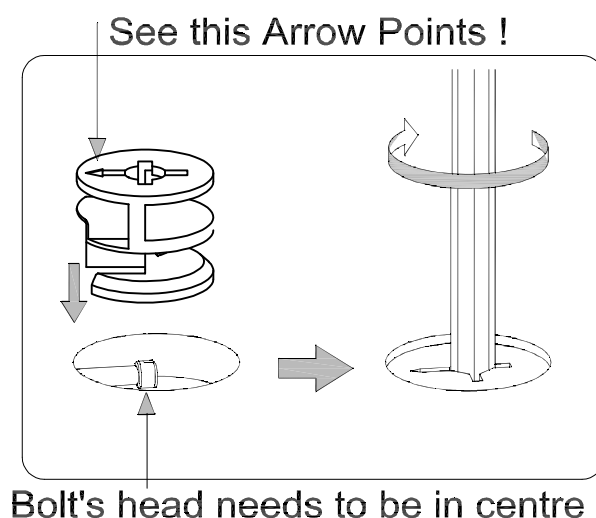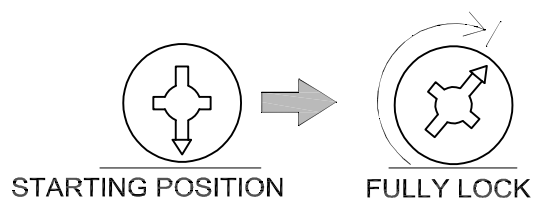

ASSEMBLY INSTRUCTION

DESCRIPTION:
5421
CORA 3 DOOR SIDEBOARD




STEP 1

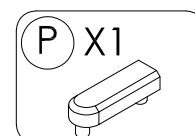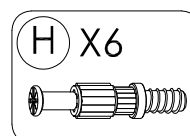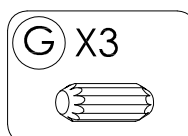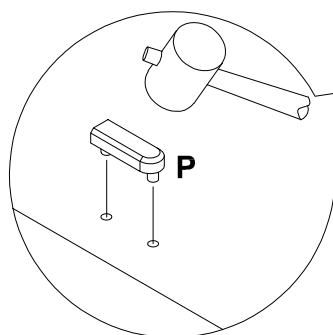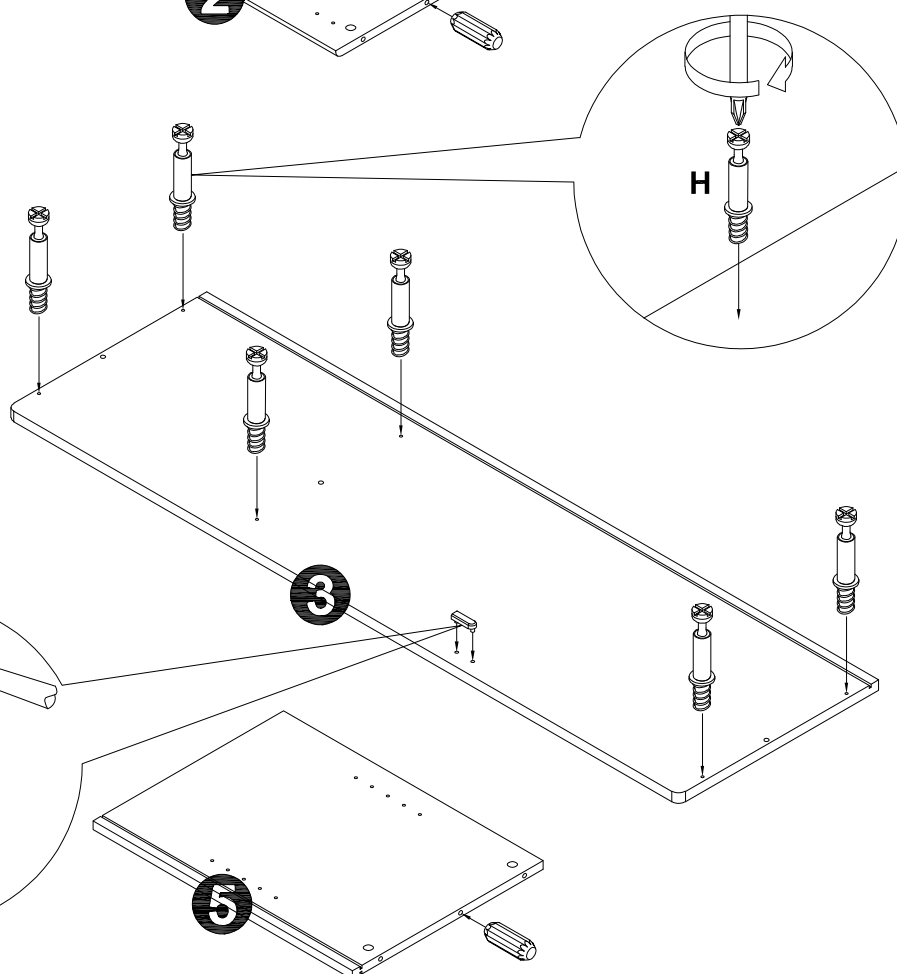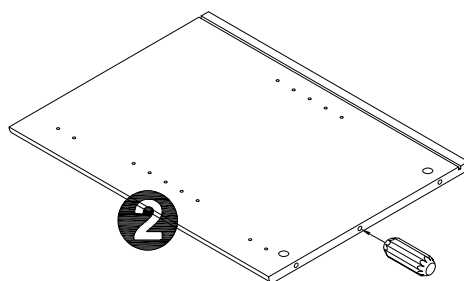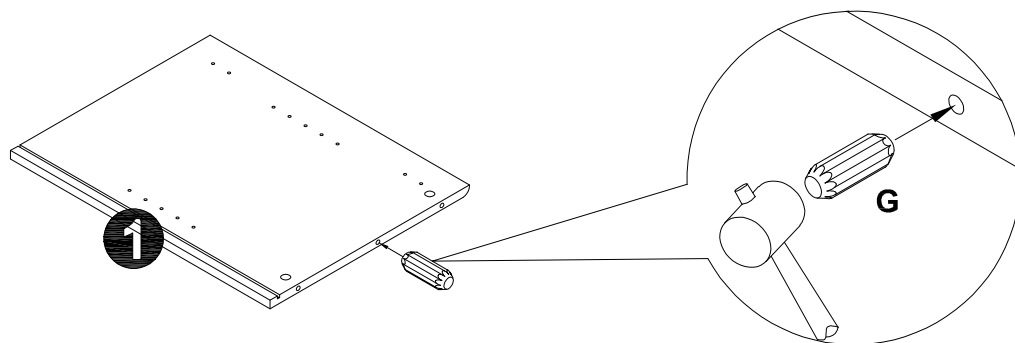

ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBOARD



STEP 2

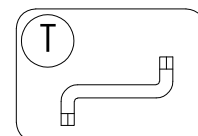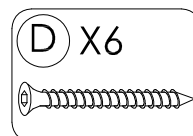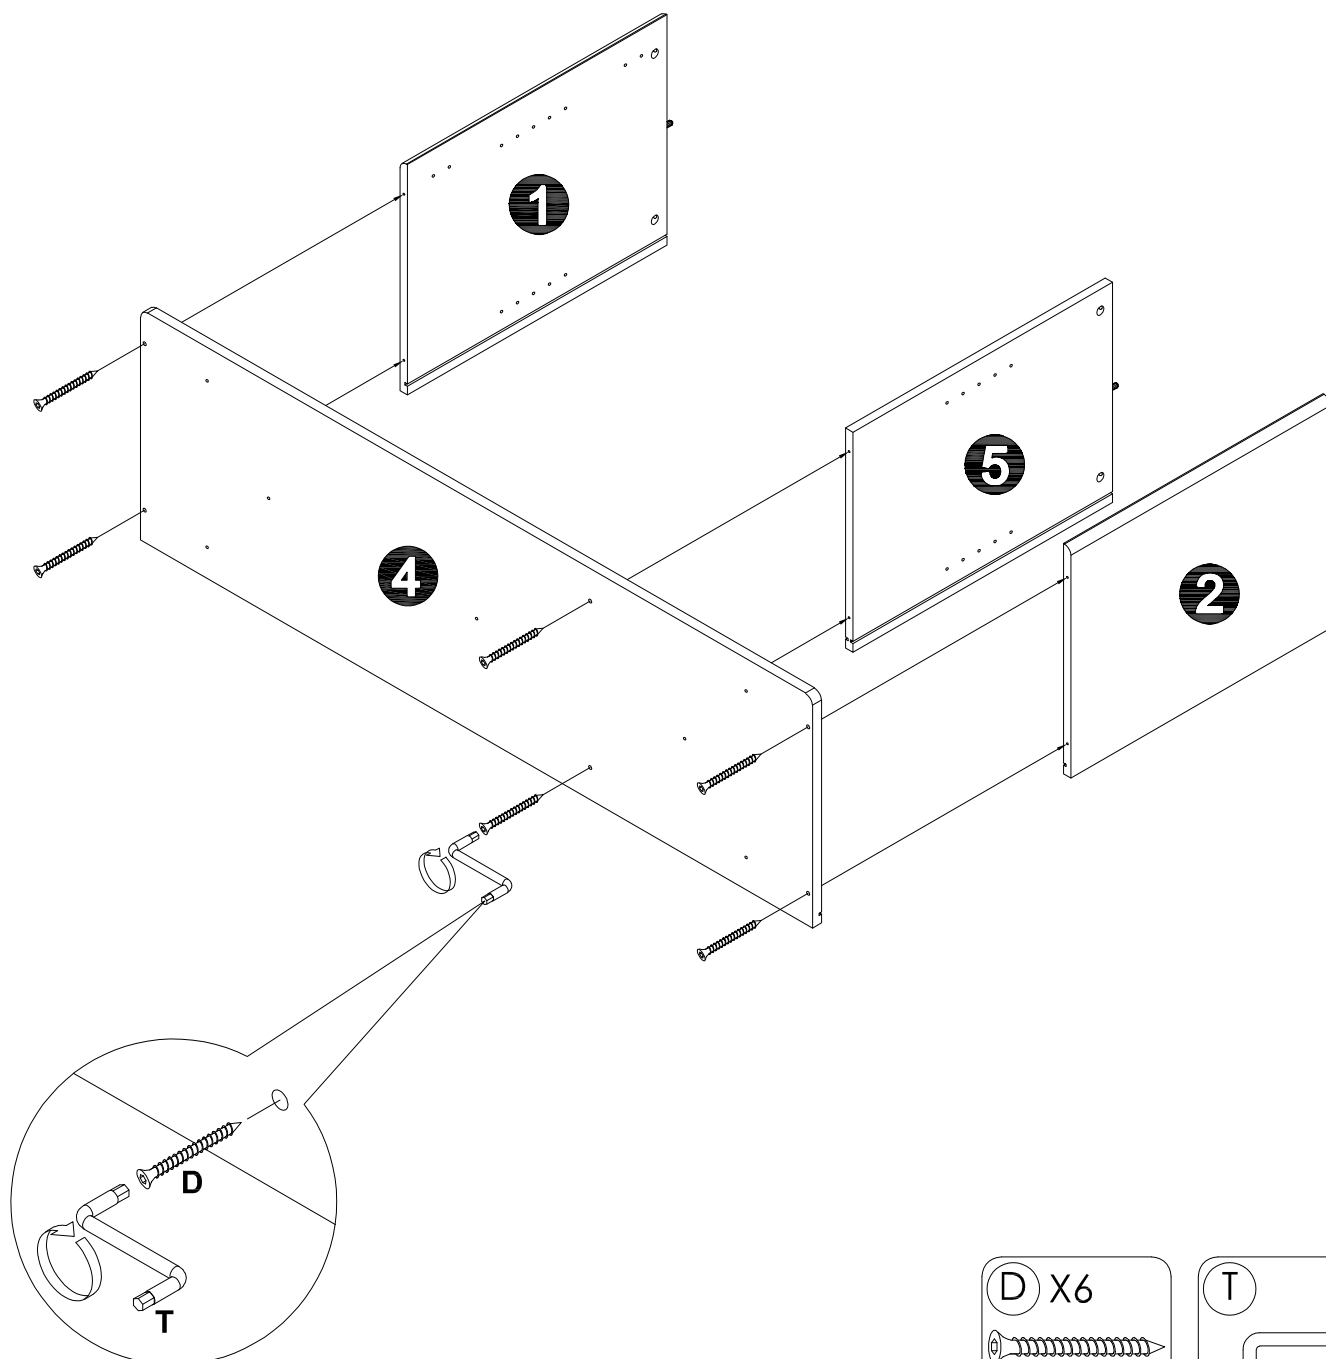

ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBOARD



STEP 3

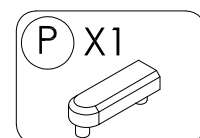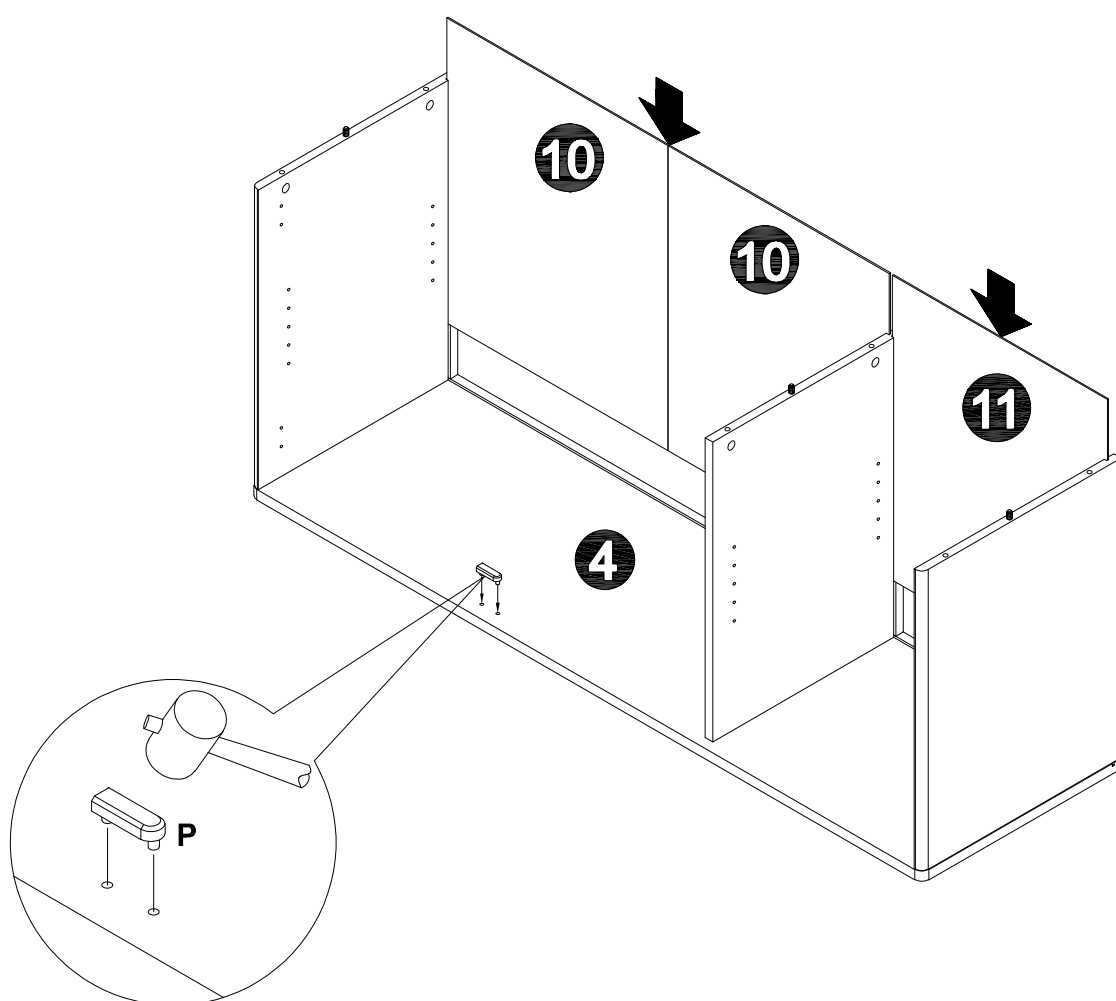

ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBORD




STEP 4

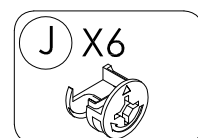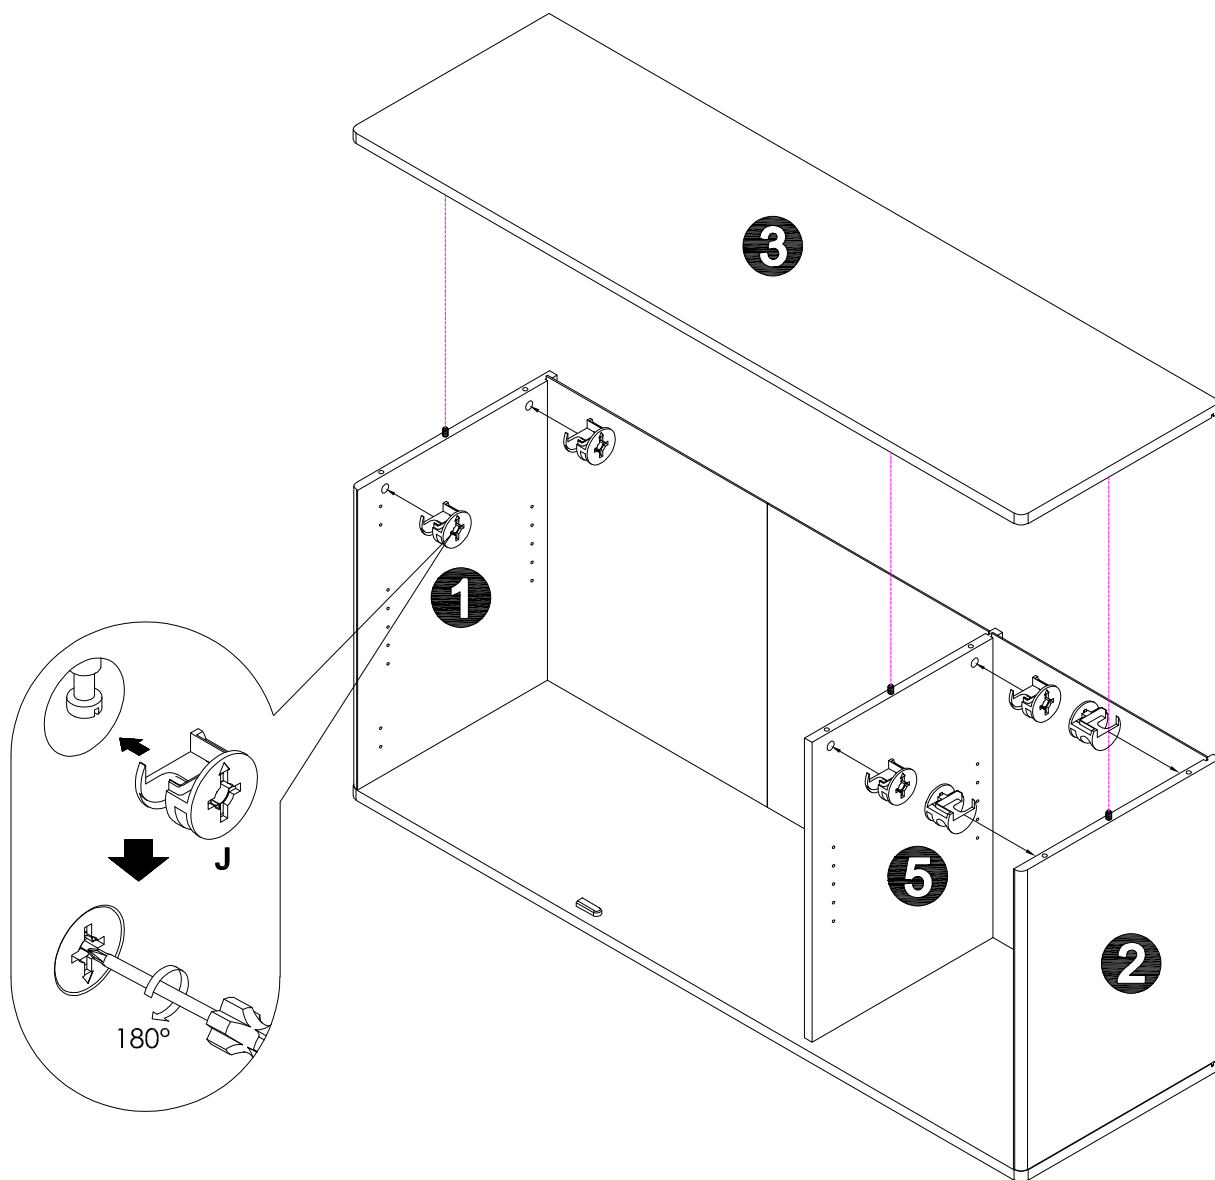




ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBOARD

STEP 5

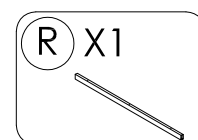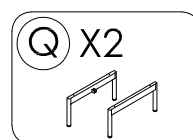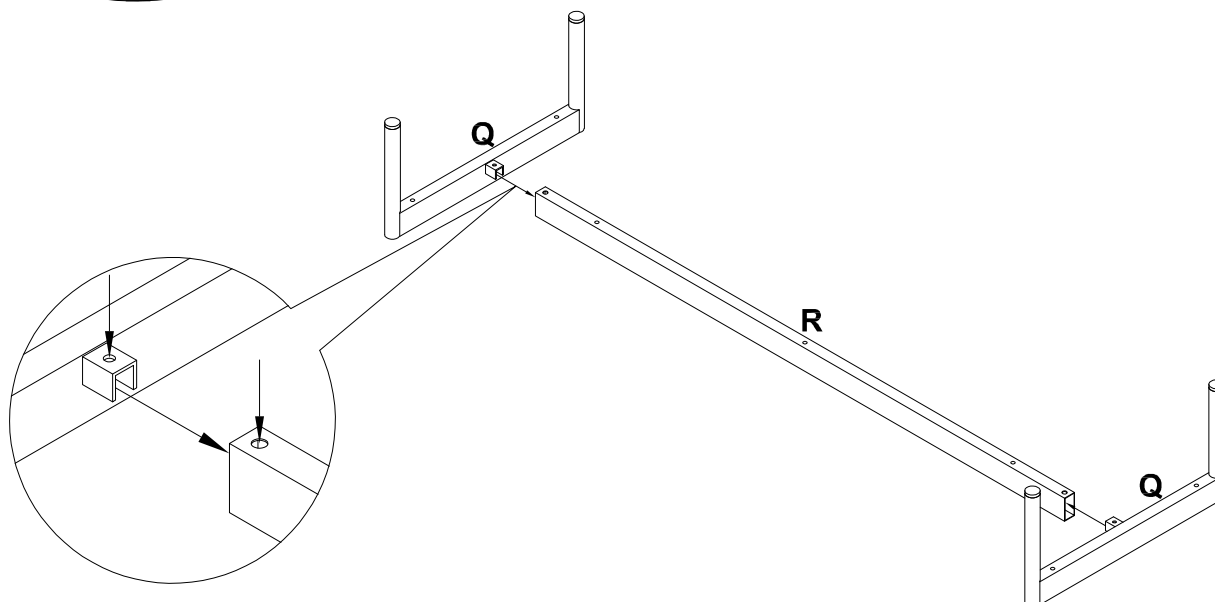

STEP 6

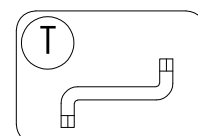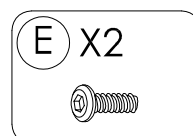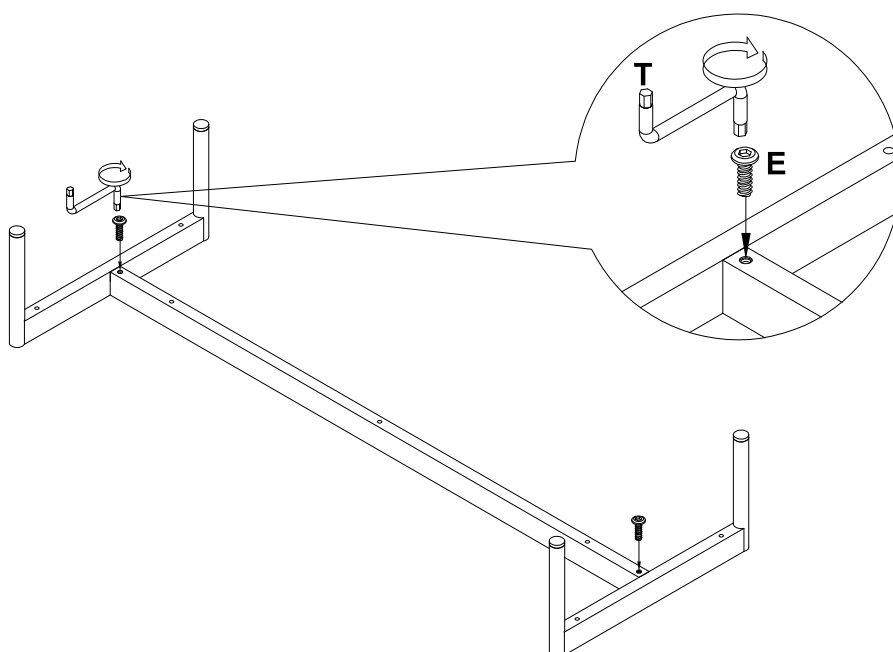


NOTE :
DO NOT FULLY TIGHTEN.





ASSEMBLY INSTRUCTION

DESCRIPTION:
5421
CORA 3 DOOR SIDEBOARD

STEP 7

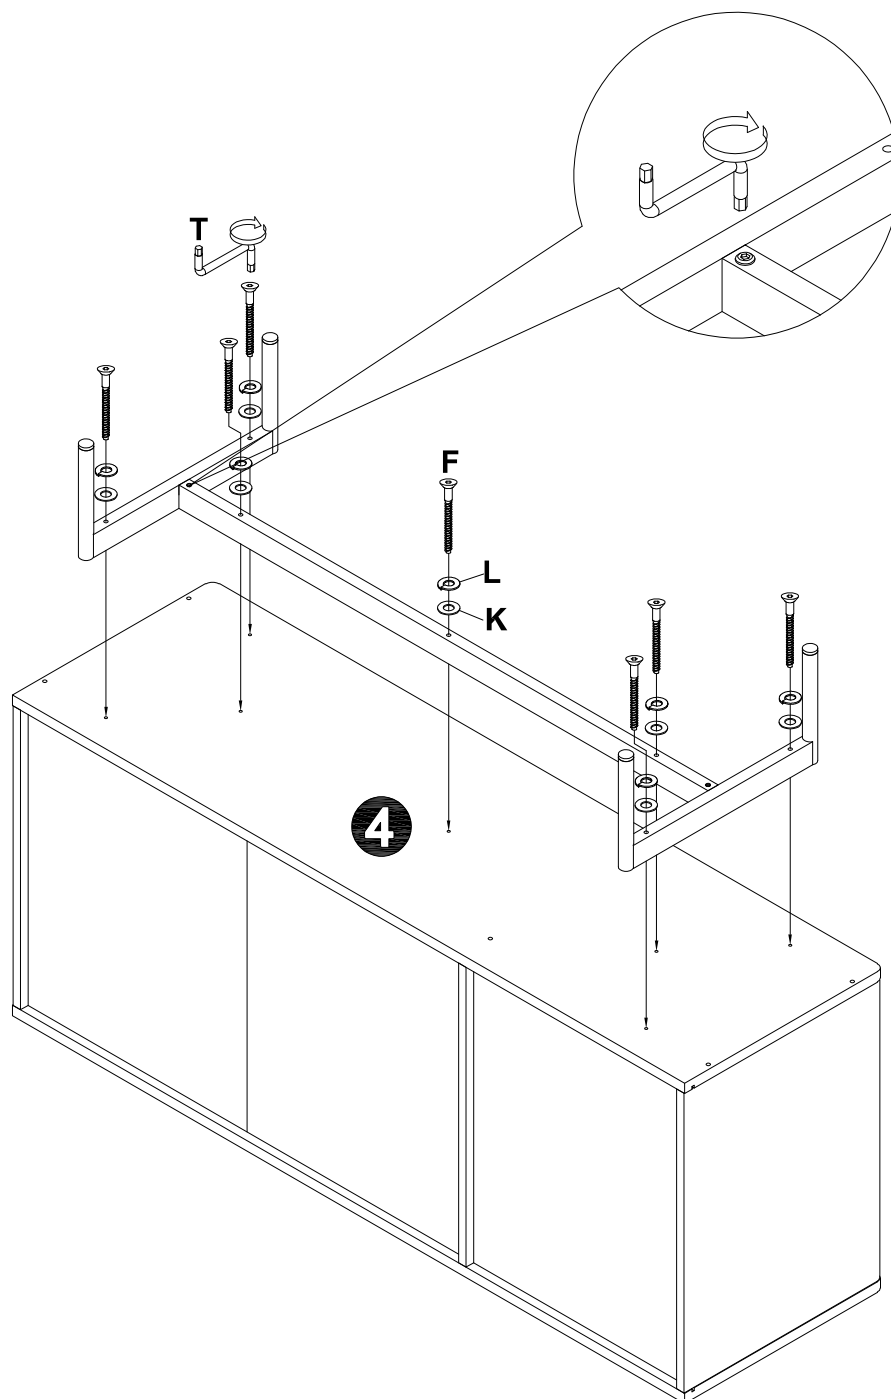



NOTE :
FULLY TIGHTEN ALL BEFORE
CONTINUE TO STEP 8.

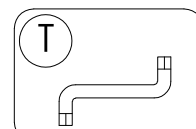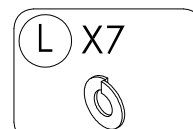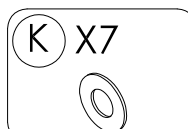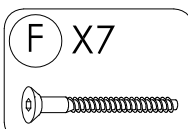



ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBORD

STEP 8

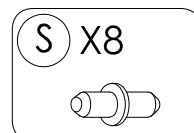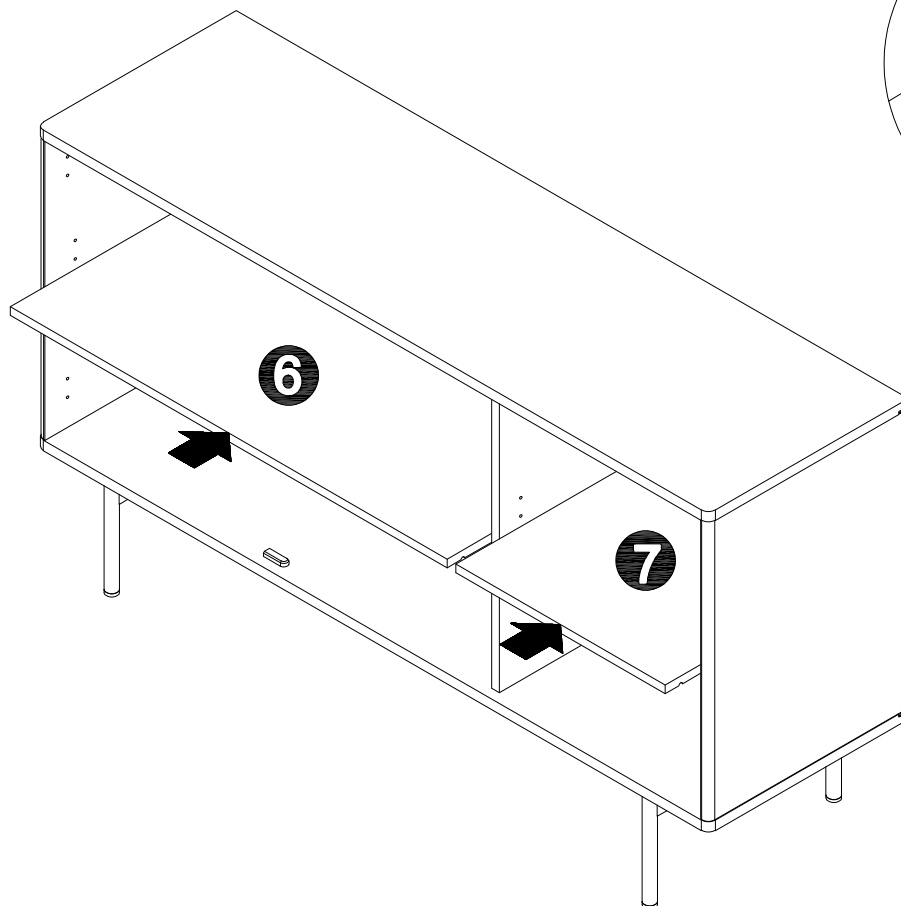


STEP 9

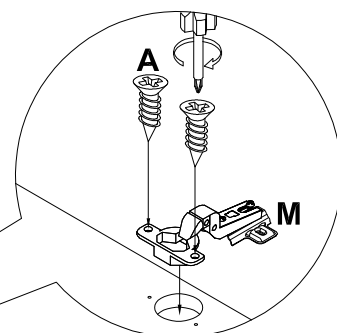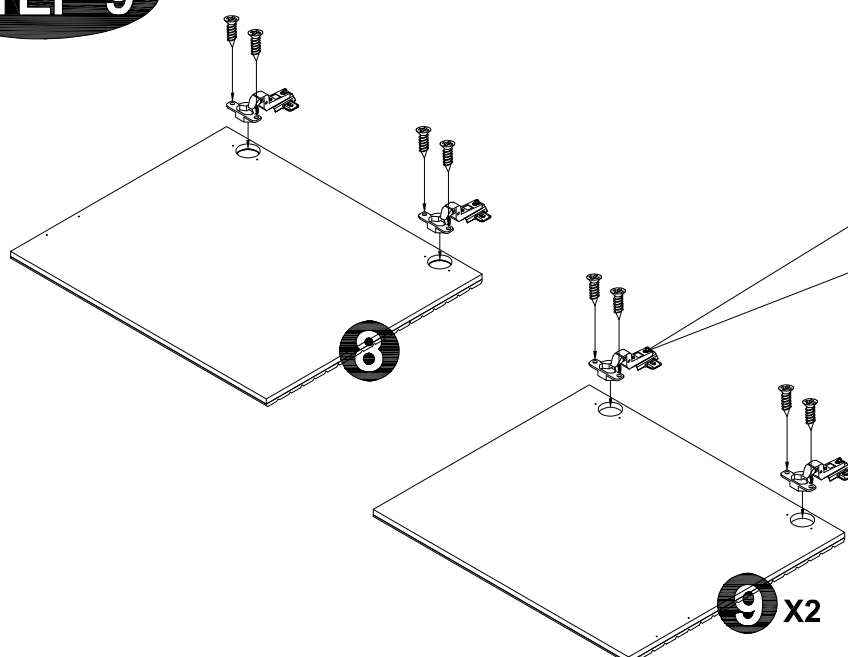

A X12





M X6




ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBORD


STEP 10

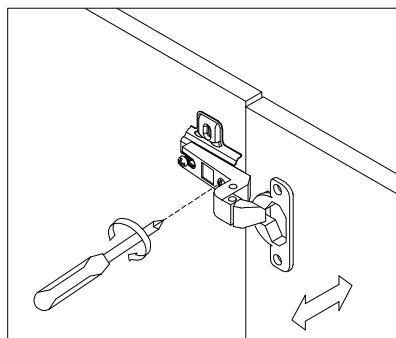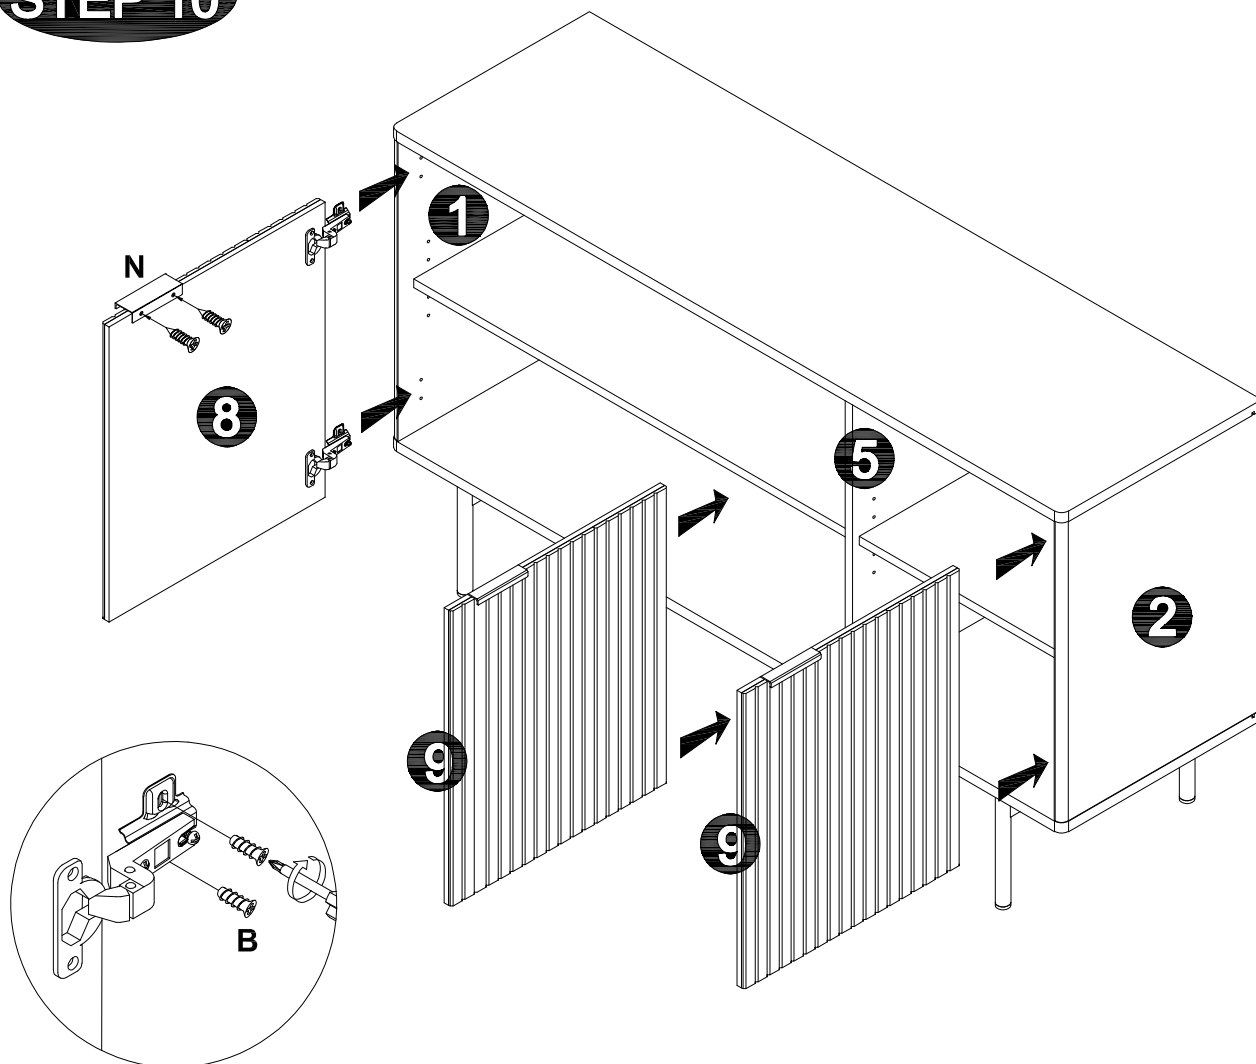

A. Lateral adjustment
by screw adjusting

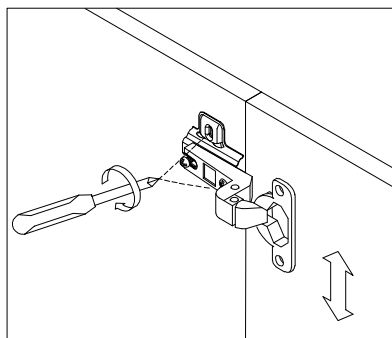

B. Vertical adjustment via
slot in the mounting plate

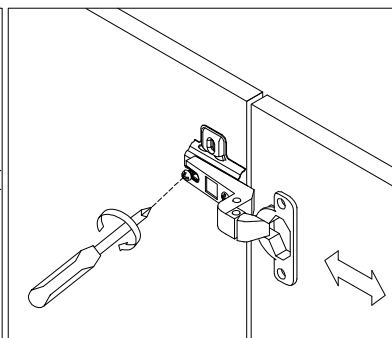

C. Front-to-Back by the slacking
the hinge arm mounting screw

B X12




N X3



ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBORD


STEP 11

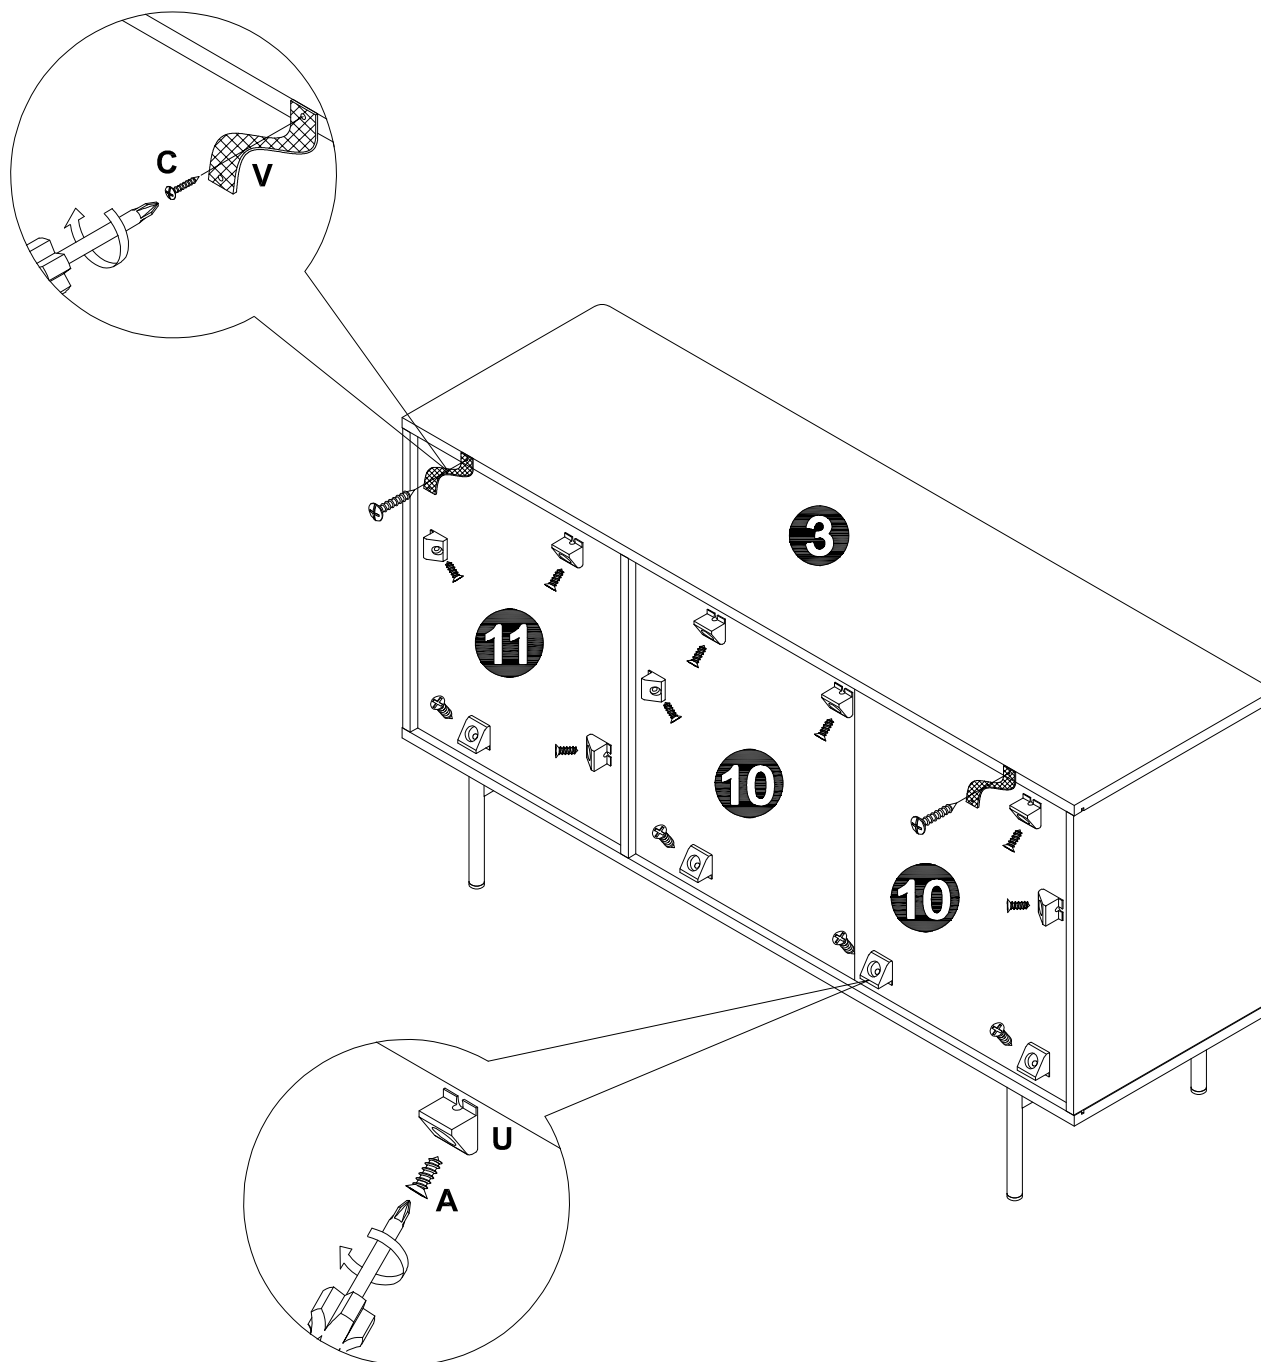

A X12



C X2



U X12



V X2



ASSEMBLY INSTRUCTION

DESCRIPTION: 5421 CORA 3 DOOR SIDEBORD

STEP 12

NOTE :
WALL PLUG & SCREW ARE
NOT SUPPLIED WITH THIS
PRODUCT AS DIFFERENT WALL
MATERIALS REQUIRE DIFFERENT
TYPES OF FIXING HARDWARE &
YOU MUST USE SUITABLE FIXING
HARDWARE FOR TYPE OF WALL
YOU INTEND TO MOUNT THIS
PRODUCT TO WALL.

WALL

