


IHOMDEC
Assembly Instruction
WINE RACK
SKU: OKMZ-WRACK1001A

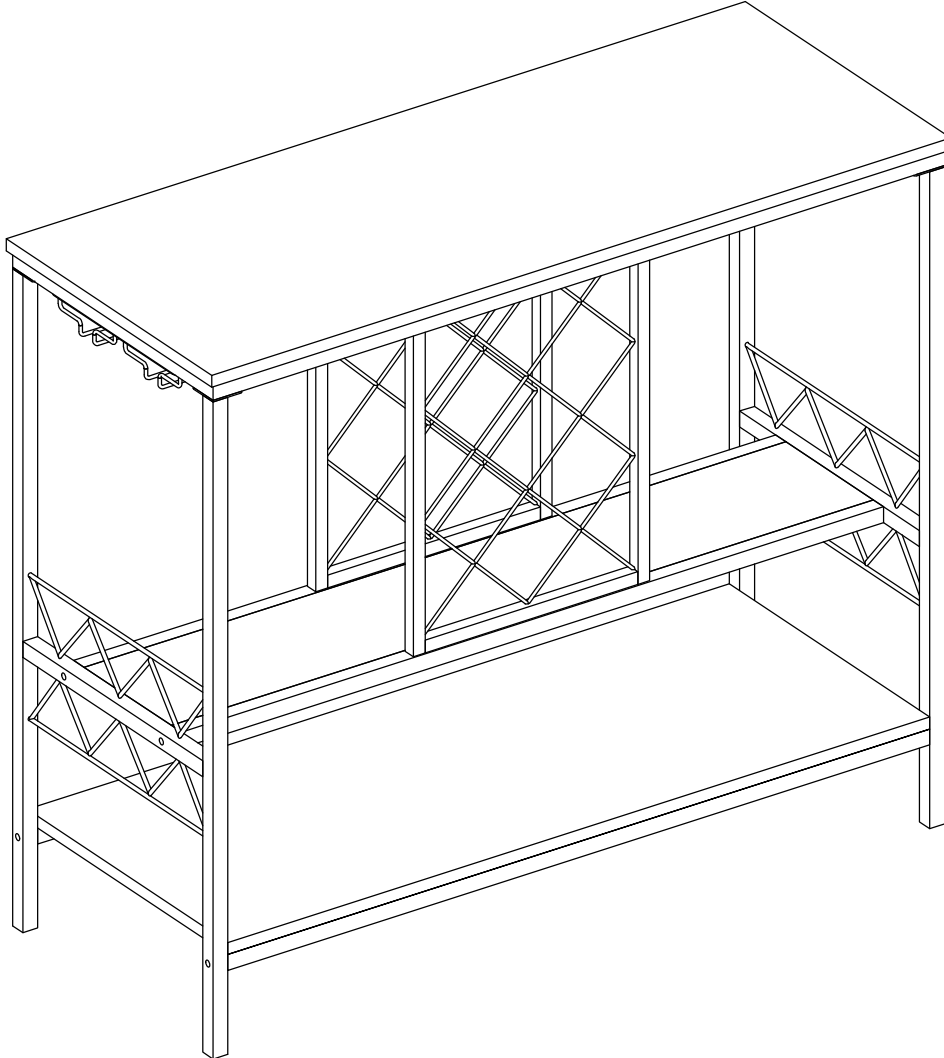

Customer Service Before Return

If part is missing or damaged, or you need help with assembly, please do not hesitate to contact us.

SELLER CONTACT INFORMATION:

contacts@ihomdec.com

IHD23-HY-20












Before Assembly





IMPORTANT NOTE:


- Make sure all parts and hardware are included and free of obvious Defect before disposing of any packaging.
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- DO NOT tighten all screws and bolts until completely assembled.
- Assembly will require two people.

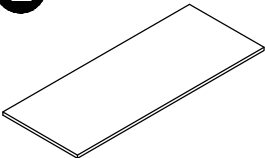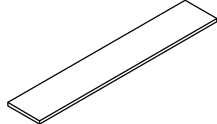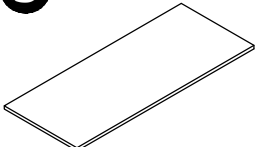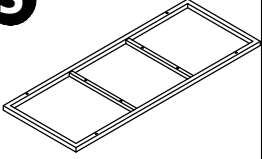PART LIST

1 	2 	3 	4 	5 
1 PC	1 PC	1 PC	2 PCS	1 PC
6 	7 	8 	9 	
2 PCS	2 PCS	2 PCS	2 PCS	


HARDWARE LIST

A  M6X12mm	B  M6X35mm	C  M6X40mm	D  M6X40mm	E 
22 PCS	8 PCS	12 PCS	4 PCS	1 PC

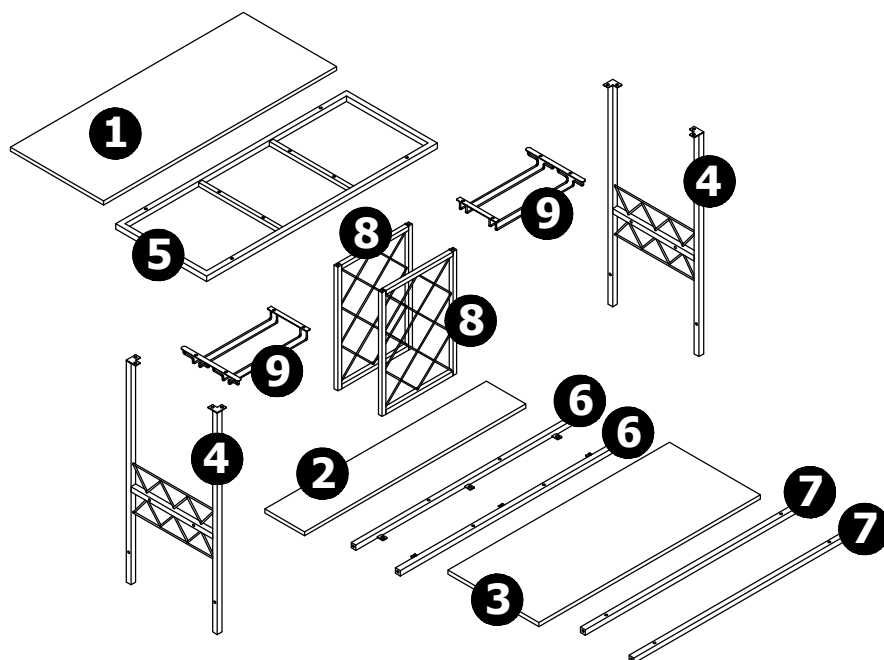


NOTED:
Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.

Step 1

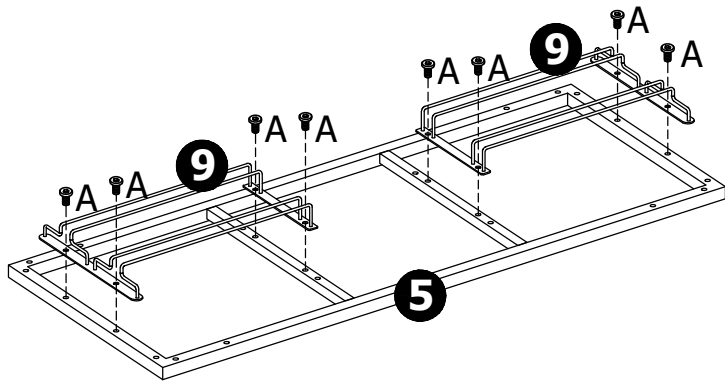


A X 8 PCS

Step 2

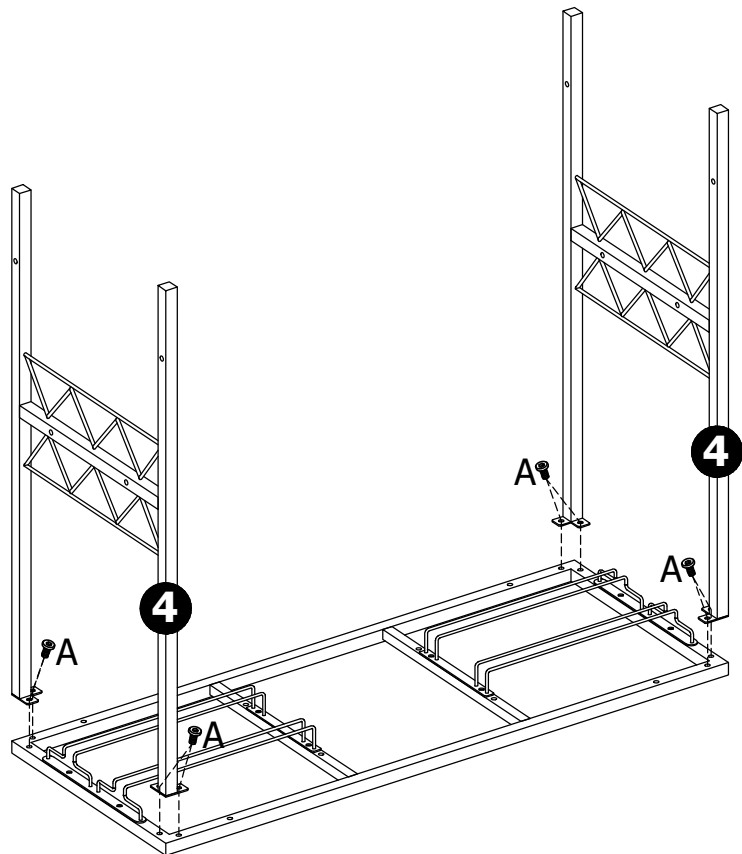


A X 8 PCS

Step 3

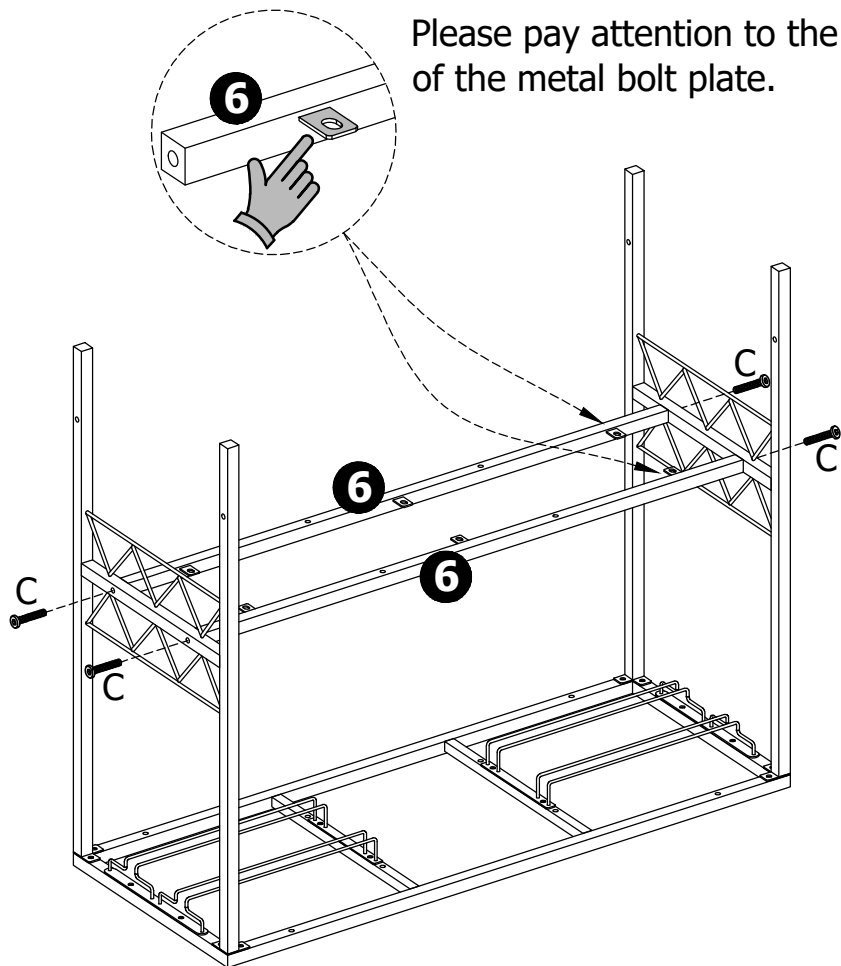


C X 4 PCS

Step 4

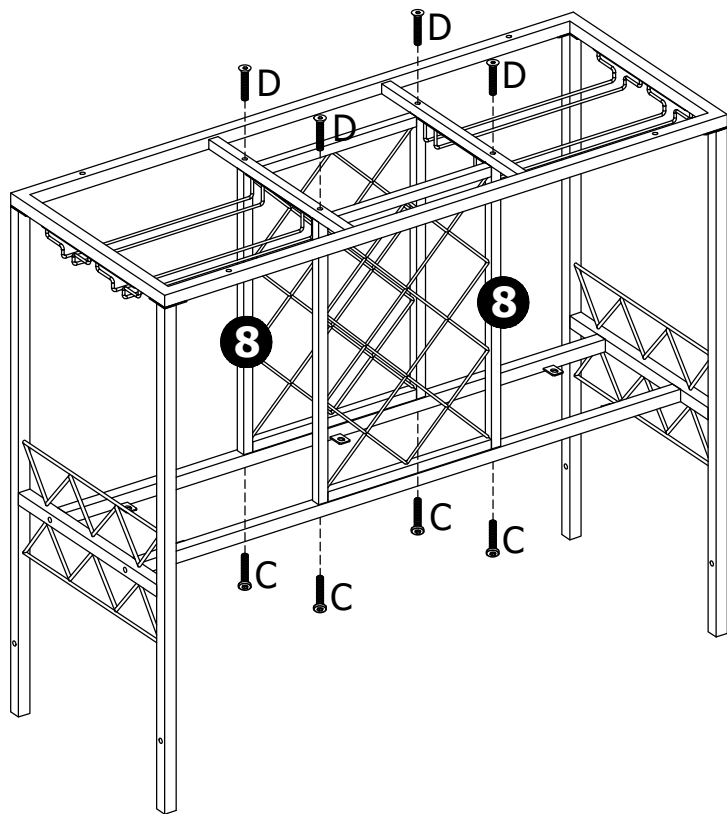


C X 4 PCS
D X 4 PCS

Step 5

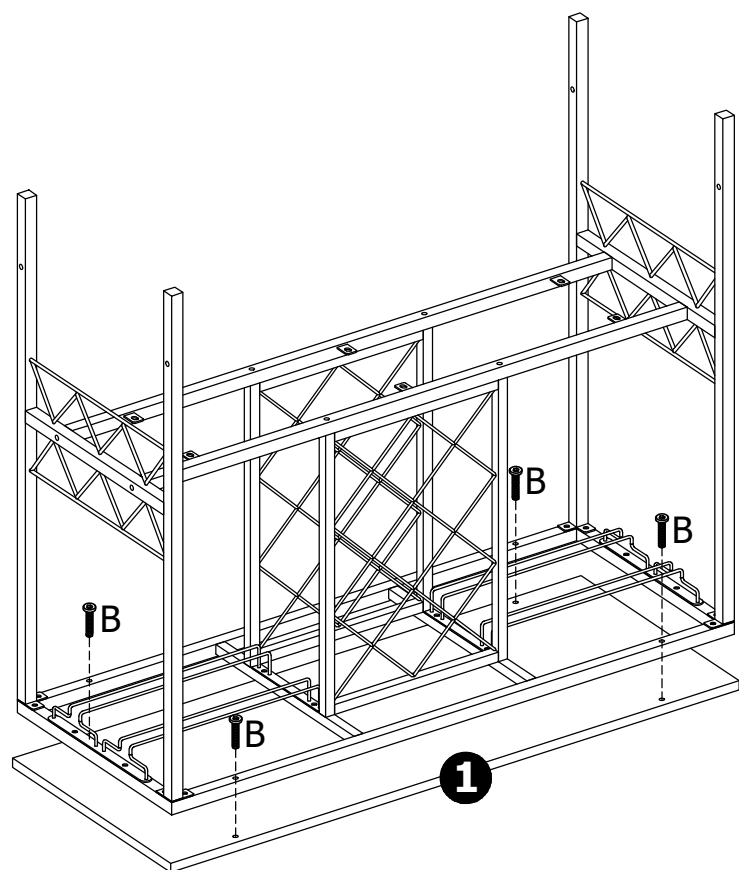


B X 4 PCS

Step 6

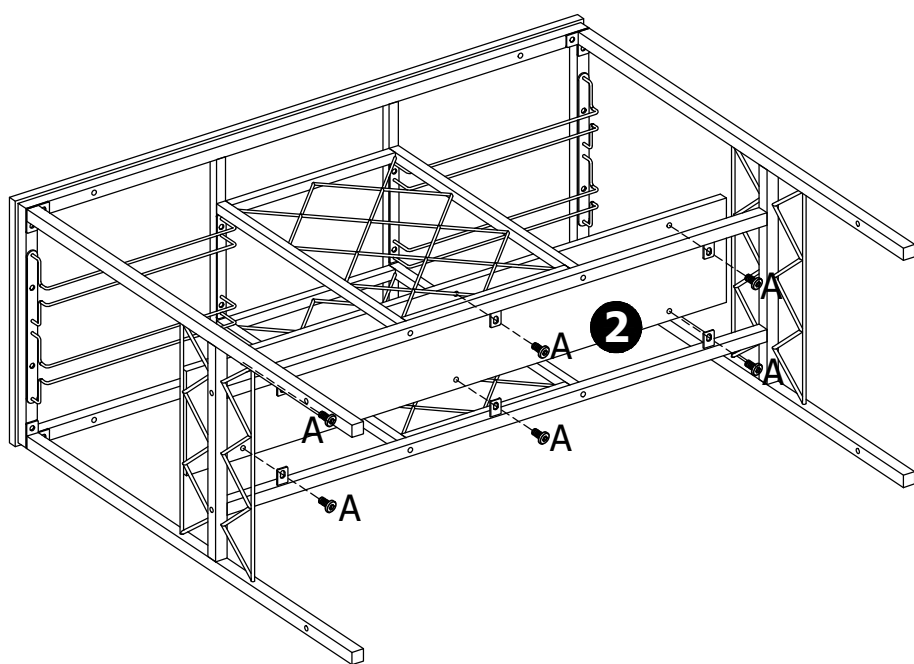


A X 6 PCS

Step 7

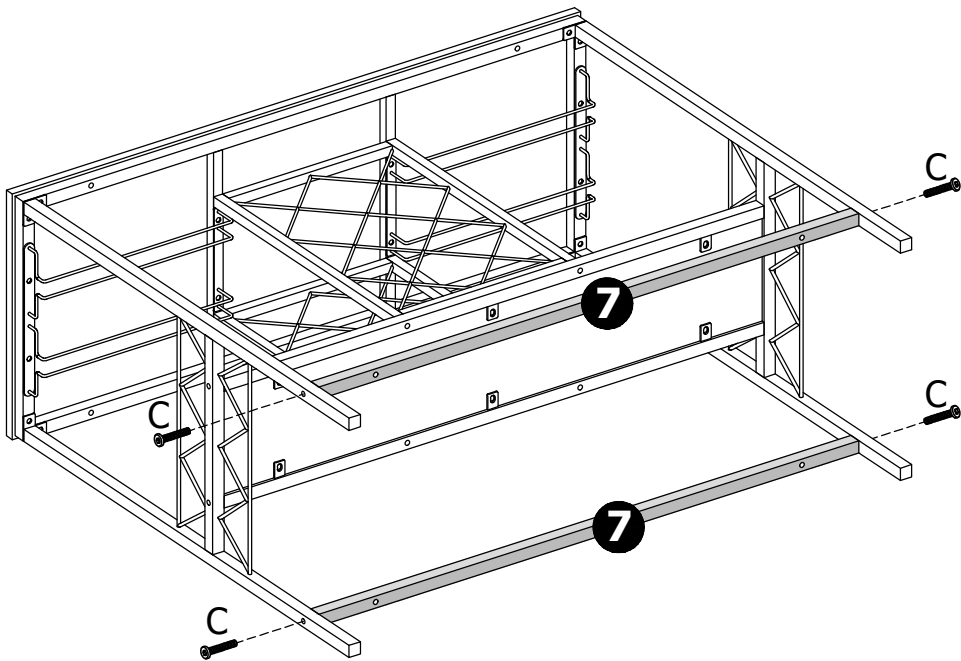

C X 4 PCS

Step 8

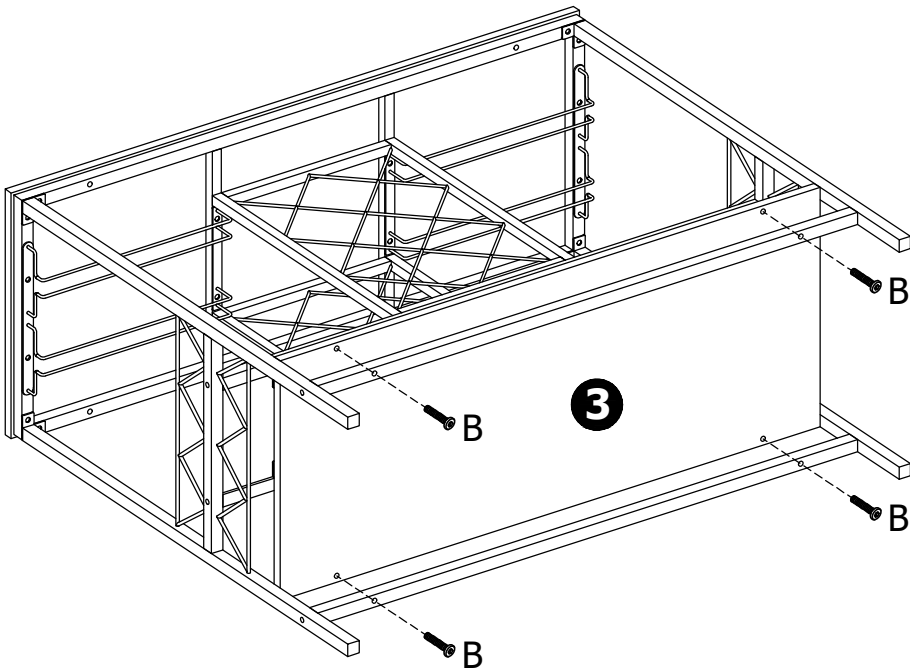

B X 4 PCS