


ALFORDSON®

Wooden Bed Frame

Model: BF-W-BEAM-D

BF-W-BEAM-Q

BF-W-BEAM-K

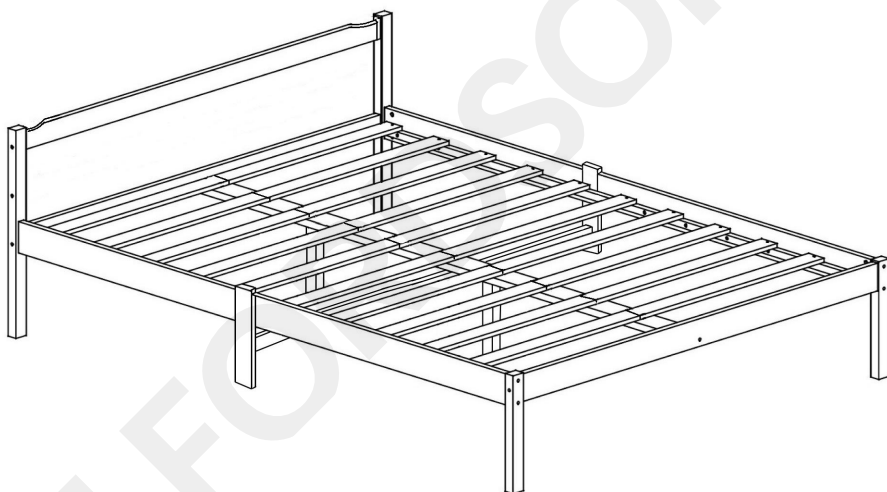











Dear Customers:







- We warmly welcome you to contact us at any time.
- Kindly keep all the packaging until you believe that return is not needed.
- If anything goes wrong, kindly let us know before lodging Return Request. Such as damaged parts, missing parts, change of mind etc; Our team will do our utmost to resolve the case to your ultimate satisfaction.
- Our customer service email: cs_ecom@hotmail.com
- 100% Customer Satisfaction Guaranteed


NOTE:

- Read through the instructions carefully before you begin.
- Make sure you have all the required tools. **Do not use power tools.**
- Identify and lay out all of the components before you begin assembly.
- Place the parts on soft surface (such as carpet or cardboard) when assembling your product to avoid scratching or damaging the surface.
- Check the components and make sure they are in right position before assembly. Make sure the hardware is correct.
- Do not fully tighten all screws until the step/process is finished.
- Never use any glue until you are certain that the parts should be connected together.


HARDWARE



A	 	12
B		14
C		01
D	 	02
E		02
F	  	04

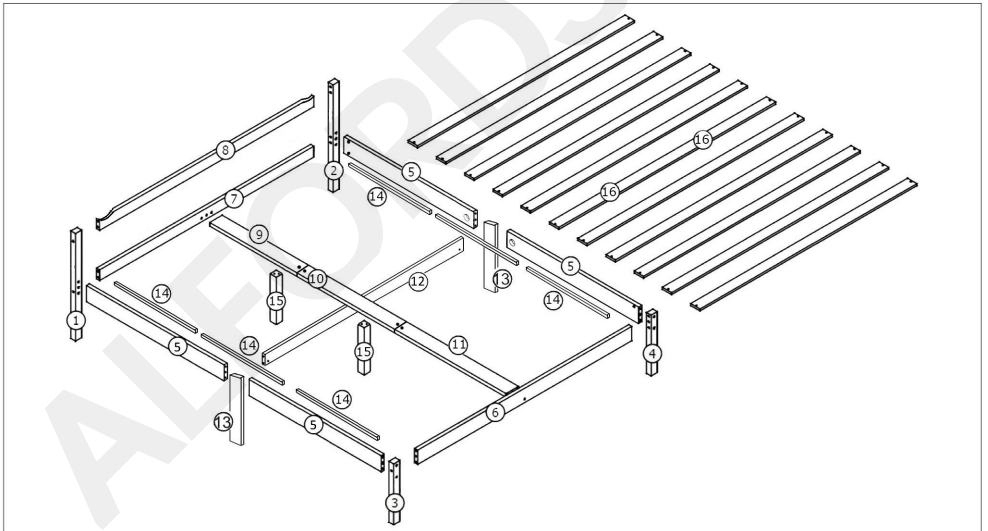

G		26
H	 	90
I		01
J	 	08

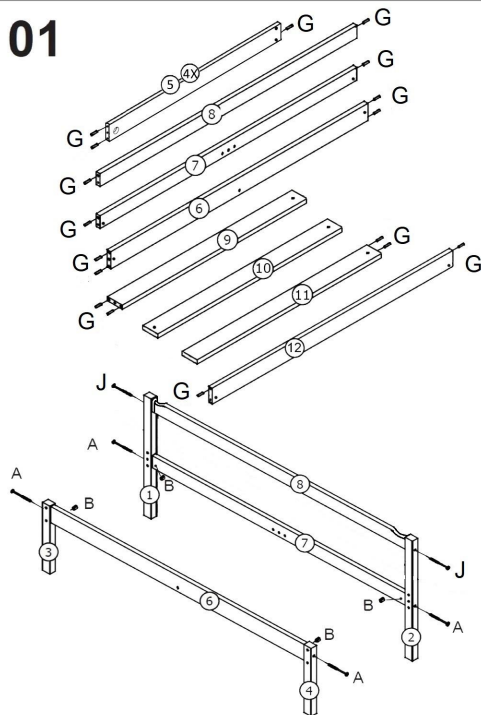


01





A	 15mm M6x80mm	04
B		04

G	 Ø8x30mm	26
J	 15mm M6x70mm	02

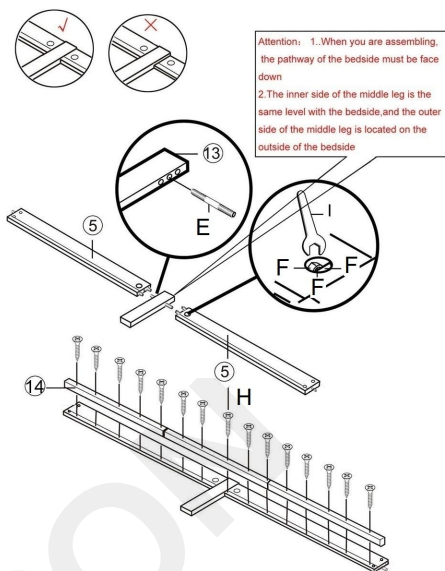
02







H	 8mm Ø4x30mm	30
I		01
E		02


F	 Ø4x30mm	04
---	--	----


03

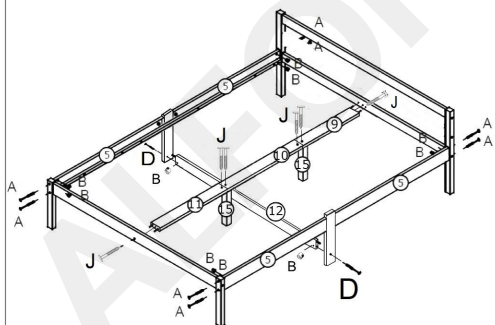

A	 15mm M6x80mm	08
D	 15mm M6x70mm	02
B		10
J	 15mm M6x70mm	06

04

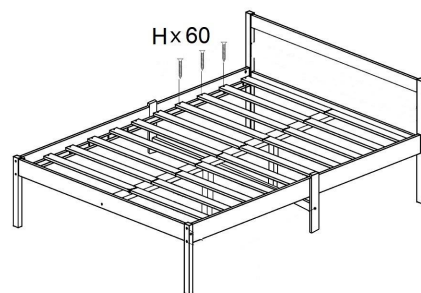

H	 8mm Ø4x30mm	60
---	---	----