

ASSEMBLY INSTRUCTIONS A-OF-SUNBED **ALFORDSON®**

NOTE: DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

PART NO	PART IMAGE	QTY	PART NO	PART IMAGE	QTY
A1		1	P	M6*15MM	12
A2		1	Q	M6*35MM	6
B1		1	R	M6*50MM	5
B2		1	T		1
C1		1	U		1
C2		1			
D		1			
D1		1			
E		1			
N		3			
O		5			

1

N=3sets
P=6sets
R=3sets
O=3sets

2

Q=4sets
R=2sets
O=2sets

3

Q=2sets

4

Put the small metal brackets to hold D&D1. May need to tighten the screws of the metal brackets so that they would not move.

P=6sets

5

S1

ASSEMBLY INSTRUCTIONS A-OF-SUNBED **ALFORDSON®**

NOTE:DONT TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

PART NO	PART IMAGE	QTY		
K		2		
L		2		
D		1		
D1		1		
M		4		
O		4		
O		4		
O		20		
R		4		
S2				


ASSEMBLY INSTRUCTIONS A-OF-SUNBED ALFORDSON®

NOTE: DON'T TIGHTEN BOLTS UNTIL ALL PARTS ARE CONNECTED. 2 PEOPLE ARE REQUIRED WHEN ASSEMBLING

PART NO	PART IMAGE	QTY
F		2
G		2
H		2
I		2
J		4
P	M6*20MM	4
Q	M6*35MM	8
S		4
W		2
X		1
Y		10


S3

①

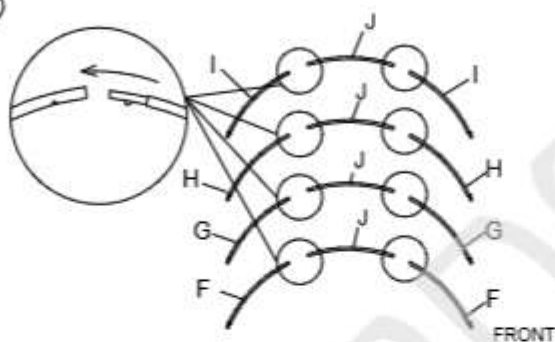


Note: From front to back F-G-H-I, the tube sets are shorter and shorter.

②

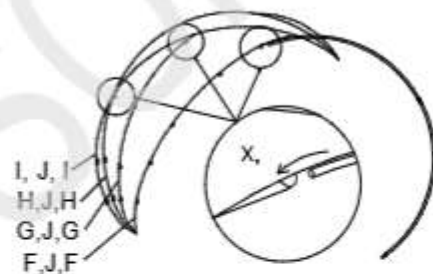


③

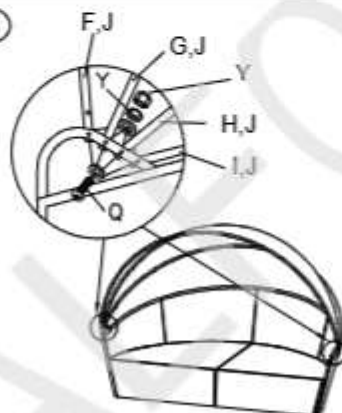

Y=8sets
Q=8sets

④

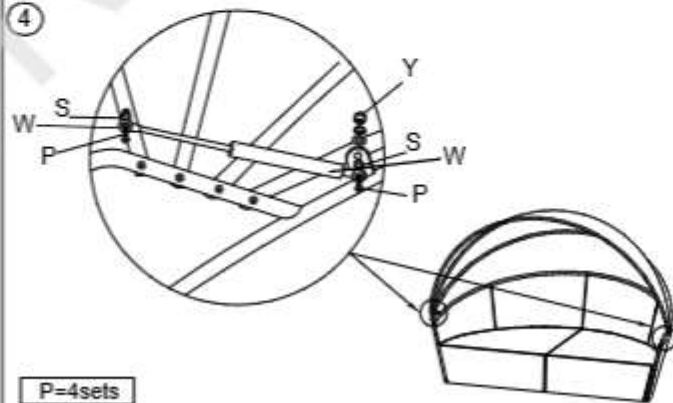

P=4sets
W=2sets
S=4sets
Y=2sets

Refer to the assembly video in page 4

Gas lift installation video

SCAN QR CODE



Dear Customers:

- We warmly welcome you to contact us at any time.
- Kindly keep all the packaging until you believe that return is not needed.
- If anything goes wrong, kindly let us know before lodging Return Request, such as damaged parts, missing parts, change of mind etc. Our team will do our utmost to resolve the case to your ultimate satisfaction.
- Our customer service email: cs_ecom@hotmail.com
- 100% Customer Satisfaction Guaranteed