












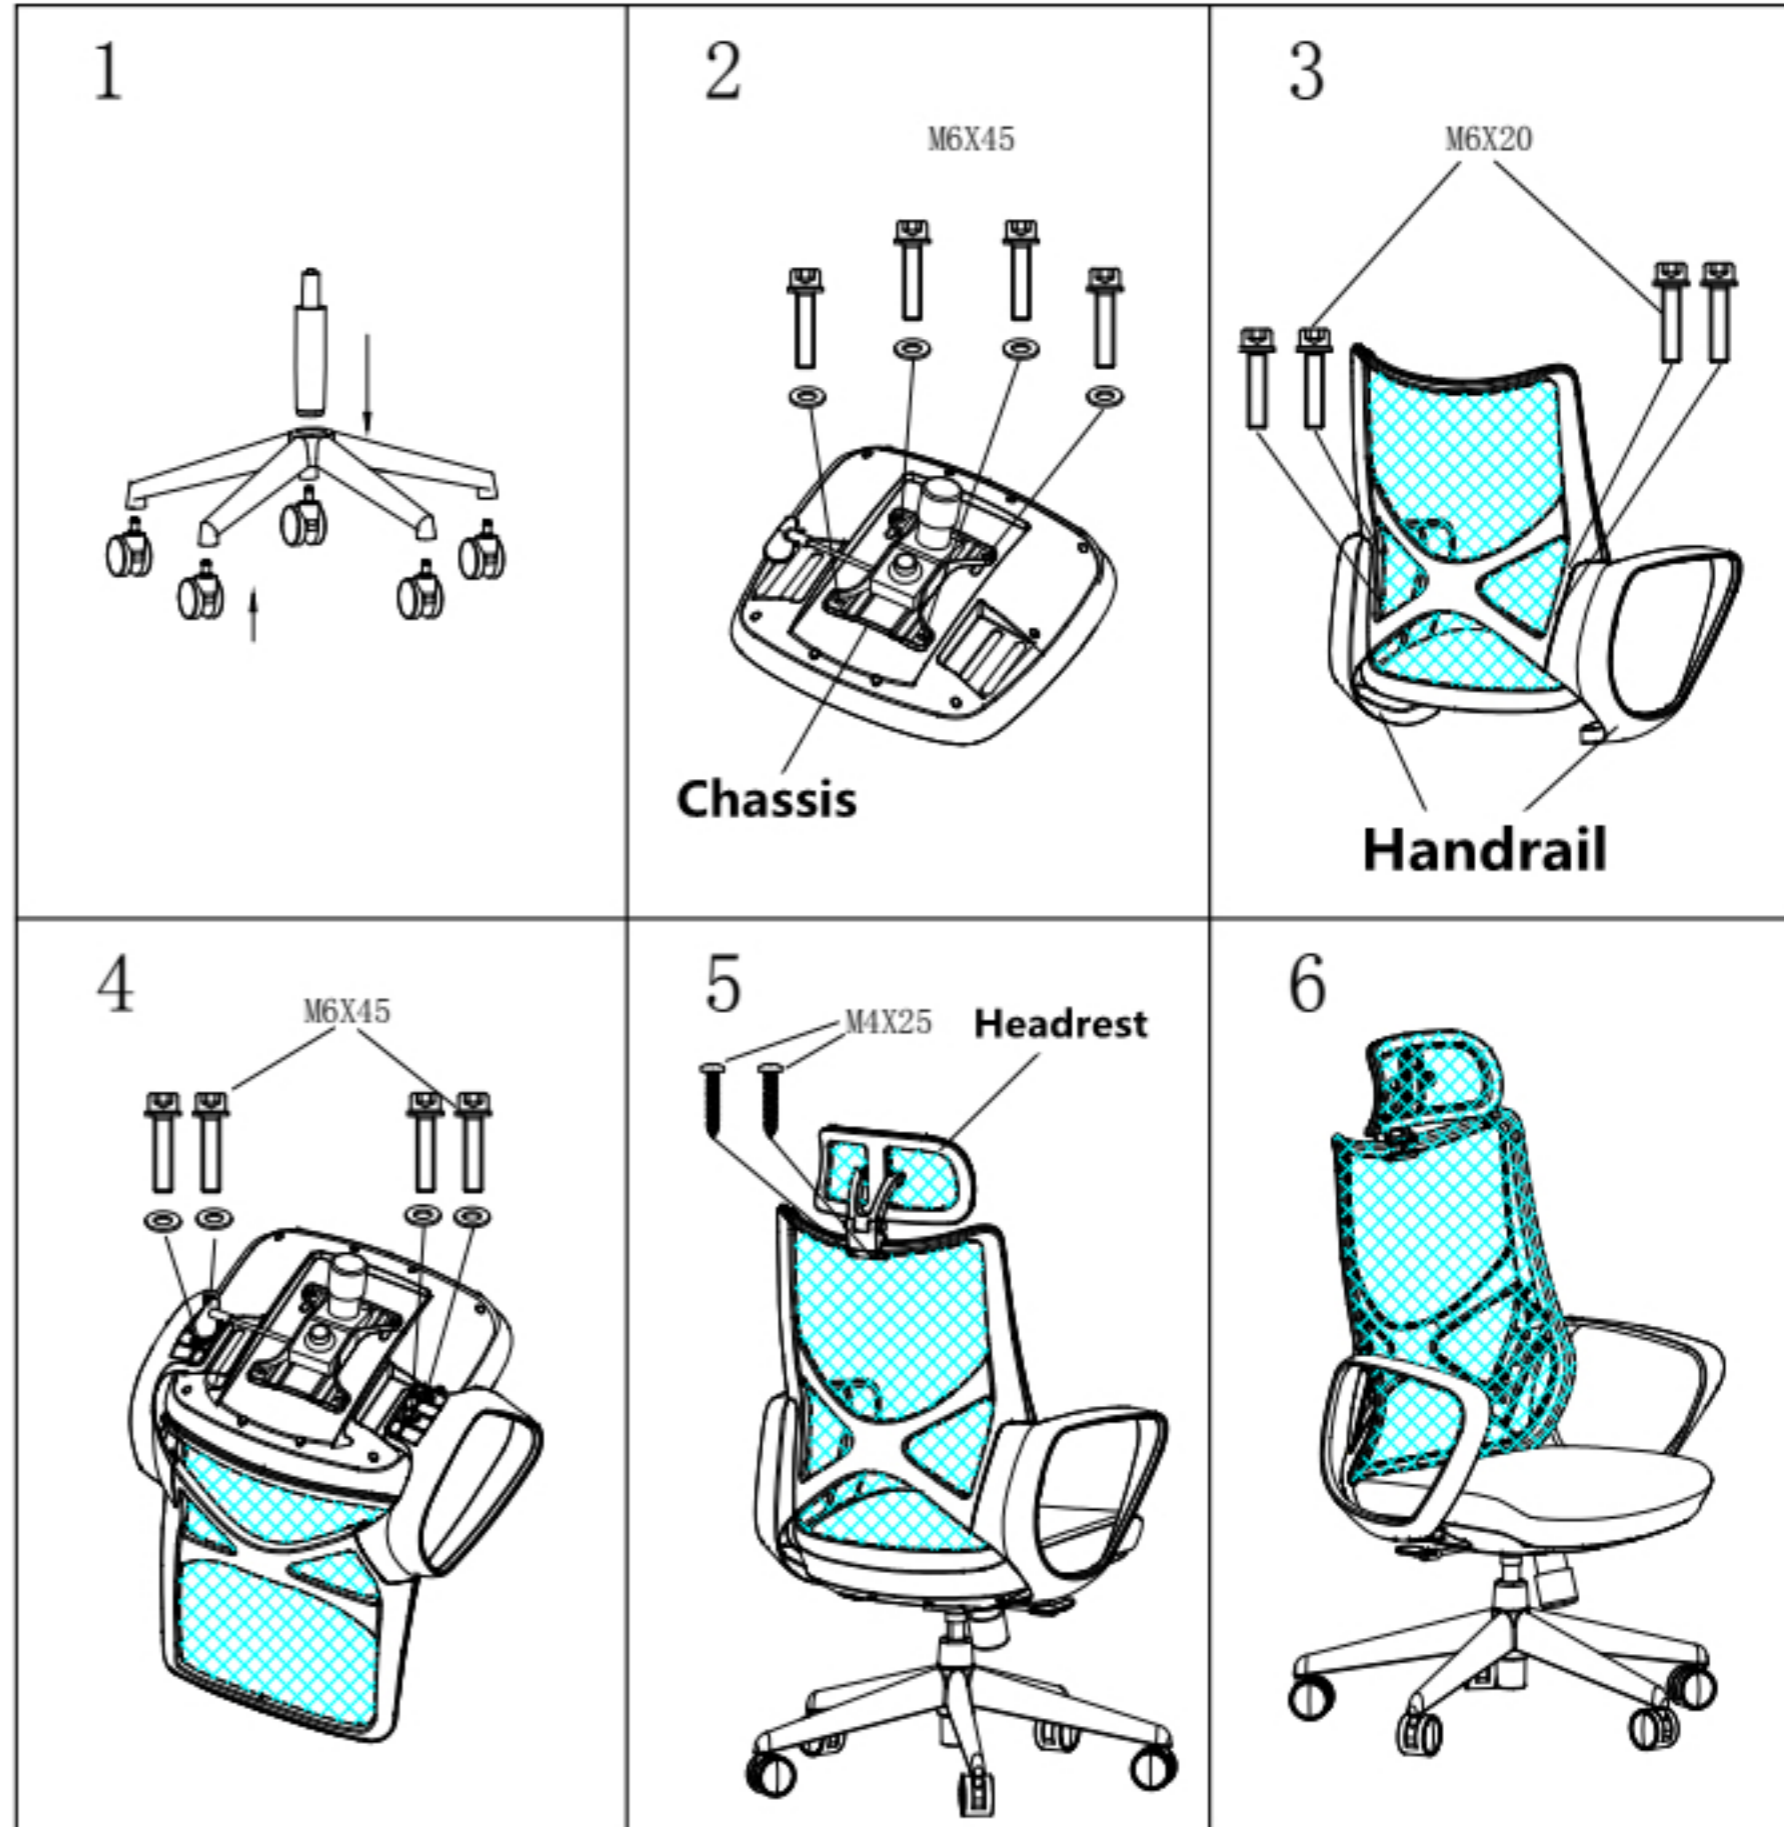


Installation diagram

MODEL:A911

Wheel	Five star feet	Air rod	Chassis
			
Handrail	Seat bag	Back	Headrest
			
 5mm inner sixangle	 6X45 eight	 M4X25 four	
 eight	 M6X20 four		



REMINDER:

1. When installing the office chair, please follow the above steps to avoid mistakes.

2. When screwing, screw on the other side first, do not tighten it for the time being, fix it for the time being, and then tighten it when both sides are fixed.