
## FILE-MDF-CAB-WHT-01-1

# Details of parts: (unit CM)


		and the later than th						
Eccentric screw	Eccentric nut	Pointed screws	Handle screws	Handle	Metal pin	Key lock	Small self- tapping screw /1.2cm	Spring spacer pin
A*7	B*7	C*14	D*5	E*2	F*5	G*2	H*30	I*2
Universal whee	el Nails	Iron shee	t					
L*4	K*16	J*2						

#### Warm Reminder:


- 1. When installing please distinguish the plates according to the drawings.
- 2. When installing, the screws are tightened to seven points first, and then tightened after all the alignment is completed.
- 3. Some panels have a red face, red face down or in.
- 4. The color of the product shall prevail, the instructions is for reference only.

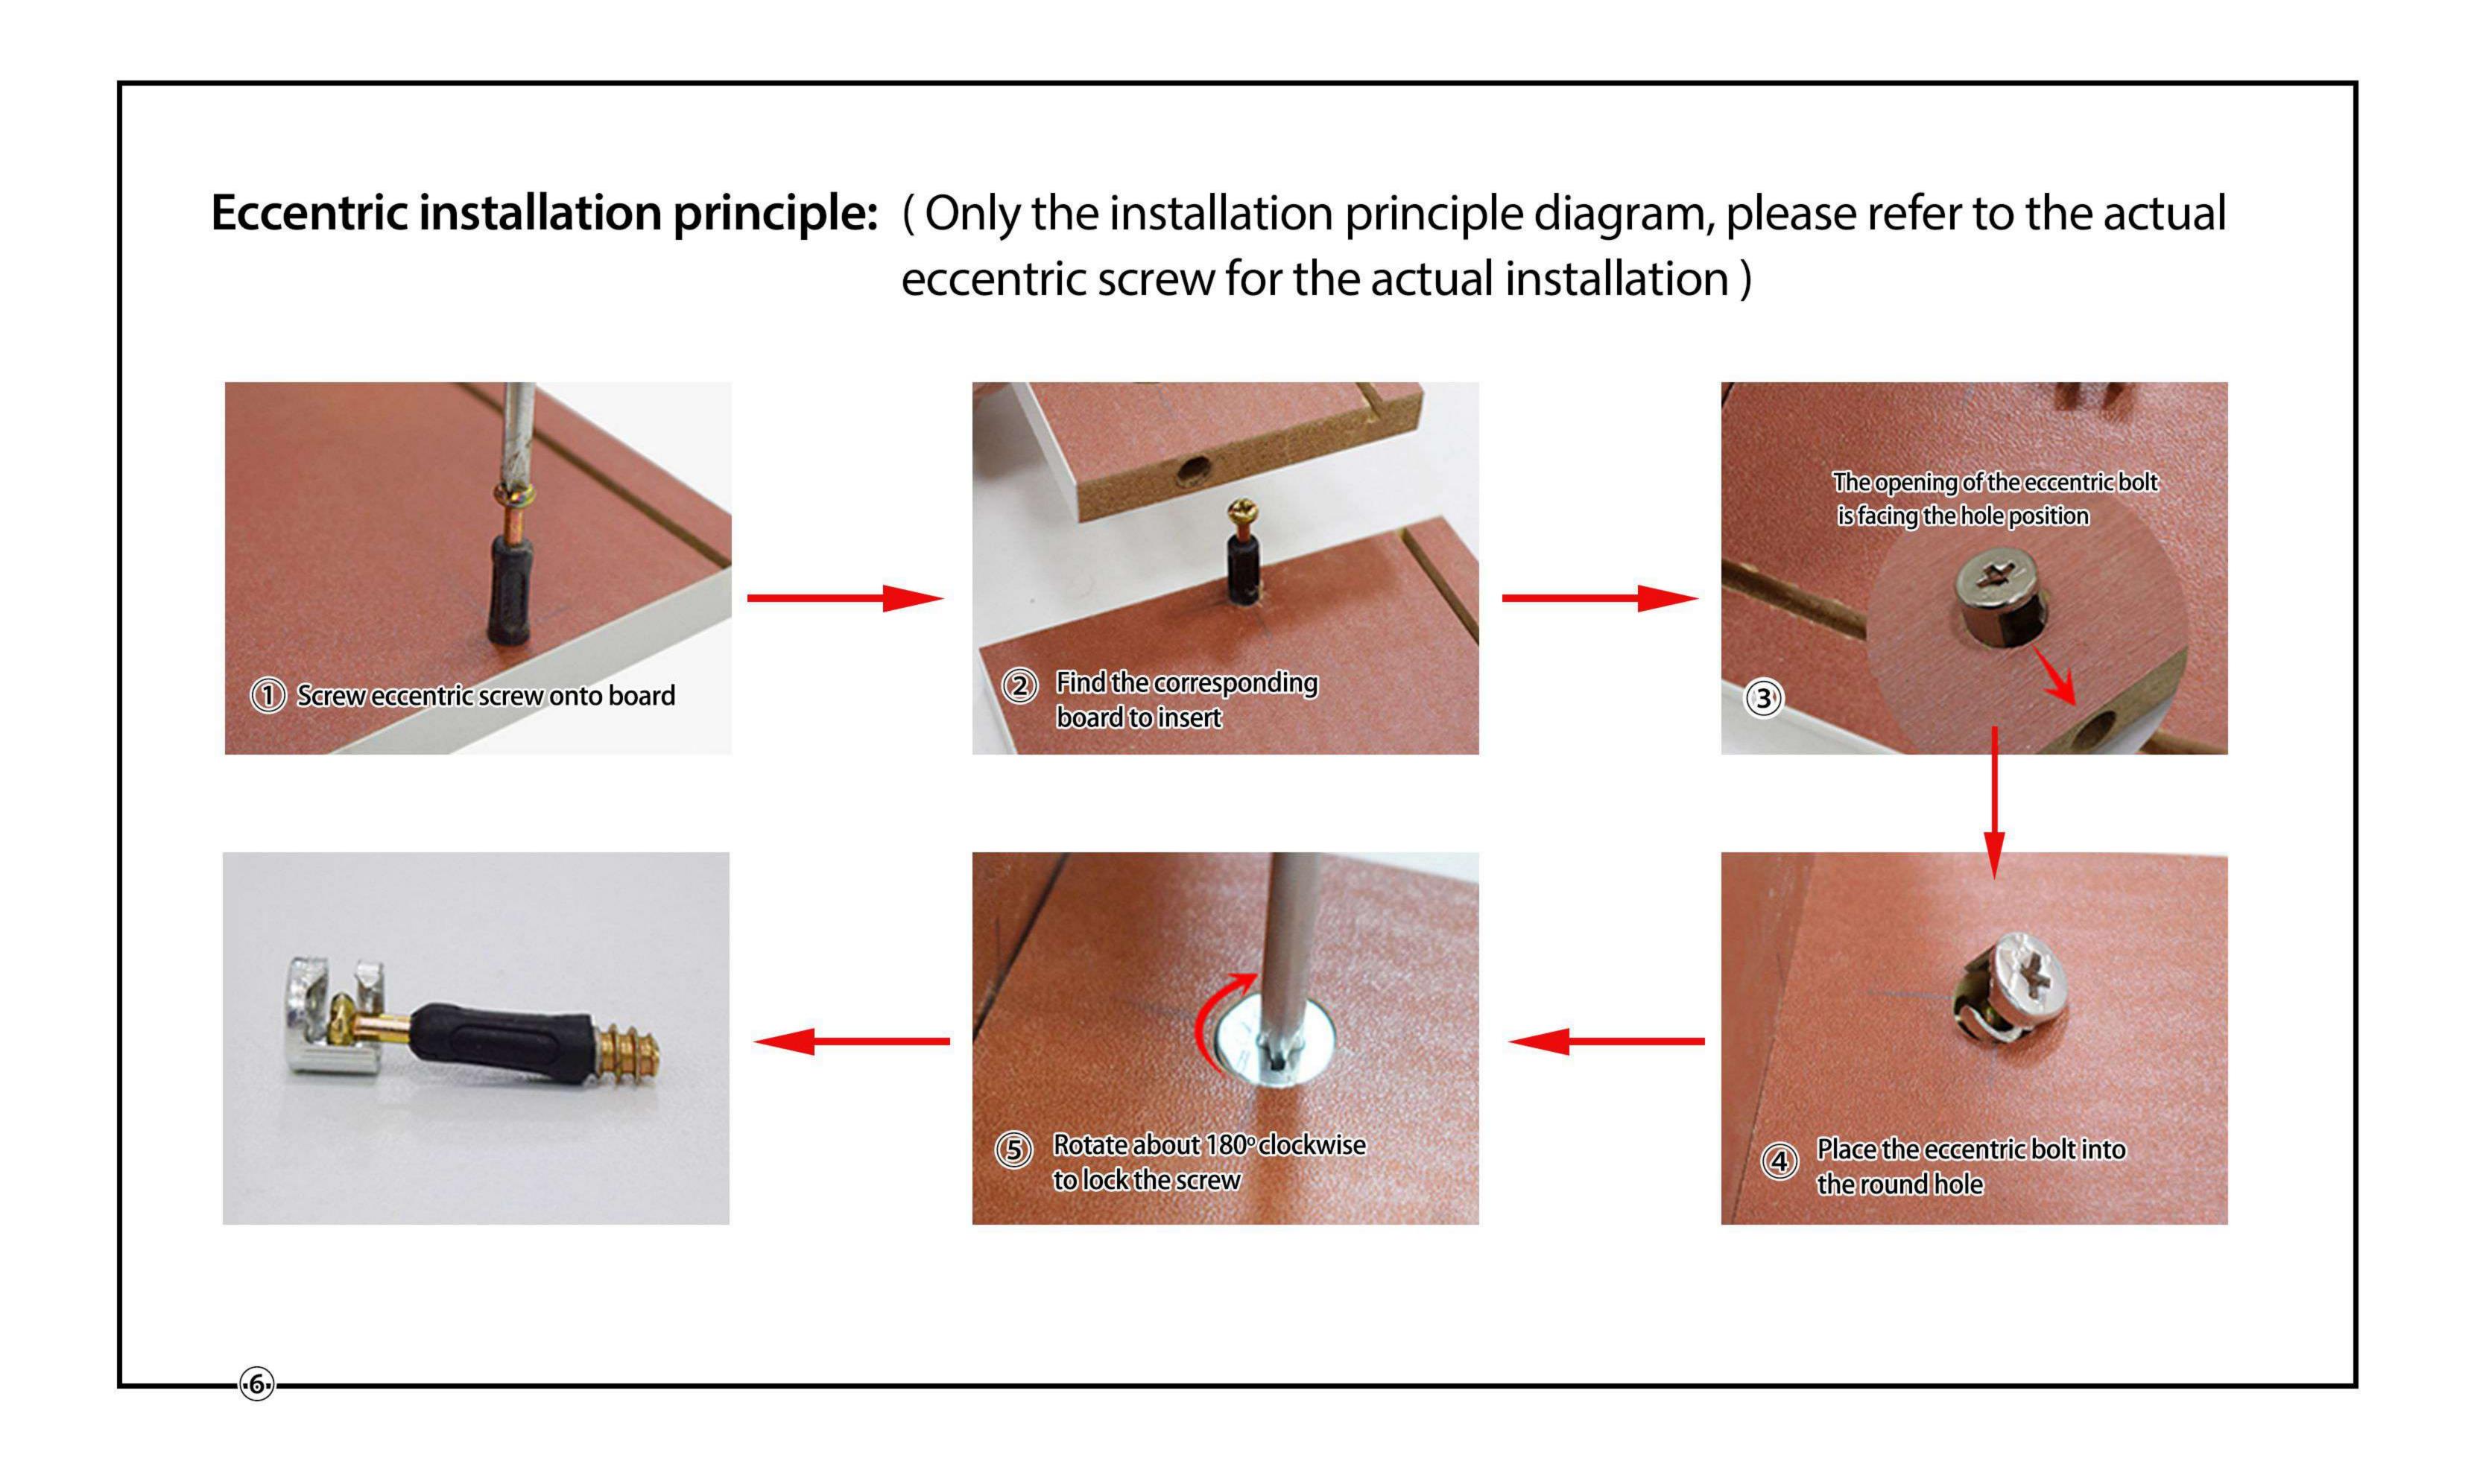

#### Plate Name and Serial Number

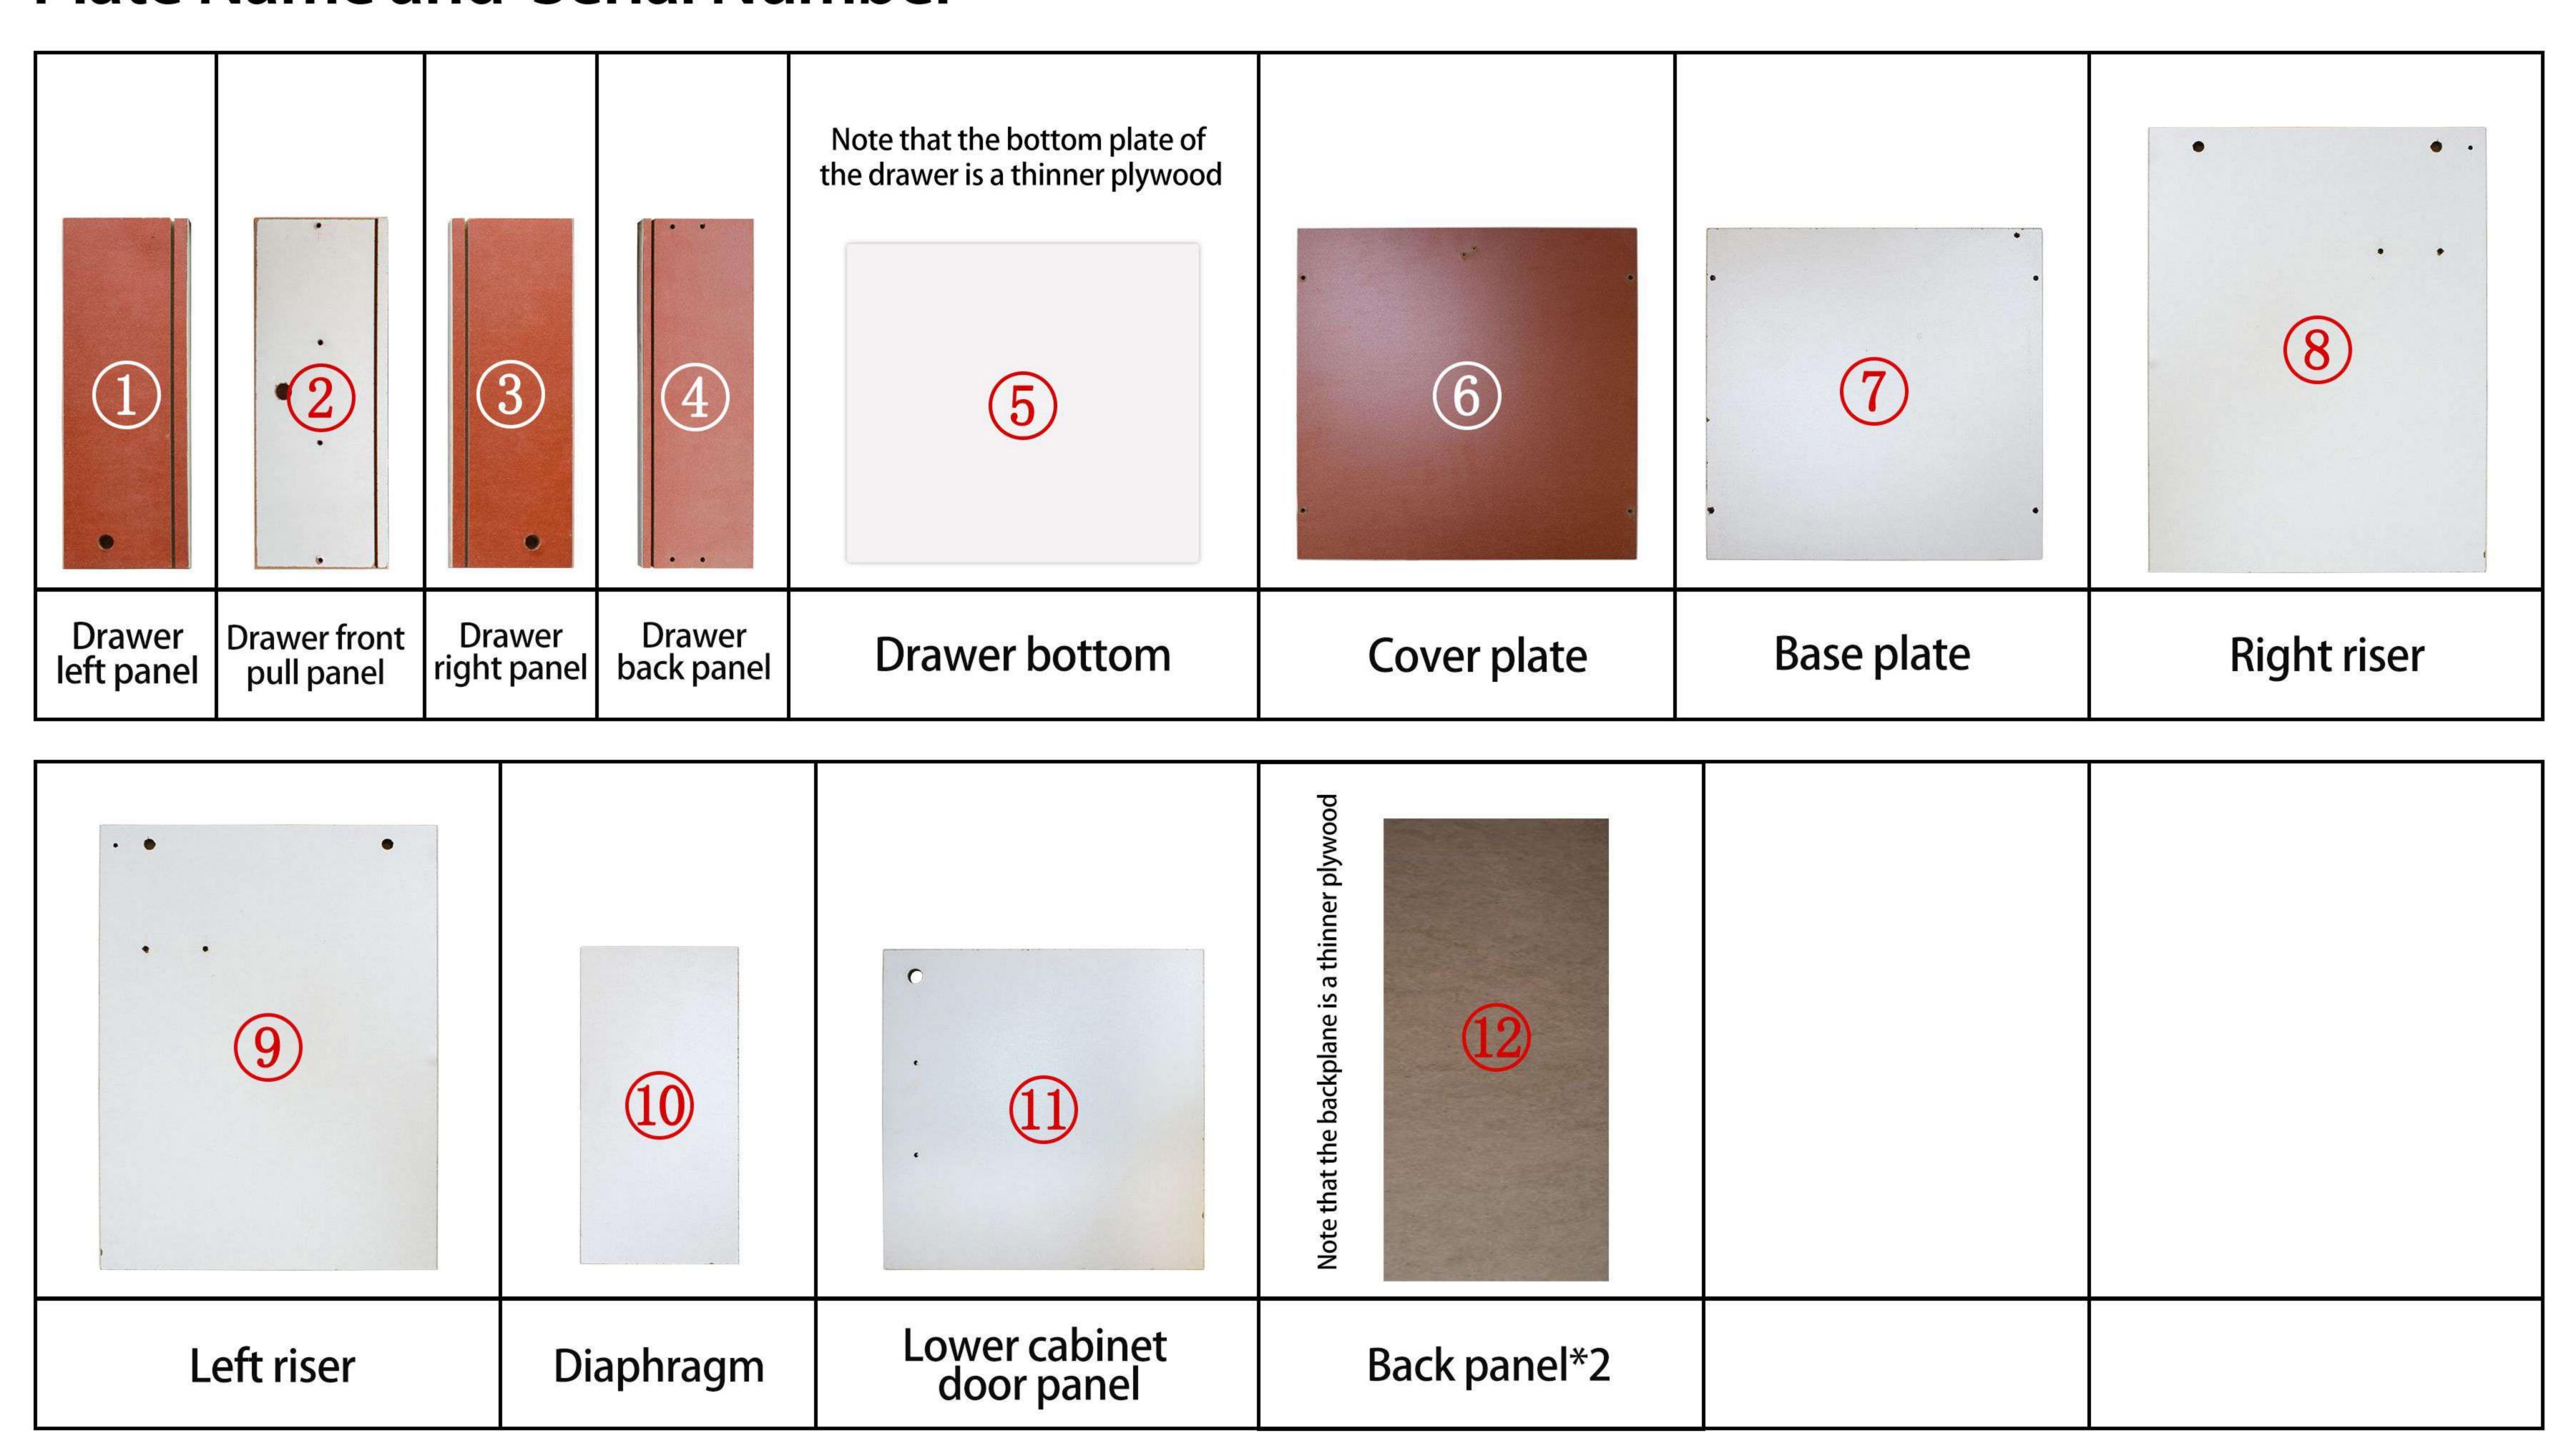

## Start the installation: Step 1: The drawer installation steps are as follows

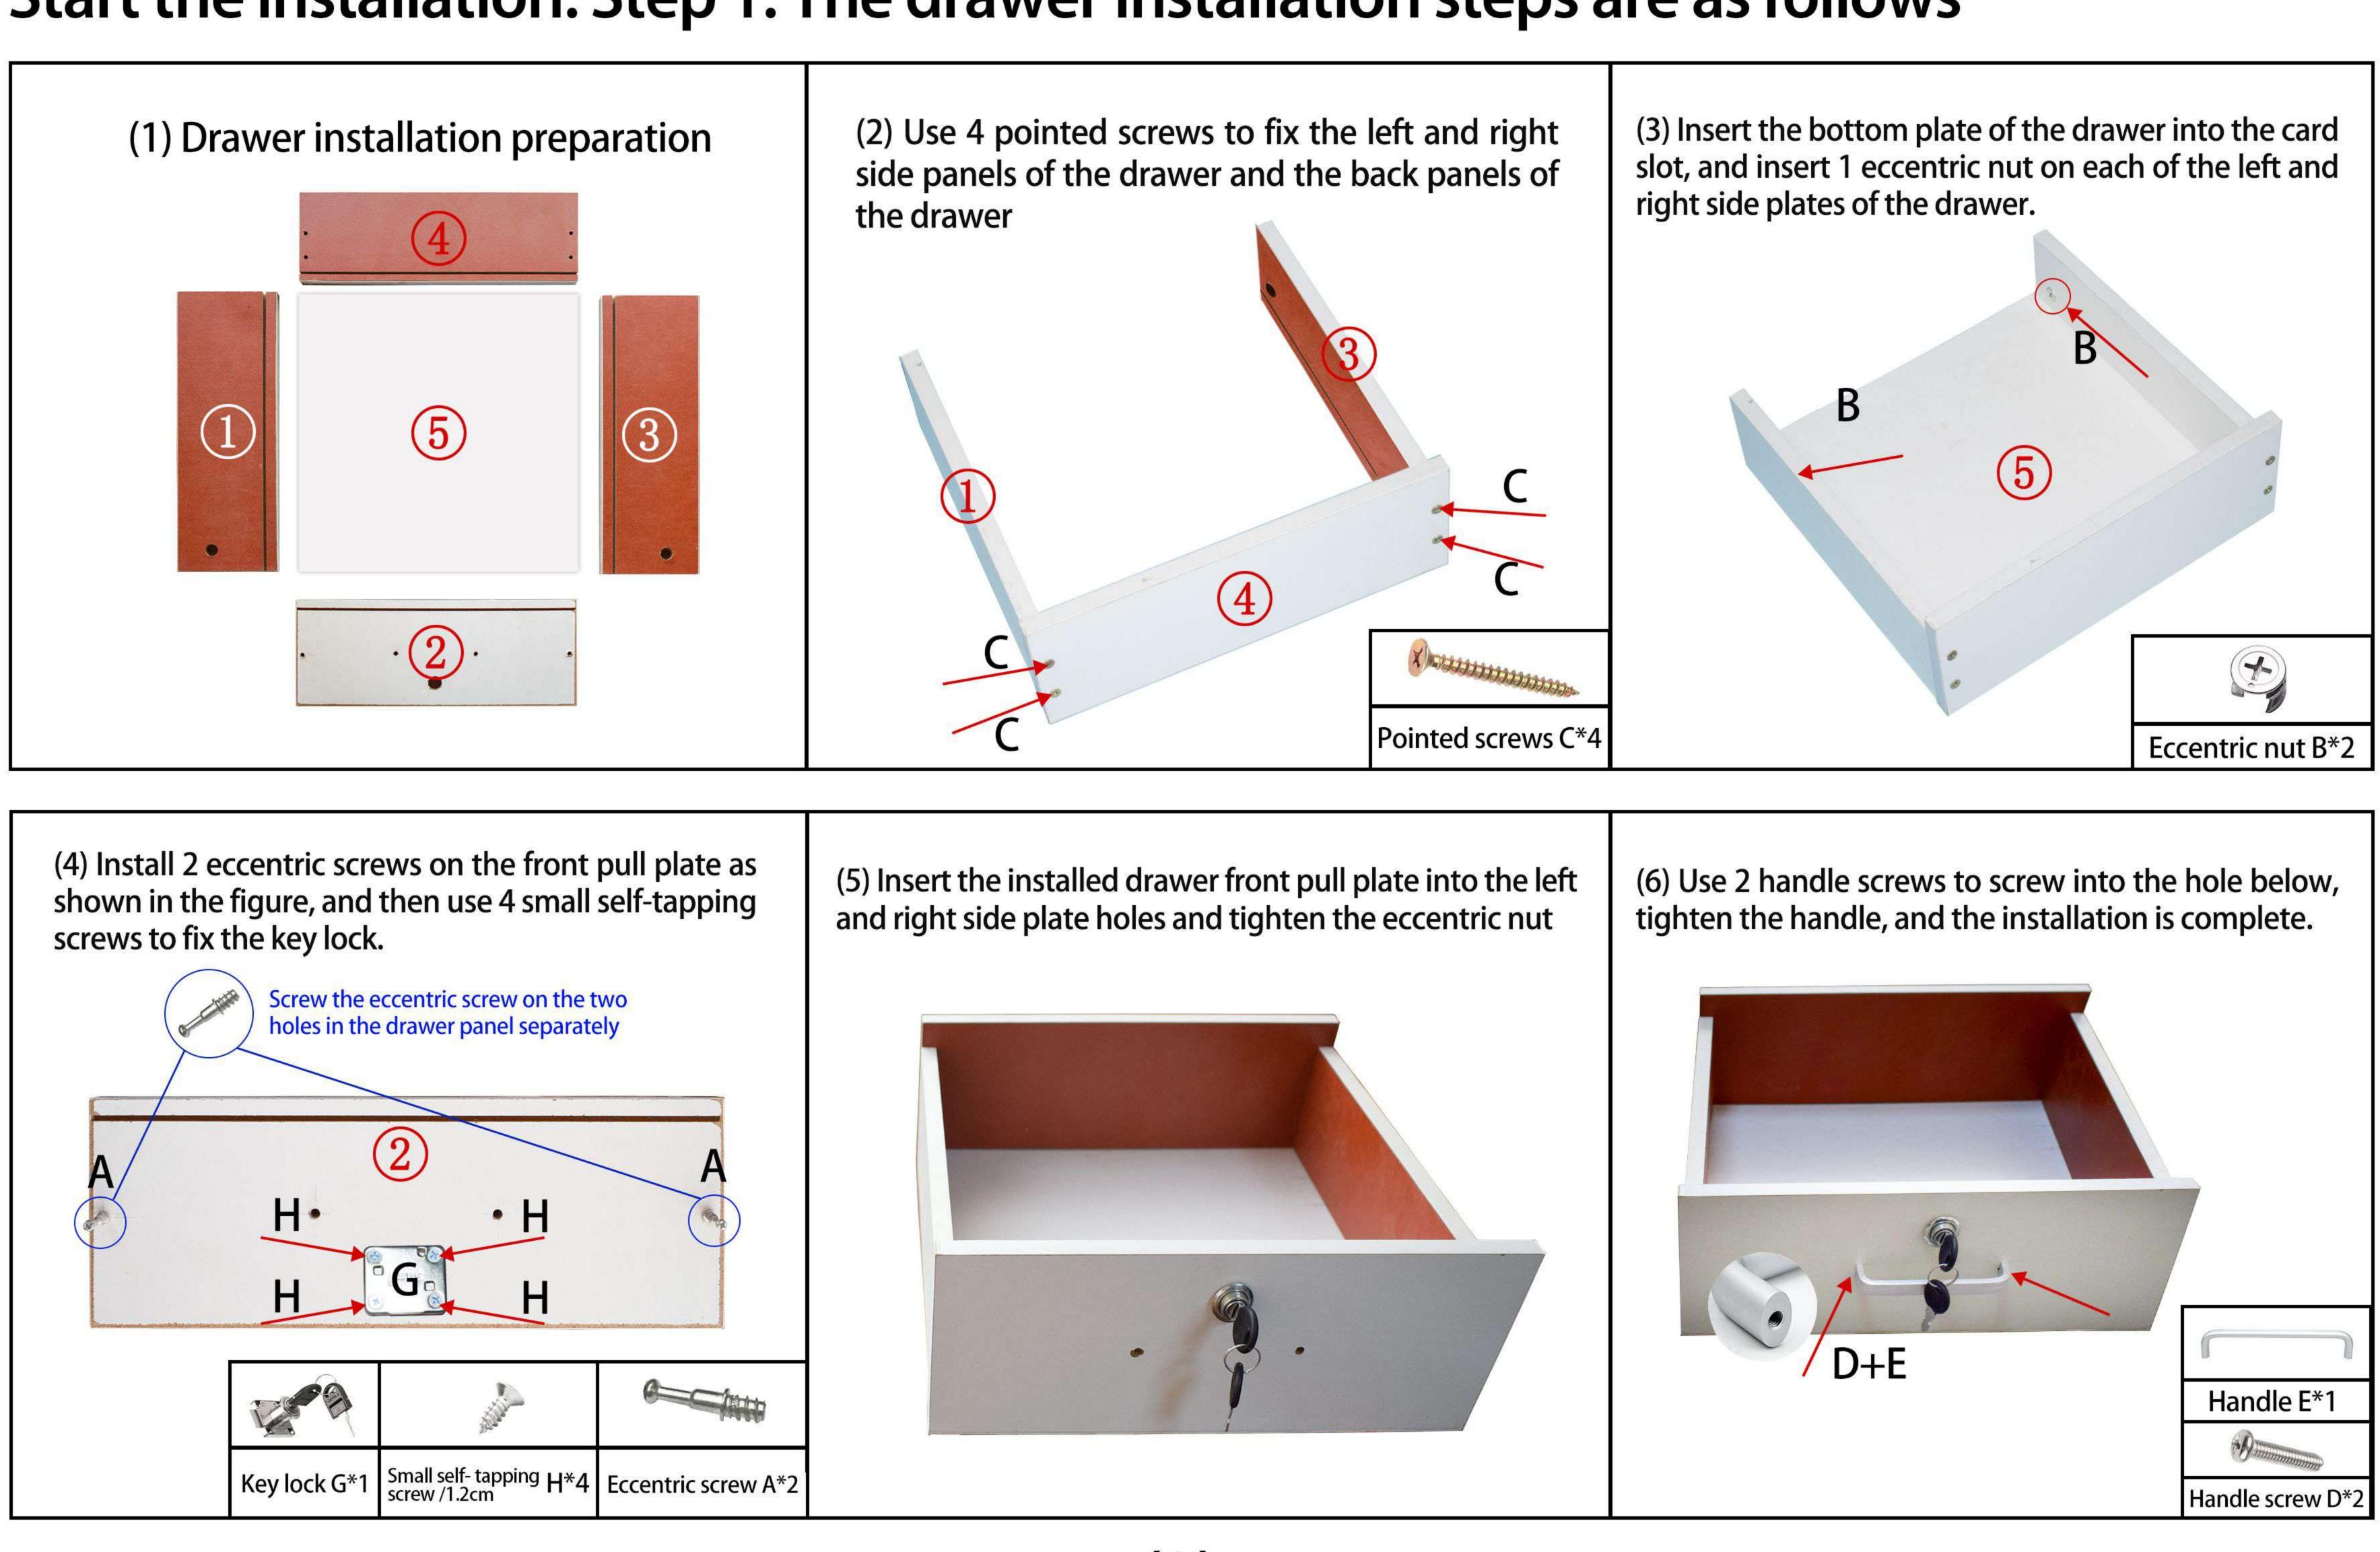



# Step 2: The installation steps of the file cabinet are as follows


Iron sheet J\*1


Eccentric screw A\*4


### FILE-MDF-CAB-WHT-01-2

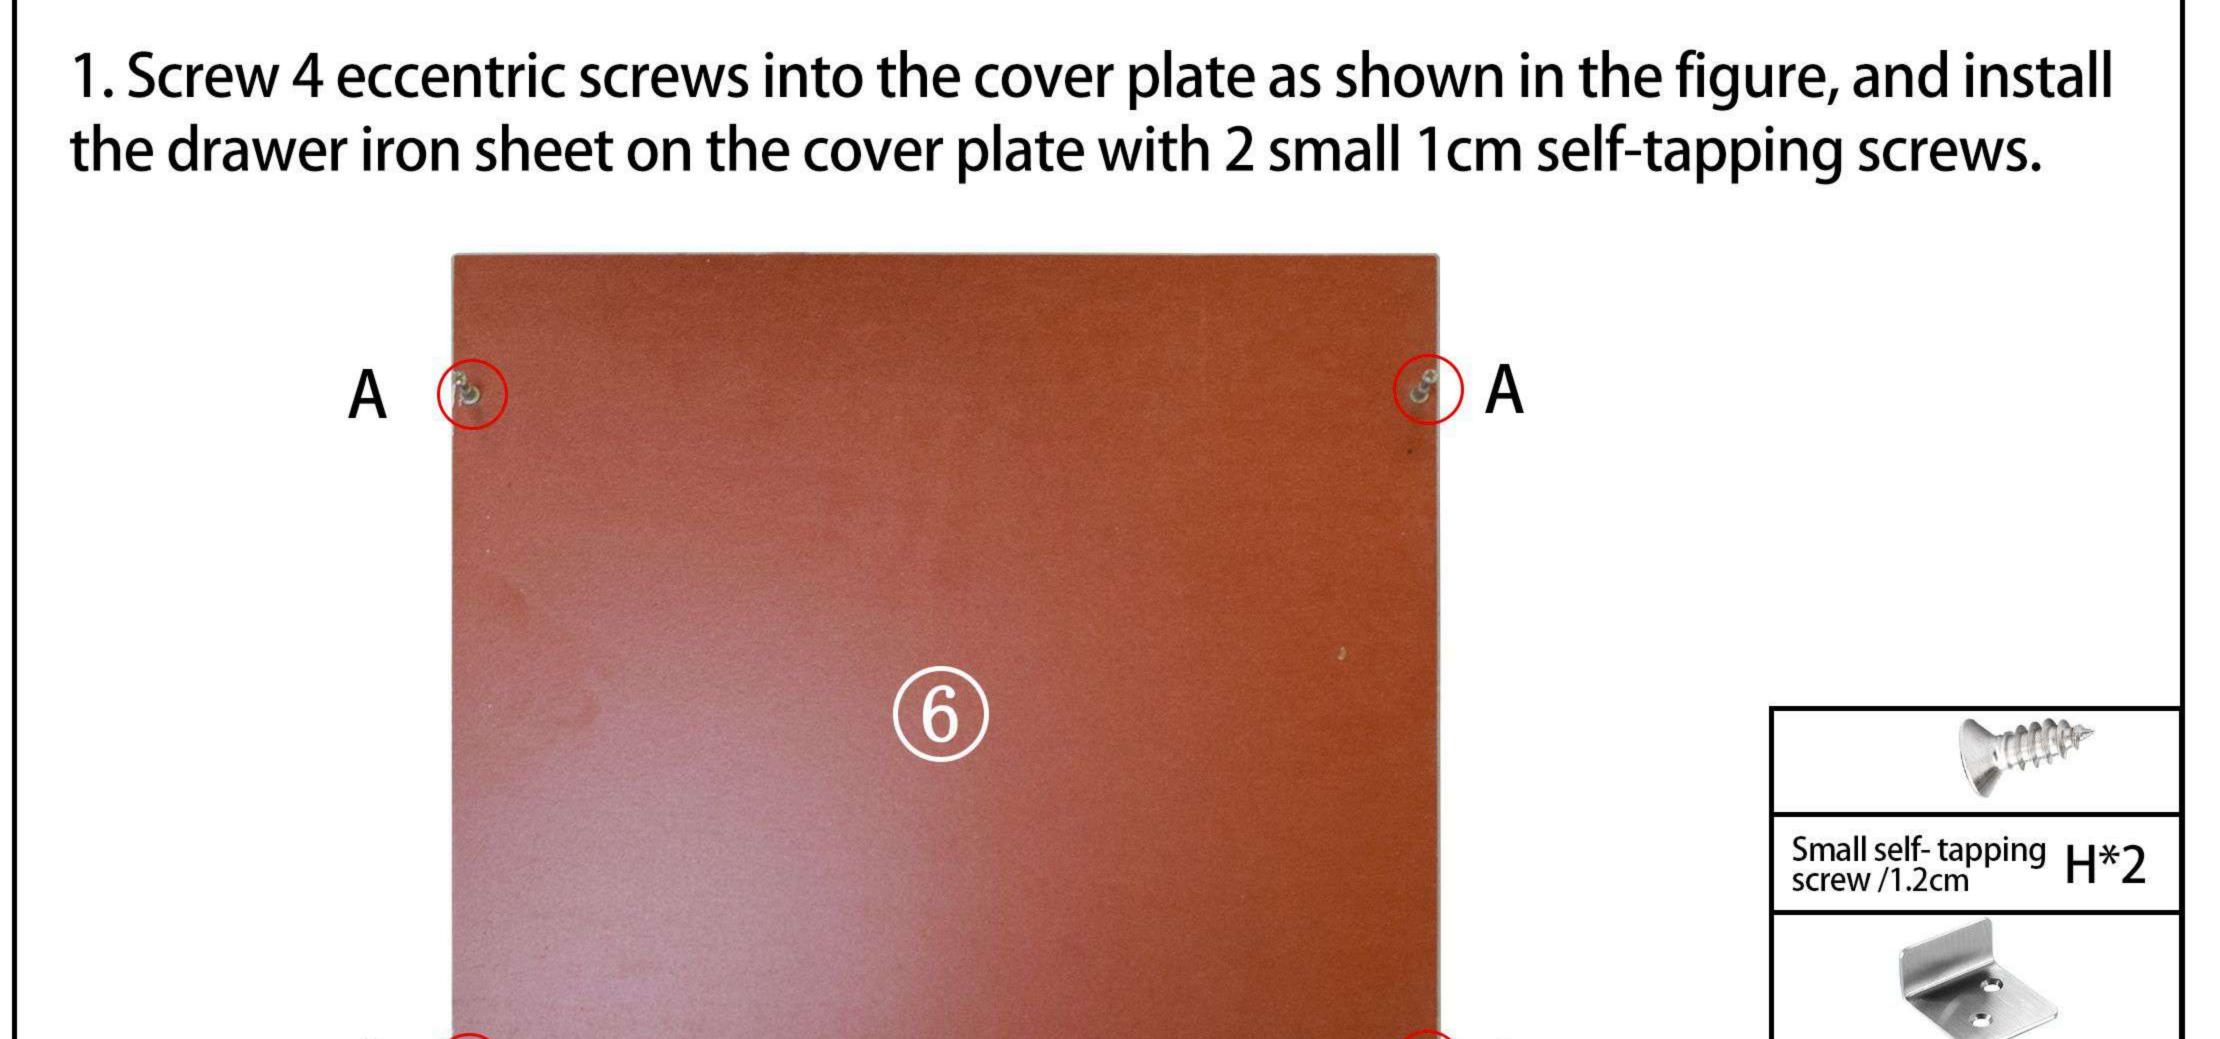


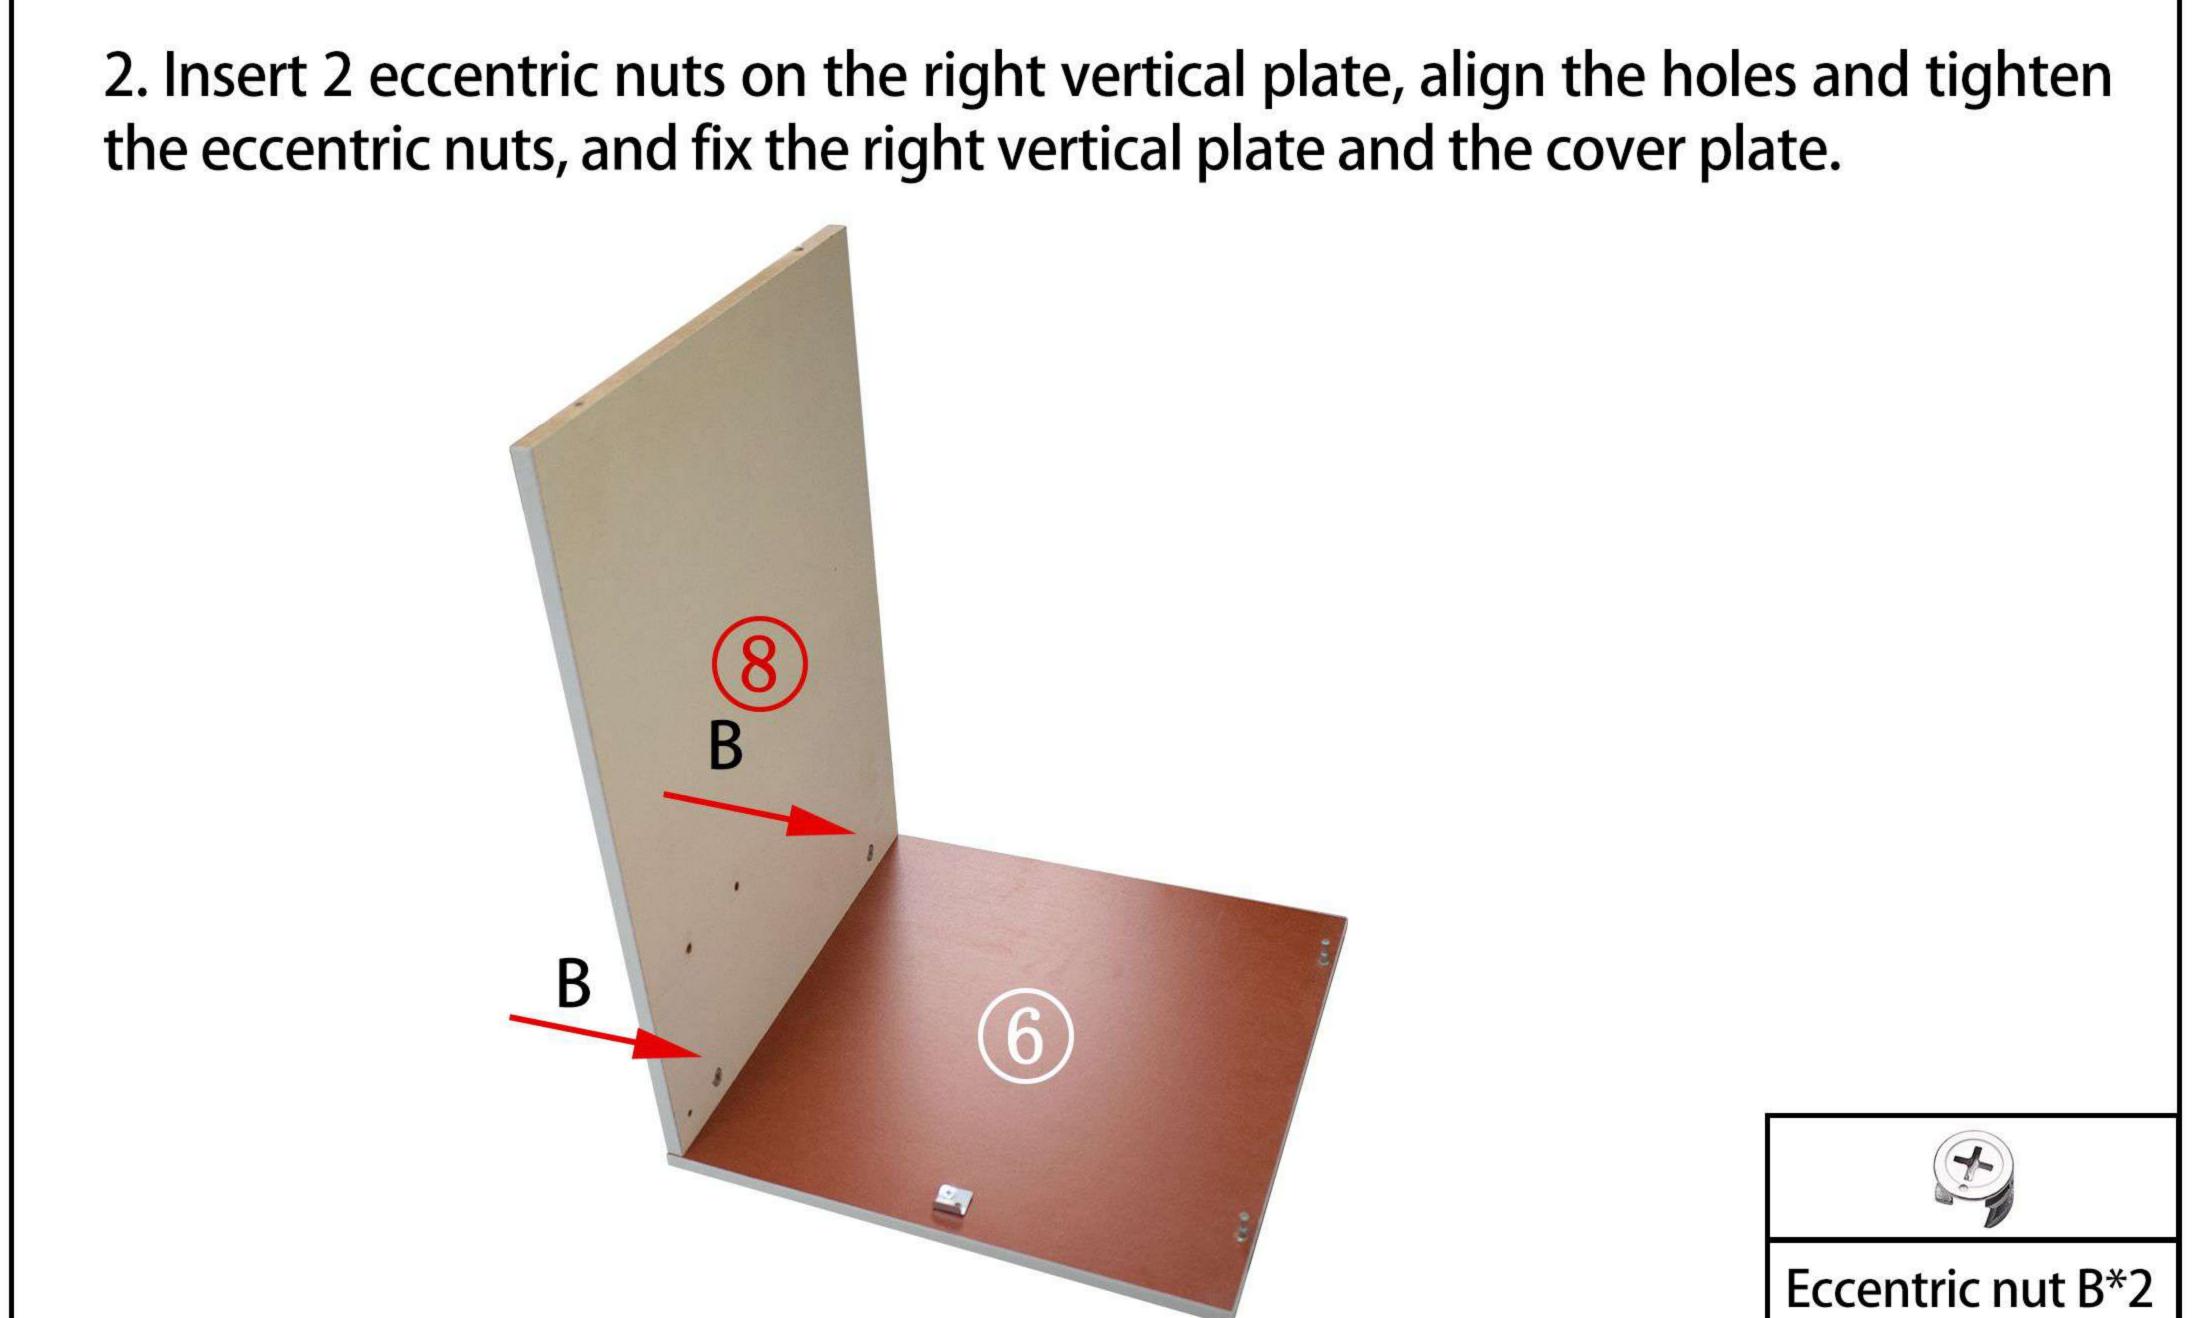

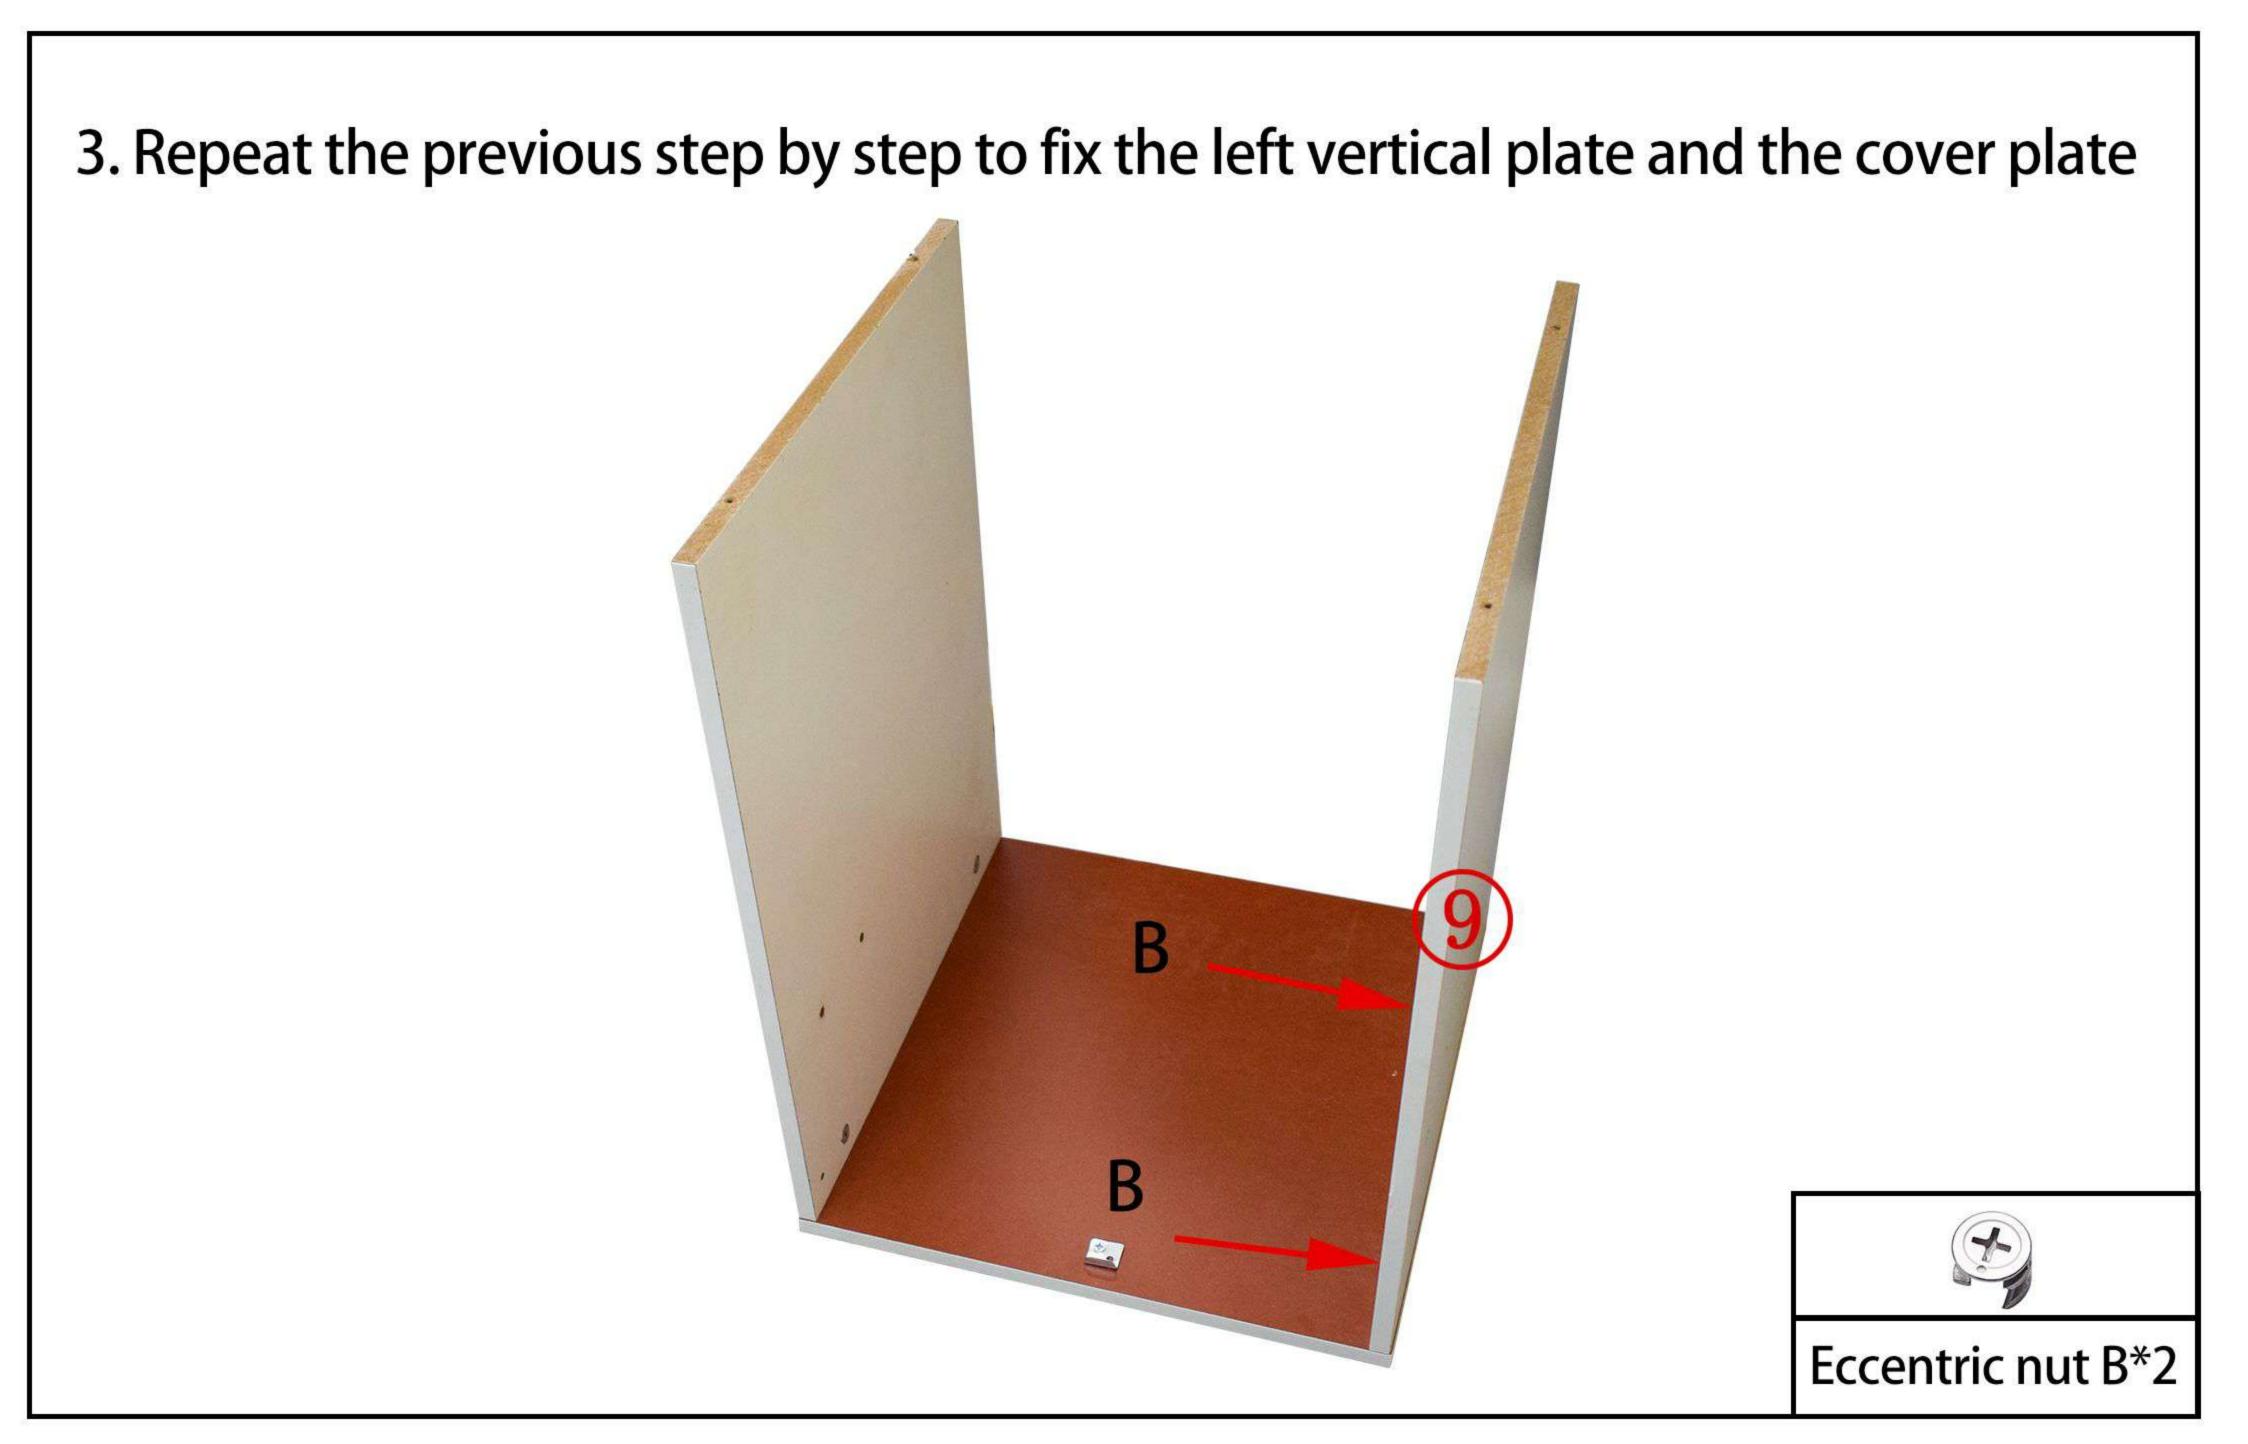

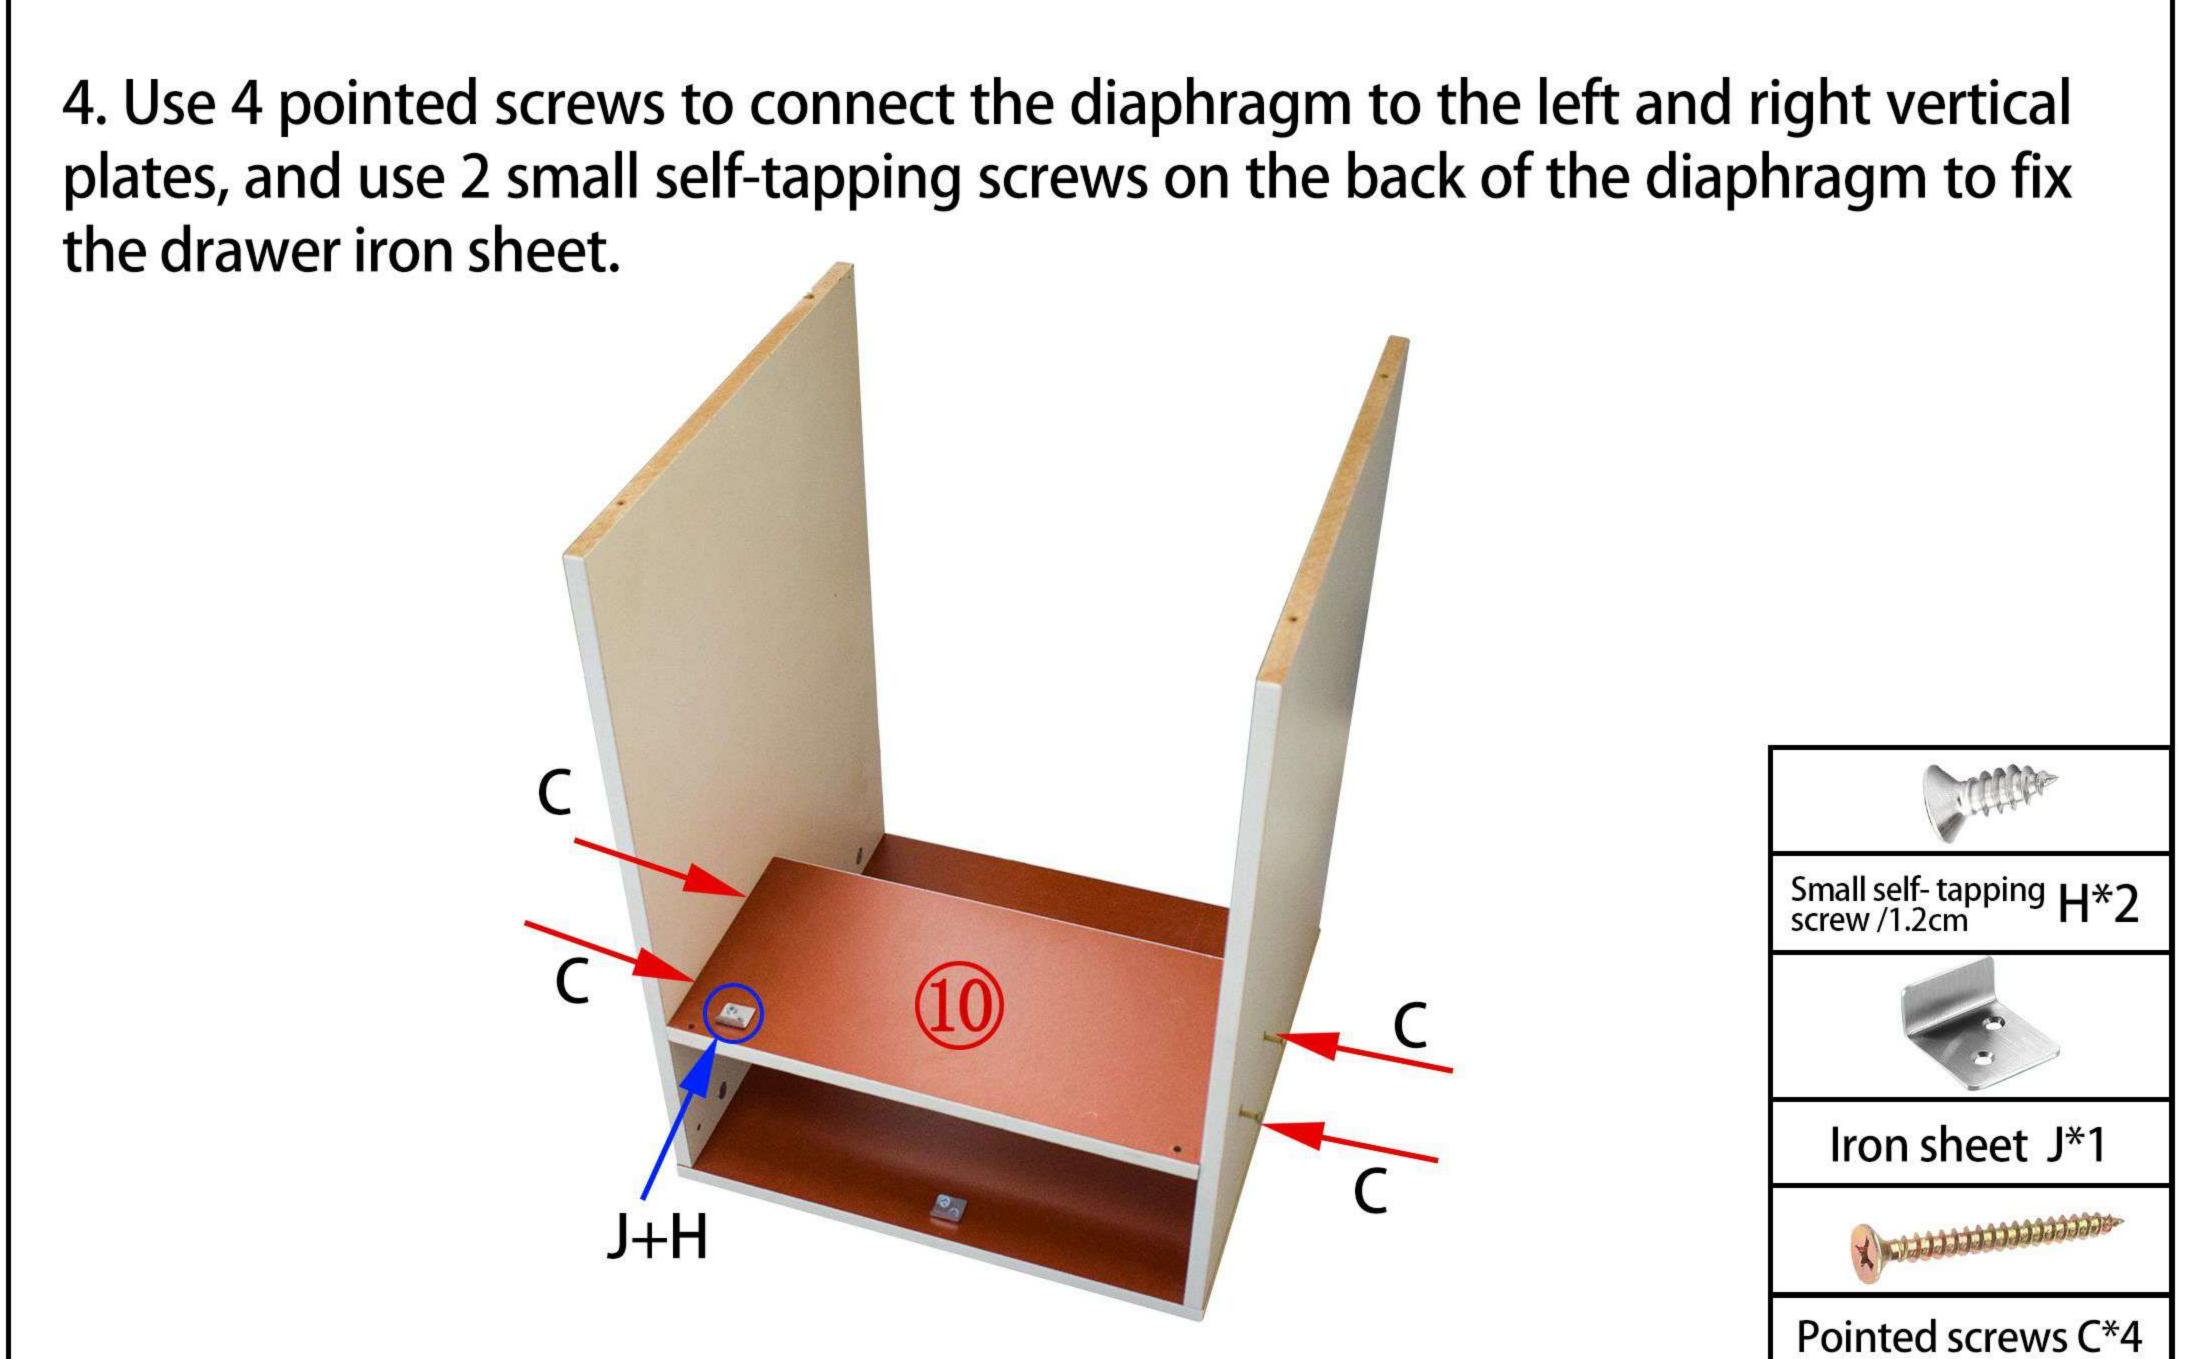

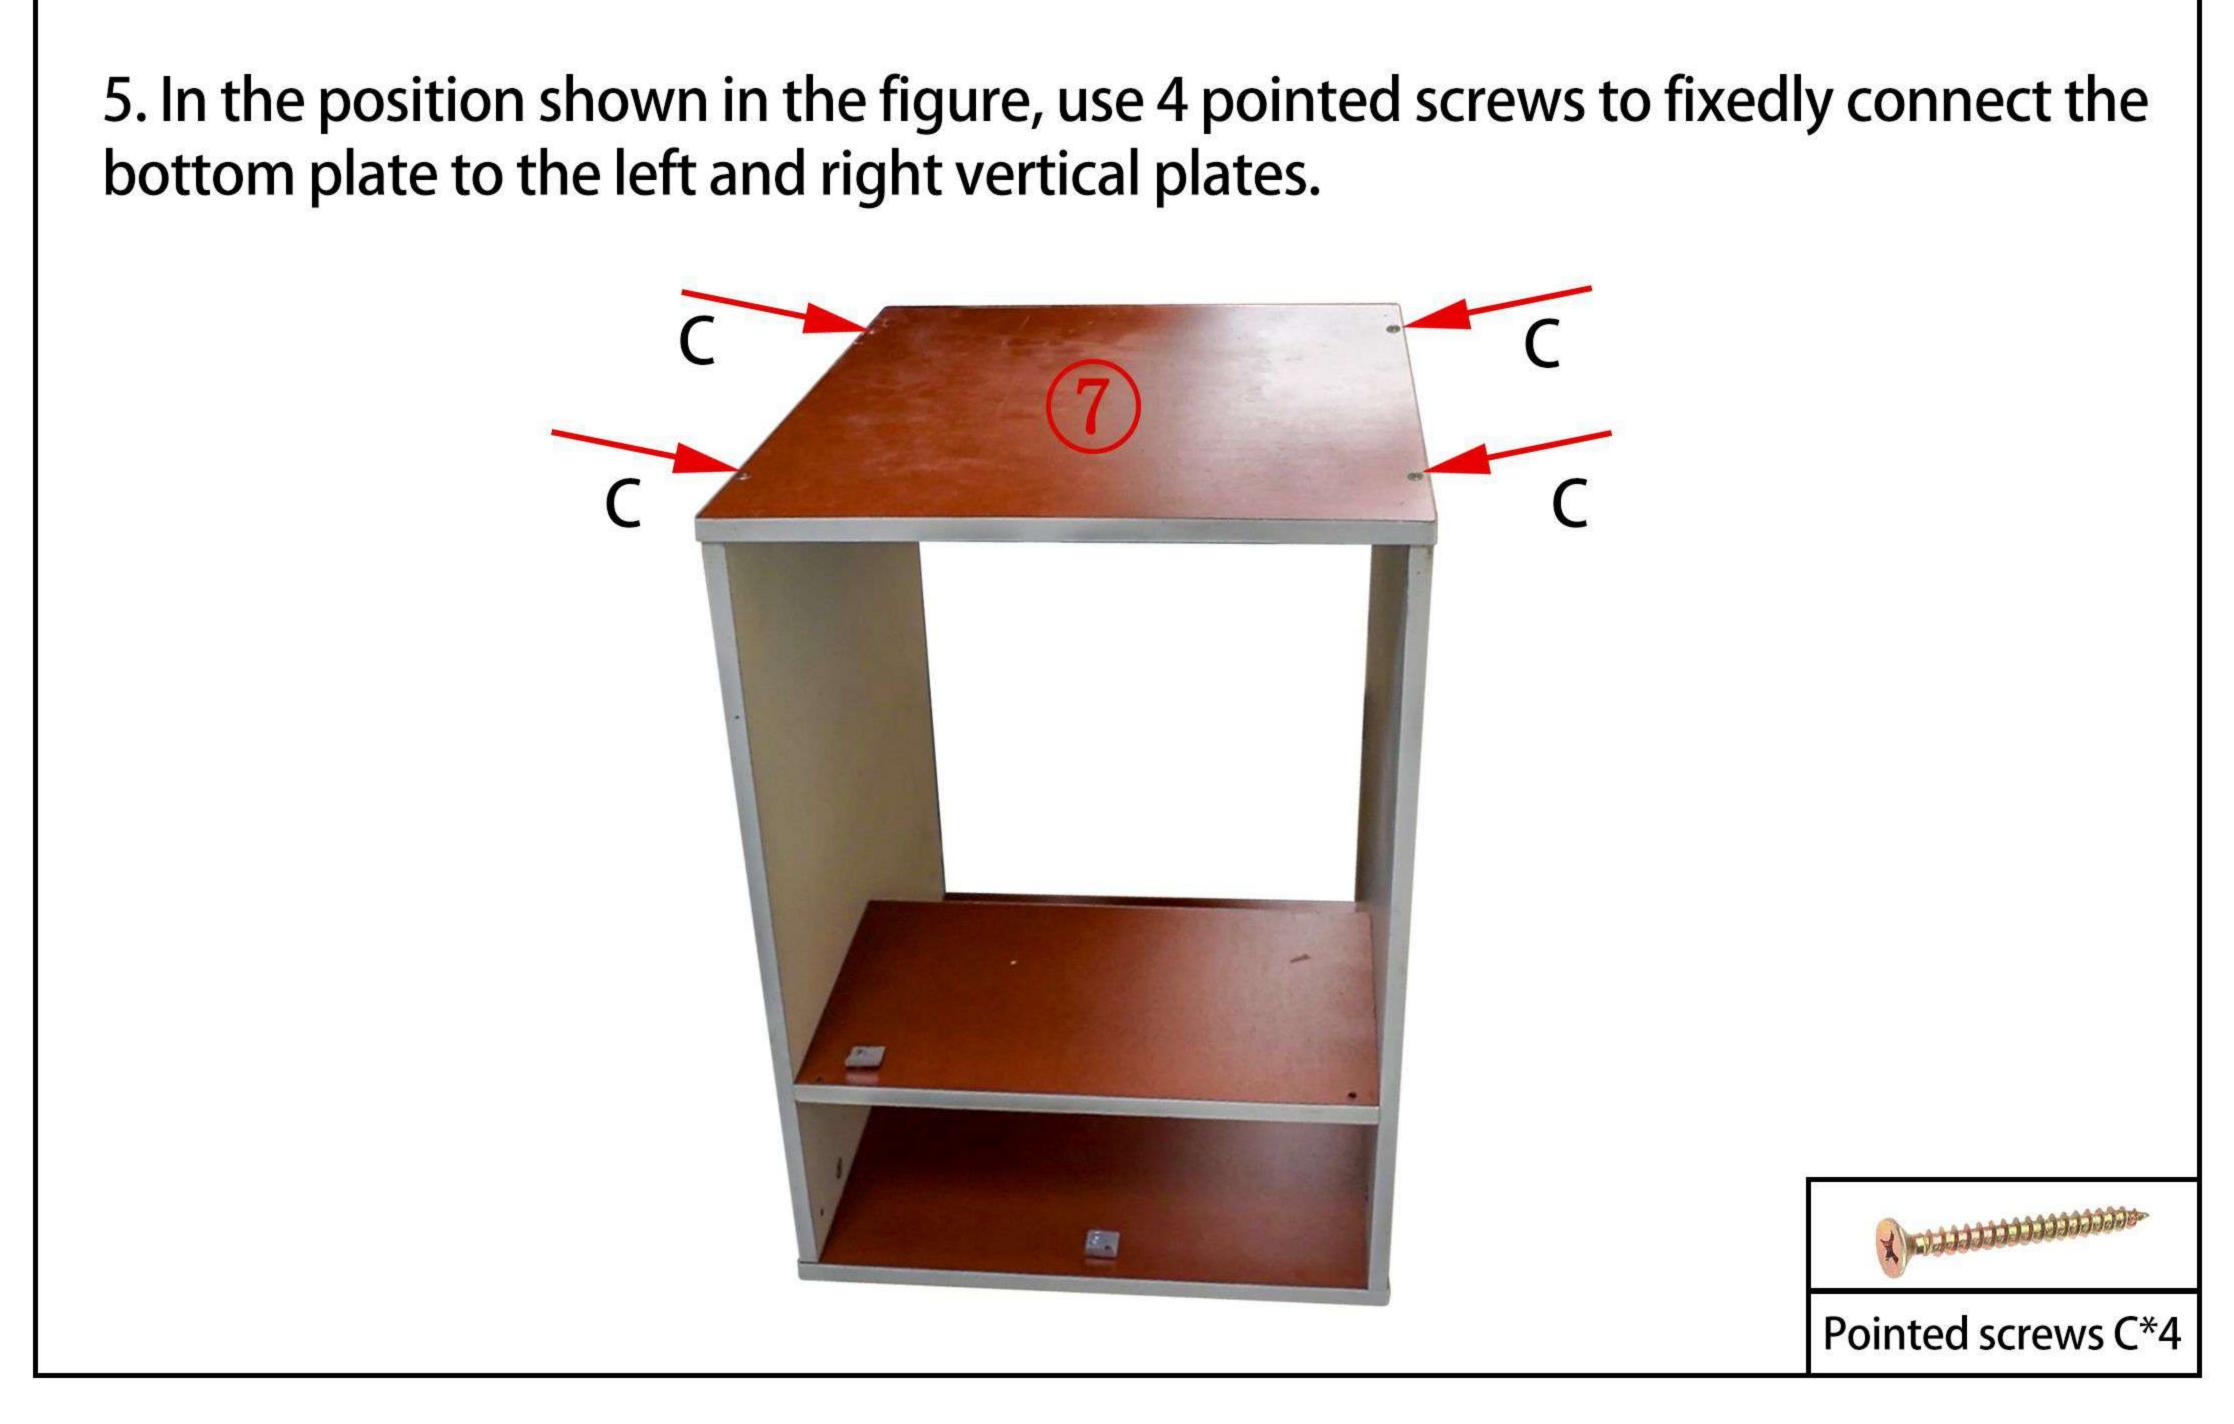

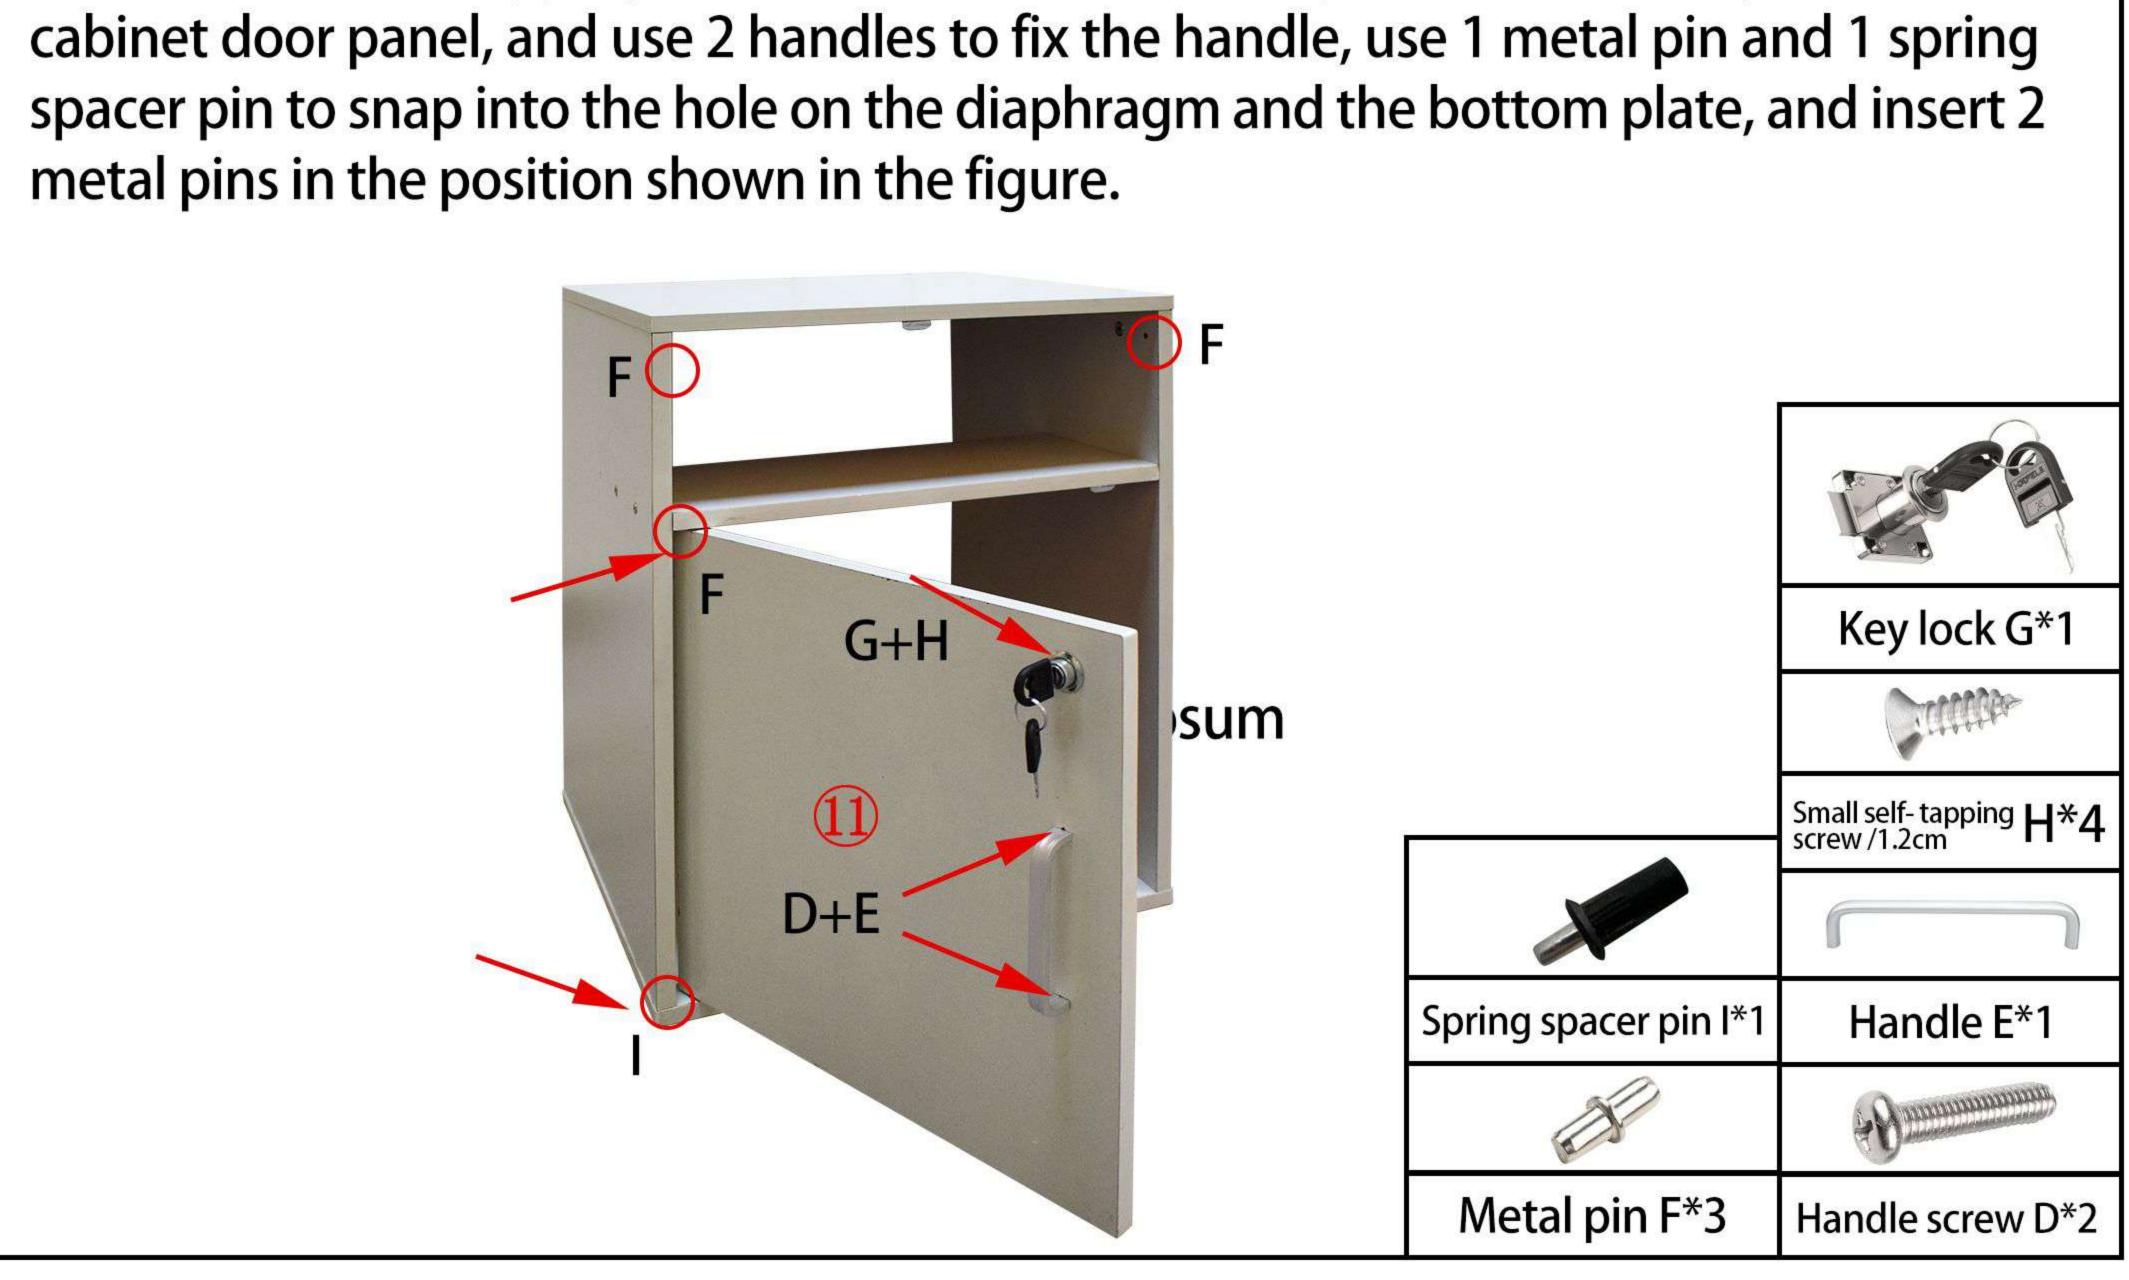

6. Use 4 small self-tapping screws on the cabinet door panel to fix the key lock on the

