












FILE-MDF-CAB-WHT-03-1

Details of parts: (unit CM)



							
A Painted screw *26	B Eccentric screw *12	C Eccentric nut *12	D Metal pin *7	F Small self-tapping screw *26	G Iron sheet *2	H Handle *4	N Handle screw *8
							
Q Small Nails *10	J Key lock *2	K Universal Wheel *4	M Spring pin *1				

Warm Reminder:

- When installing please distinguish the plates according to the drawings.
- When installing, the screws are tightened to seven points first, and then tightened after all the alignment is completed.
- Some panels have a red face, red face down or in.
- The color of the product shall prevail, the instructions is for reference only.



(1)

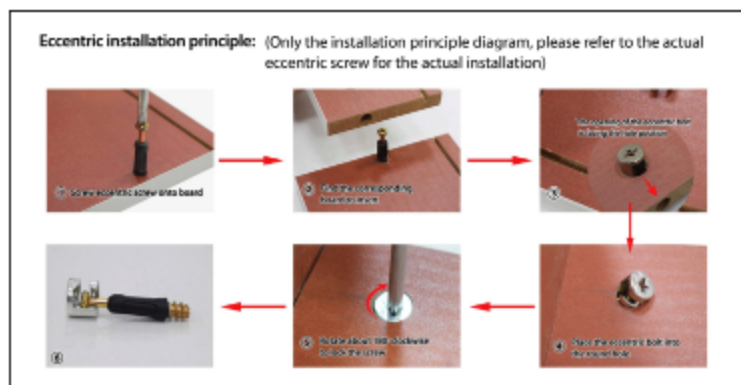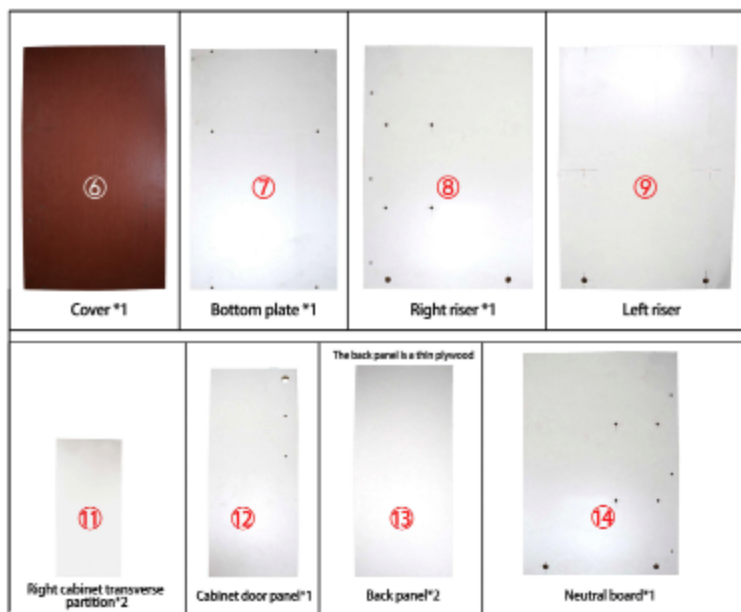

(2)