


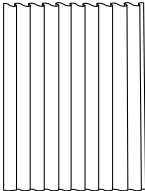


cadence & co.

S-Fold Curtain Installation Instructions

Thank you for purchasing our Cadence & Co. S-Fold Curtain.

What's included in pack		Not included	
 ✔ Curtain Panel	 ✔ Hemming Tape	 ✘ Hooks	 ✘ Track


1. Prepare curtains

Lay your curtain on a flat surface with the face side down with the curtain tape facing up.

2. Inserting curtain hooks

**Hooks are not included with this curtain*


Beginning with the 2nd pocket, insert the curtain hooks into the pocket with the pointed end facing up towards the top of the curtain. Turn the curtain hook over 180° so the pointed end of the curtain hook is now facing downwards.

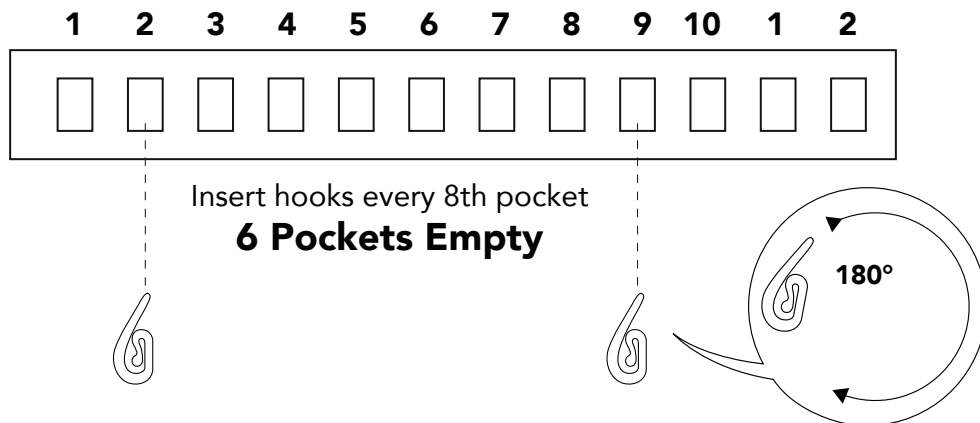

Note: Creating the perfect folds.

Remember that each fold must have 2 sides, and to create 2 sides there needs to be 2 hooks. To ensure perfect folds from start to finish you will need to use an even number of hooks throughout the width of the curtain.

As the tape pockets may be slightly uneven, you will need to adjust the curtain hook positioning slightly.

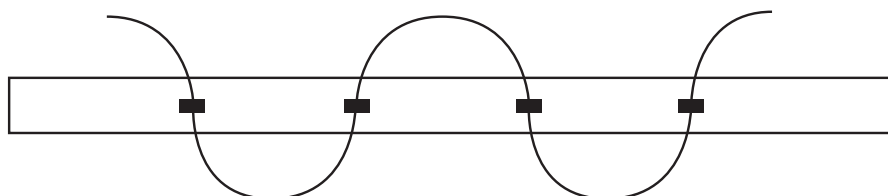

3. Hanging your curtains

We recommend 2 people hang the S-Fold curtain - one person to insert the hooks and the other person holding the curtain.


With the fabric side of the curtains facing you, begin at the FIXED END of the curtain track. Insert the pointed end of the curtain hook through the hole in the S-Fold carriers ensuring that the pointed section of the hook is pointing in a downwards direction when finished.

Move along the track and insert all curtain hooks into the carriers


4. Adjust the curtain folds

Starting at one end adjust each curtain fold so that the entire curtain forms a series of perfect waves.

About 10cm depth

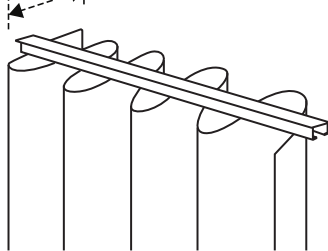

✓ **Correct**

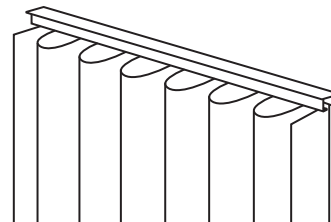

✗ **Incorrect**

5. Hemming your curtain

NOTE: Your S-Fold curtains are already hemmed with a 280cm drop. We recommend hanging the S-Fold curtains on the track for 1 week to help creases naturally relax before hemming. Follow the care instructions on the packaging to iron or steam.

This S-Fold curtain pack contains a roll of hemming tape.


Simply pin or mark with chalk your desired curtain length while the curtain is hanging.

You may need to cut excess fabric at this point as a maximum hem of 10cm is recommended.

Place the hemming tape in between the layers of fabric, making sure the fabric is completely covering the tape. Iron flat until the fabric adheres to itself.

Important: *the tape melts becoming glue and is hot when melted. Please exercise caution to avoid burns.*

You can remove the curtain from the track or iron on the hemming tape while the curtain is hanging, using an ironing board.

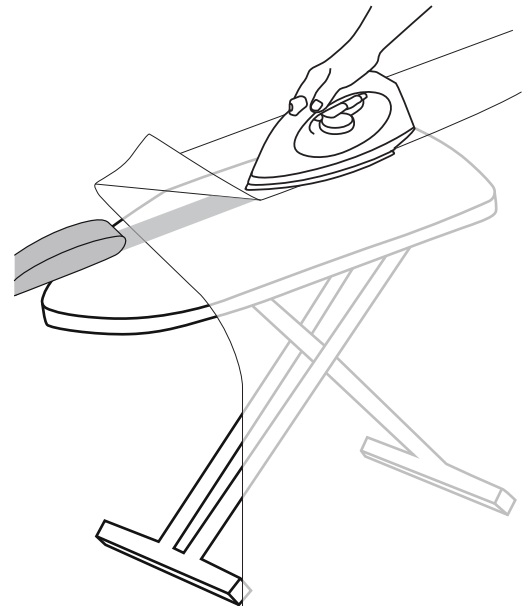

Fabric Warning: When ironing blackout curtains with coatings, always iron the fabric side only. Never iron the coated side, as this may damage the coating.