


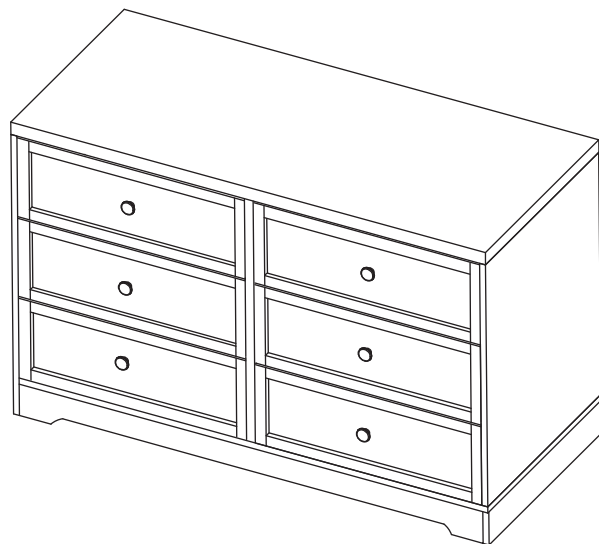


CHEST OF DRAWERS

MODEL:COD-HAMP-6D-WH





















ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.





Two persons and
tools required for
assembly

HARDWARE



A	x40	B	x4	C	x12	D	X54	E	x36	F	x2
											
7x35mm		Ø6x50mm		Ø6x30mm		M4x40mm		M3x12mm		M4x30mm	
G	x12	H	x16	I	x20	J	x2	K	x2	L	x6
											
15x12mm				M3x14mm							
M	x6	N	x18	O	x6	P	x24	Q	x2	R	x12
											
M6		M4x10mm				12x10mm		M4x14mm			

PARTS

Wipe with dry cloths

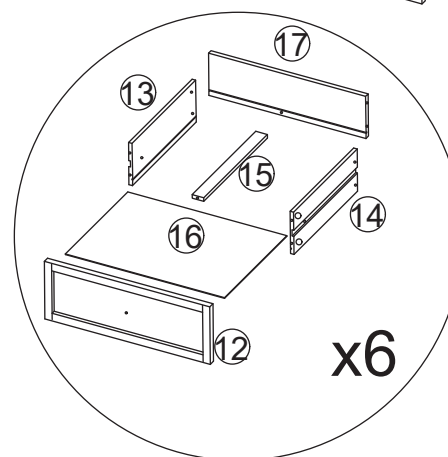
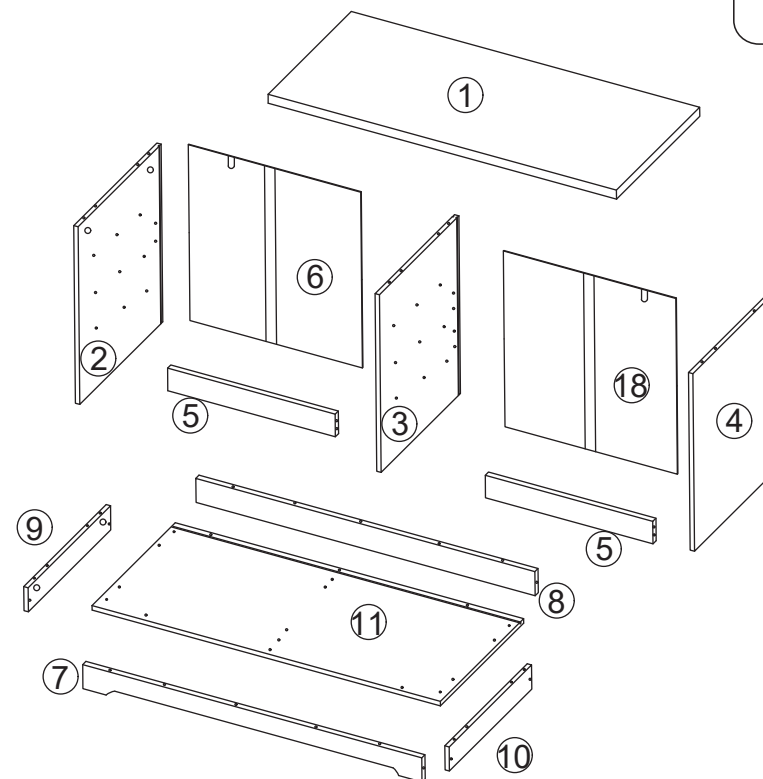


1

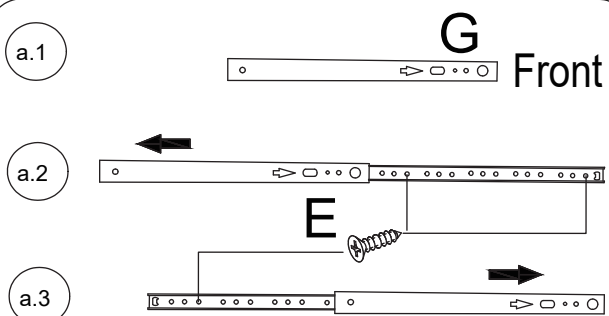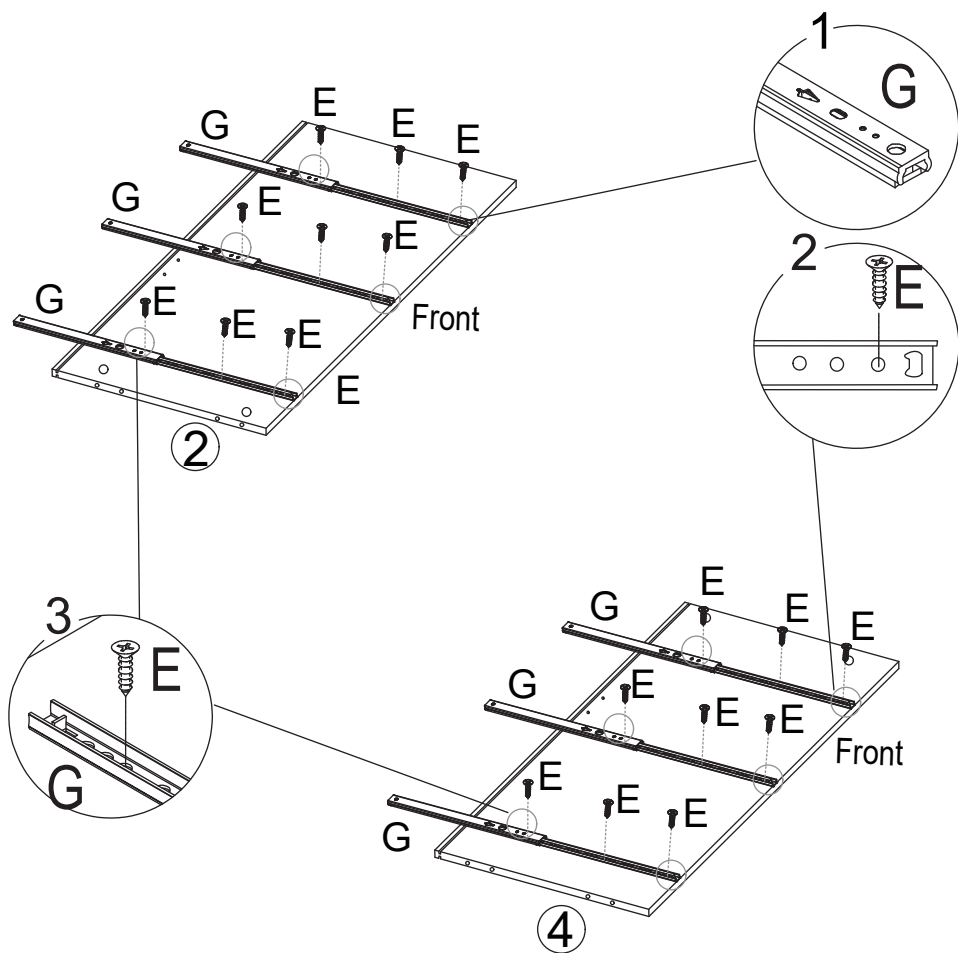


E	X18	G	x6
M3x12mm			

2

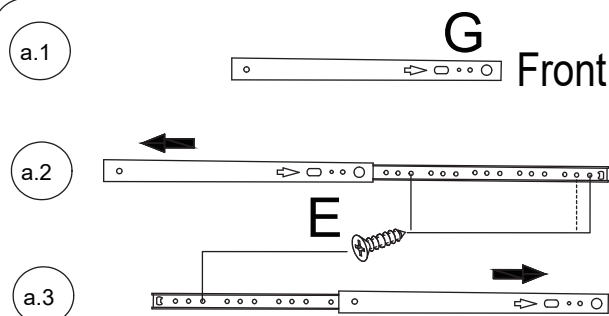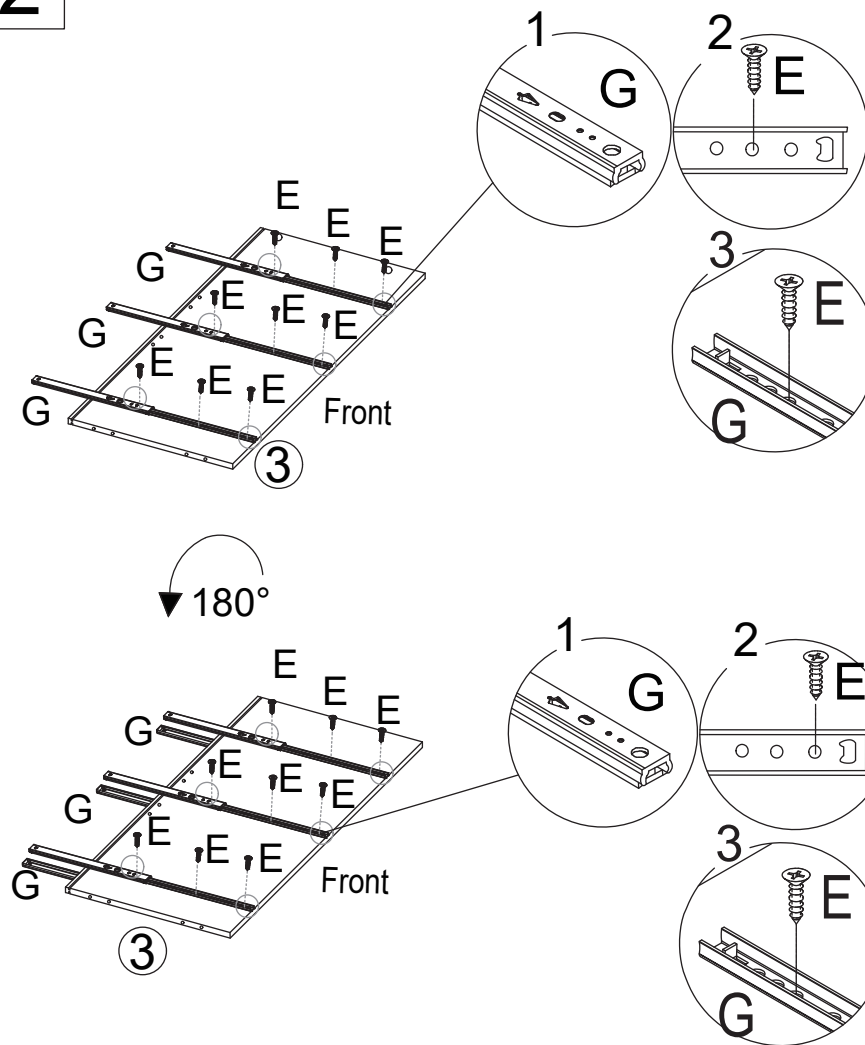


E	X18	G	x6
M3x12mm			


3

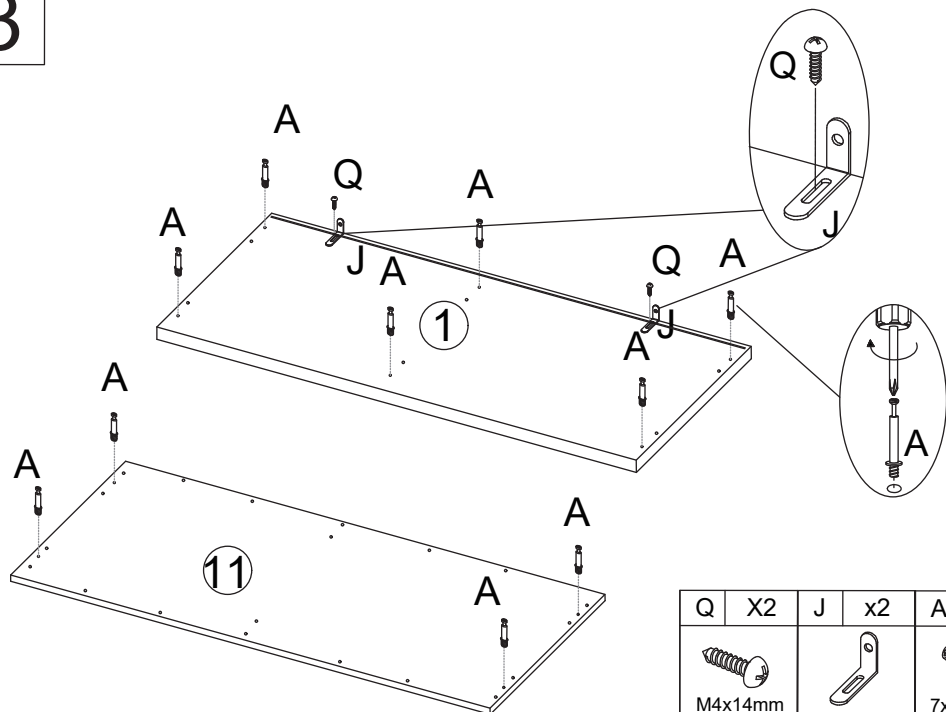


5

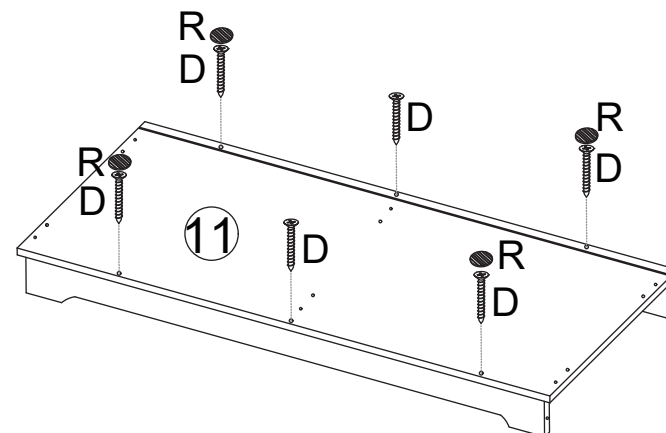


4

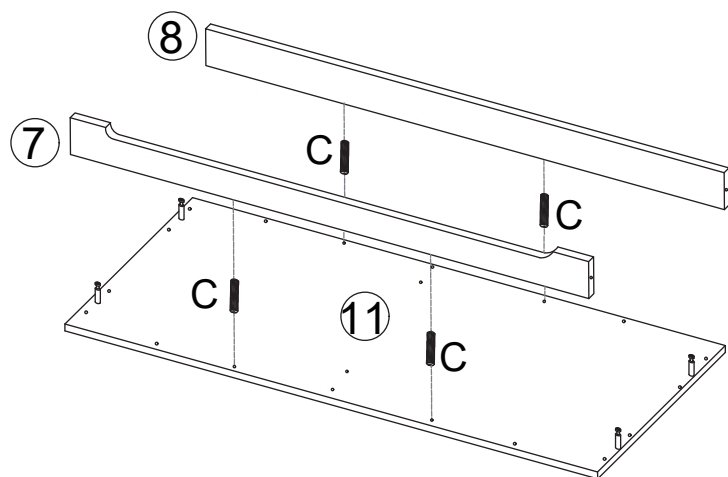

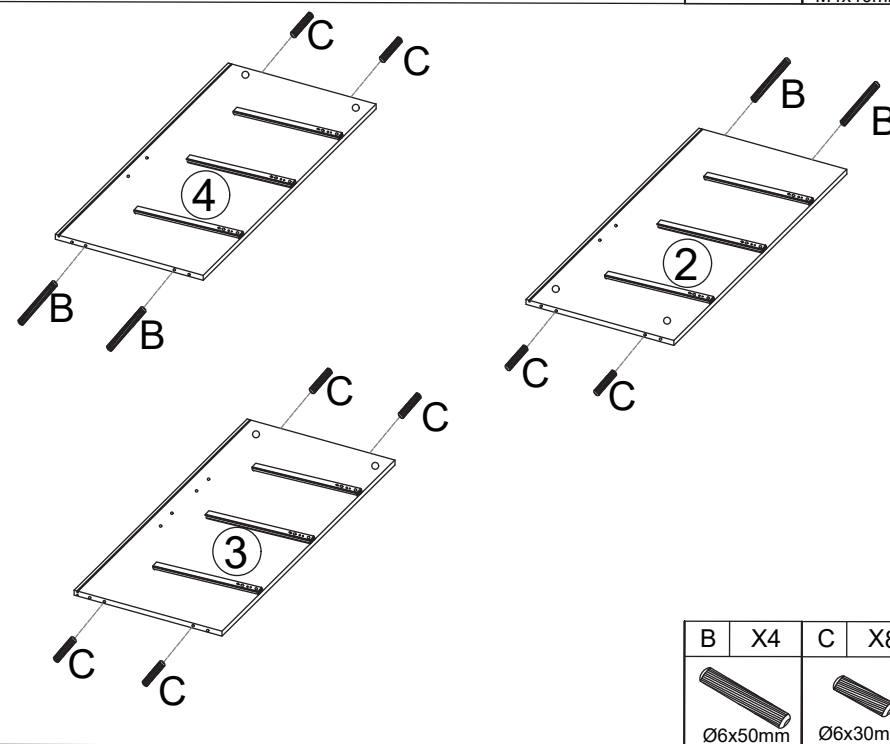

6

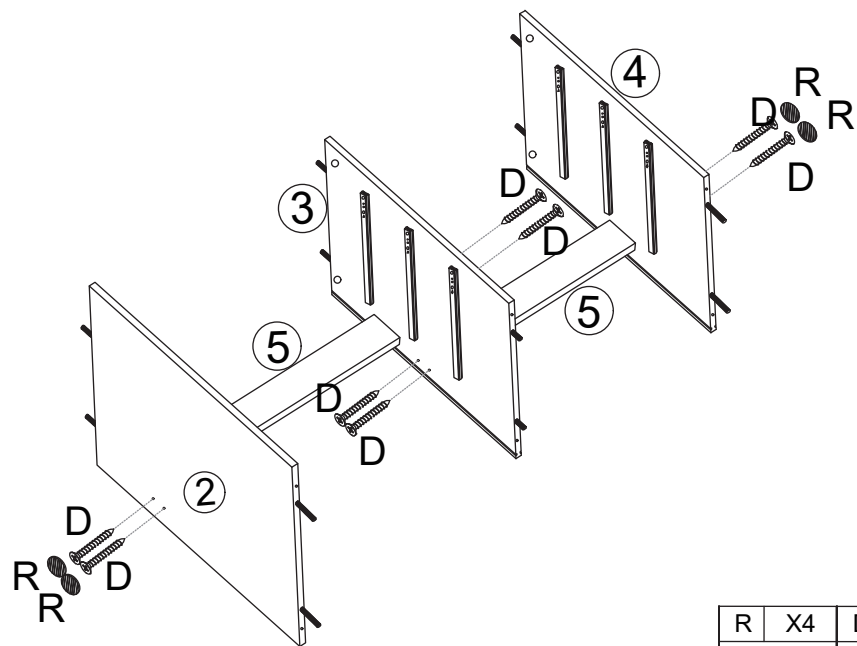



7




R	X4	D	X8
			
		M4x40mm	


9

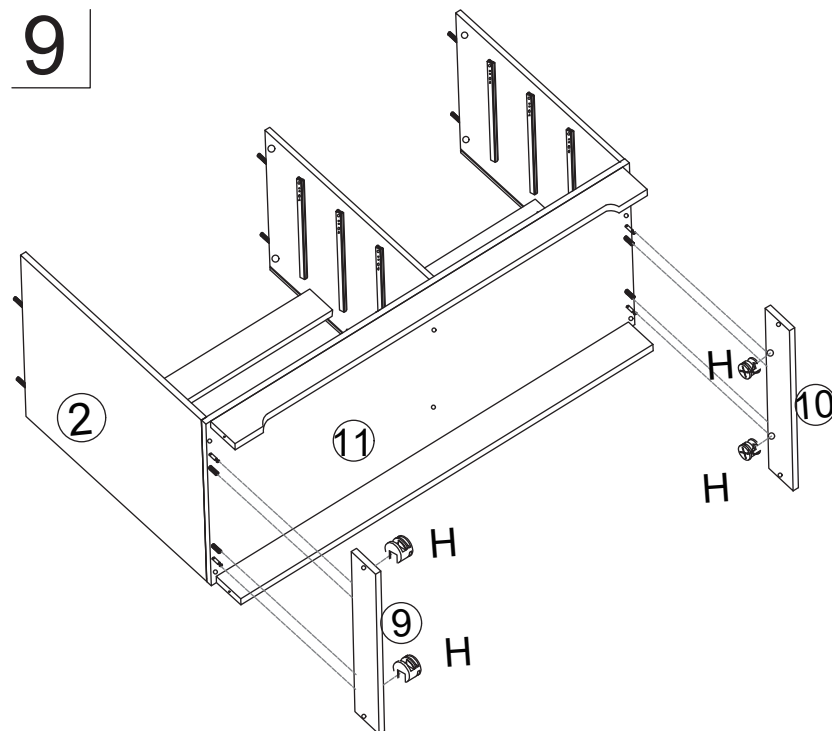


H	x4
	
	15x12mm

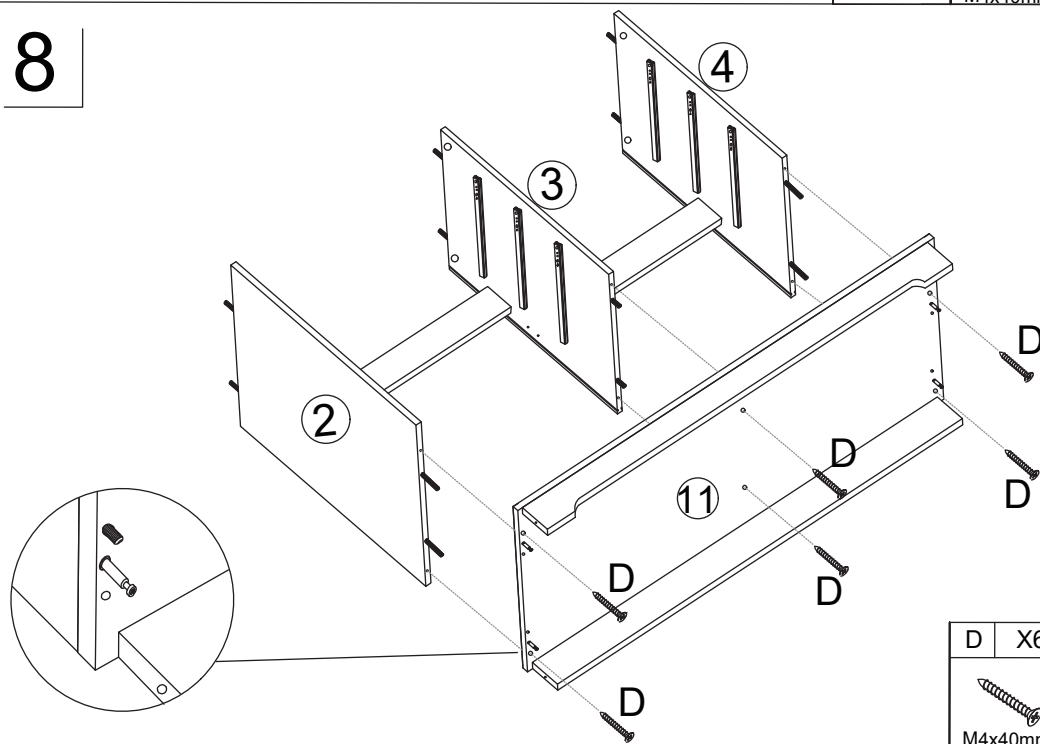


8




D	X6
	
	M4x40mm

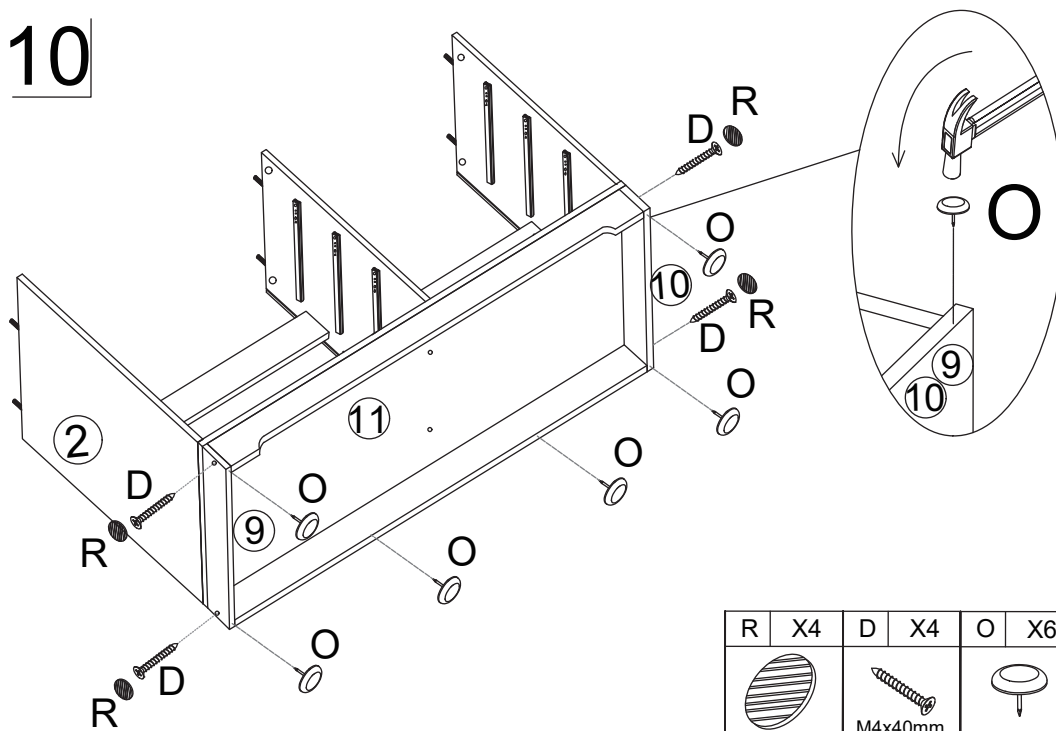10







R	X4	D	X4	O	X6
					
		M4x40mm			

11


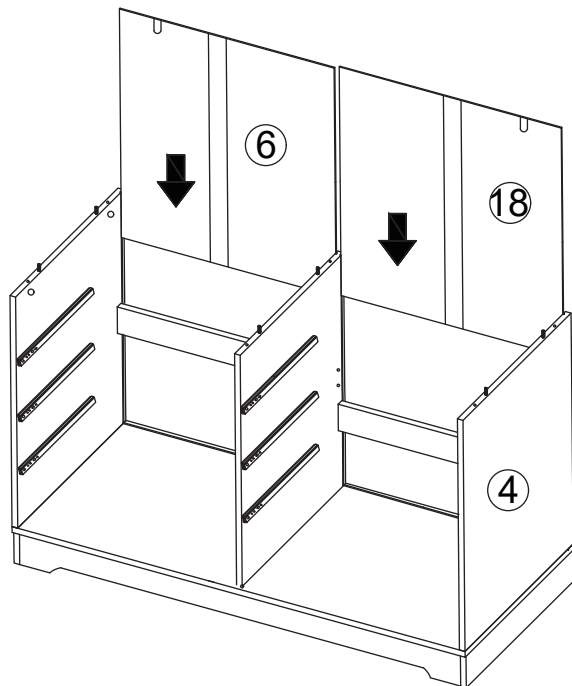


12


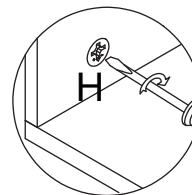
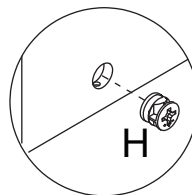
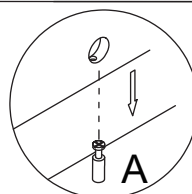
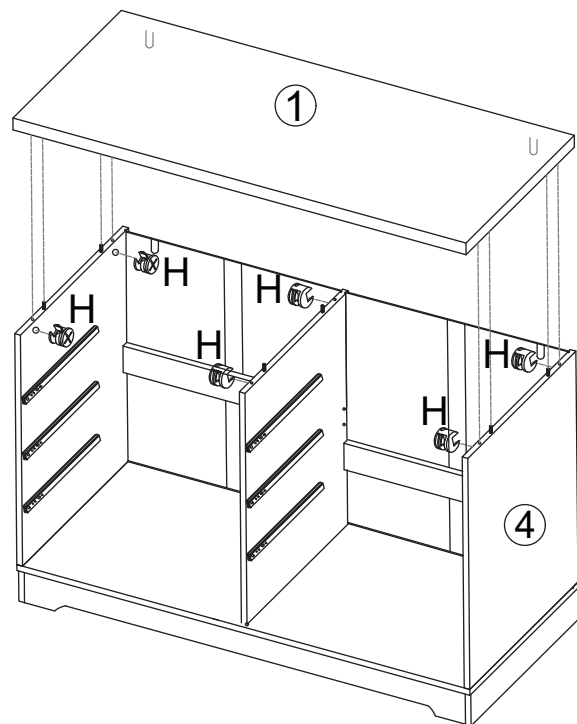


H	x6
	15x12mm

13

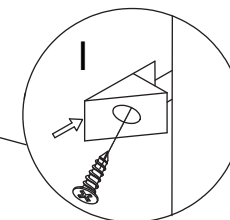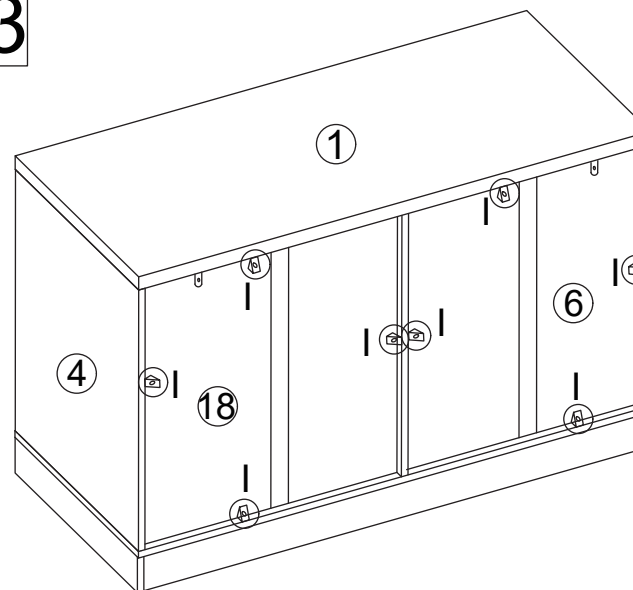


Pre-drill hole in wall

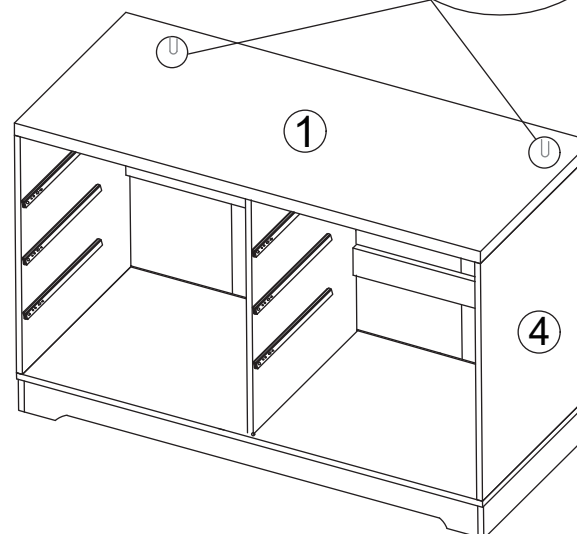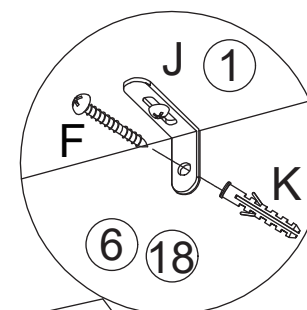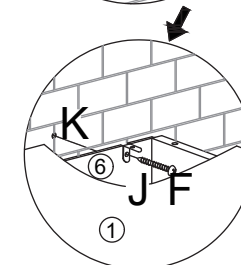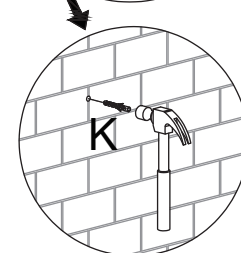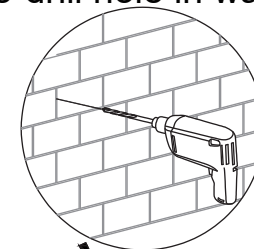

I	x8	F	x2	K	x2
	M3x14mm		M4x30mm		


14

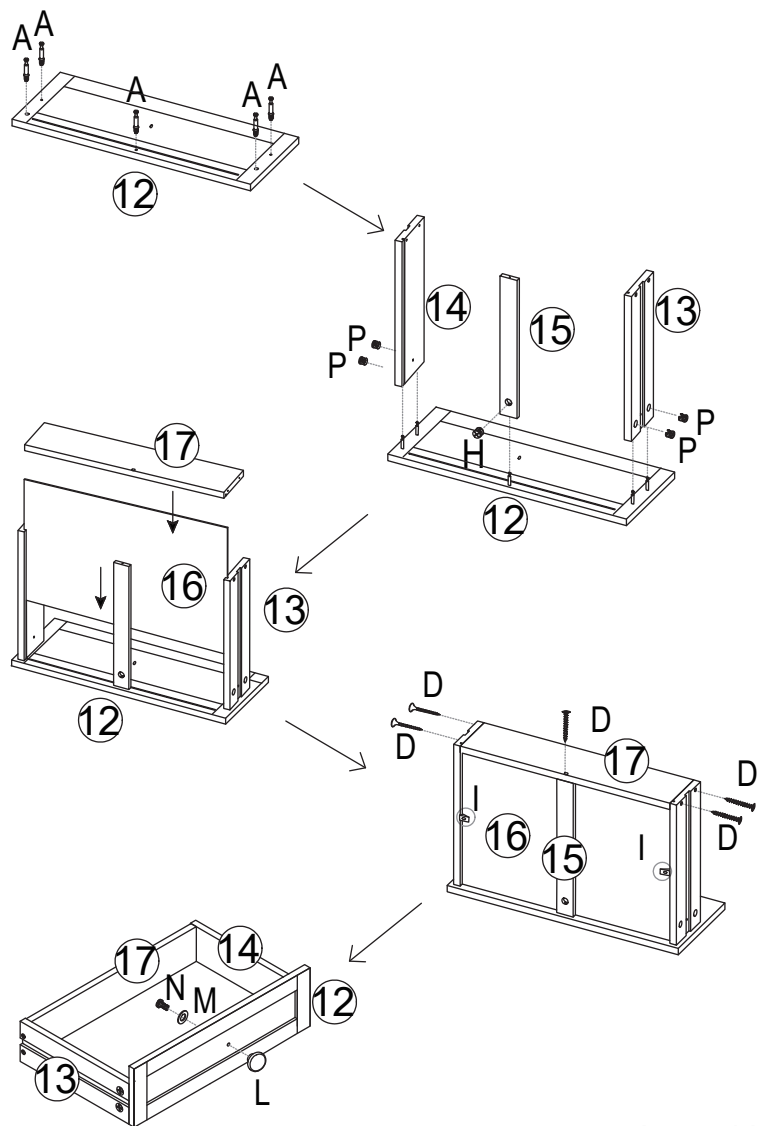

Assemble 6 drawers

H	x6	P	x24	A	x30	D	x30	I	x12	N	x6	L	x6	M	x6
15x12mm		12x10mm		7x35mm		M4x40mm		M3x14mm		M4x10mm				M6	


15

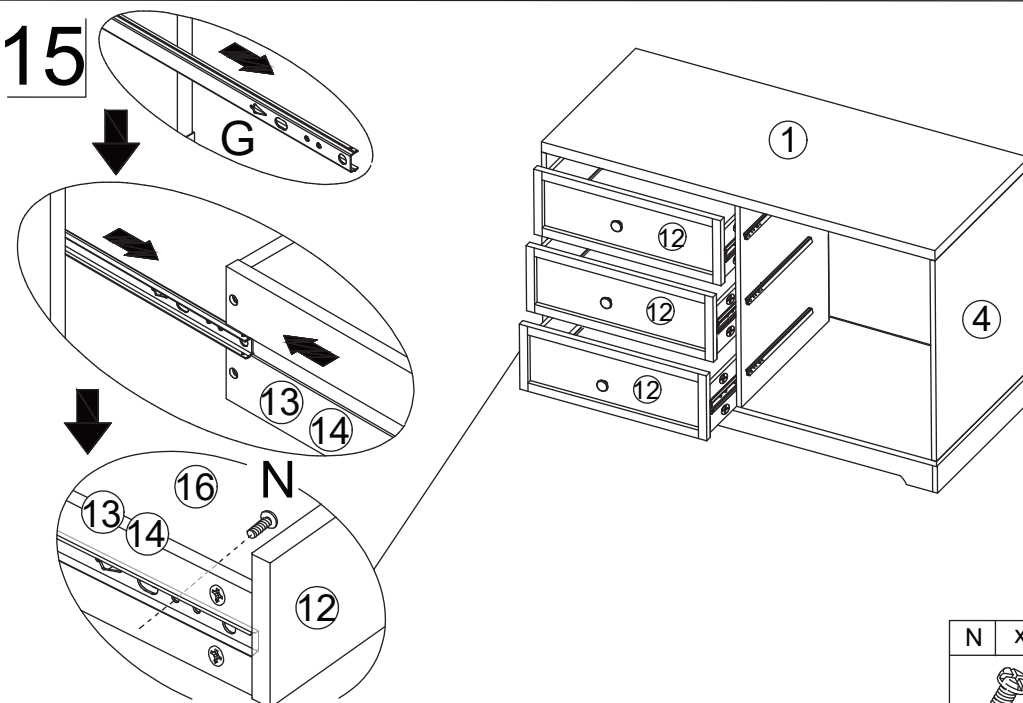

Screw from the inside of the drawers

N	x6
M4x10mm	

16

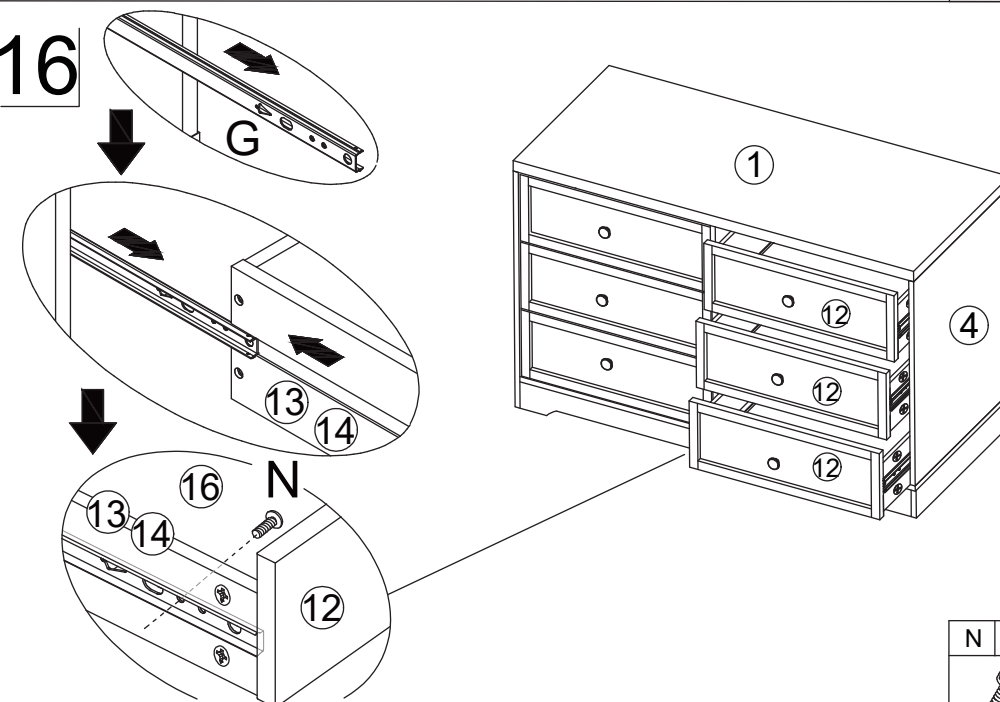

Screw from the inside of the drawers

N	x6
M4x10mm	