


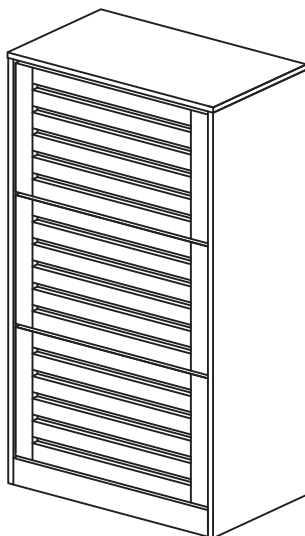

SHOE STORAGE CABINET

MODEL:SS-AND-3M-WH/WD


















ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and tools required for assembly

HARDWARE


A	x4	B	x4	C	x4	D	x16	E	x16	F	x2
											
7x35mm		15x12mm		Ø6x30mm		M4x40mm					
G	x2	H	x48	I	x4	J	x6	K	x6	L	x6
											
M4x30mm		M3.5x14mm									
M	x6	N	x3	O	x3						
											
M4x10mm											


PARTS

Wipe with dry cloths

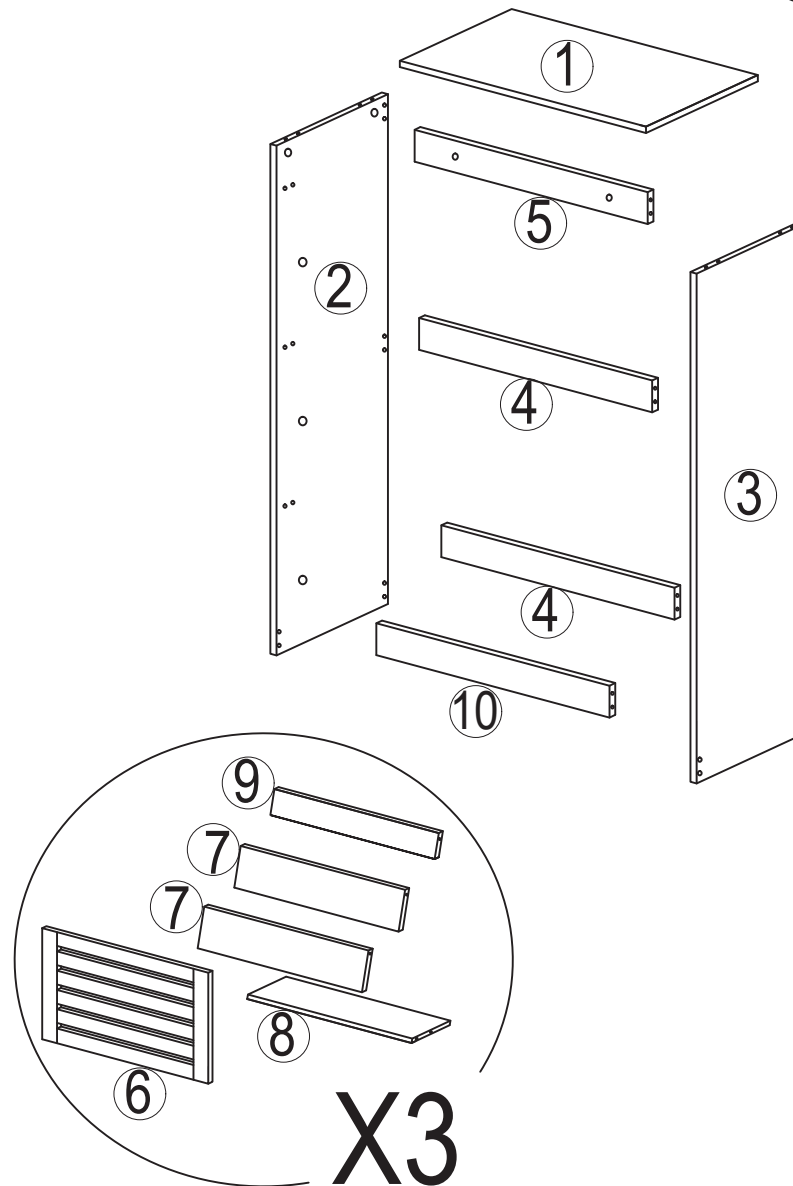




1

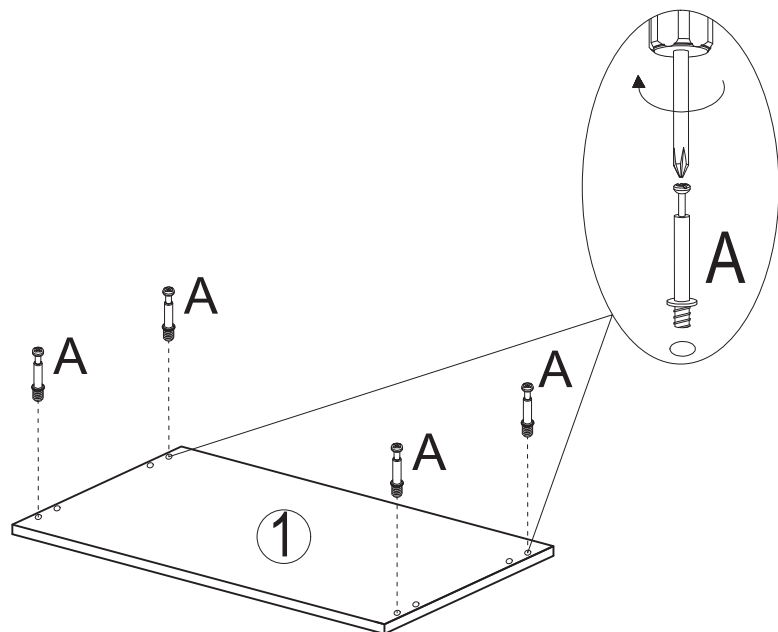


A	x4
 7x35mm	


3

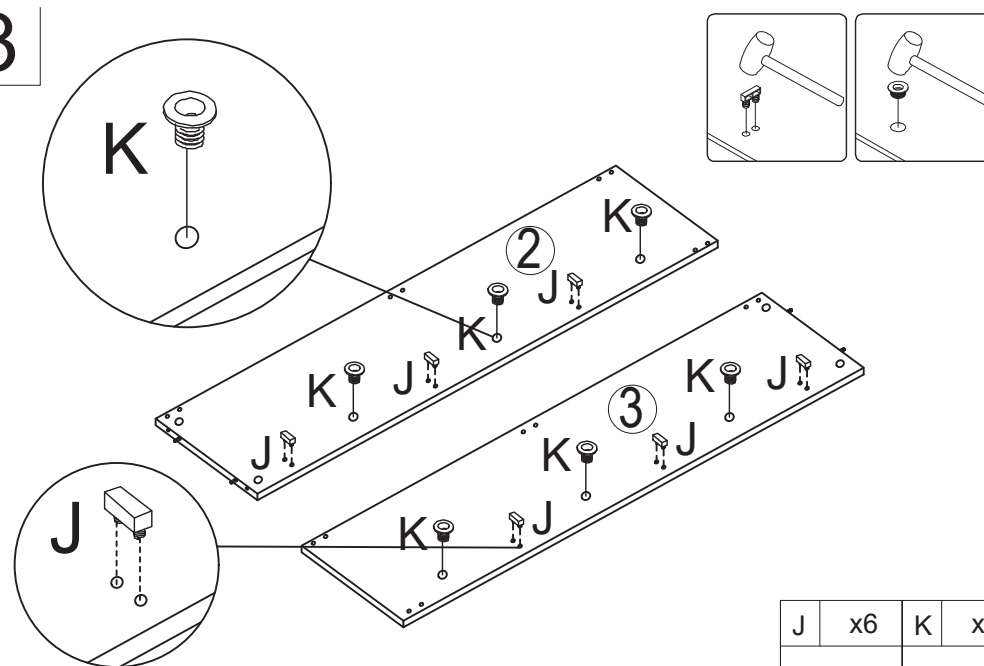


J	x6	K	x6
 J		 K	

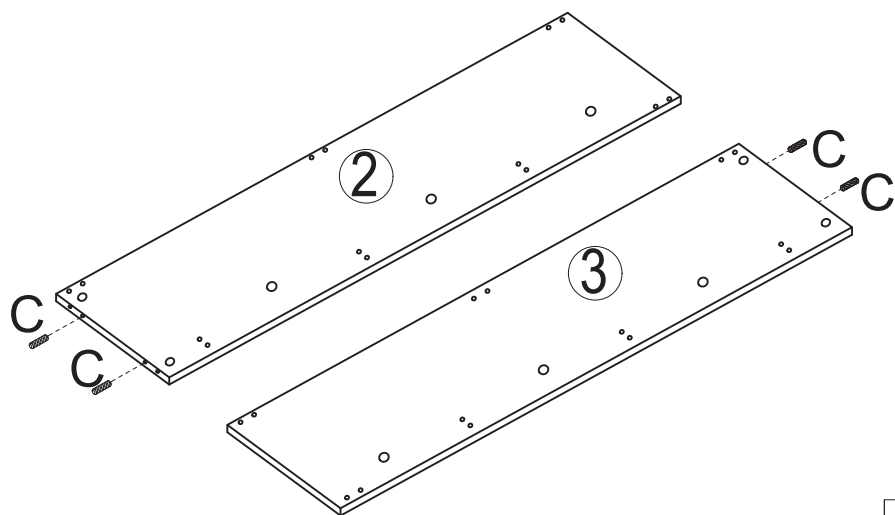

2







C	x4
 Ø6x30mm	

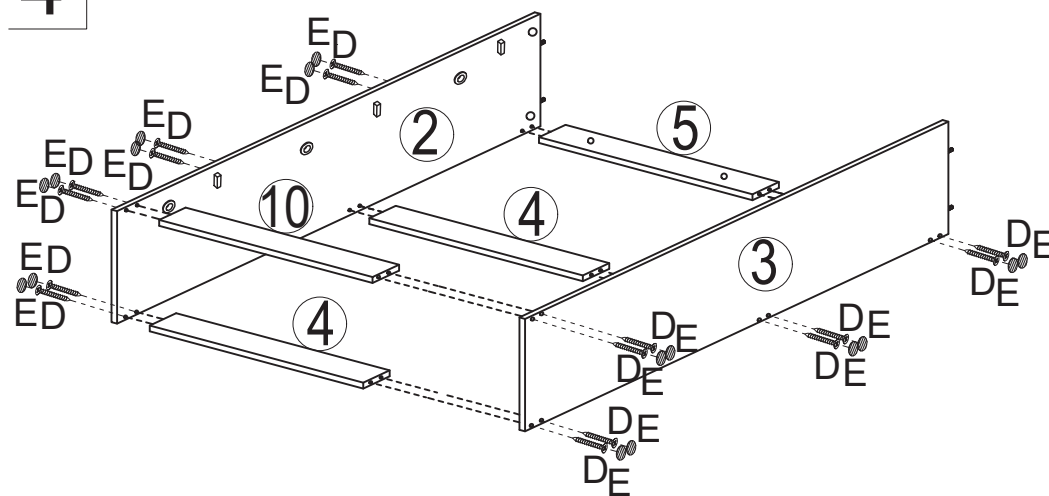

4




D	x16	E	x16
 M4x40mm		 E	

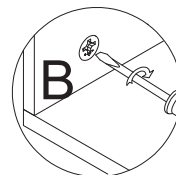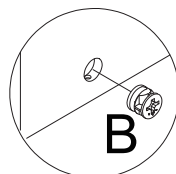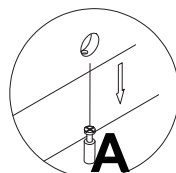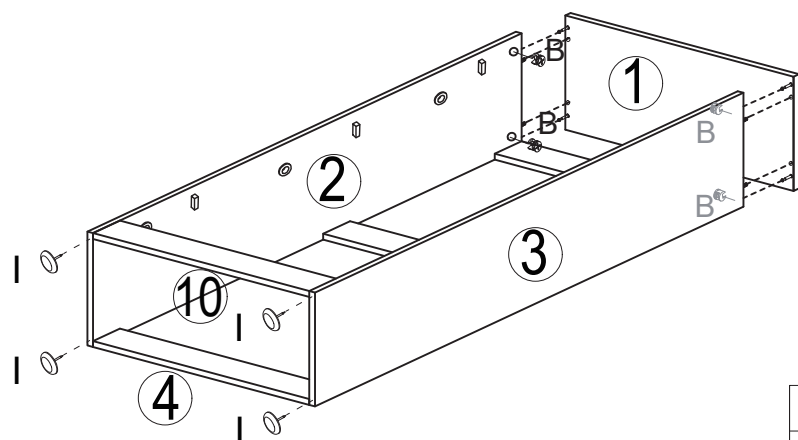
5




I	x4	B	x4
			
			15x12mm

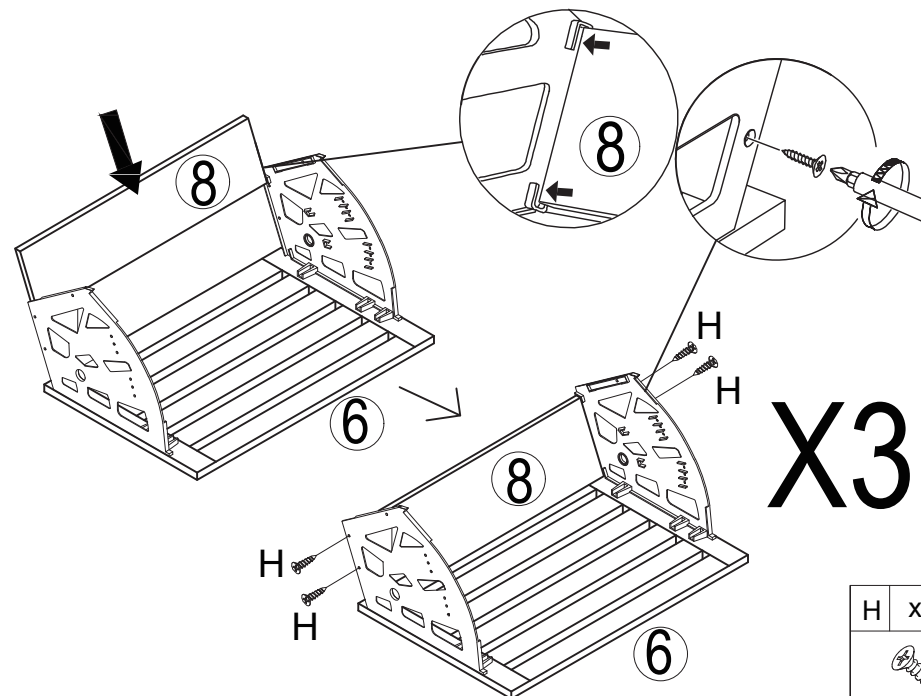


7




H	x12
	
	M3.5x14mm

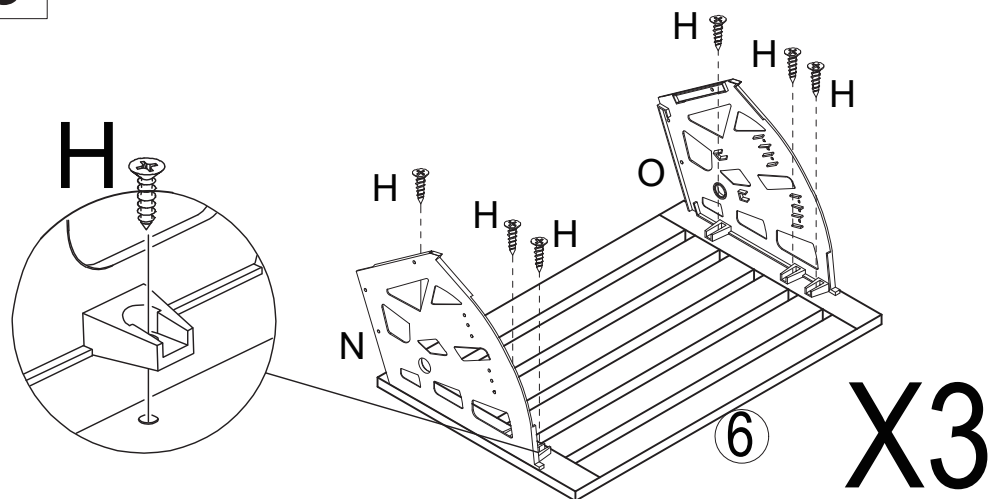
6



N	x3	O	x3	H	x18
					
					M3.5x14mm


8

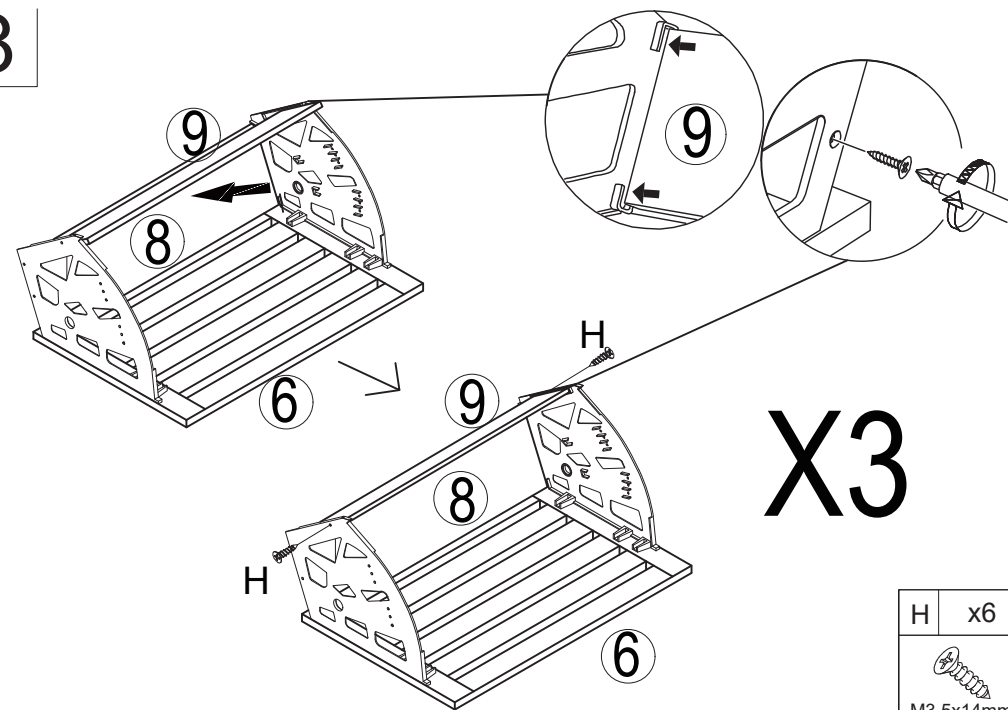


H	x6
	
	M3.5x14mm

9


Pre-drilled hole at wall

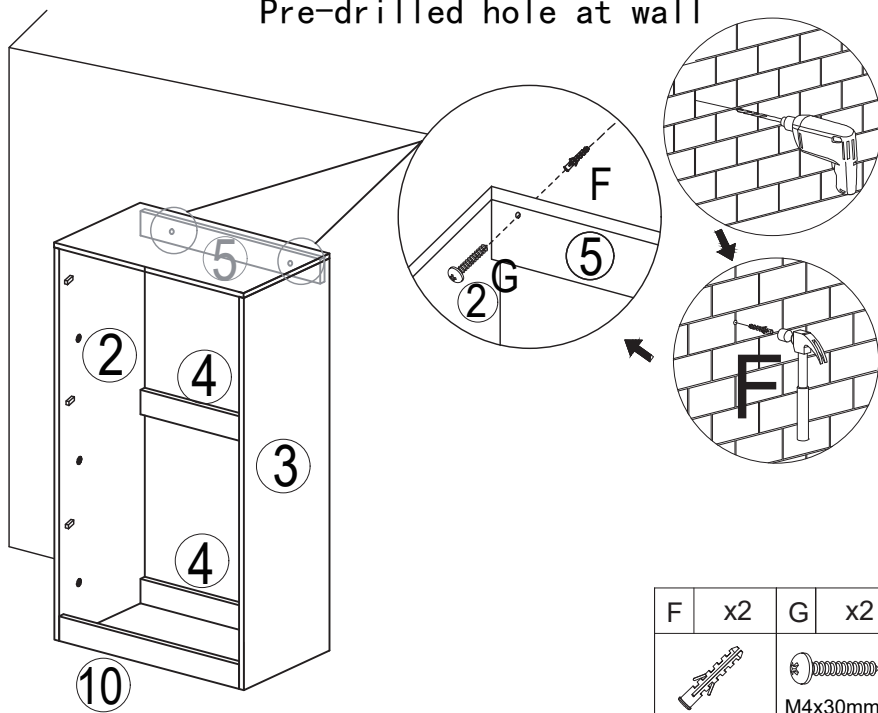

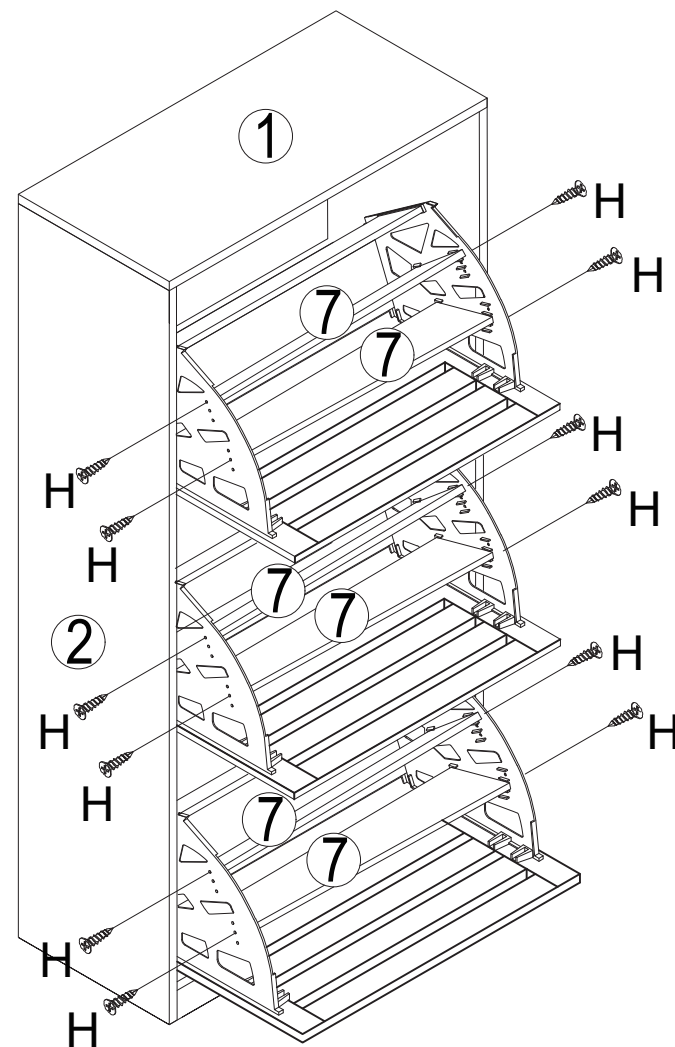

11

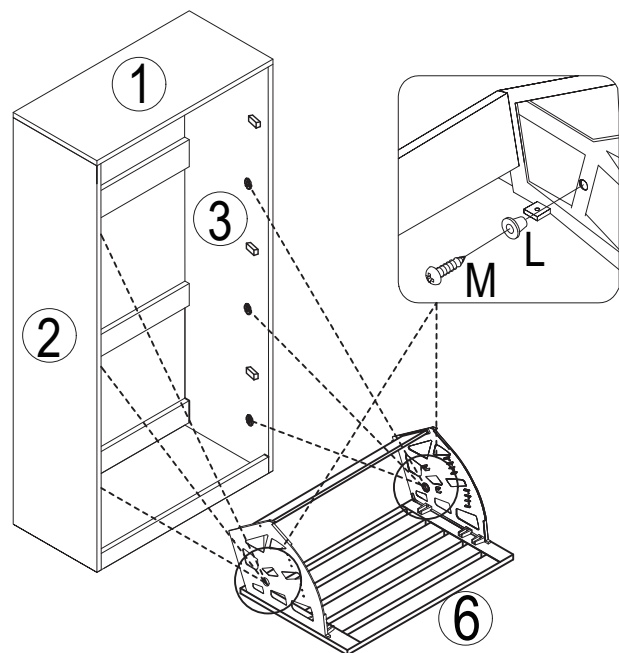


10



X3

L	x6	M	x6
			
		M4x10mm	

H	x12
	
M3.5x14mm	