




WOODEN BED FRAME


MODEL: BF-W-A9-BF69-S

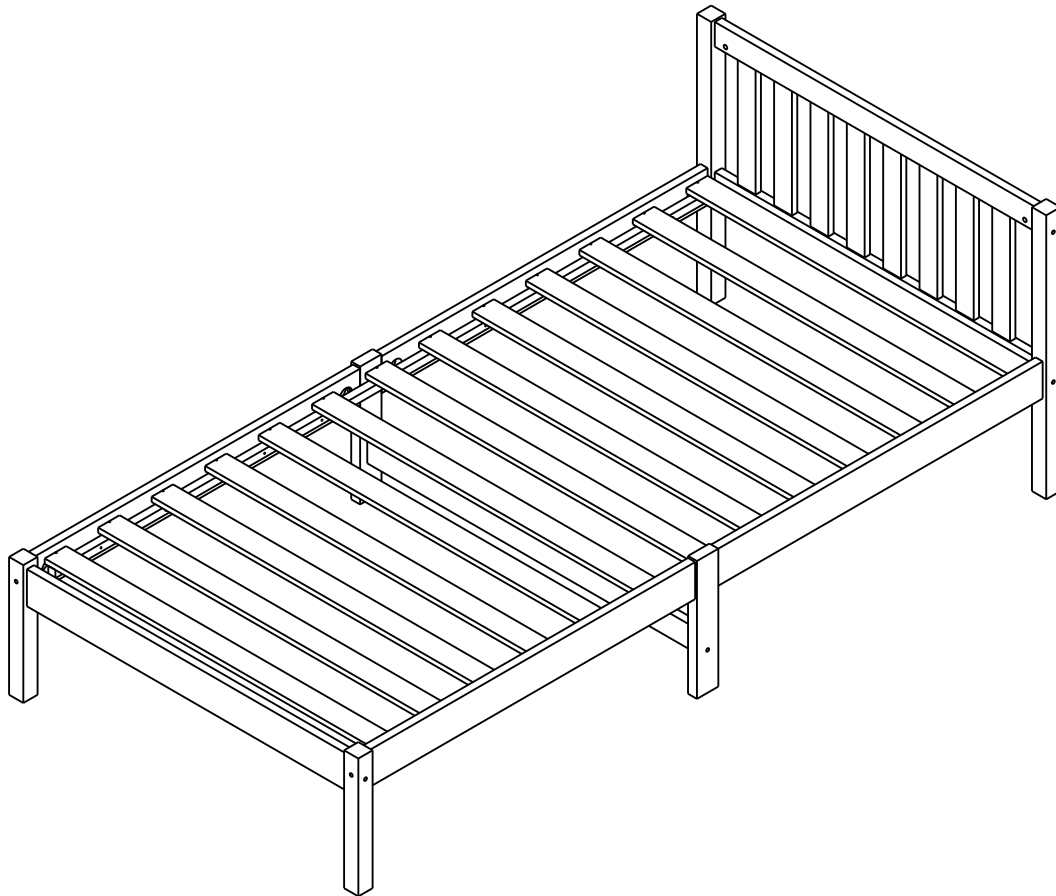





ASSEMBLY INSTRUCTIONS


Please read the instructions carefully
before assembling and using the product

PARTS

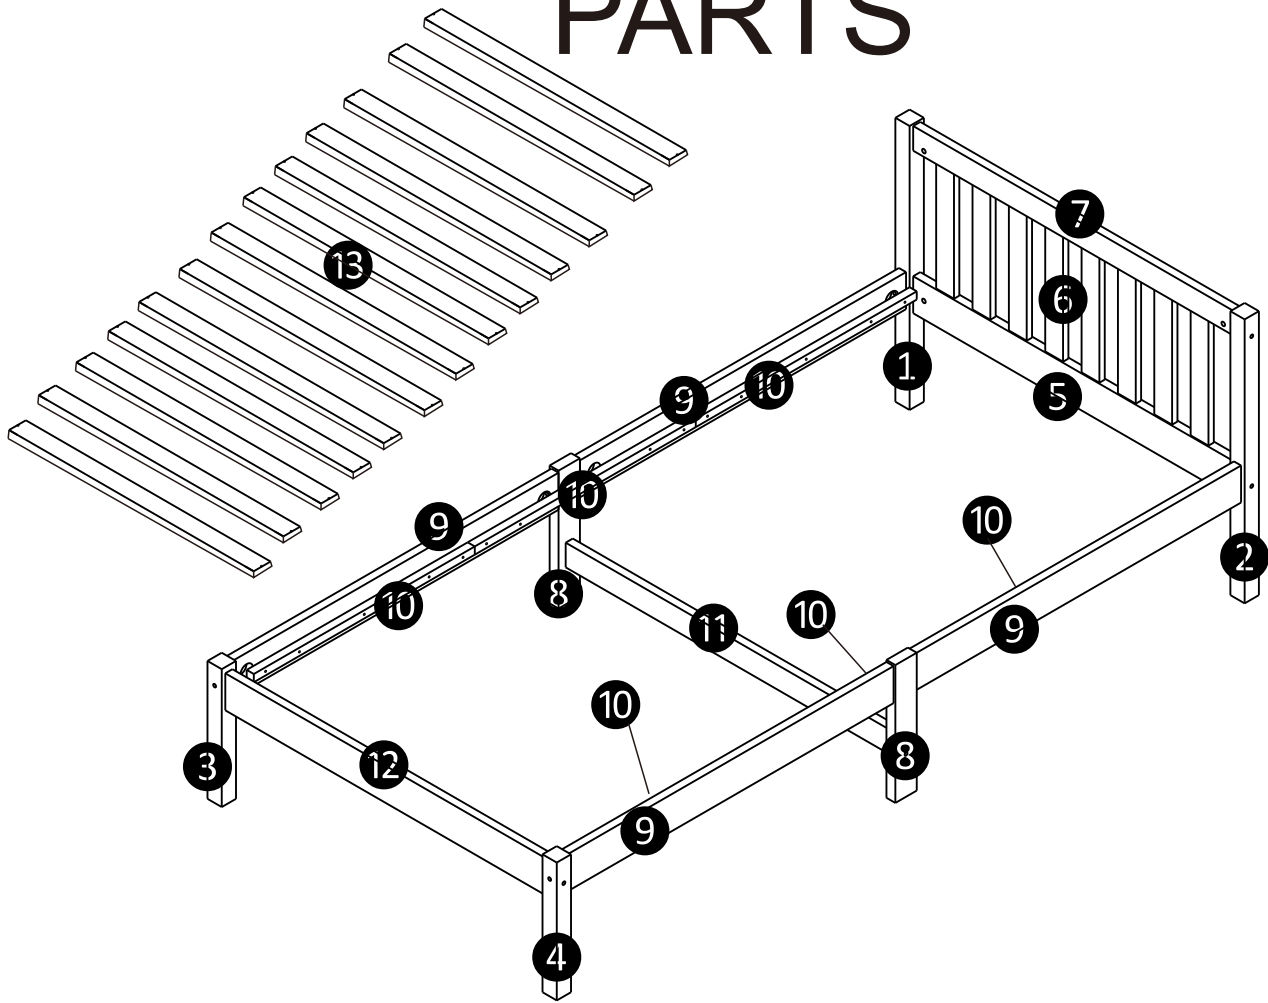


HARDWARE

A	 M6X80	10
B	 ϕ 4x30	56
C	 ϕ 8x30	64
D		6
E	 ϕ 6x70	2
F	 M6	1


H	 M6X140	2
I	 M6	8
J		8
K		2
L	 M6	8

ASSEMBLY STEPS

STEP 1

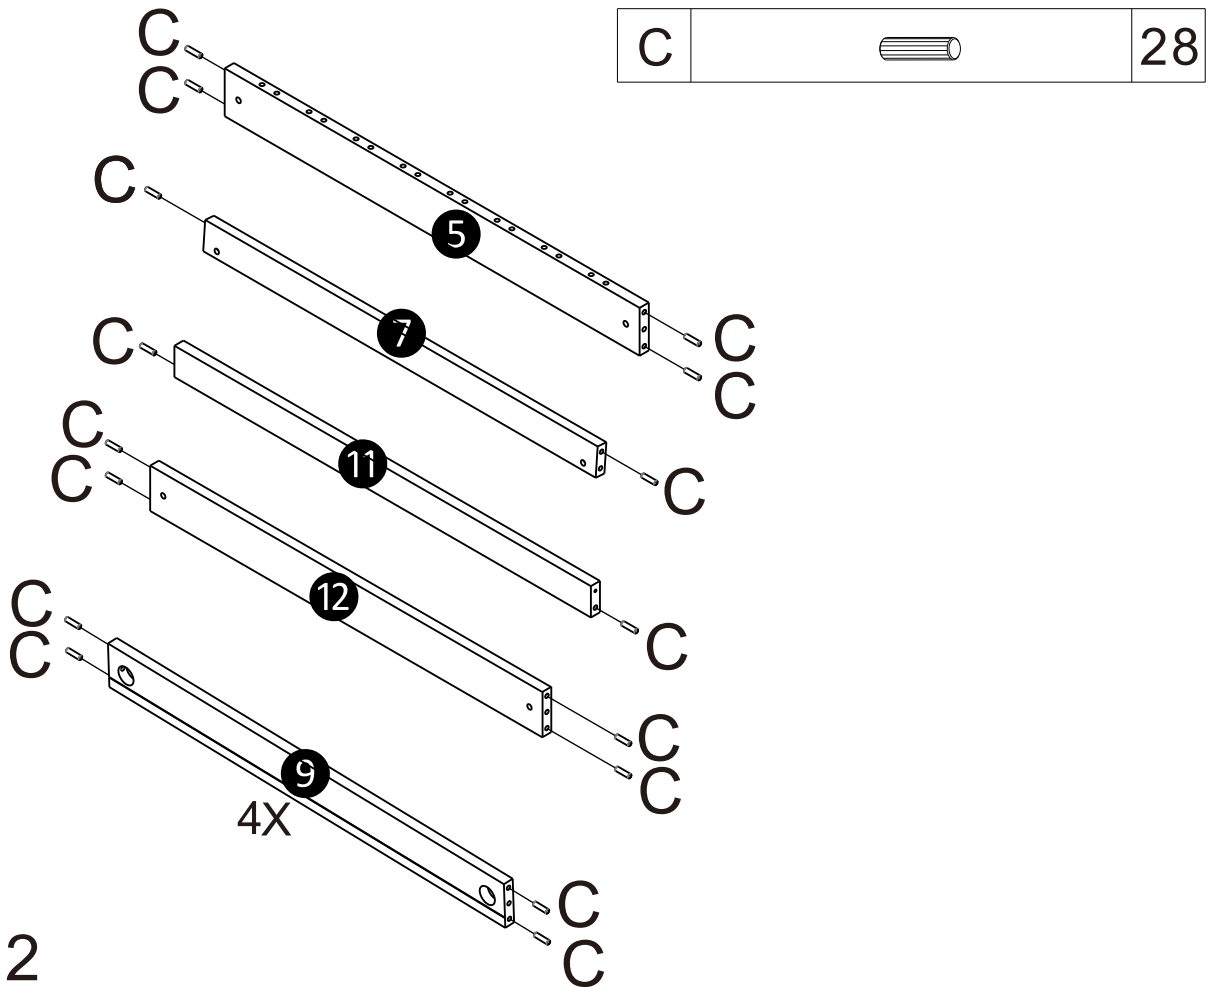


STEP 2

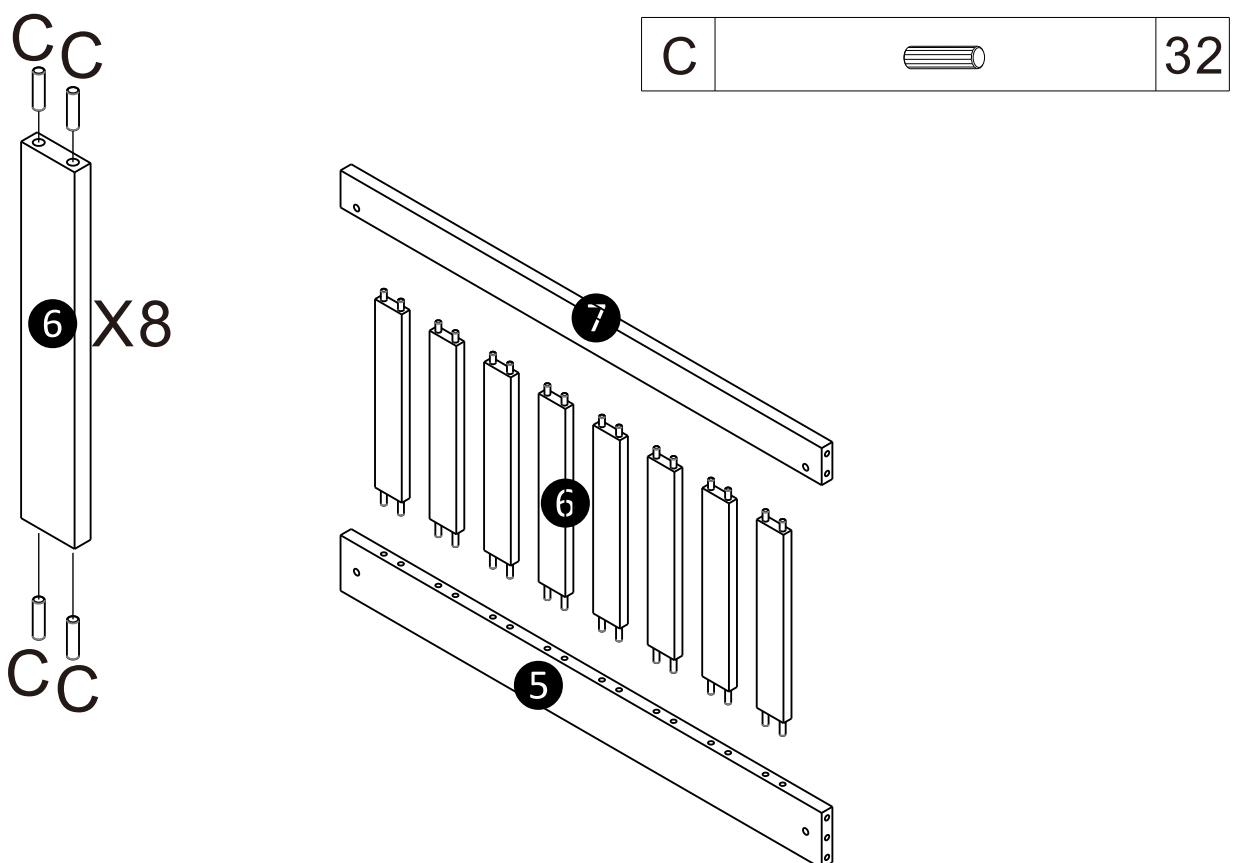


ASSEMBLY STEPS

STEP 3

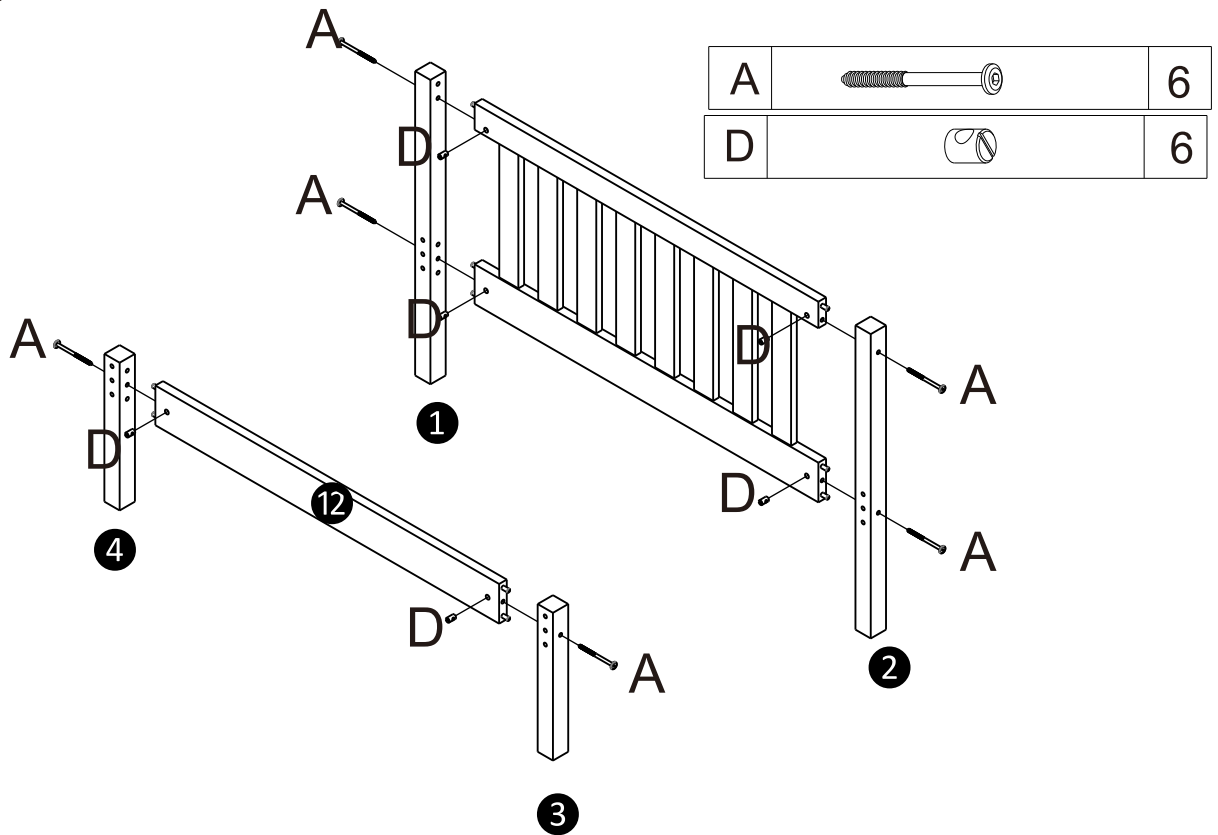


STEP 4

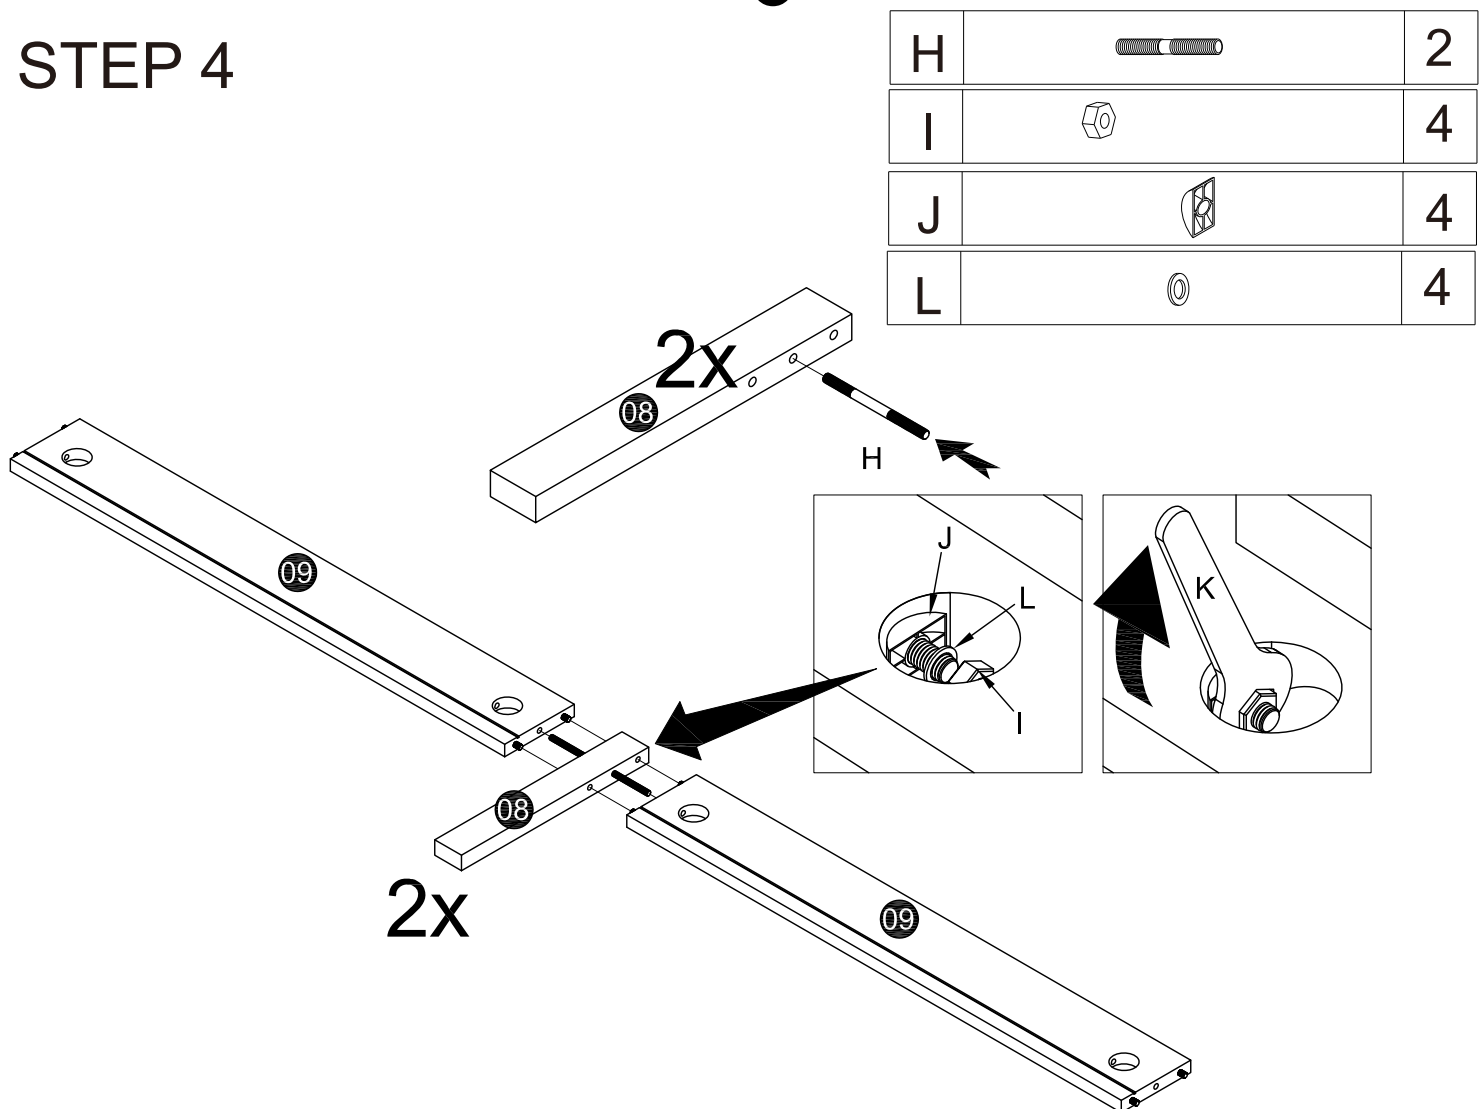



ASSEMBLY STEPS

STEP 5

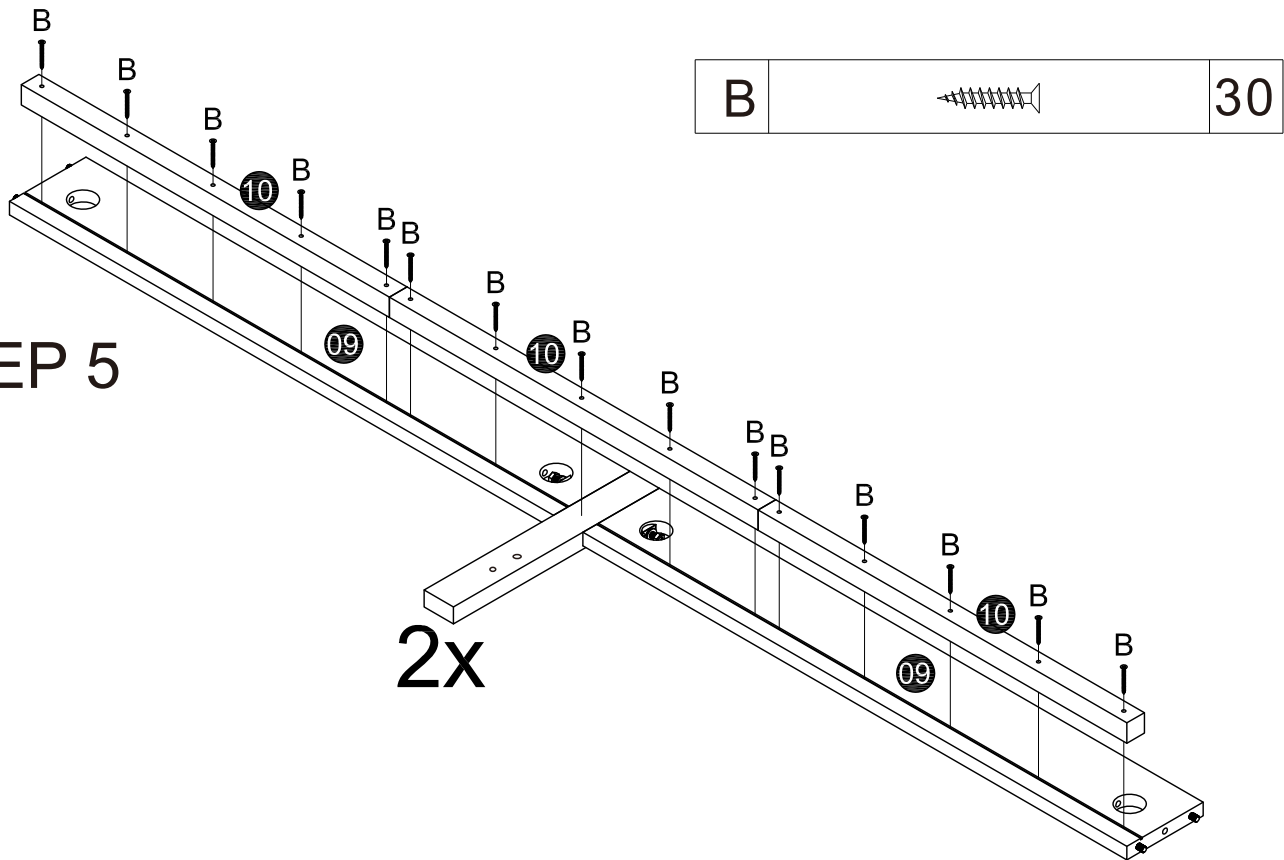


J		4
L		4


I		4
A		4

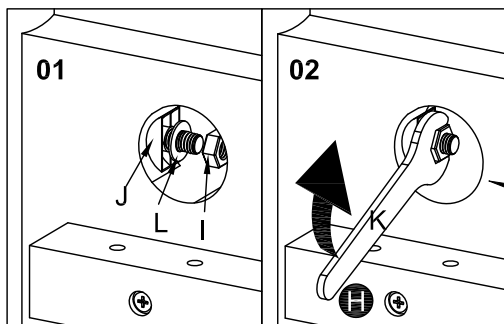


STEP 6

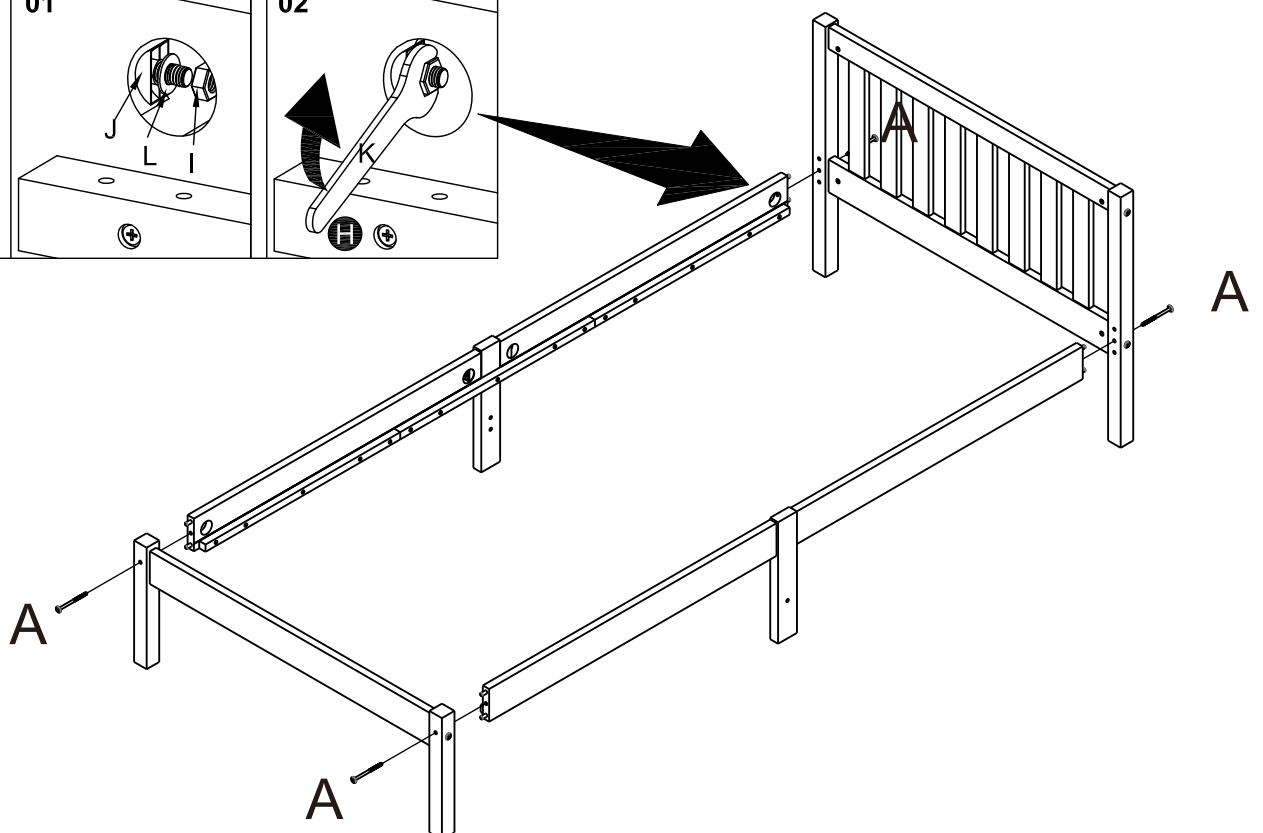


ASSEMBLY STEPS

E		2
---	---	---

STEP 7

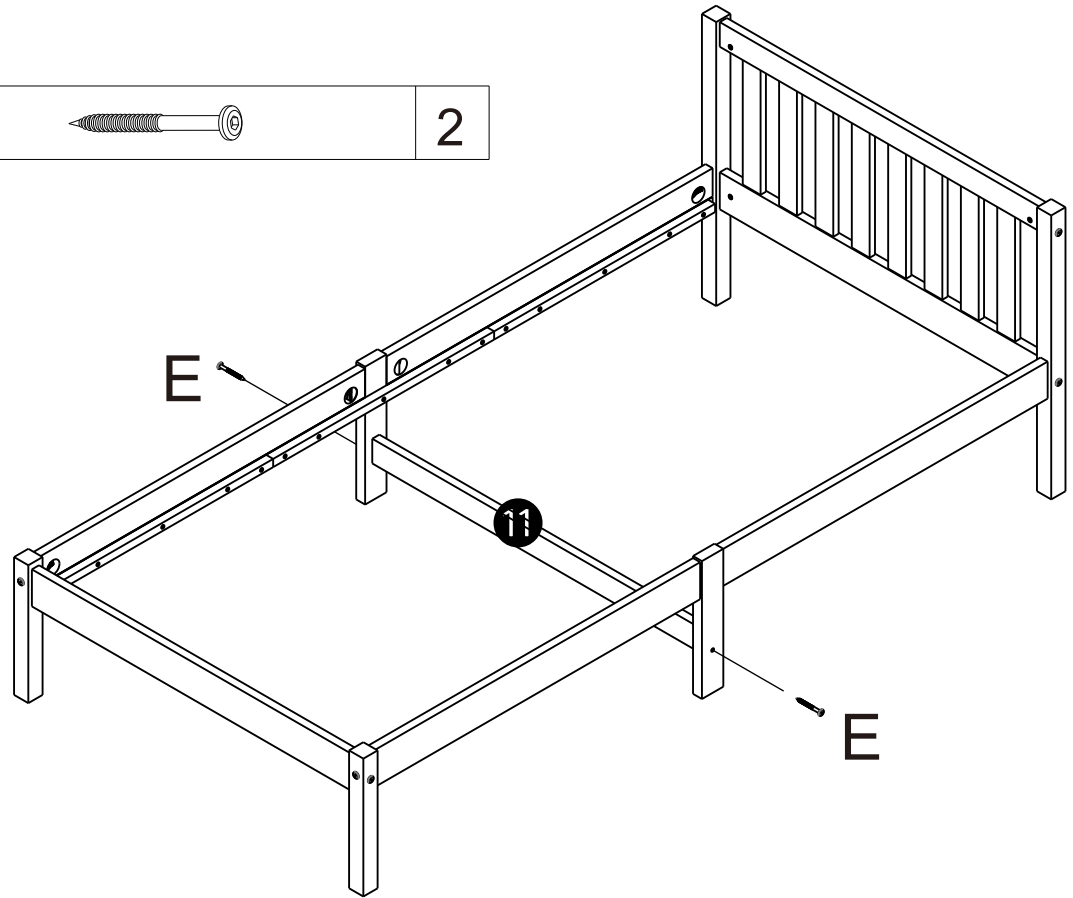

B		26
---	---	----

STEP 8

