





BEDSIDE TABLE

MODEL: BT-A23-RAT-WD

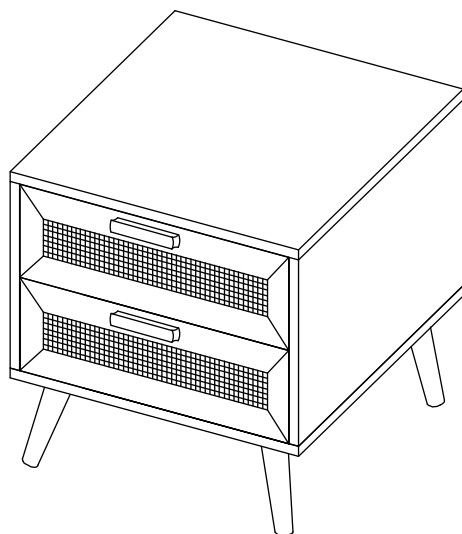

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and
tools required for
assembly

HARDWARE



A	x8	B	x4	C	x12	D	X12	E	x12	F	x4
		15x12mm				M4x40mm		M3x12mm		M4x18mm	
G	x4	H	x4	I	x1	J	X14	K	x4	L	x4
		12x10mm		M4x30mm						M4x10mm	
M	x2	N	x1	O	x1	P	x21	Q	x4		
						M4x14mm					

PARTS

Wipe with dry cloths

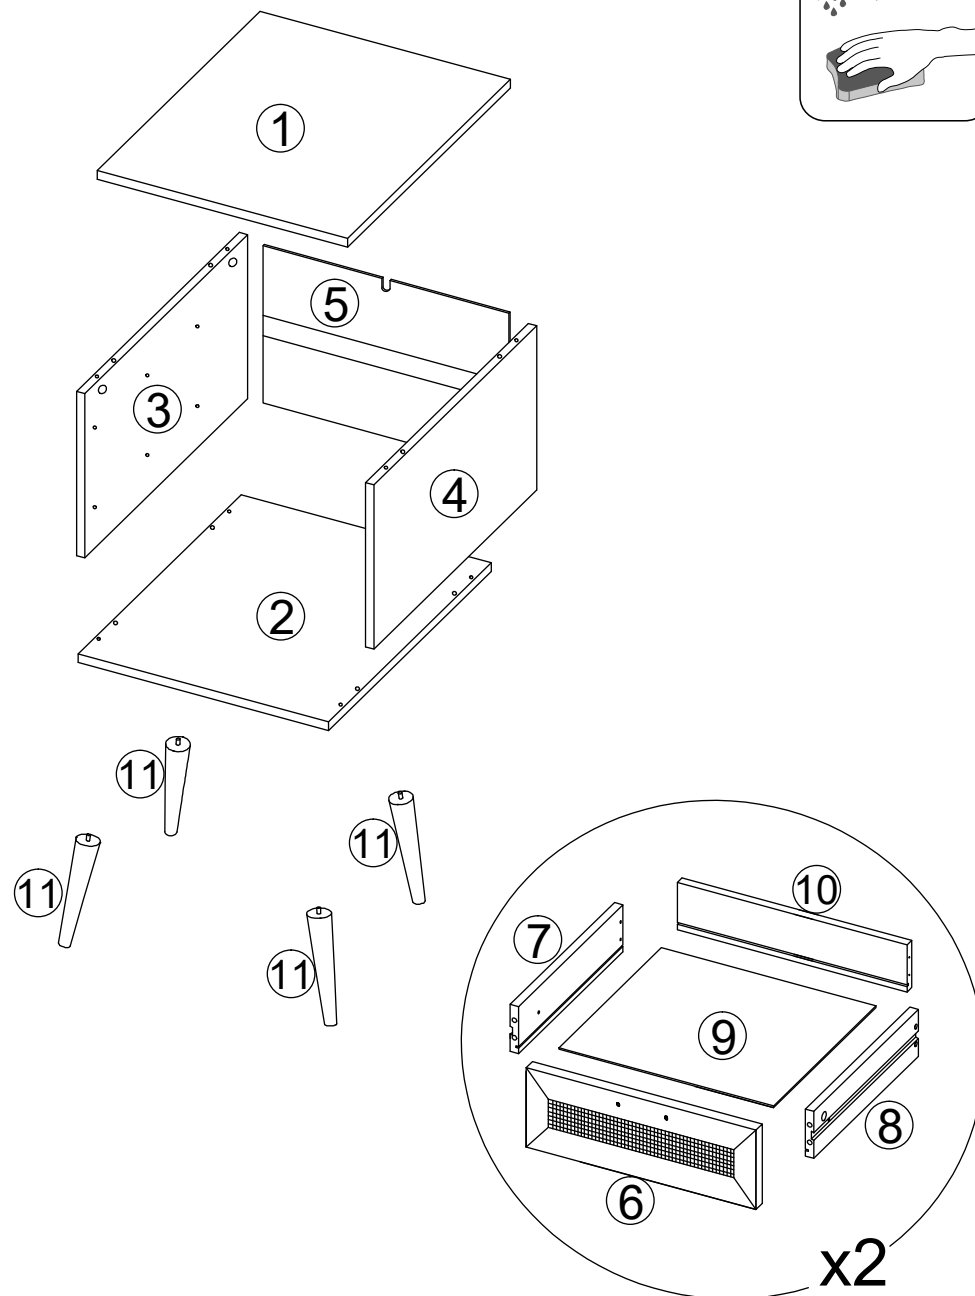


1

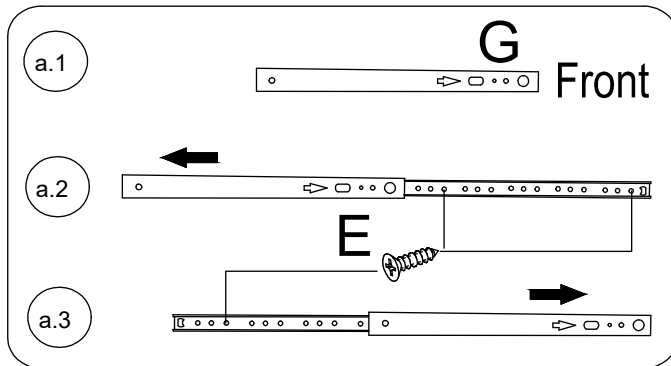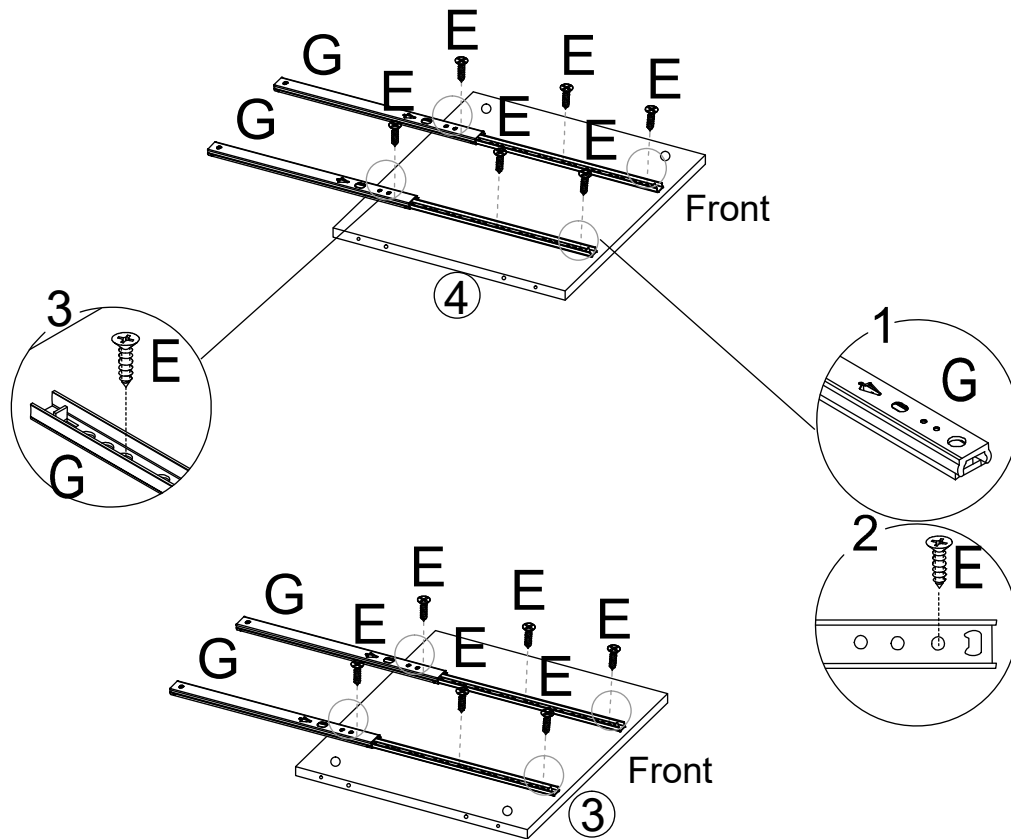


G	x4	E	x12
M3x12mm			

2

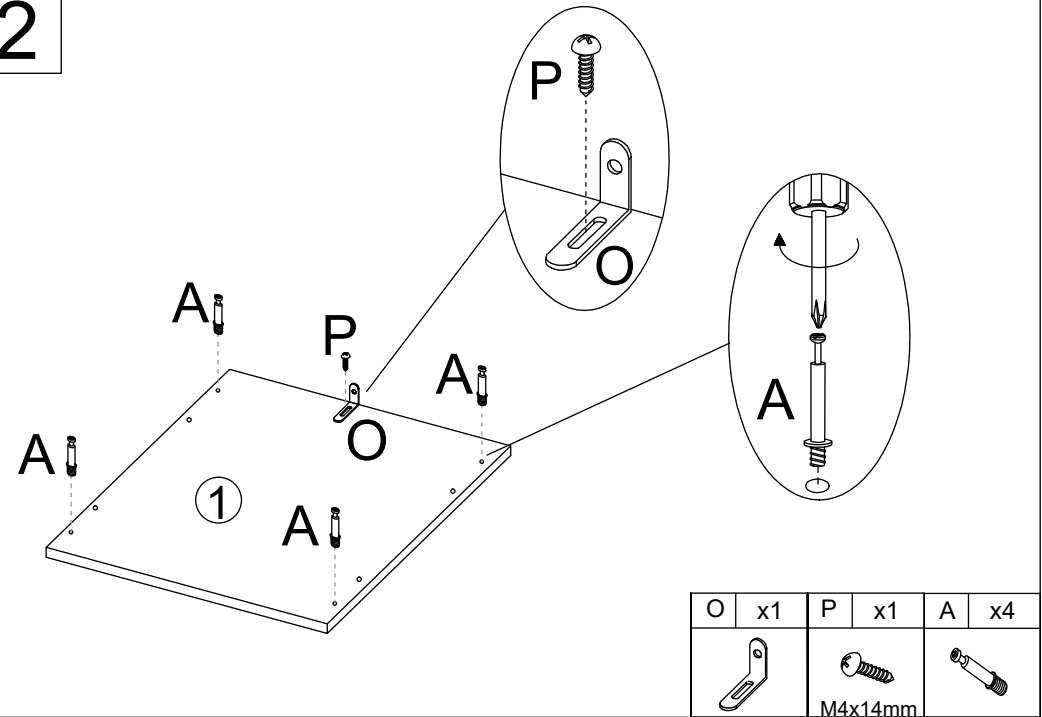





O	x1	P	x1	A	x4
M4x14mm					


3

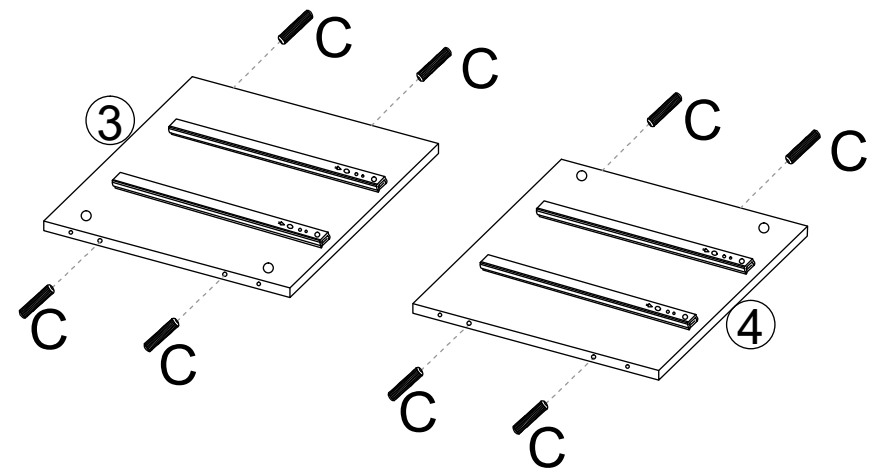


C	X8

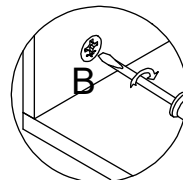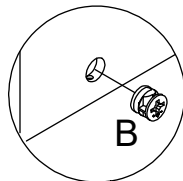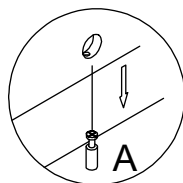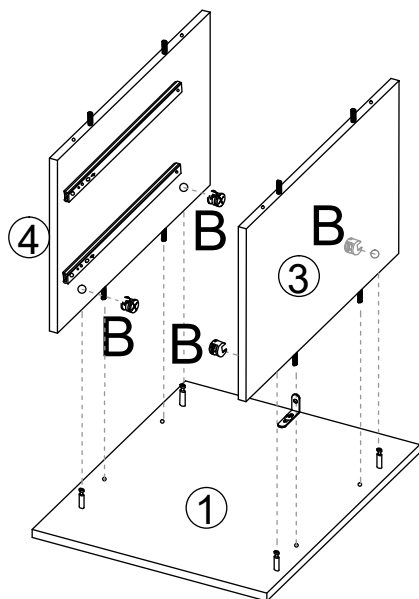


4




B	x4
	
15x12mm	

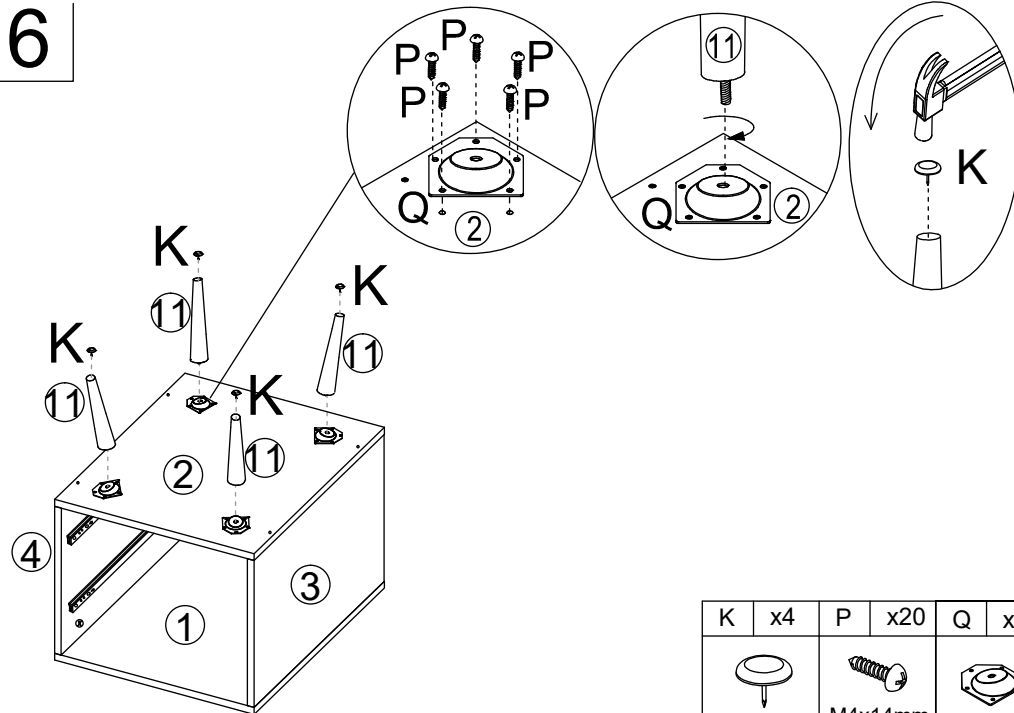
6




K	x4	P	x20	Q	x4
					
		M4x14mm			



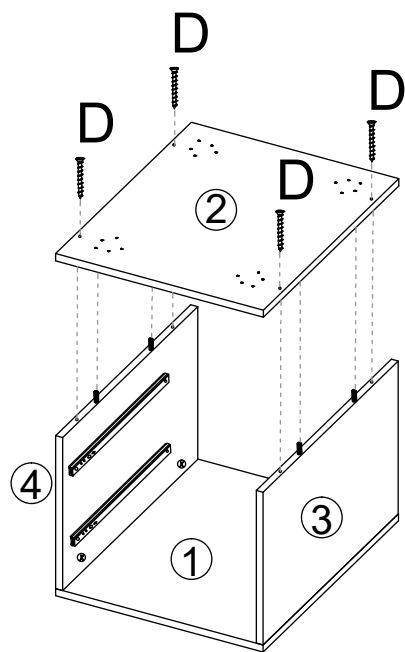

5

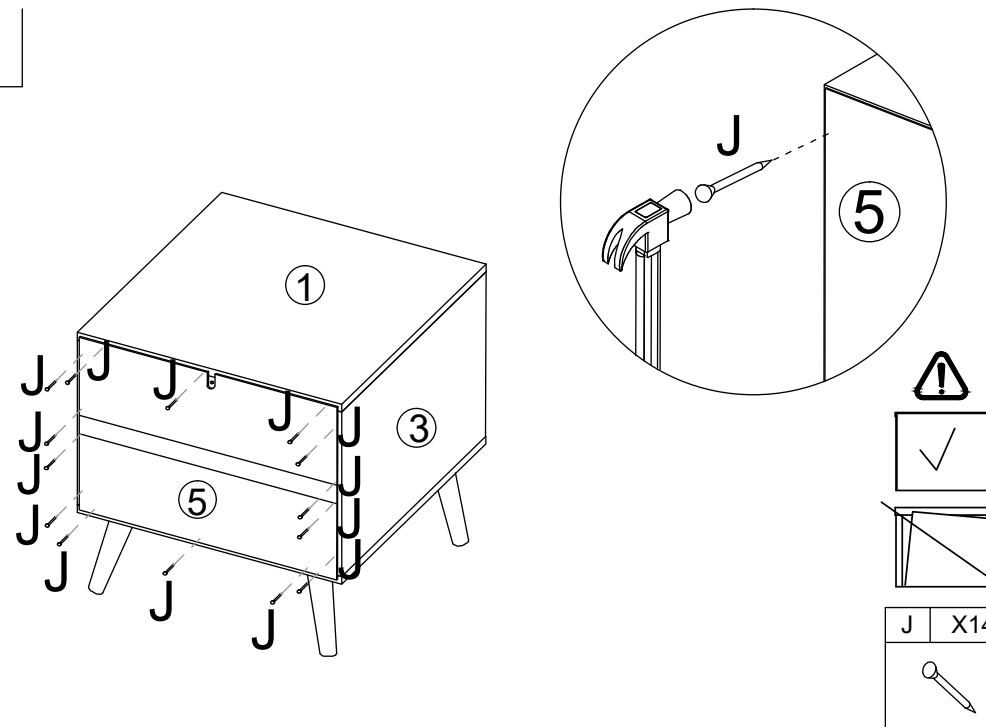

D	x4
	
M4x40mm	


7



	
	
	
J	X14
	


8

Pre-drilled hole at wall

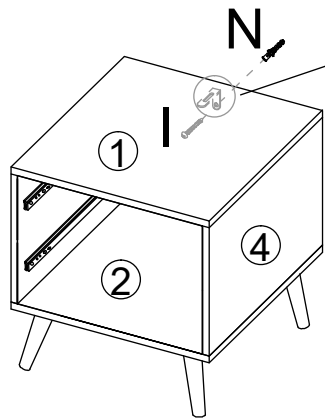

N	x1	I	x1
M4x30mm			


10

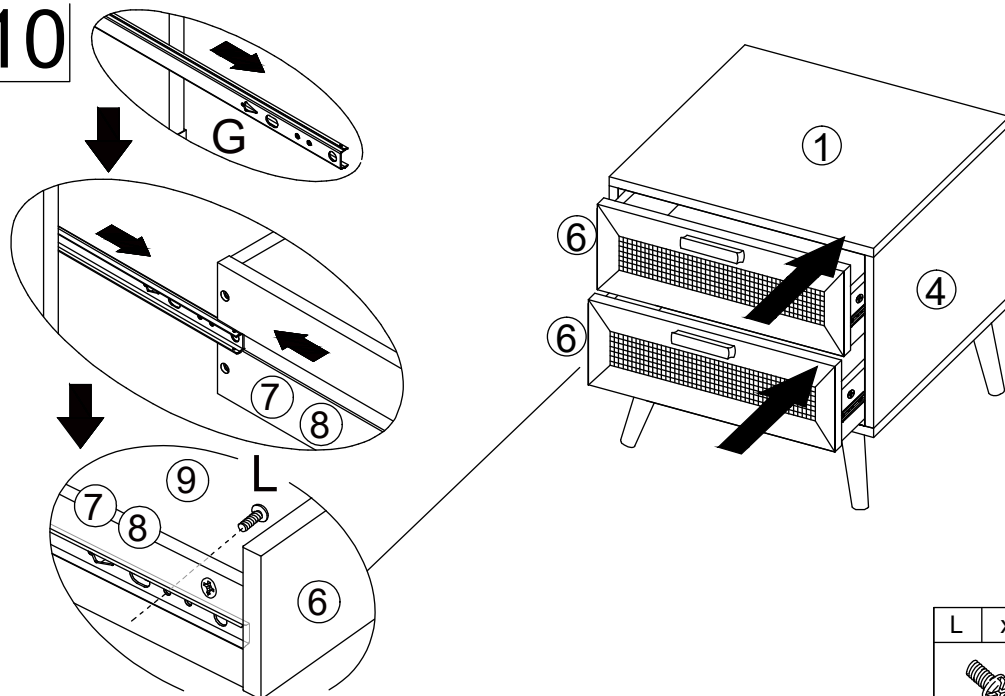

Screw from the inside of the drawers

L	x4
M4x10mm	

9

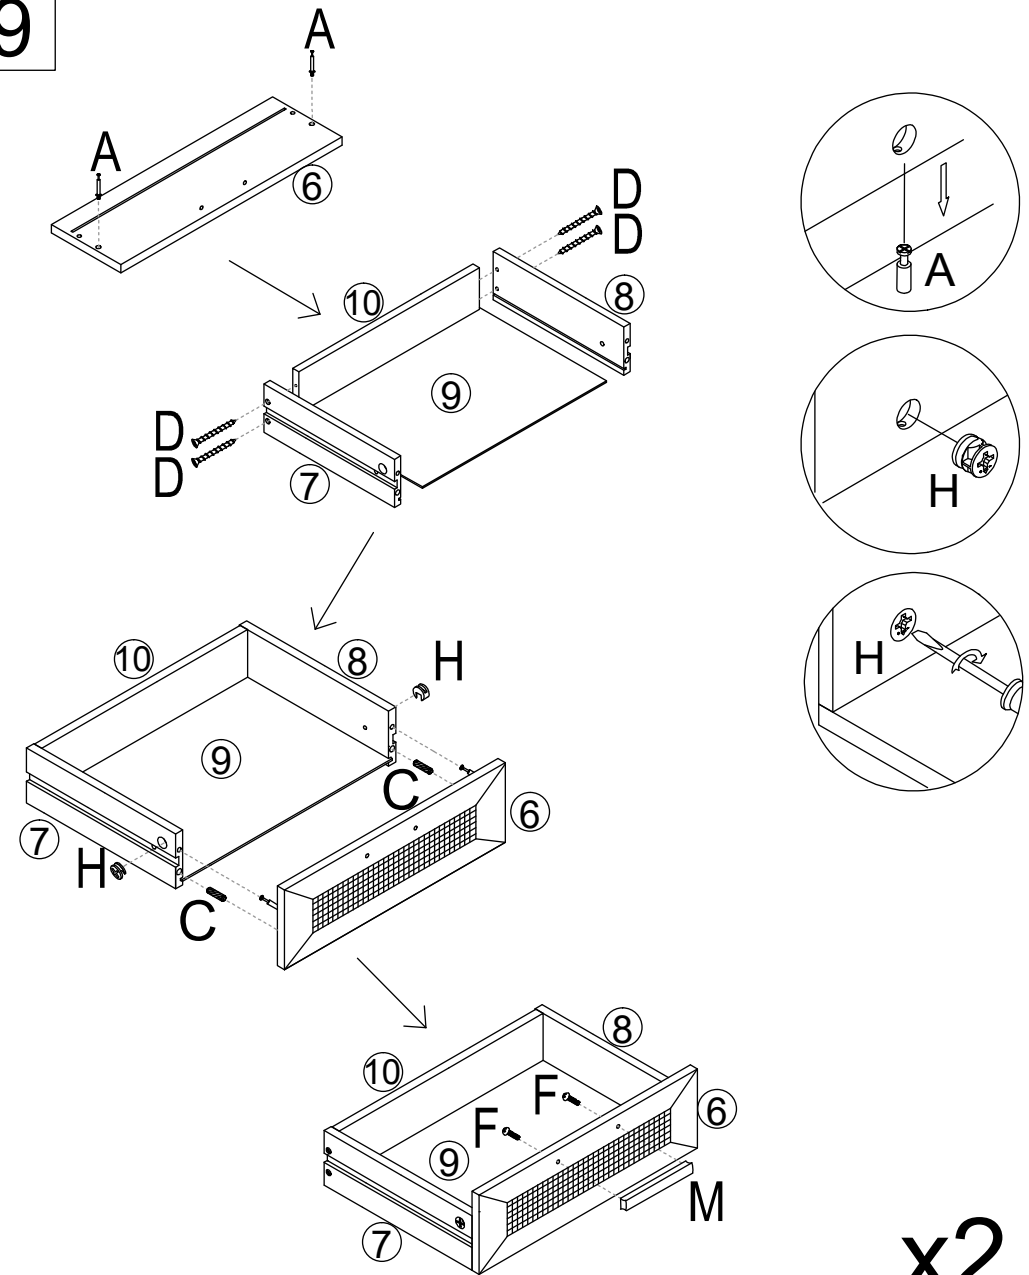

x2

C	X4	H	x4	A	x4	D	x8	M	x2	F	x4
		12x10mm				M4x40mm				M4x18mm	