




SHOE STORAGE CABINET


MODEL: SS-A20-RAT-WD

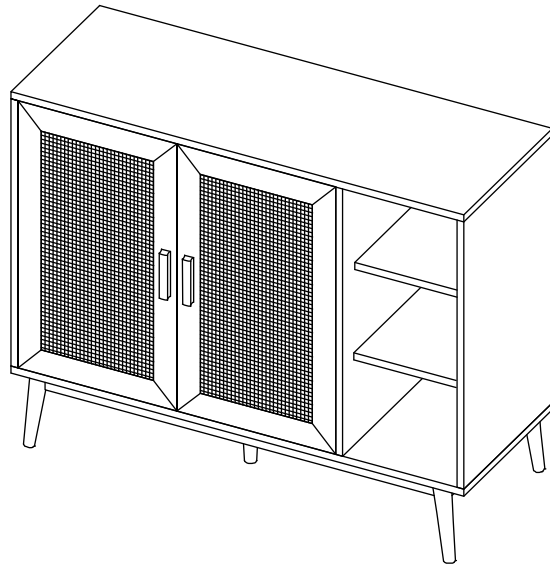

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly

HARDWARE

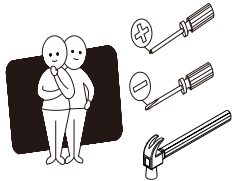


Two persons and tools required for assembly.


A	x6	B	x6	C	x32	D	x24	E	x24	F	x2
		15x12mm				M4x40mm				M4x30mm	
G	x2	H	x2	I	x1	J	x4	K	x1	L	x2
M4x14mm										M3x12mm	
M	x4	N	x16	O	x4	P	x2	Q	x4	R	x2
		M3.5x14mm		M8x60mm							
S	x4	T	x20	U	x4	V	x1	W	x4	X	x8
M4x18mm										M4x25mm	

PARTS

Wipe with dry cloths

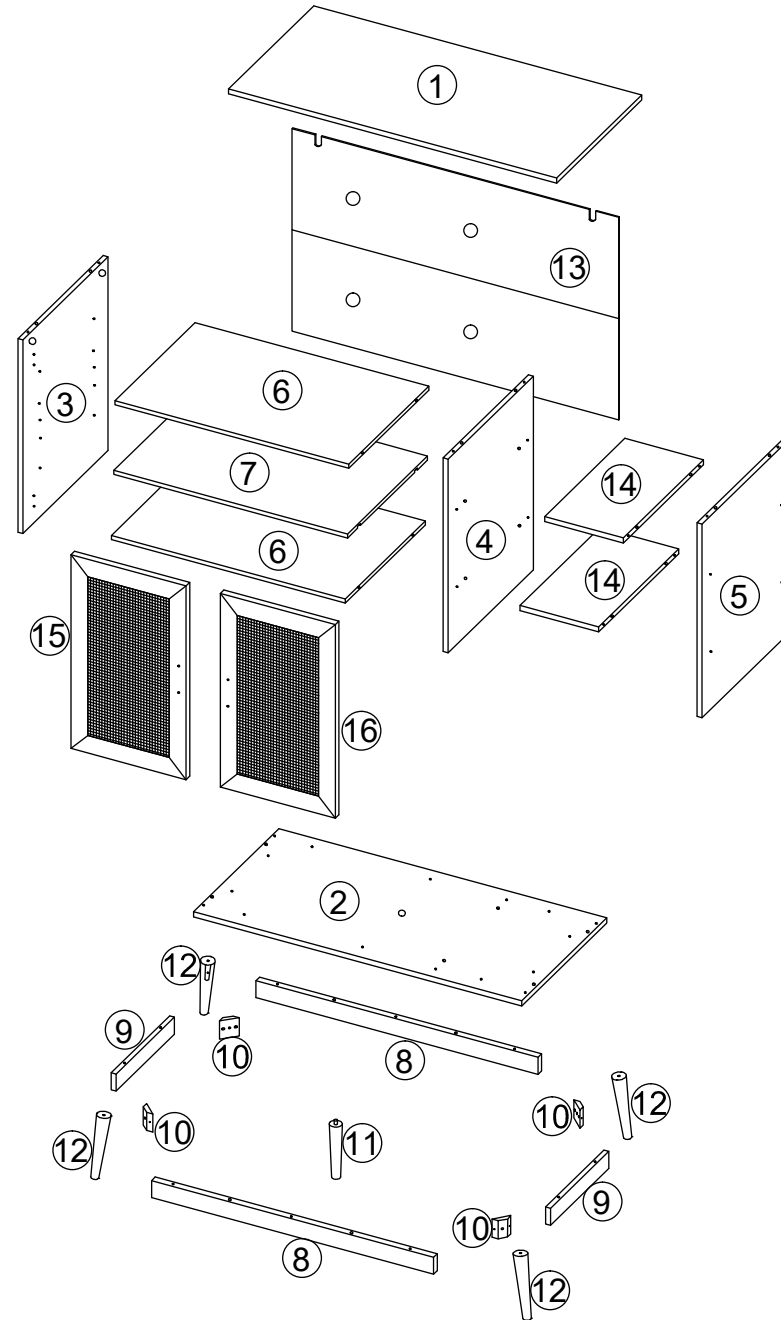


1

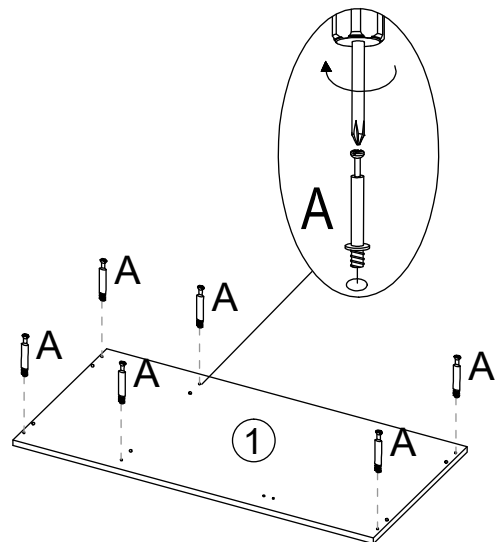


A	x6
	

2

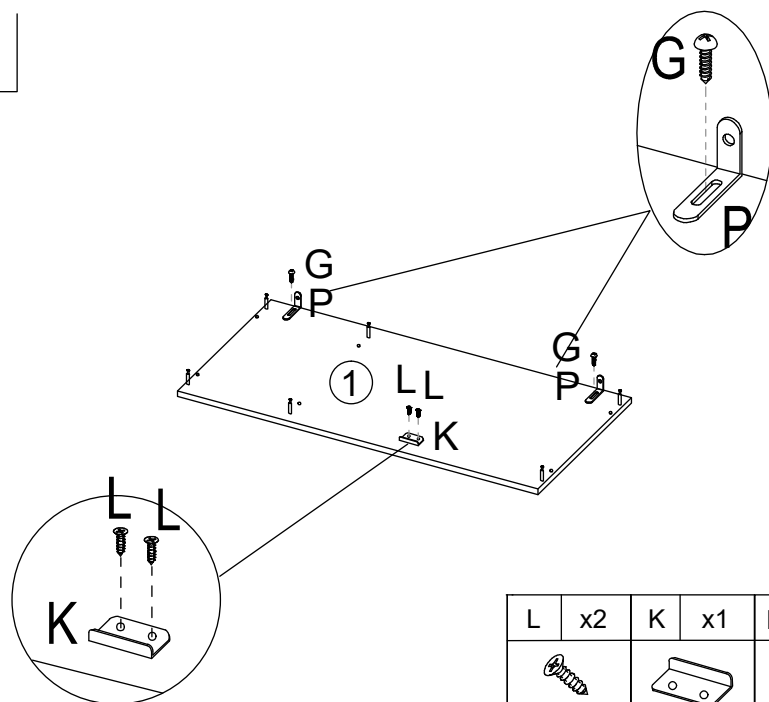



L	x2	K	x1	P	x2	G	x2
							
M3x12mm						M4x14mm	

3

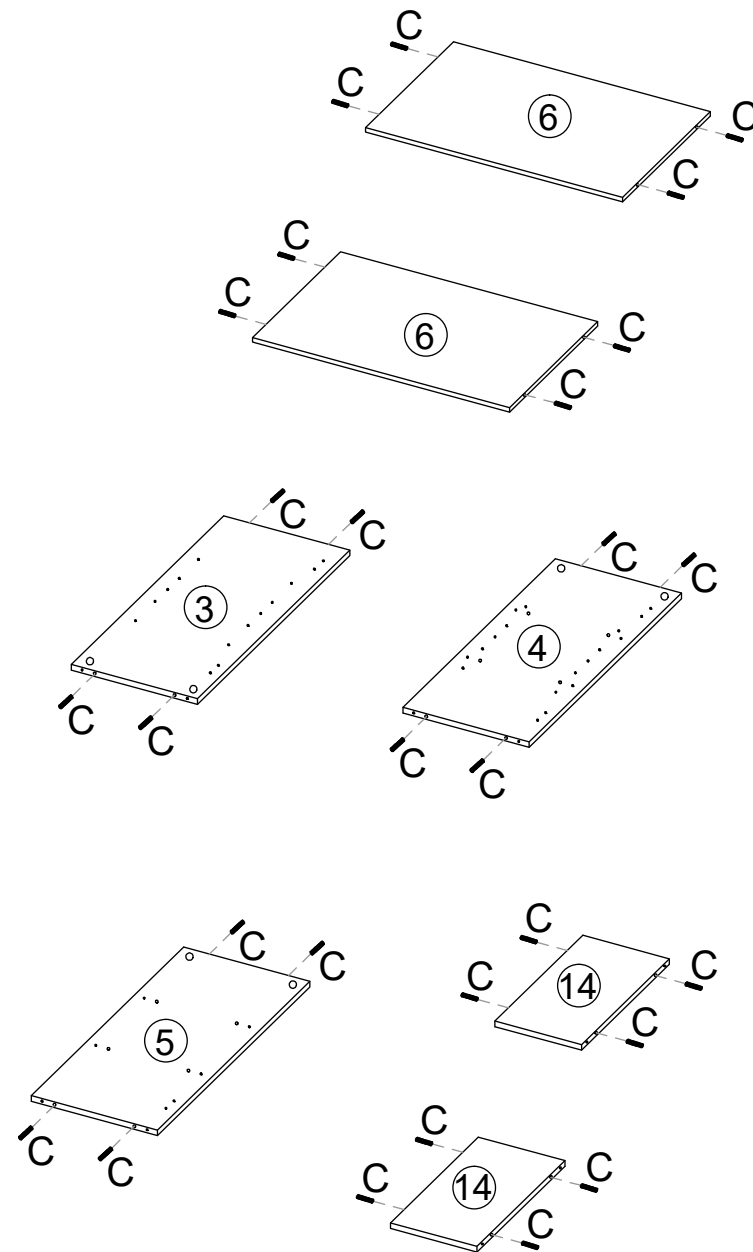



C	x28
	

4

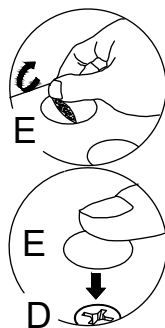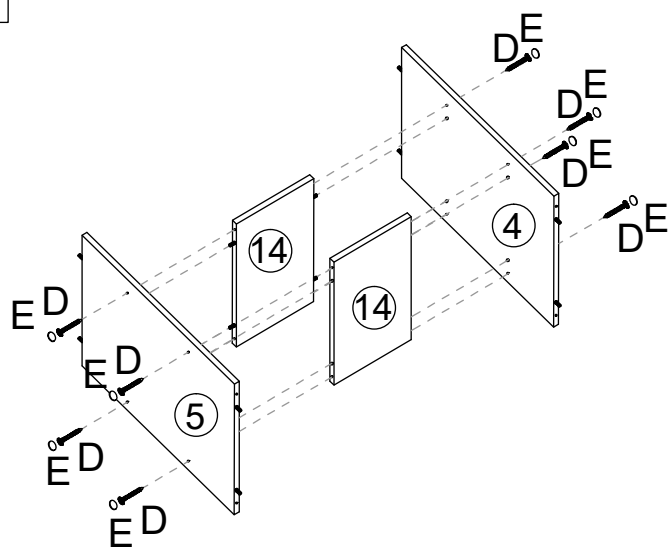


D	x8	E	x8
			
M4x40mm			

6

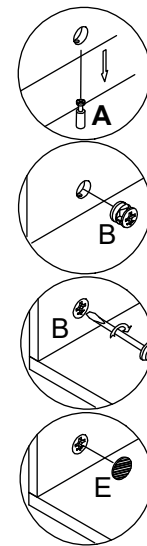
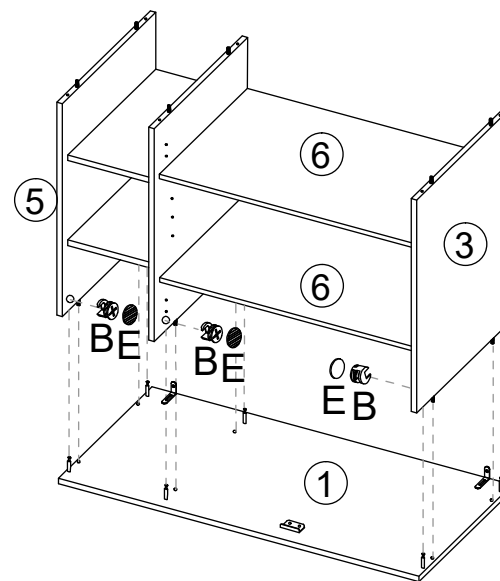


B	x6	E	x6
			
15x12mm			

5

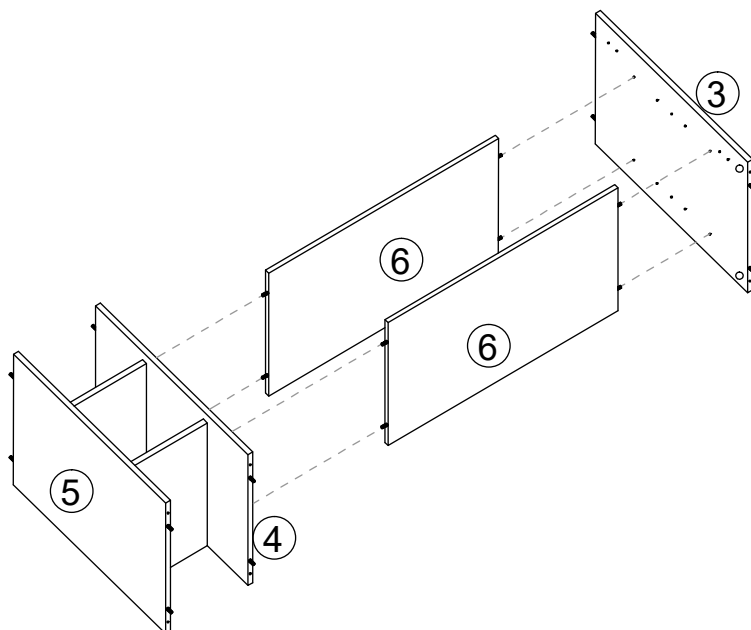


7

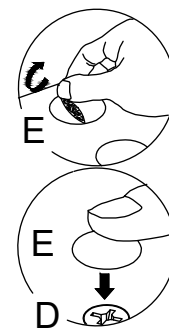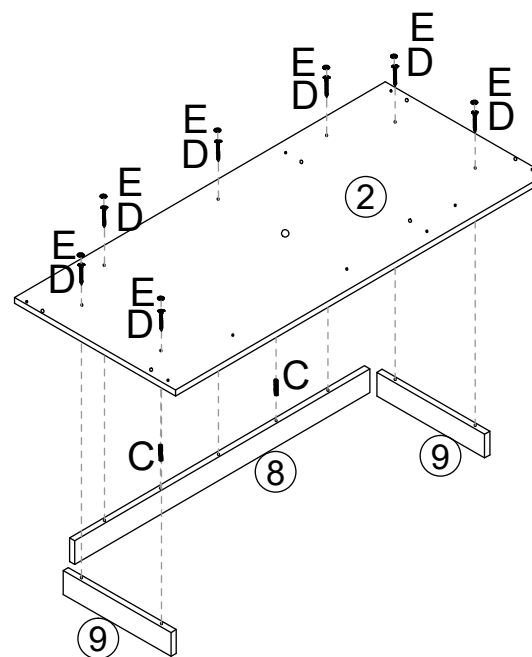


C	x2	D	x7	E	x7
					
		M4x40mm			

8

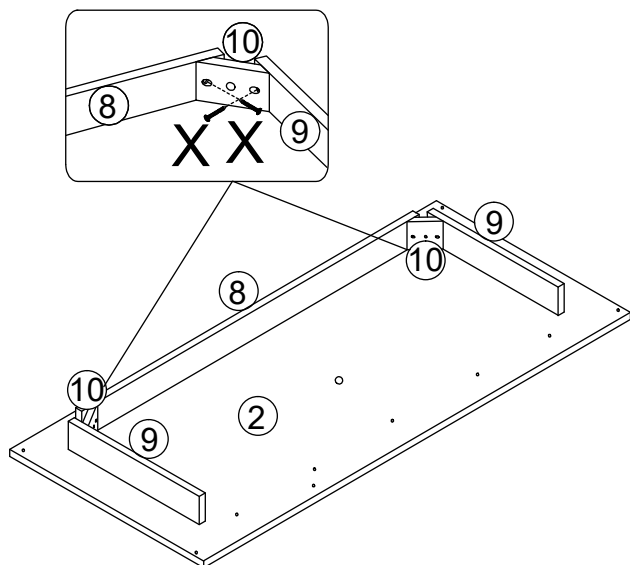


X	x4
M4x25mm	


10

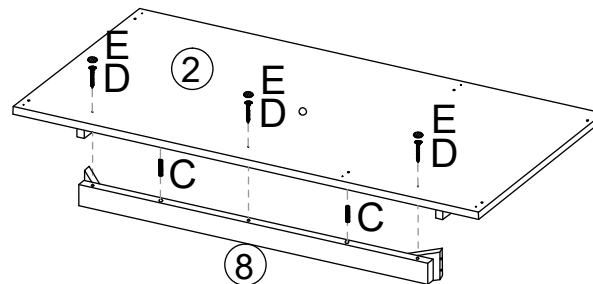

C	x2	D	x3	E	x3
M4x25mm		M4x40mm			

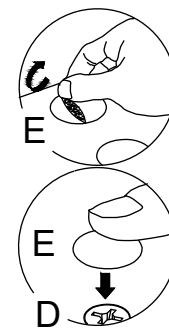


9

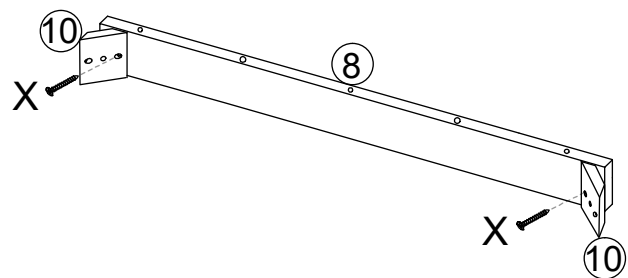


X	x2
M4x25mm	

11

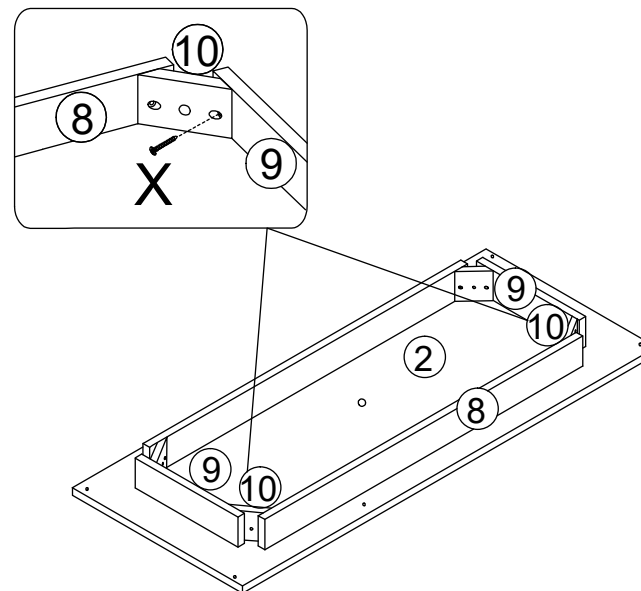


X	x2
M4x25mm	

12

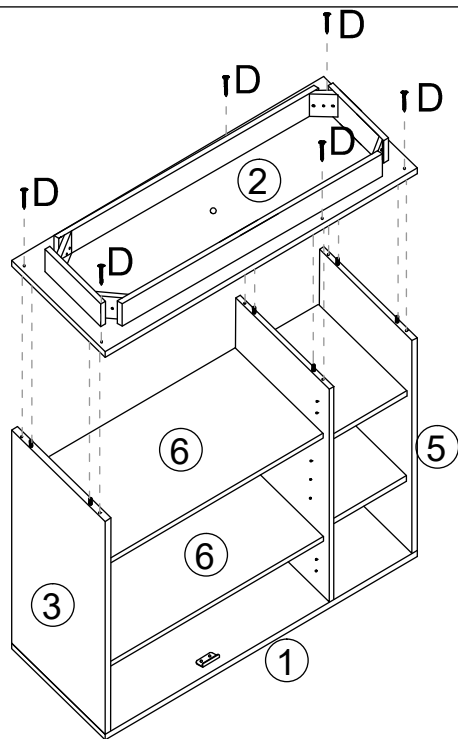


D	x6
	
M4x40mm	

14

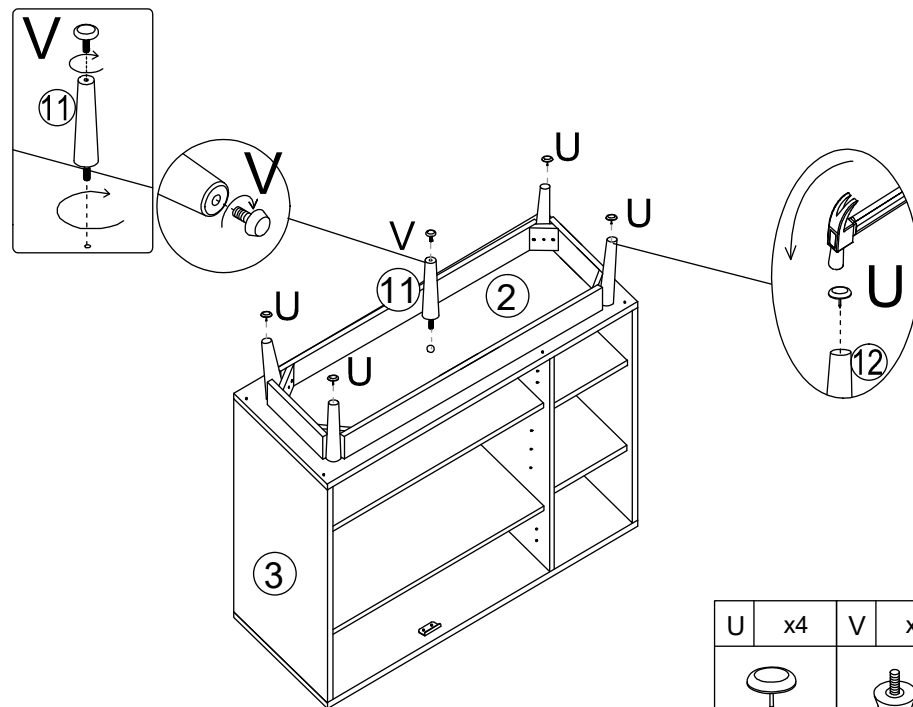


U	x4	V	x1
			

13

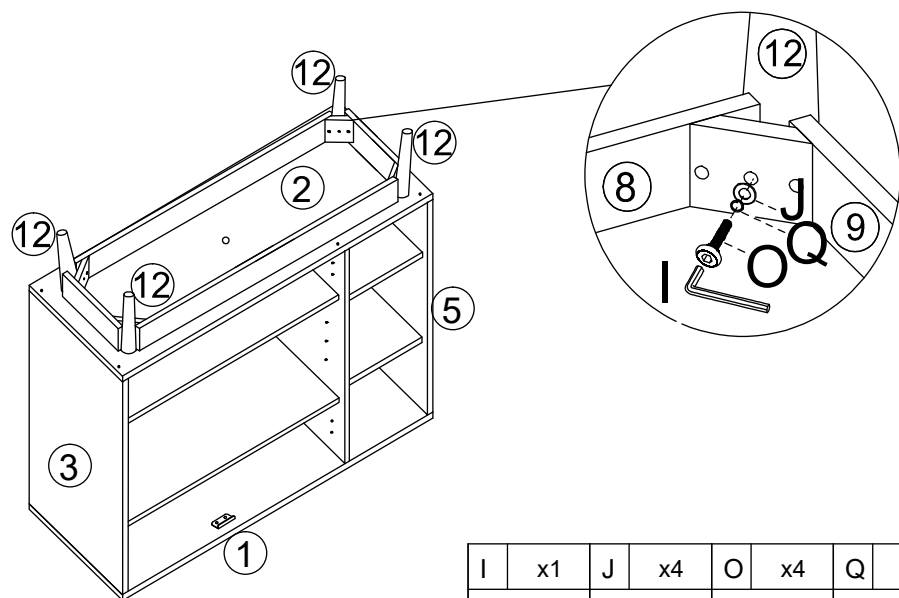

I	x1	J	x4	O	x4	Q	x4
				 M8x60mm			



15

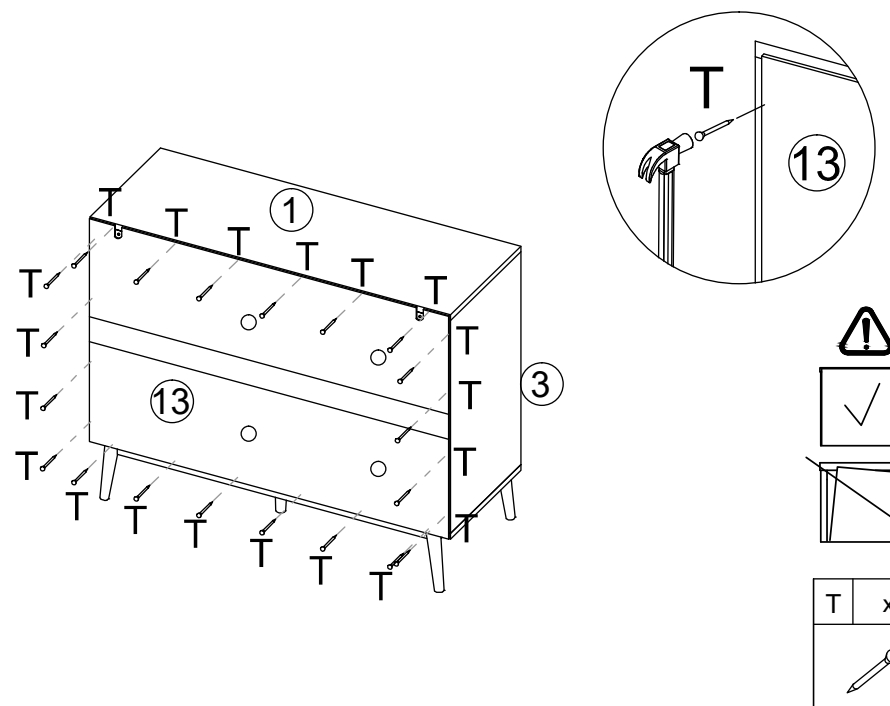

T	x20
	



16

Pre-drilled hole at wall

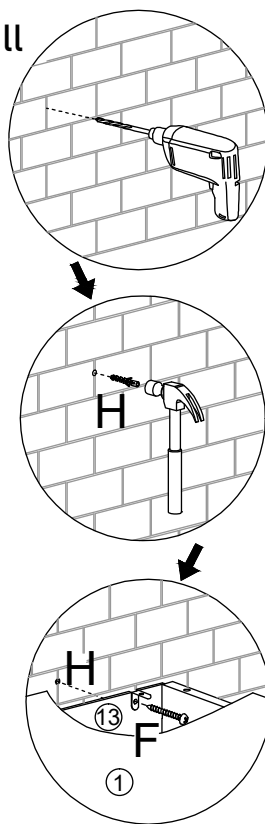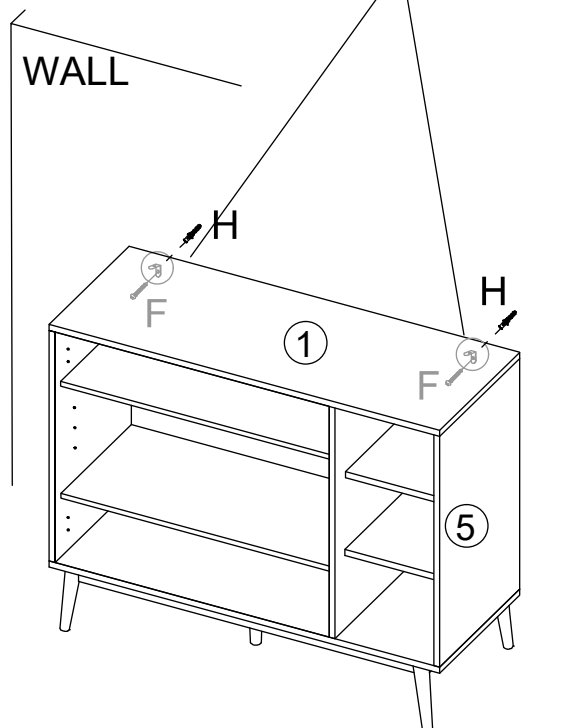



F	x2	H	x2
			
M4x30mm			

17

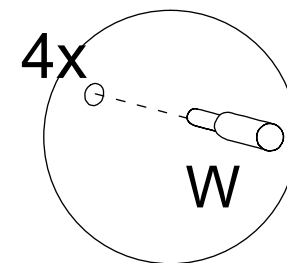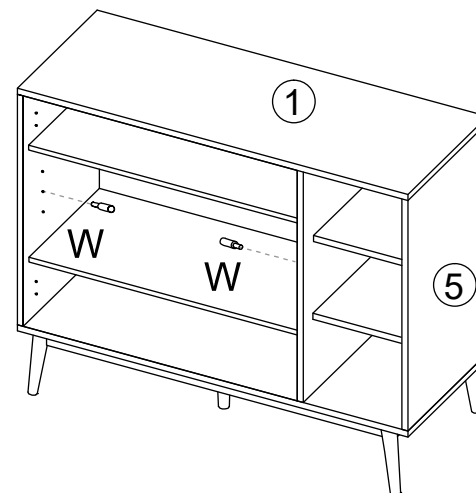


W	x4

18

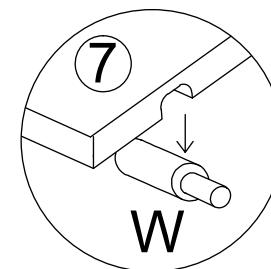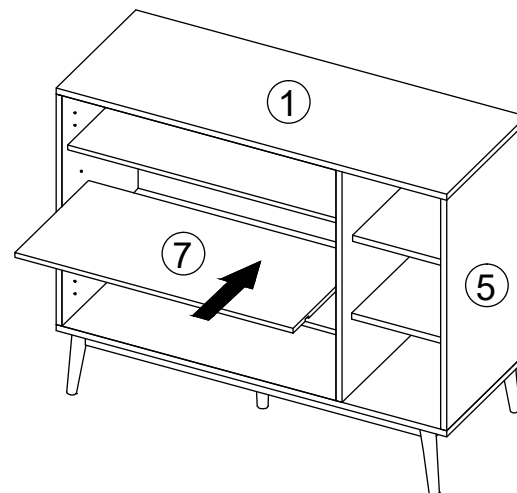


19

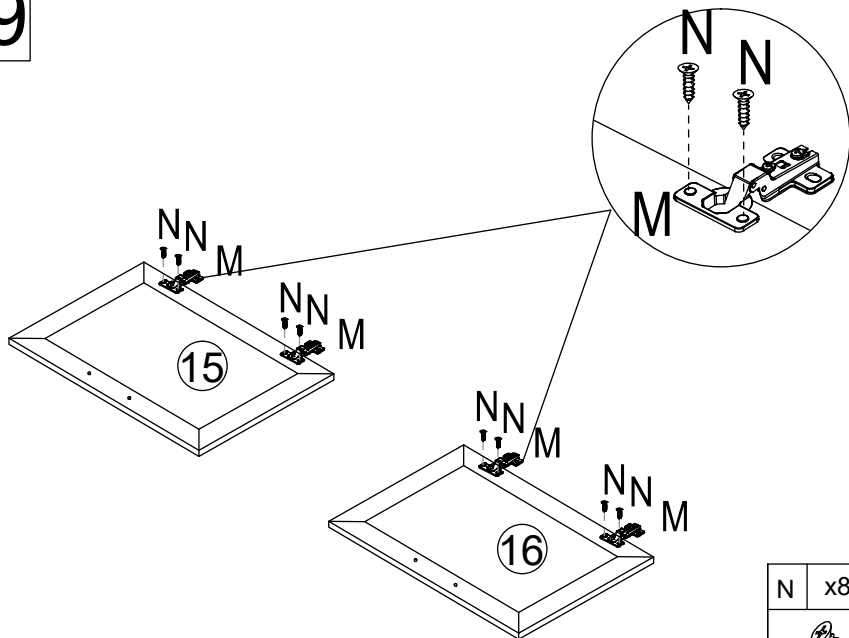



N	x8	M	x4
			
M3.5x14mm			

20





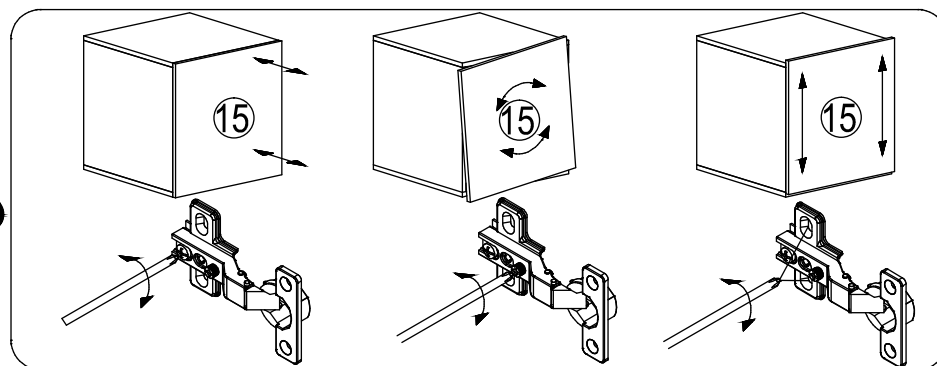


Hinge adjustments

21

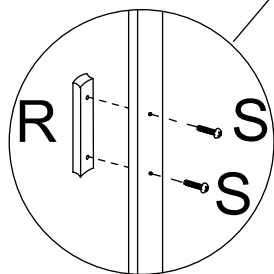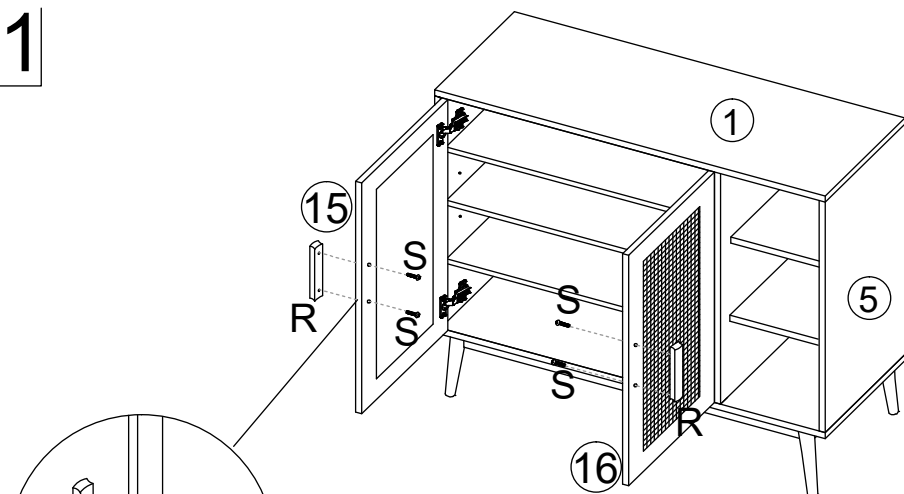

R	x2	S	x4
		 M4x18mm	

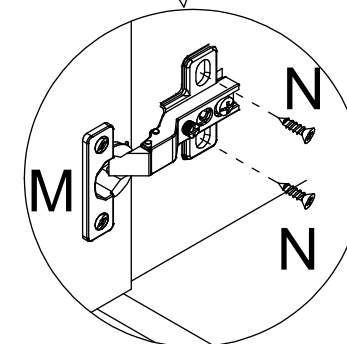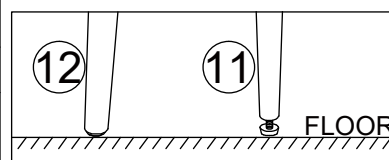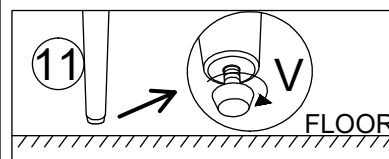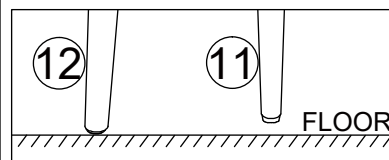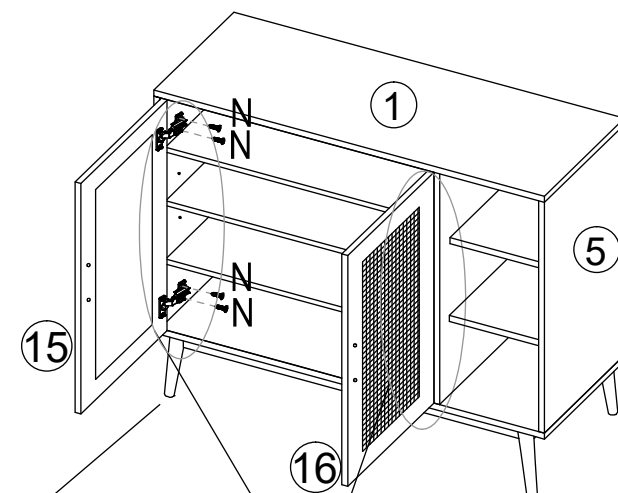

N	x8
	
M3.5x14mm	