




BEDSIDE TABLE

MODEL:BT-A5-WD

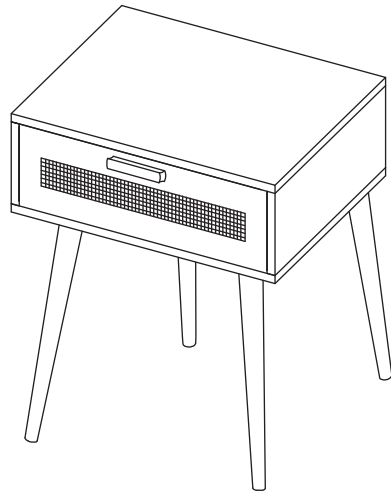

ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and tools required for assembly

HARDWARE


A	x6	B	x6	C	x10	D	x8	E	x6	F	x2
7x35mm	15x12mm	Ø6x30mm	M4x40mm	M3x12mm							
G	x2	H	x1	I	x21	J	x2	K	x4	L	x4
M4x10mm		M4x12mm	M4x18mm								
M	x8	N	x1	O	x1	P	x1				
		M4x30mm									


PARTS

Wipe with dry cloths

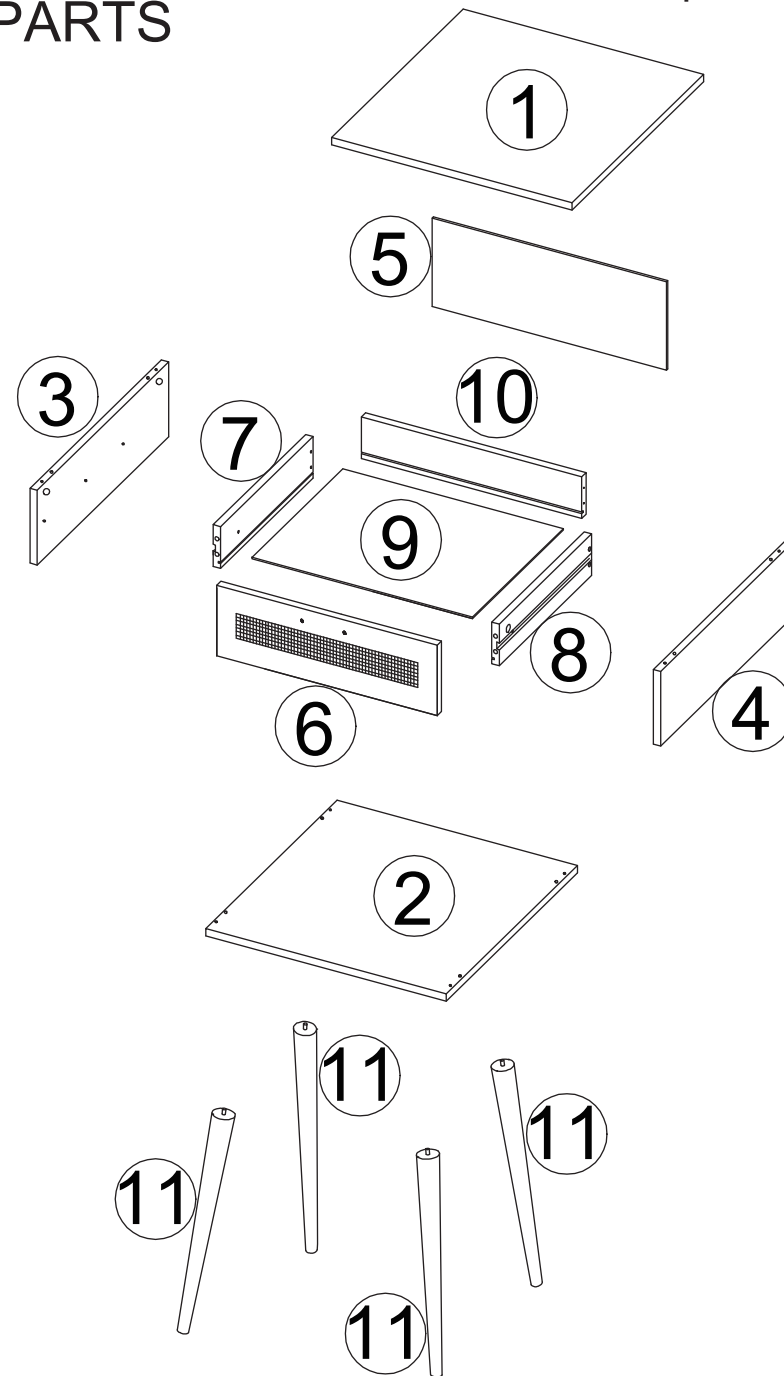


1

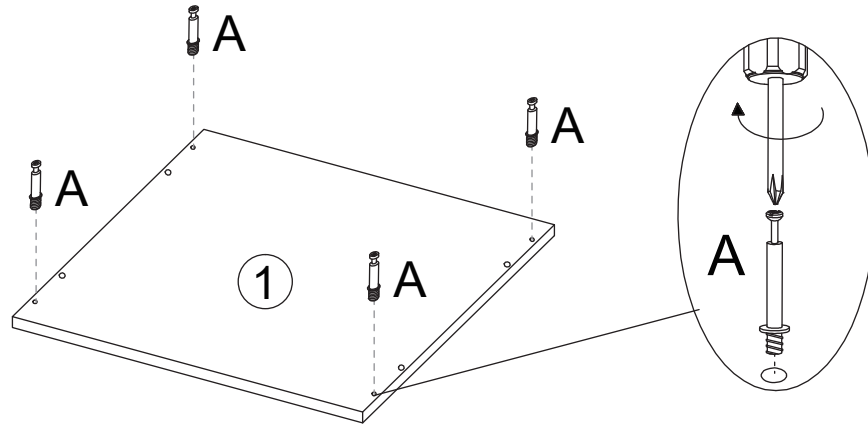




A	x4
	
7x35mm	

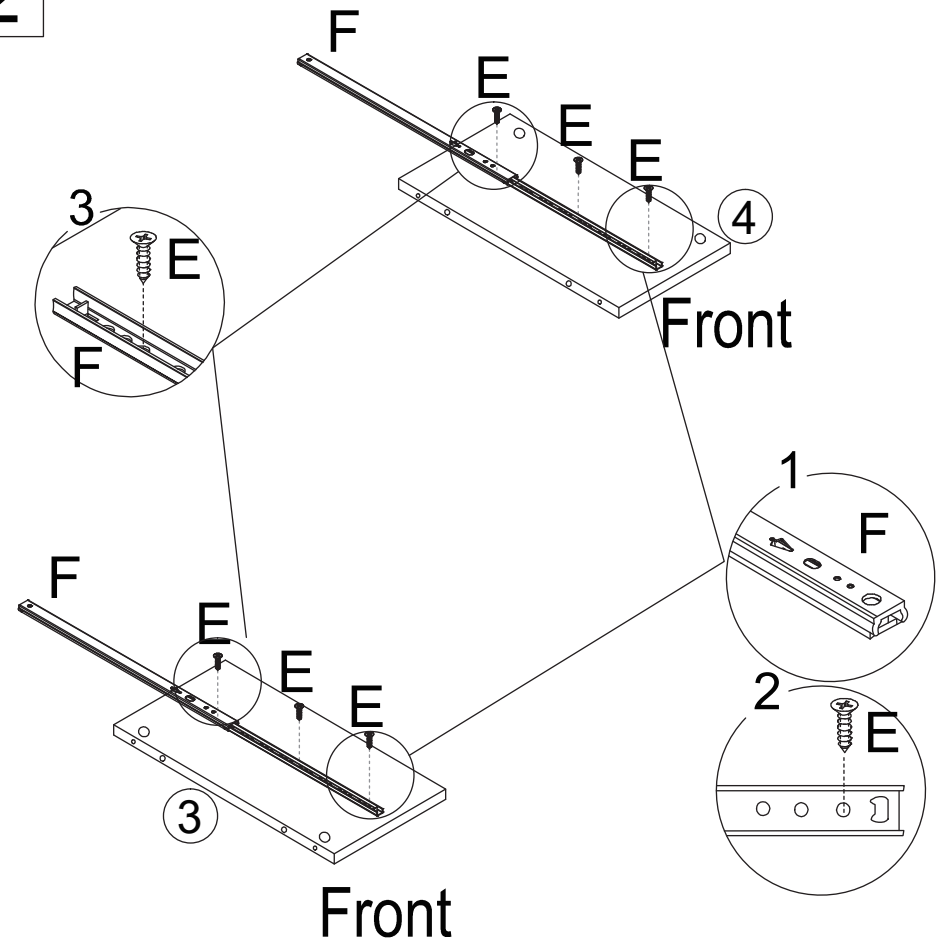
2



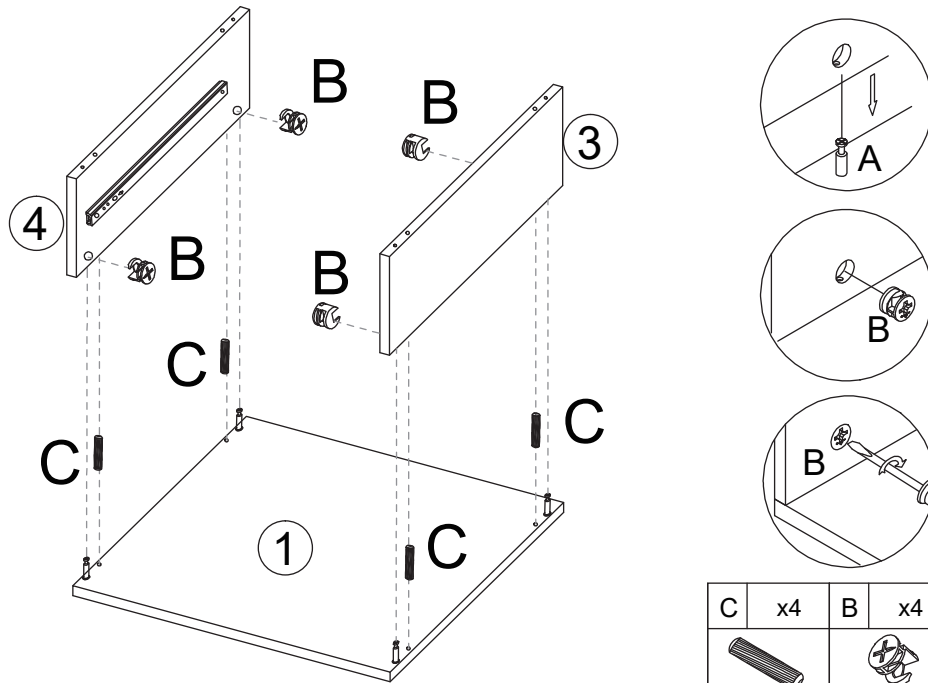

3

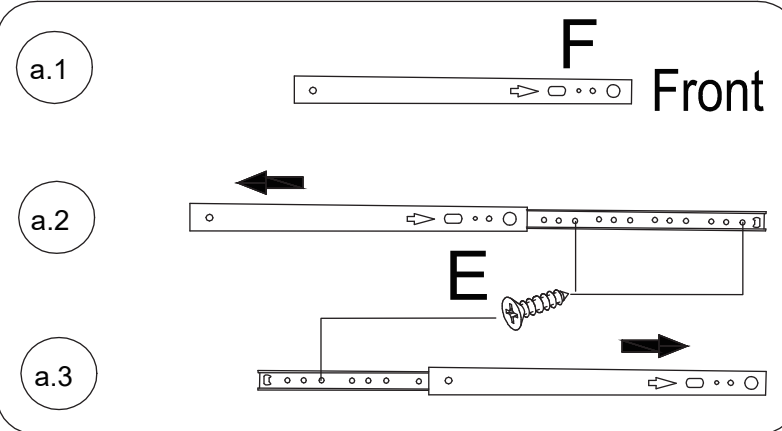




C	x4	B	x4
			
Ø6x30mm		15x12mm	




E	x6	F	x2
			
M3x12mm			


4

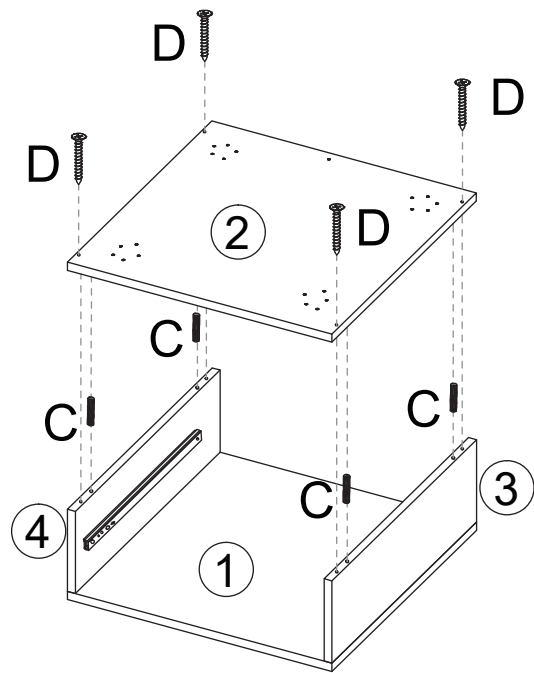


C	x4	D	x4
			
Ø6x30mm		M4x40mm	

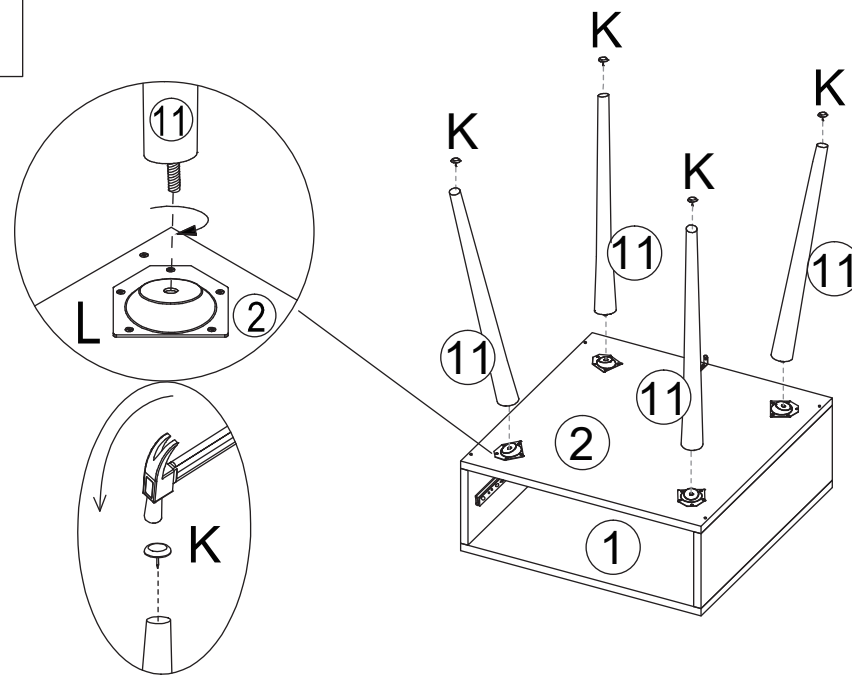


6




K	x4
	

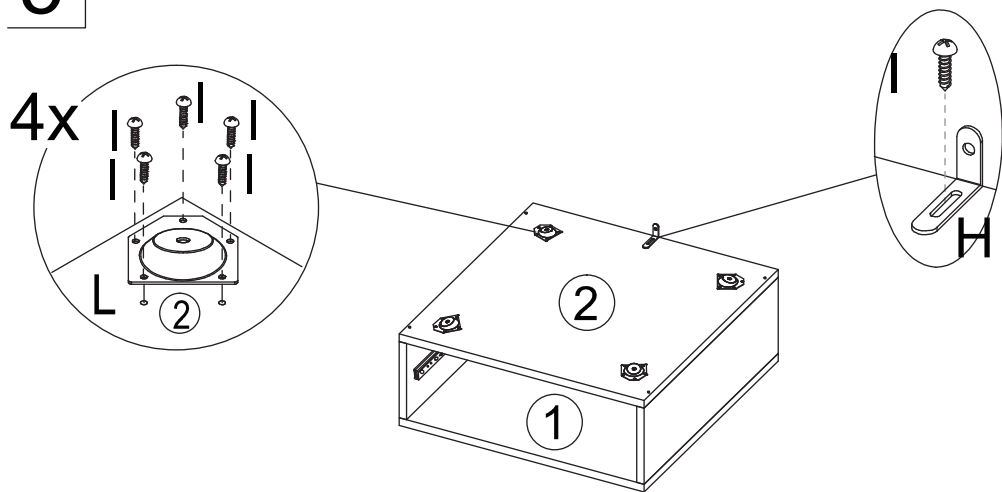



5







H	x1	L	x4	I	x21
					
				M4x12mm	

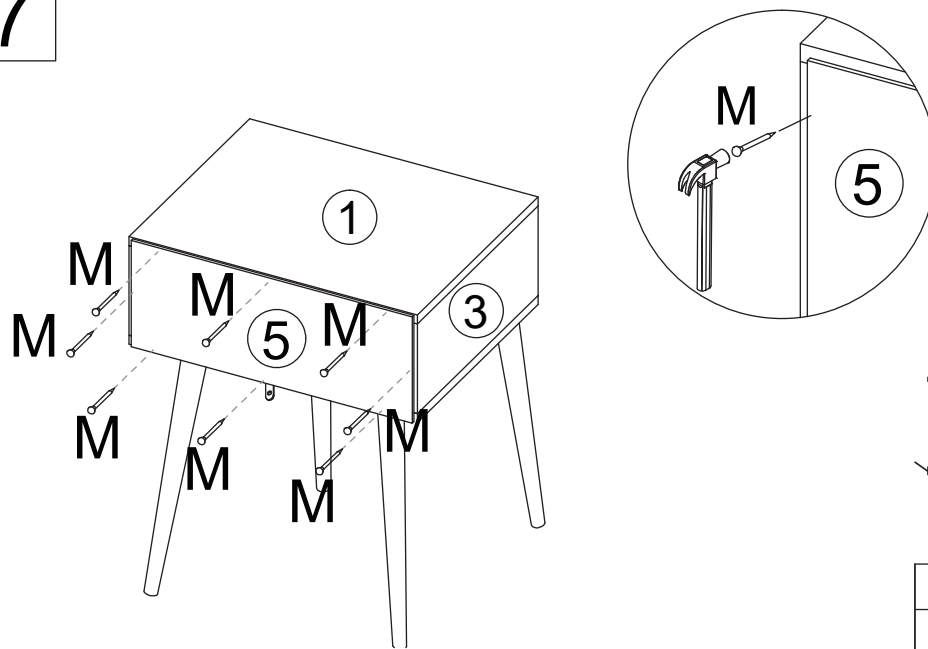





7

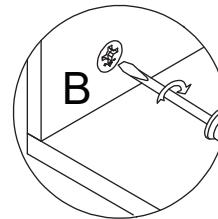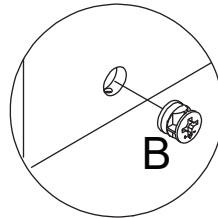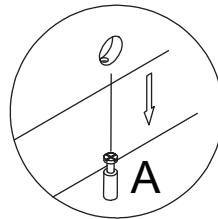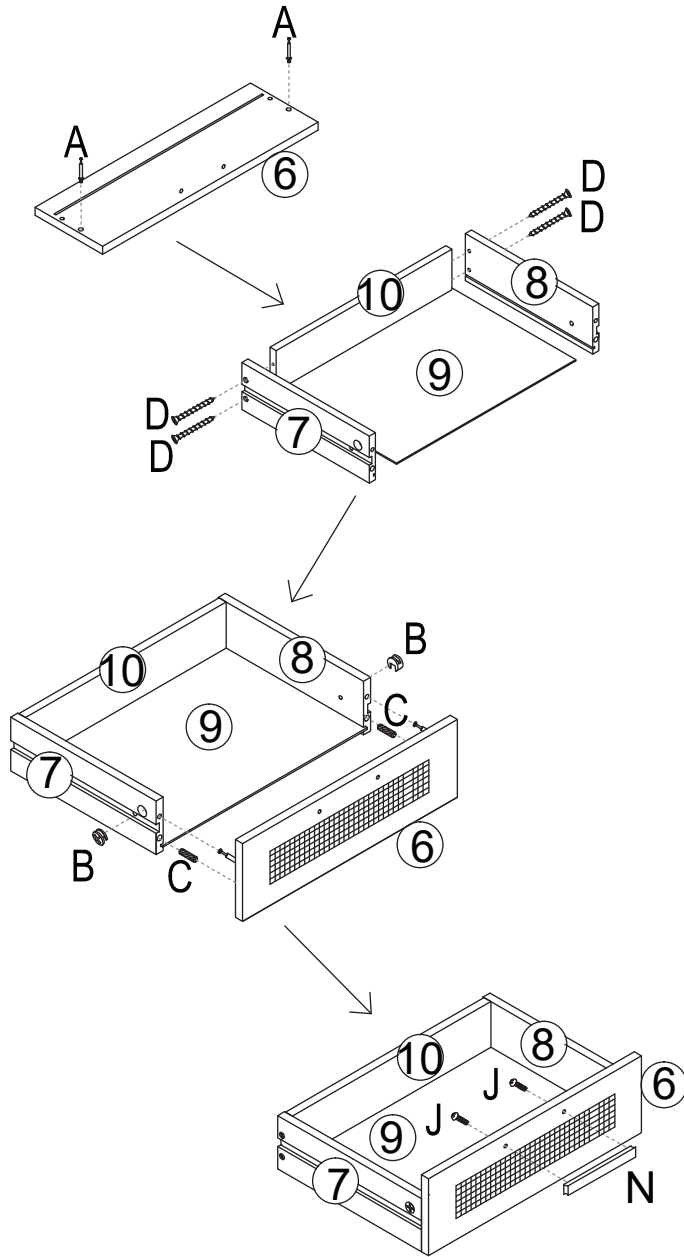


	
	
	
M	x8
	

8



A	x2	B	x2	C	x2	D	x4	N	x1	J	x2
											
7x35mm		15x12mm		Ø6x30mm		M4x40mm				M4x18mm	

9

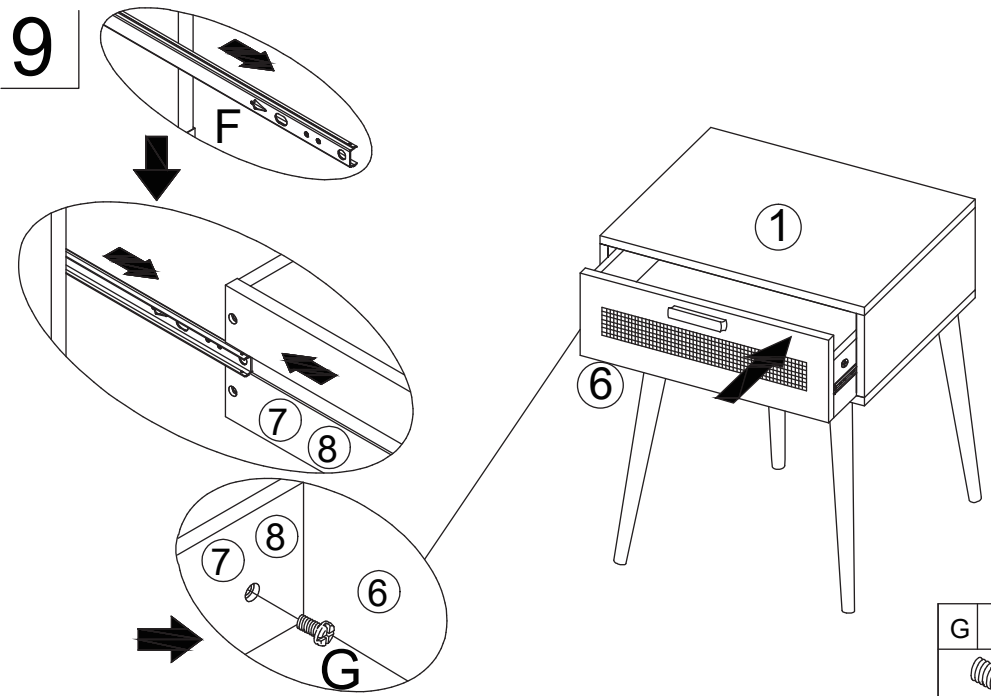




Screw from the inside of the drawers

G	x2
	
M4x10mm	

10

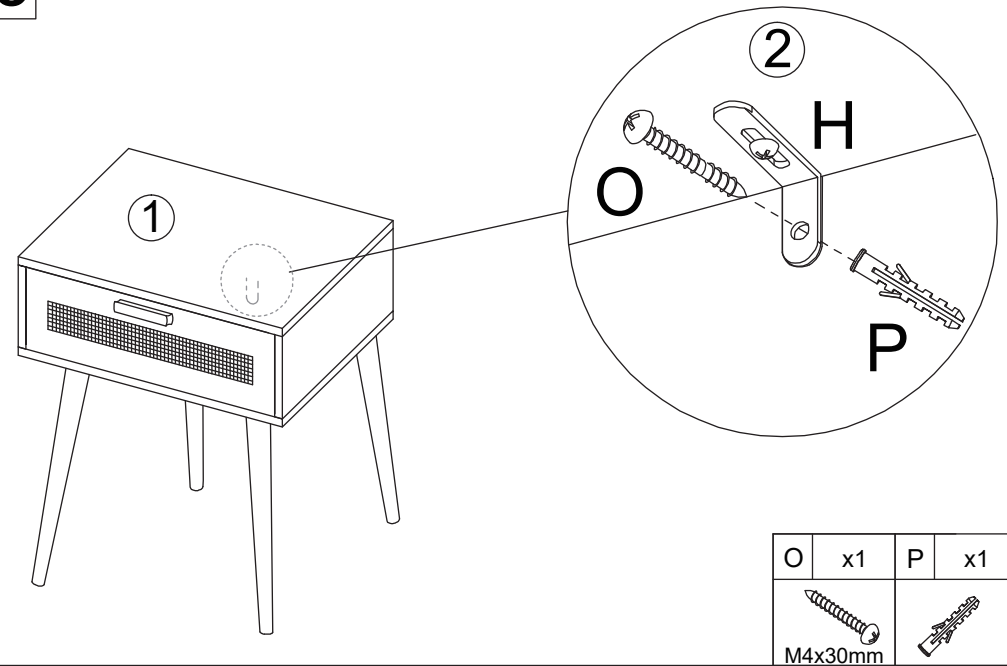Pre-drill hole in wall



O	x1	P	x1
			
M4x30mm			