








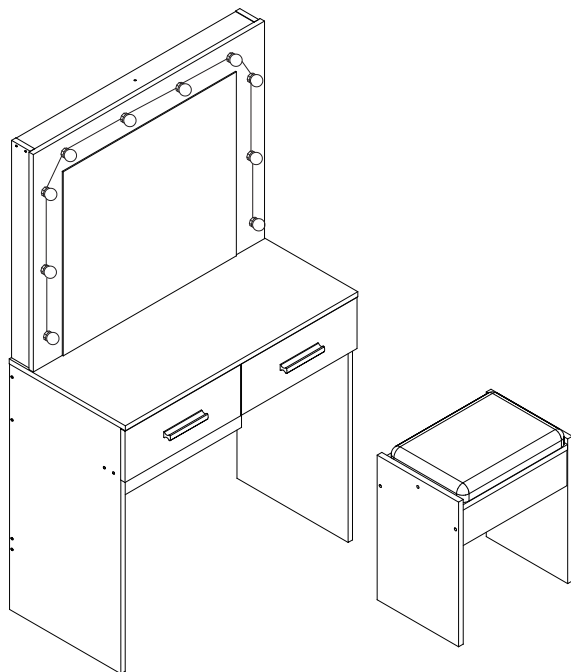




MODEL:DT-ST-B17

VERSION: 1.0

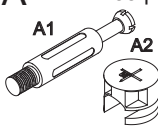


ASSEMBLY INSTRUCTIONS






HARDWARE

A 35 pcs 	B 18 pcs 	D 20 pcs 	E 13 pcs 	
F 8 pcs 	I 12 pcs 	K 2 pcs 	M 2 pcs 	N 17 pcs 
	40x8	14x3.5mm	35*3.5MM	50x7mm
				40x5mm
				hole sticker

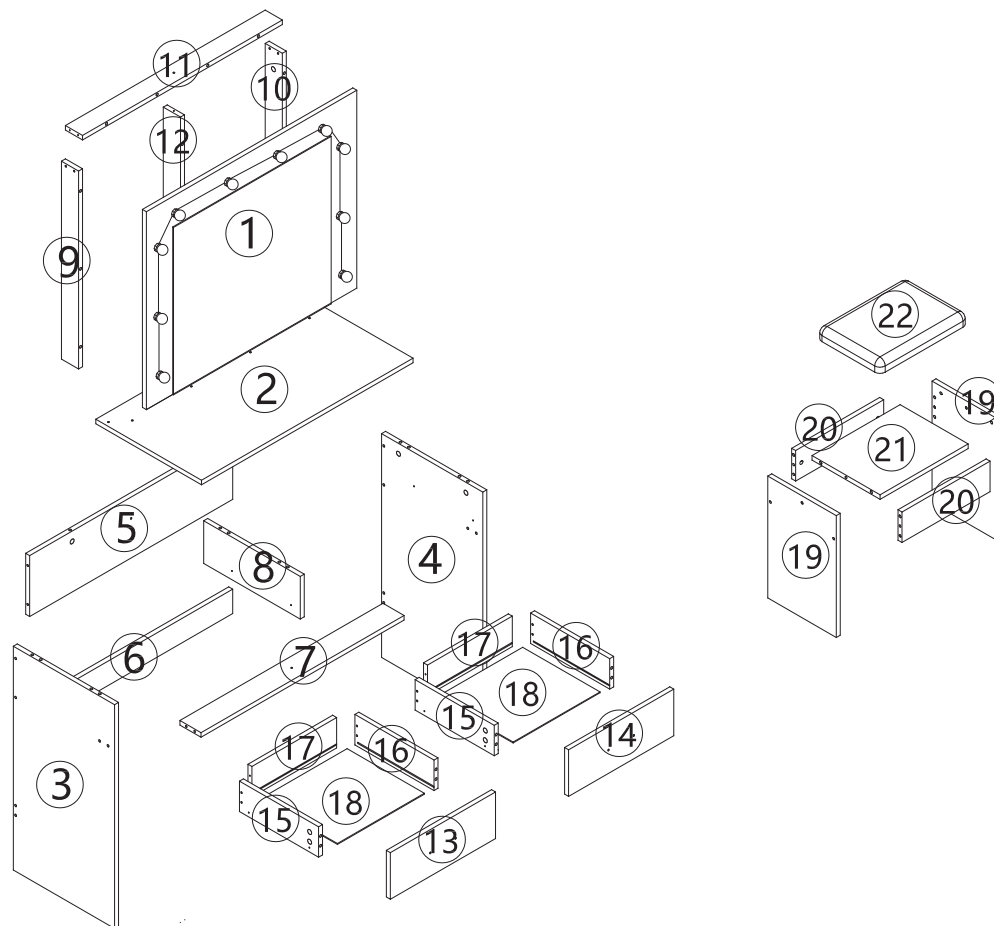PARTS



COMPONENTS

C 2 sets 	G 1 sets 	H 2 sets 	J 6 sets 	L 2 sets 
				L1 L2 L3 L4 L5

ASSEMBLY CHECKLIST



Read through the instructions carefully before starting assembly.



Make sure that you have the required tools. Do not use power tools.



Identify and lay out all parts to familiarise yourself with them.






Do not fully tighten all screws until the step or process has been completed.

USEFUL INFORMATION



1. Never use power tools for assembly. They can damage the components or hardware if used incorrectly.
2. The most common mistakes made during assembly are using the wrong hardware or getting components from back to front.
3. Always assemble the product on a soft surface such as a carpet or cardboard to avoid scratching or damaging the surface of the product.

1

Press and pull C2 from C1

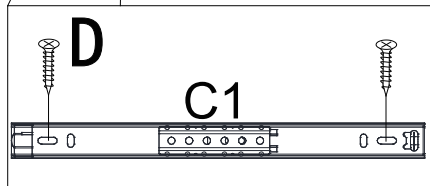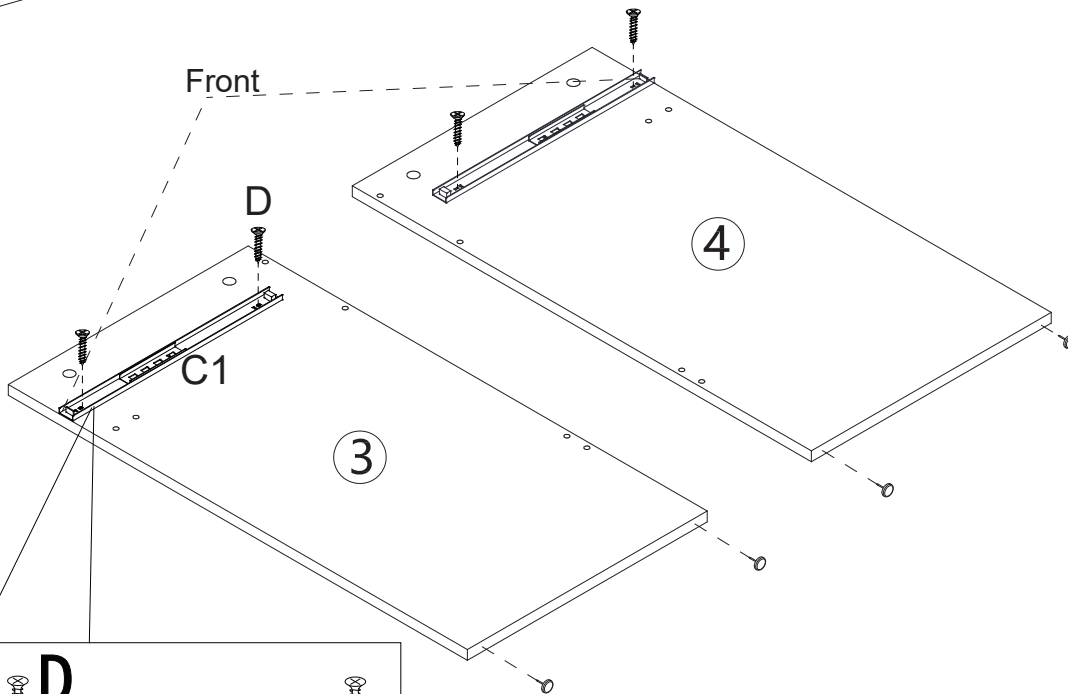
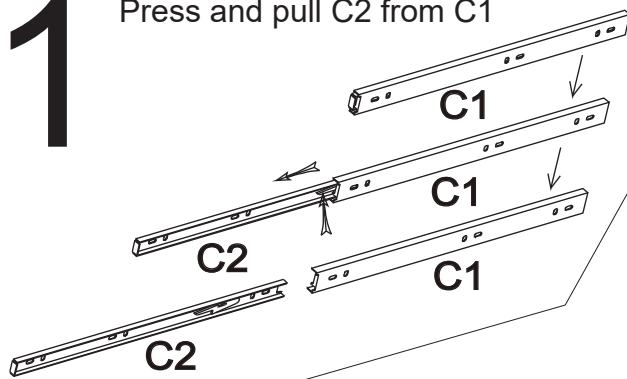


C1 x 2
D x 4

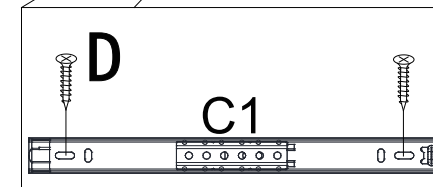
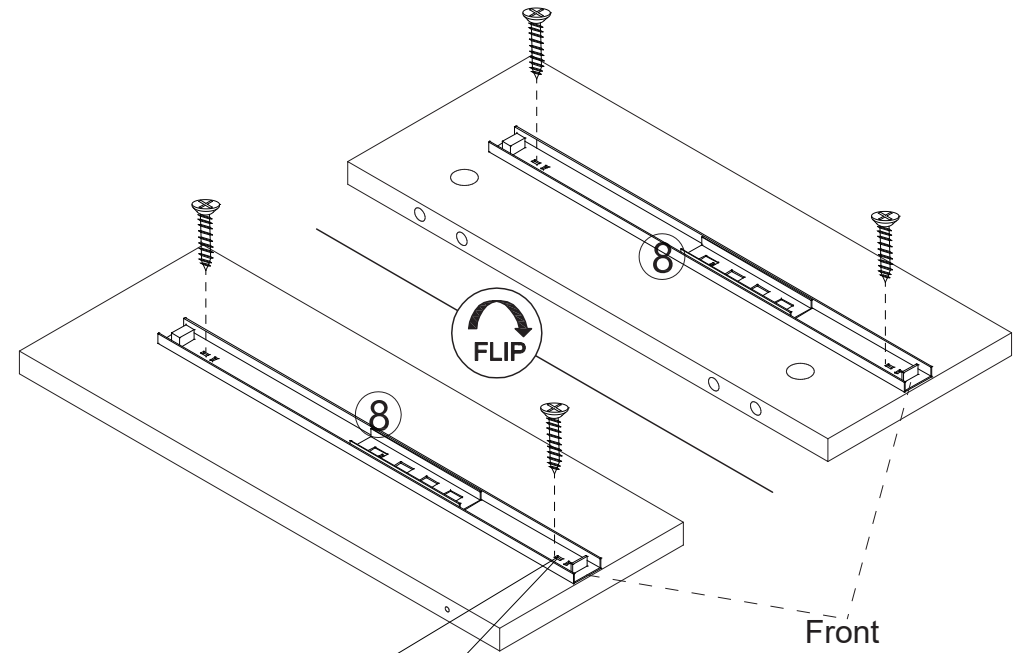


C1 x 2
D x 4



2

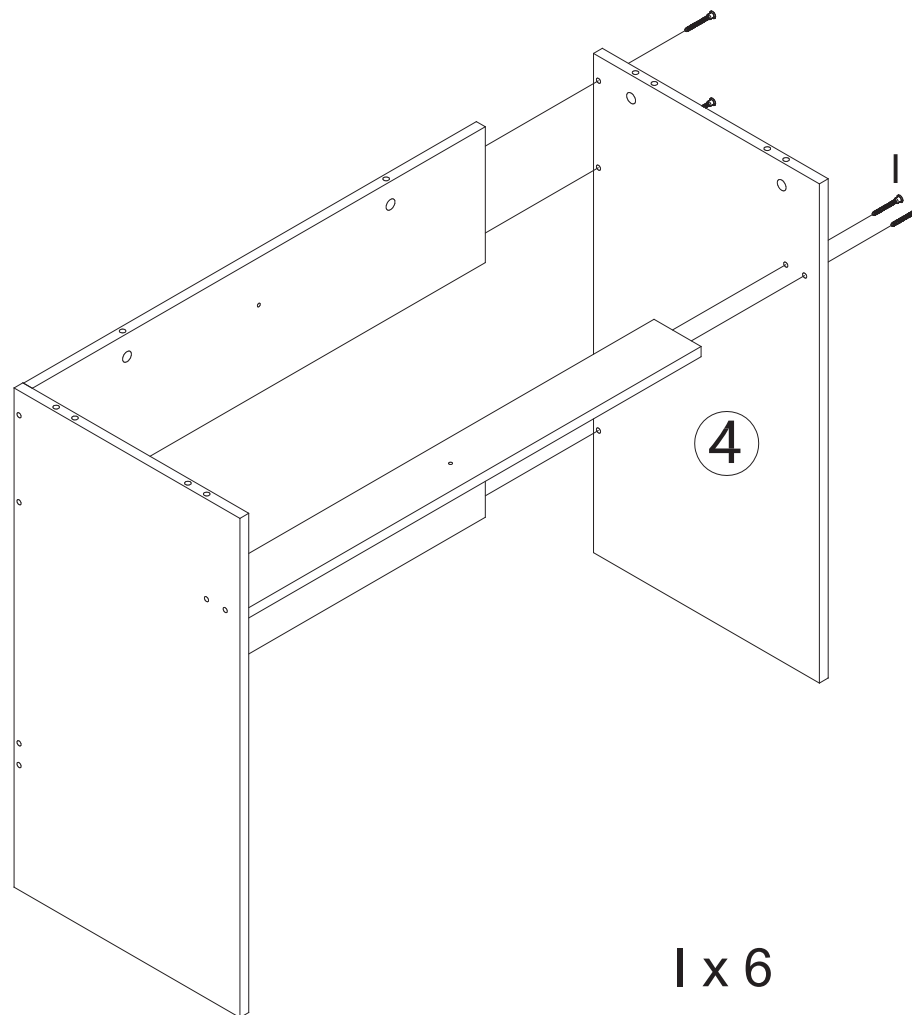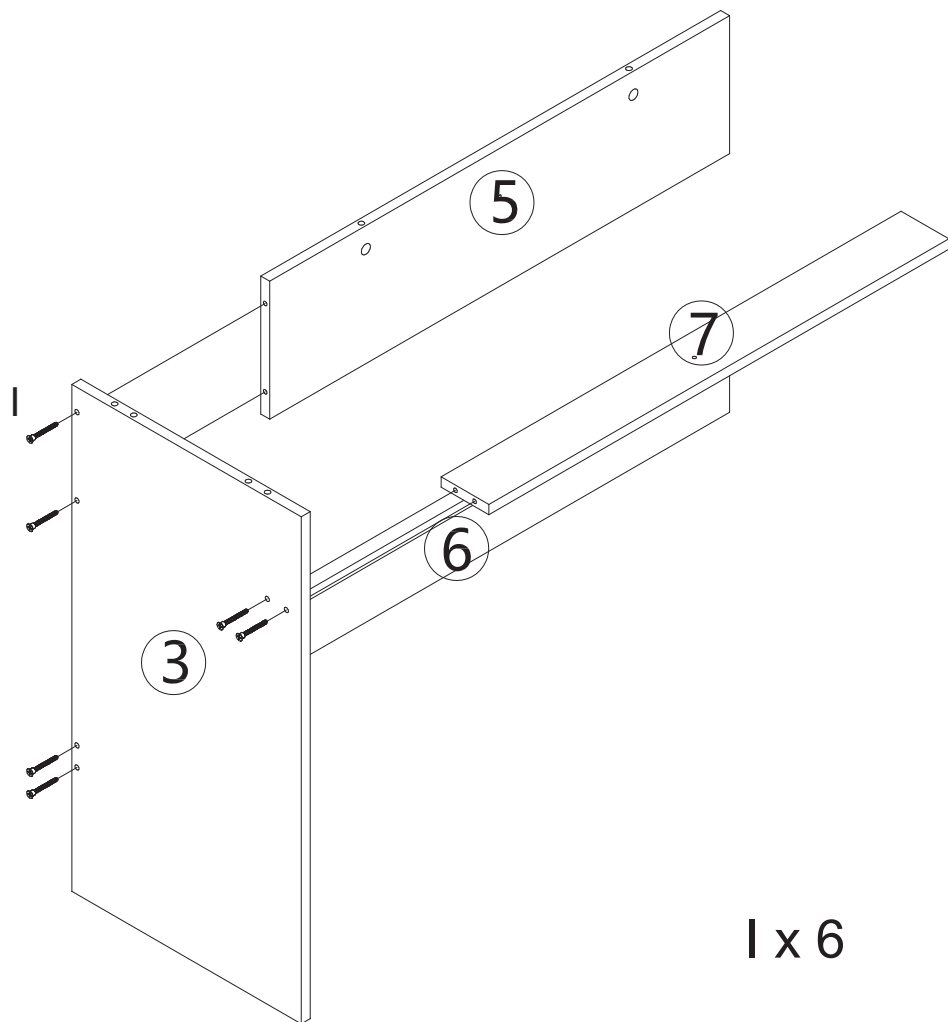


3

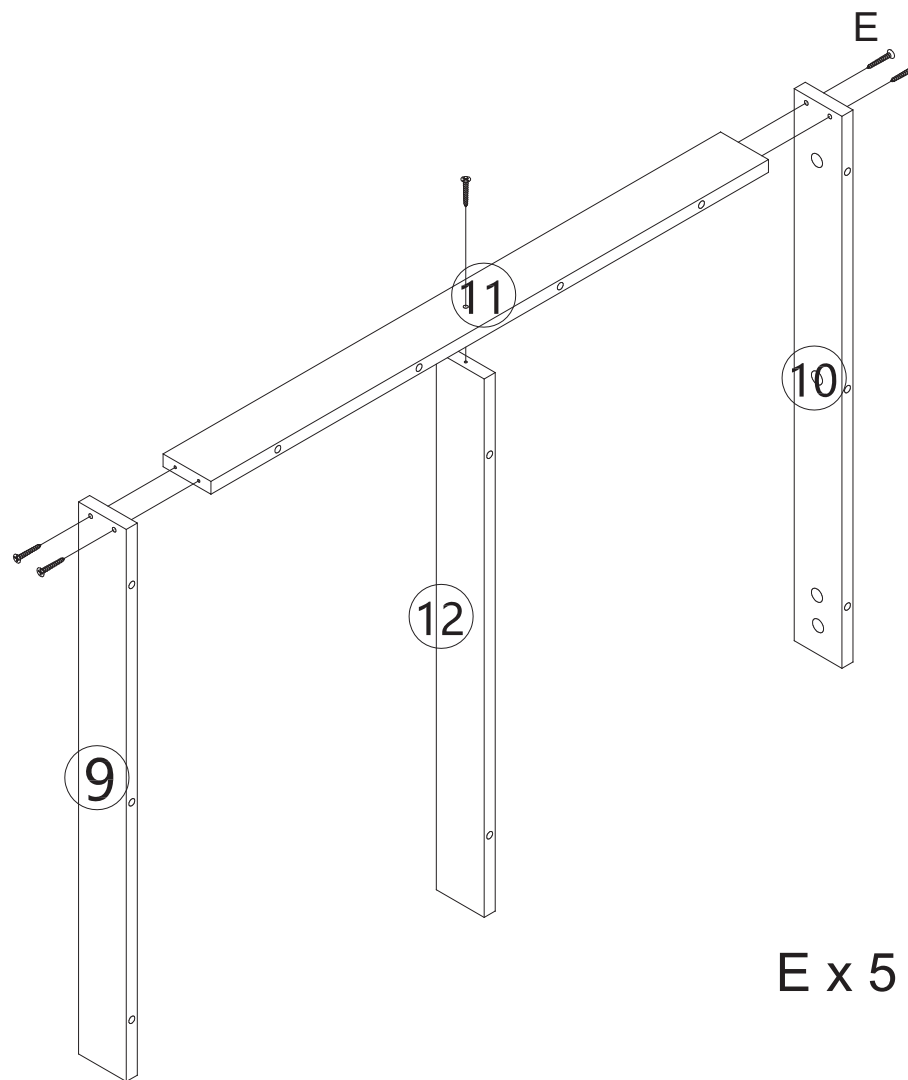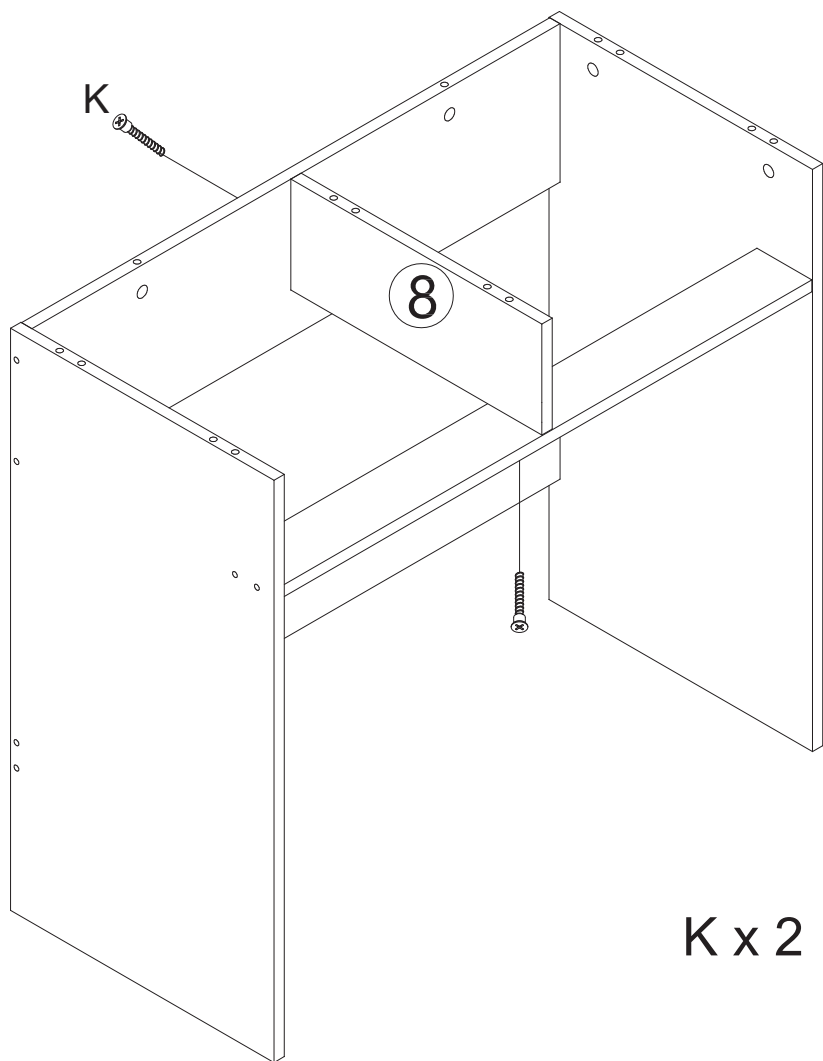

4

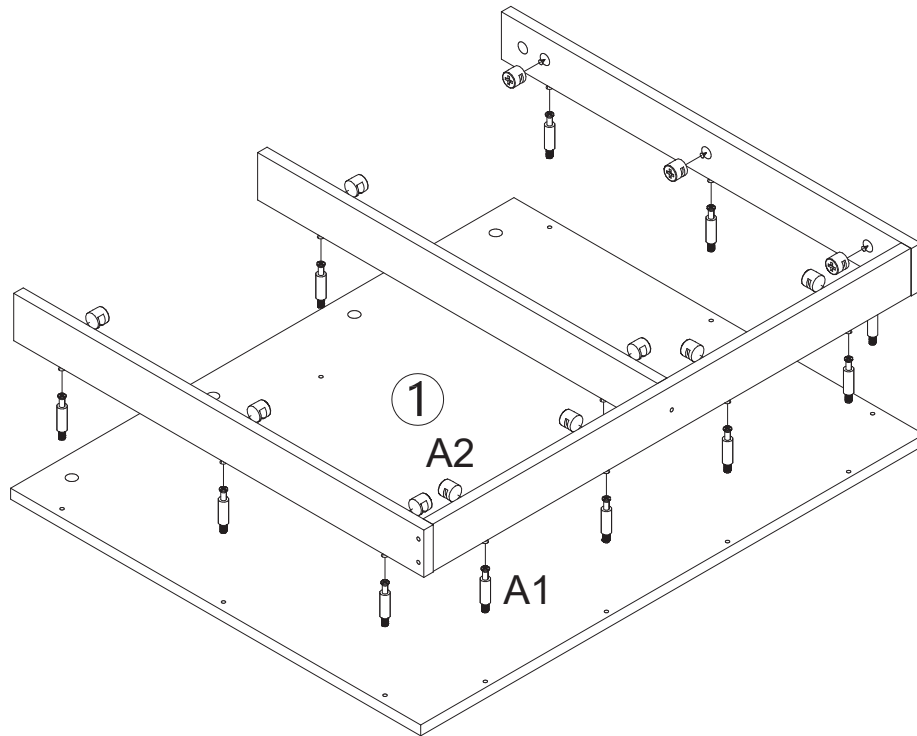
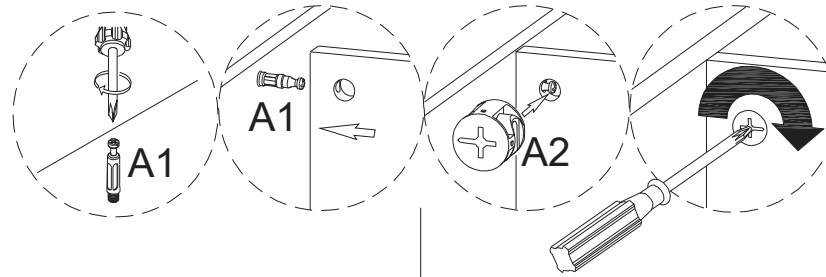


A x 12


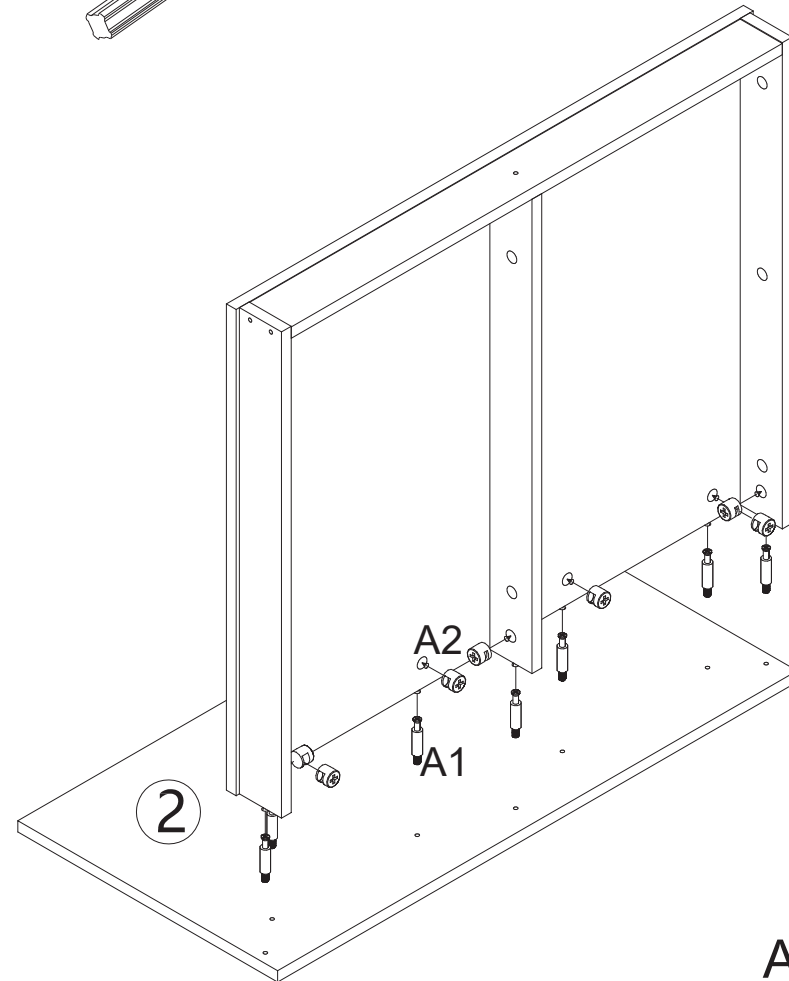


A x 7

5

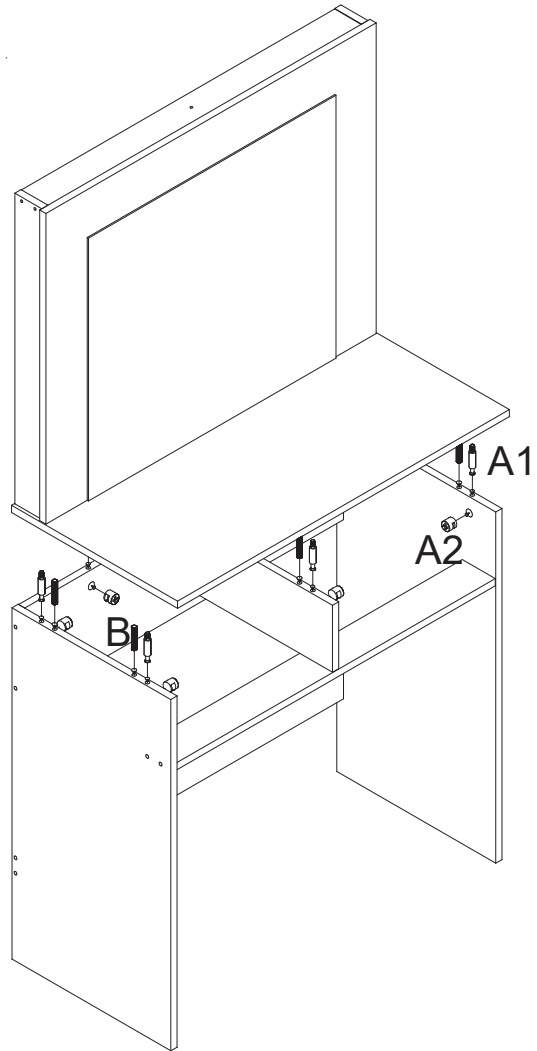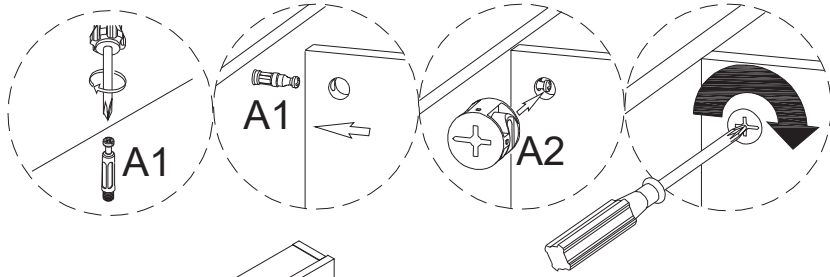


A x 8
B x 6

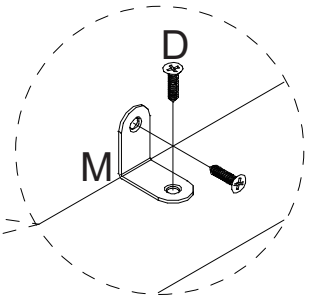
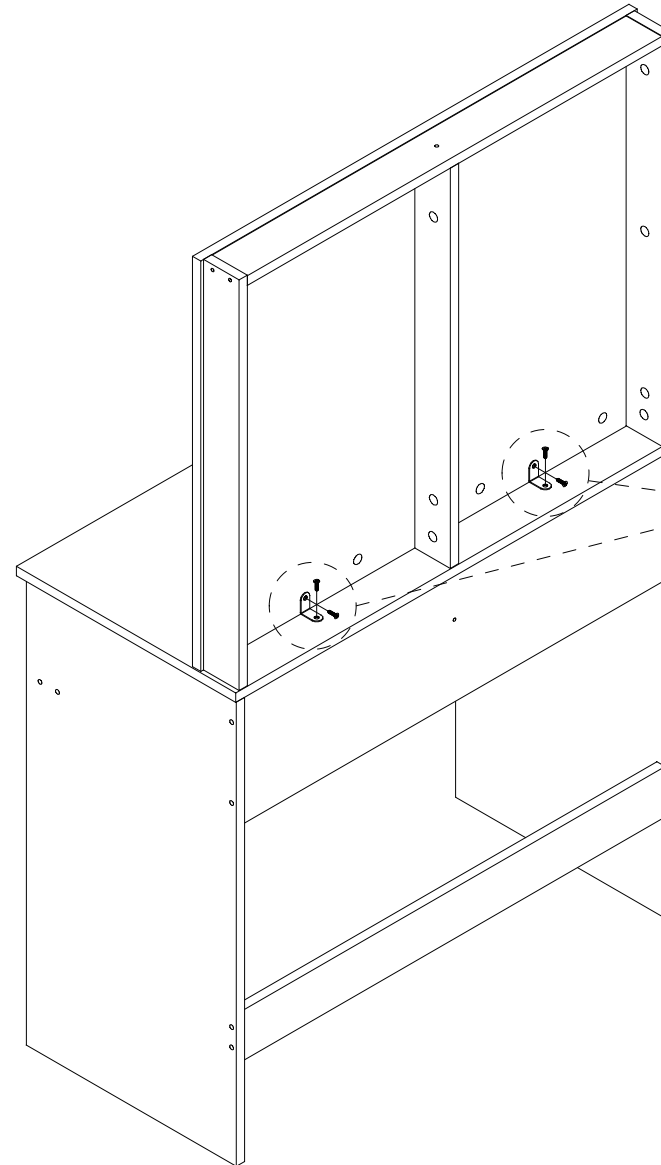


M x 2
D x 4


6

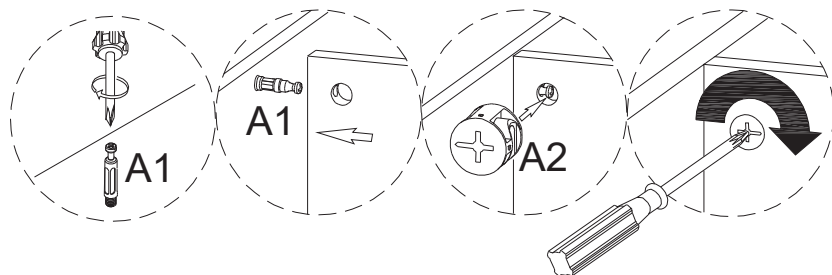


6-1

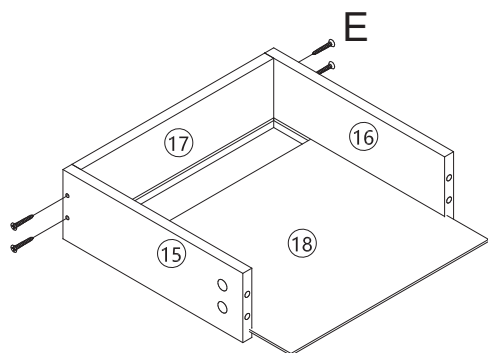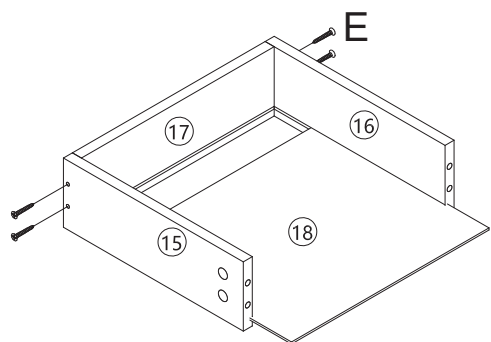

6-2



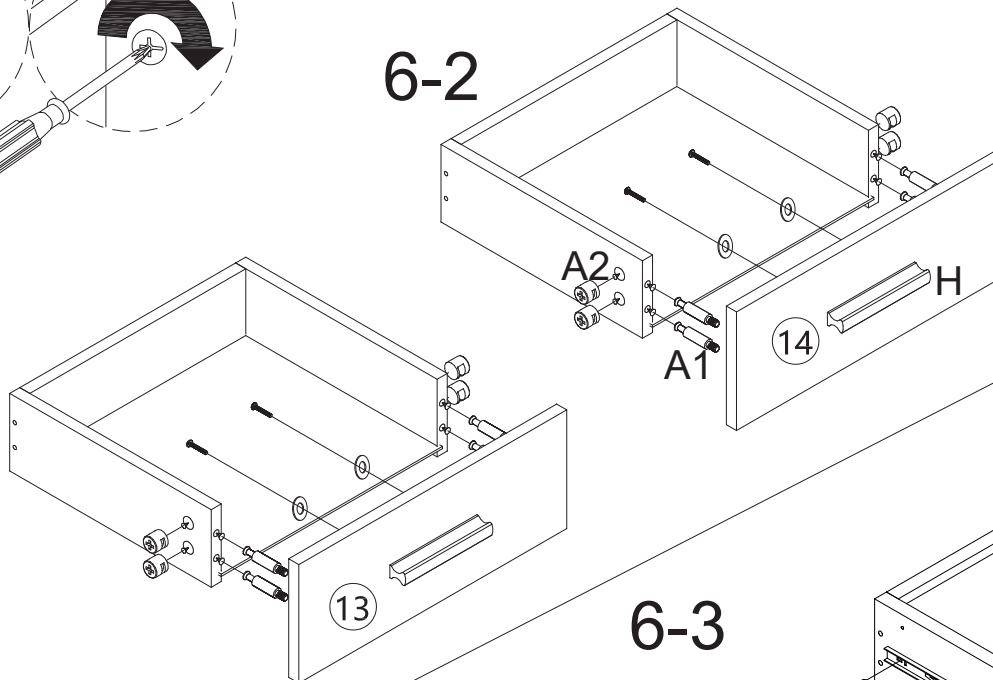


6-3

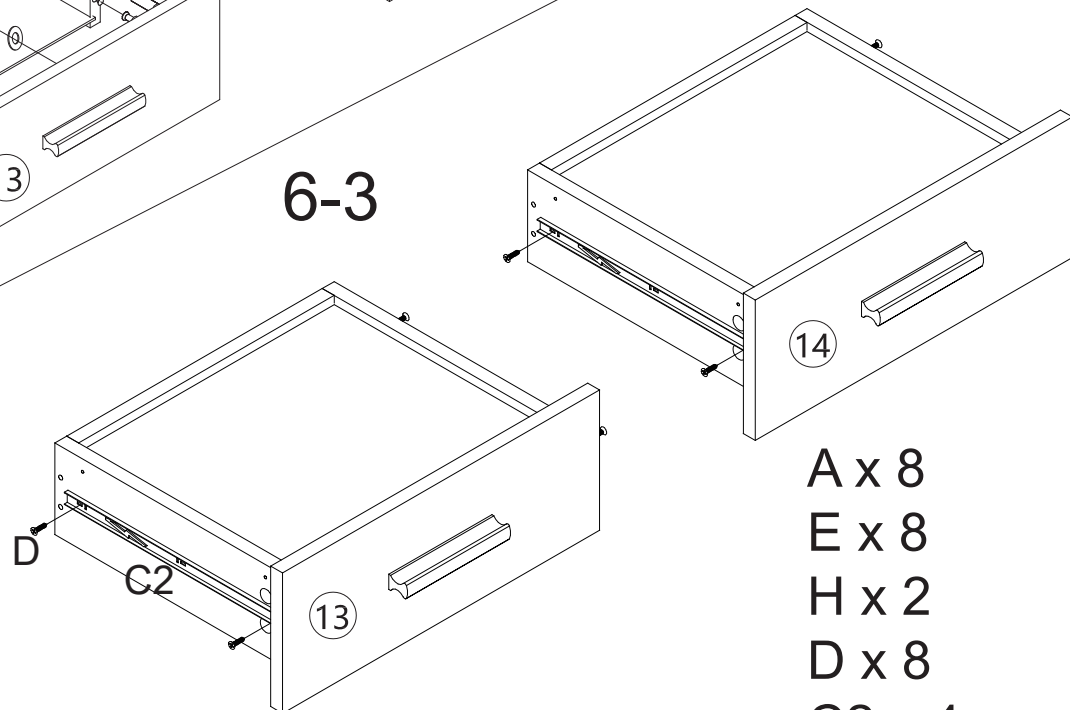

A x 8
 E x 8
 H x 2
 D x 8
 C2 x 4

7

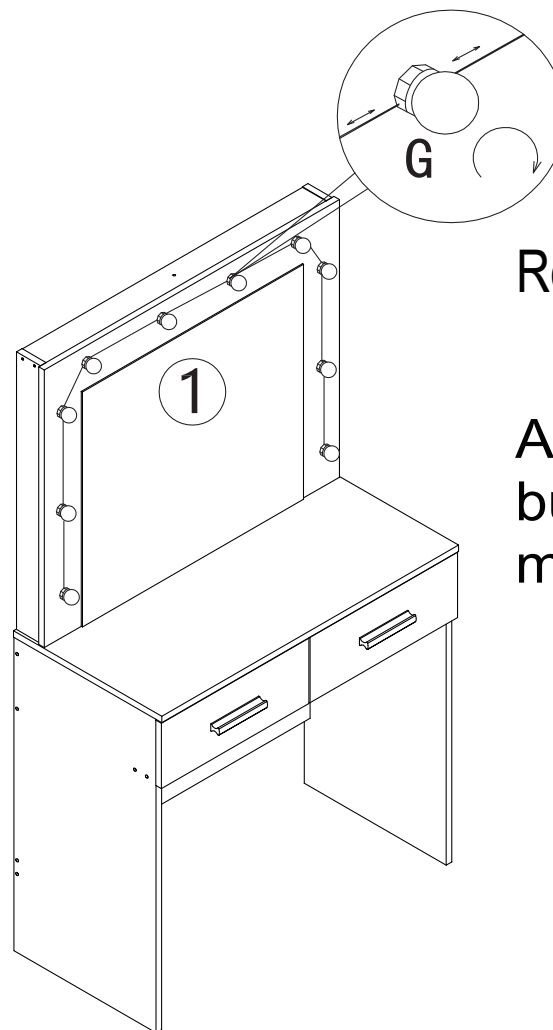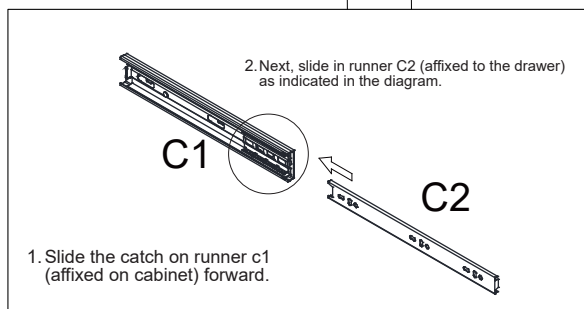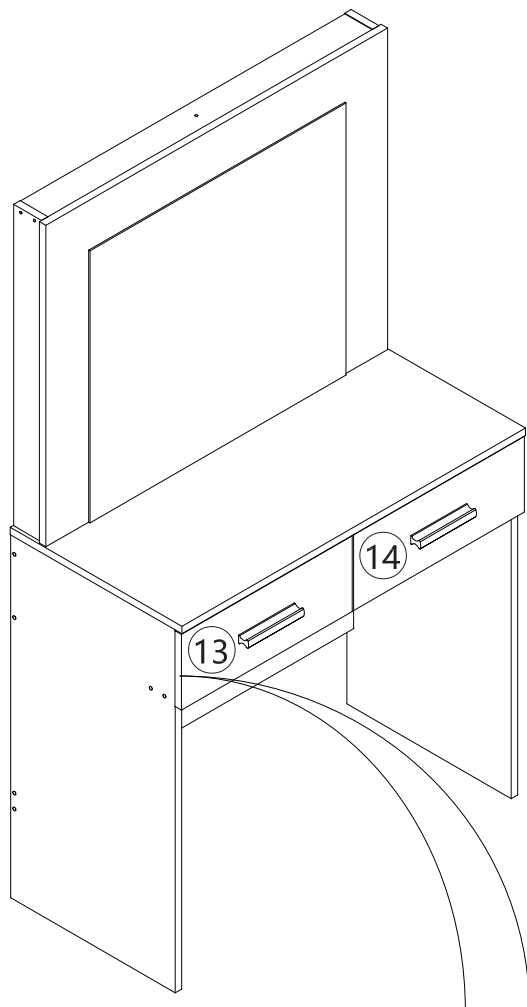


Rotate to lock

Attached the
bubs to the
mirror


refer to
the bub
instruction

G x 1



8

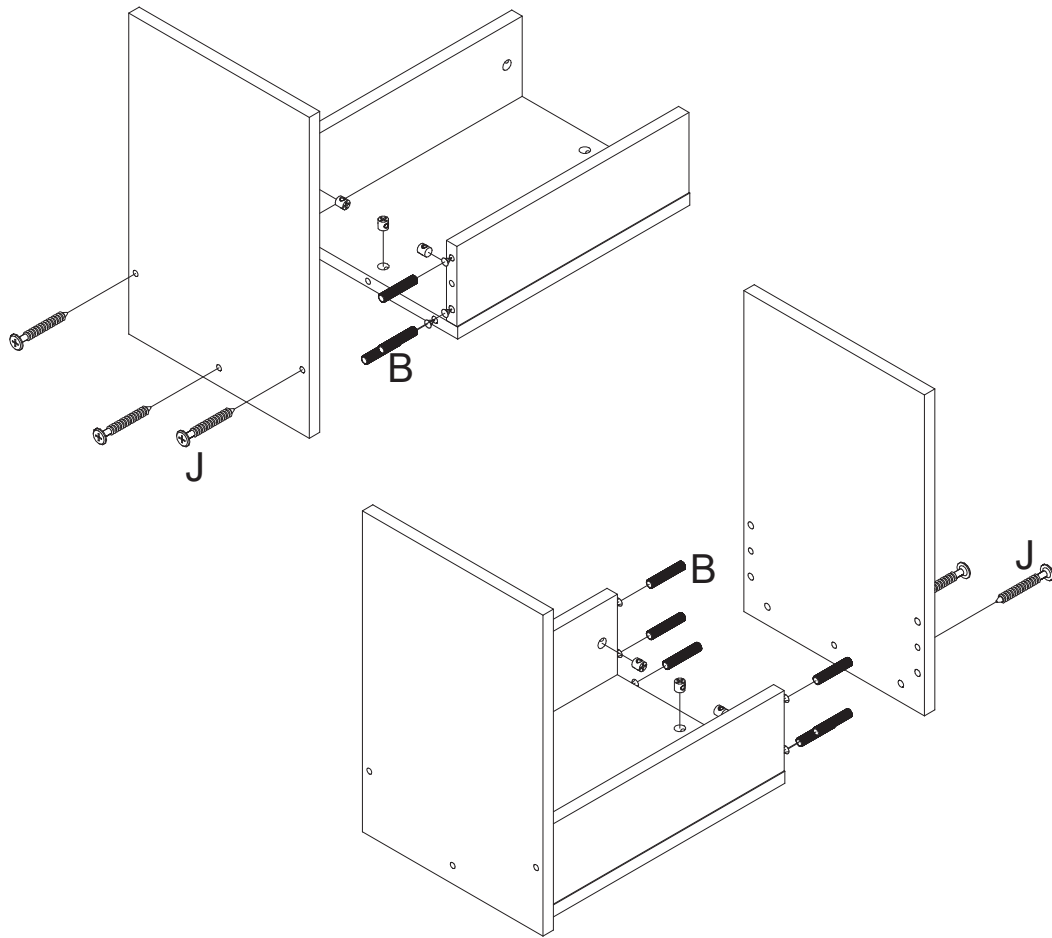


J x 6
B x 12

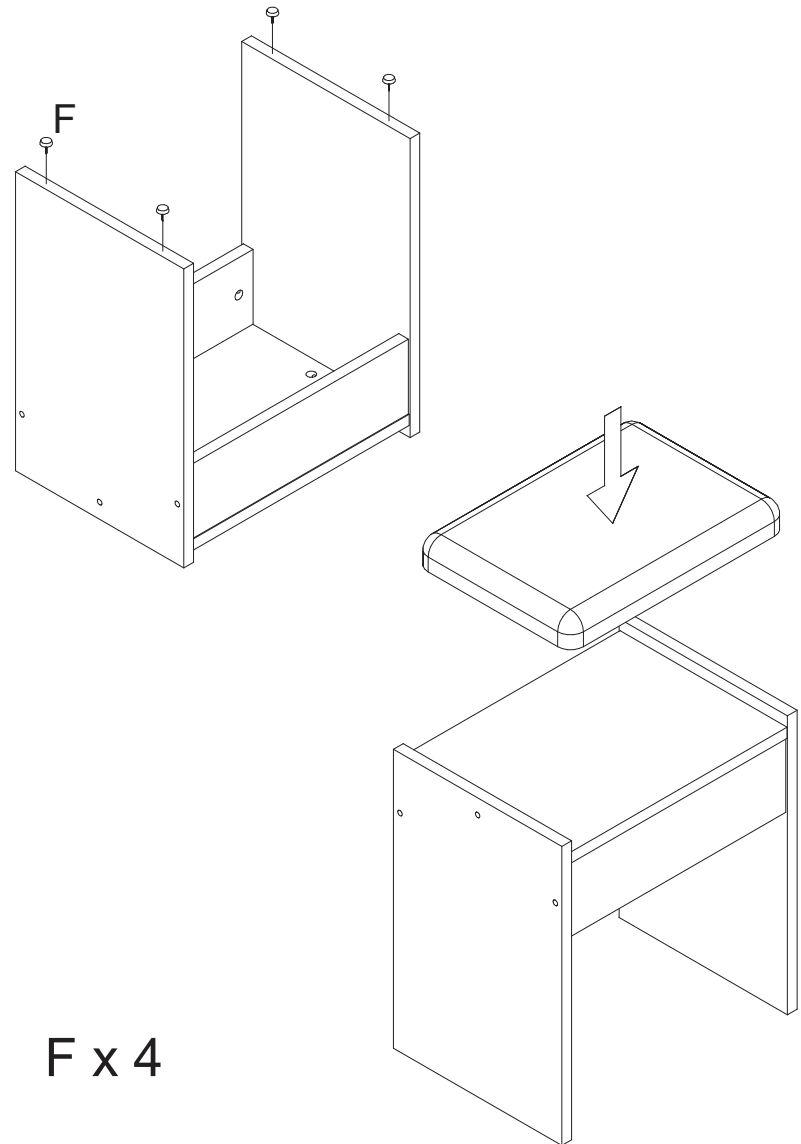


F x 4

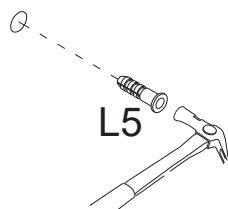


Pre-drilled hole in wall
Lightly tap K5 into hole

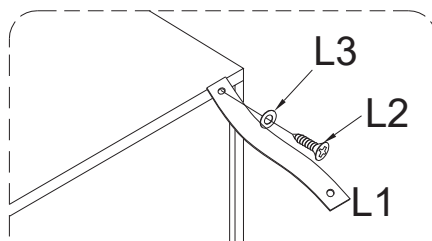


Attach K1 to back of bedside
table with K2 and K3

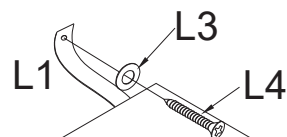

Secure K4 to wall
with K3 and K1

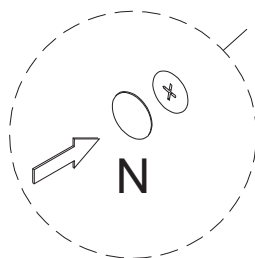

In order to make the
product more beautiful,
please paste hardware N
on the exposed holes

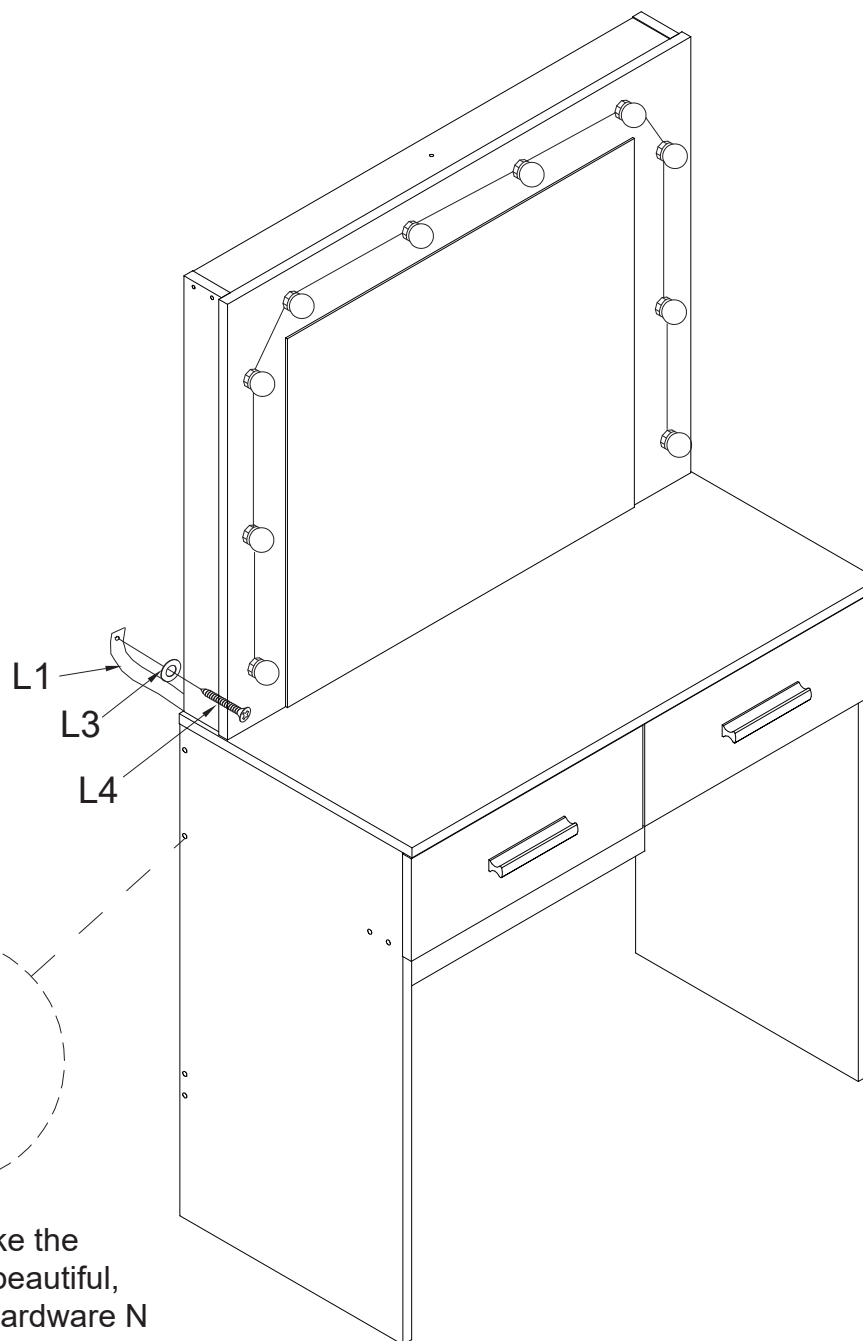

L x 2pcs
N x 17pcs