


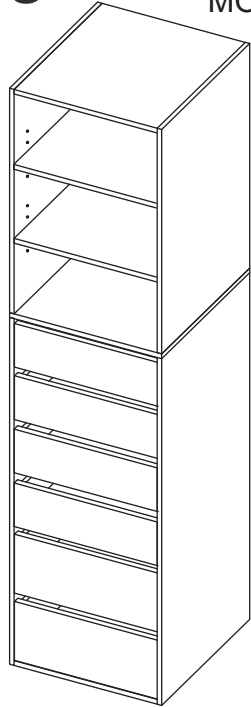


# WARDROBE

MODEL:WA-MEXI-H6D-WH



## PARTS

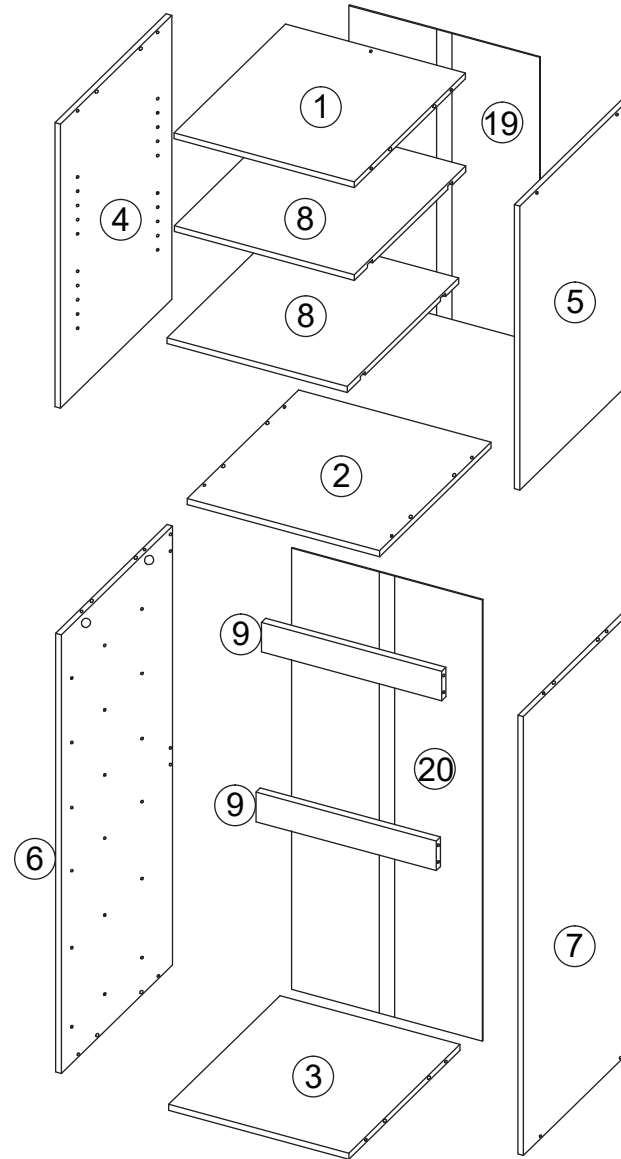


Wipe with dry cloths



## ASSEMBLY INSTRUCTIONS



Please read instructions carefully before assembly.









Two persons and tools required for assembly

### HARDWARE

A	x20	B	x4	C	x16	D	x44	E	x16	F	x1
7x35mm	15x12mm	Ø6x30mm	M4x40mm		M4x30mm						
G	x1	H	x1	I	x1	J	x12	K	x12	L	x36
M4x14mm			M4x11mm		M3x12mm						
M	x24	N	x30	O	x2	P	x16	Q	x4	R	x4
M3x14mm			12x10mm		Ø6x50mm						
S	x8										
7x8mm											


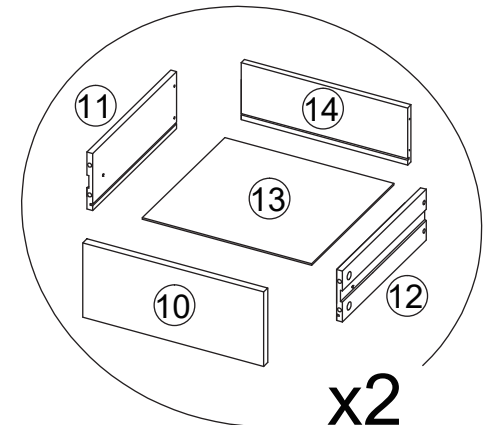
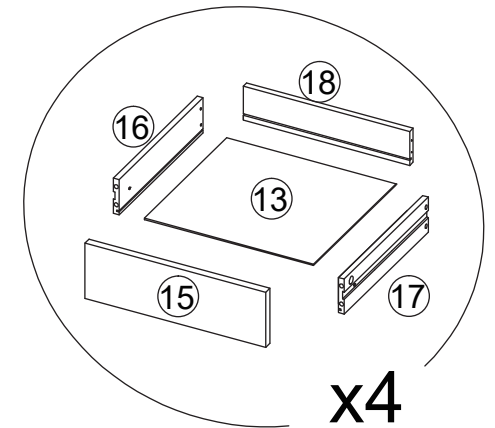


1

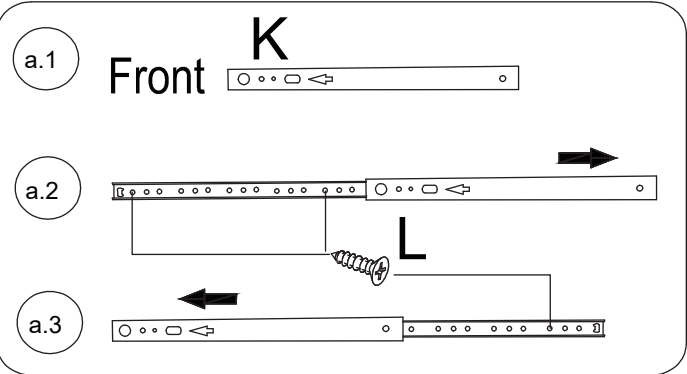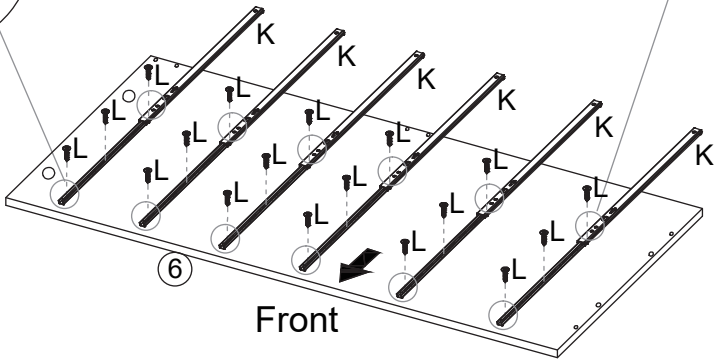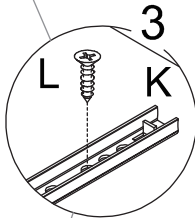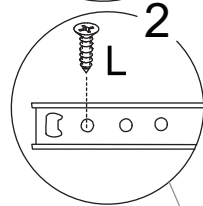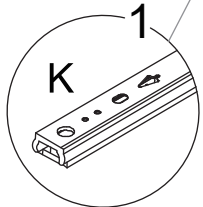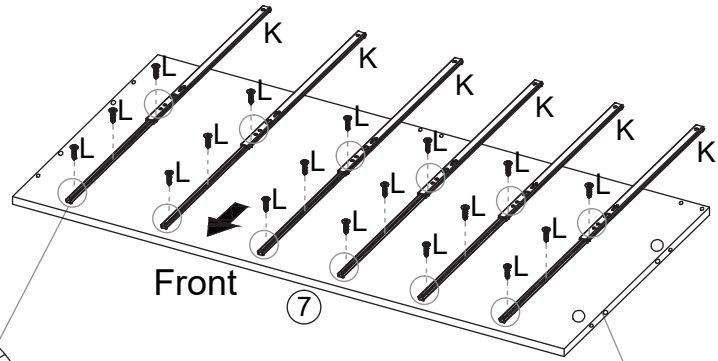





L	x36	K	x12
M3x12mm			

2

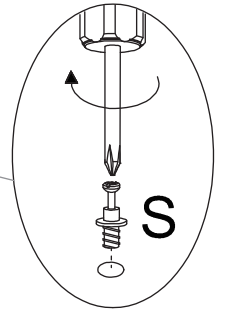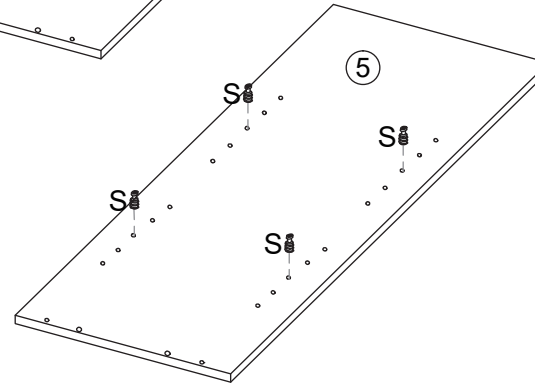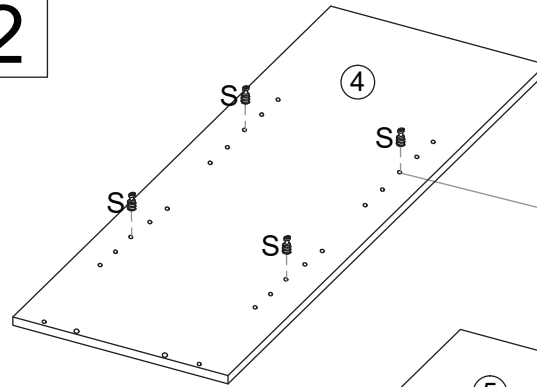


S	x8
7x8mm	


3

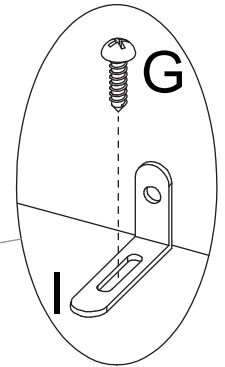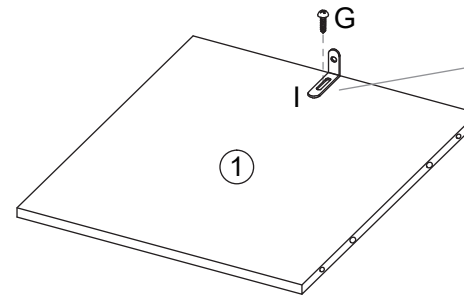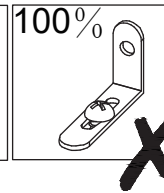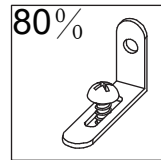


I	x1	G	x1
		M4x14mm	

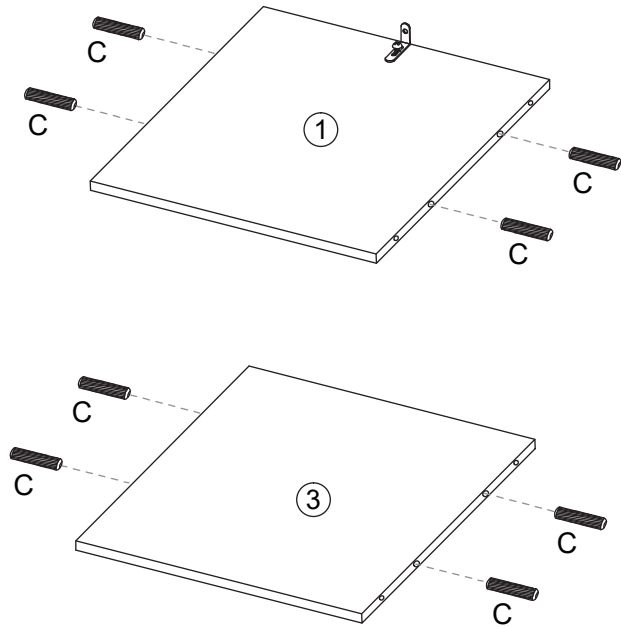

4




C	x8
	
Ø6x30mm	

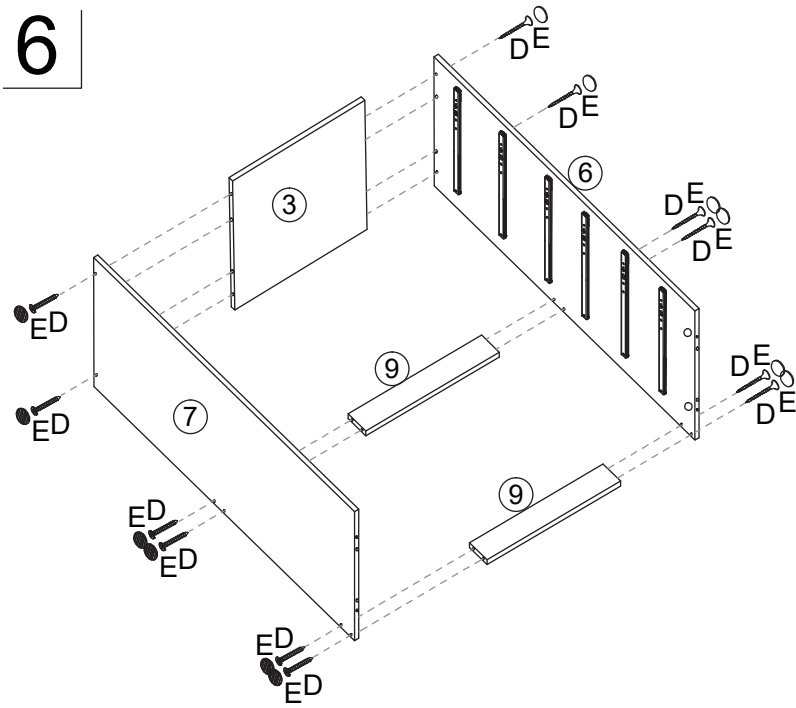
6



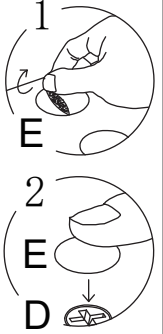


D	x12	E	x12
			
M4x40mm			

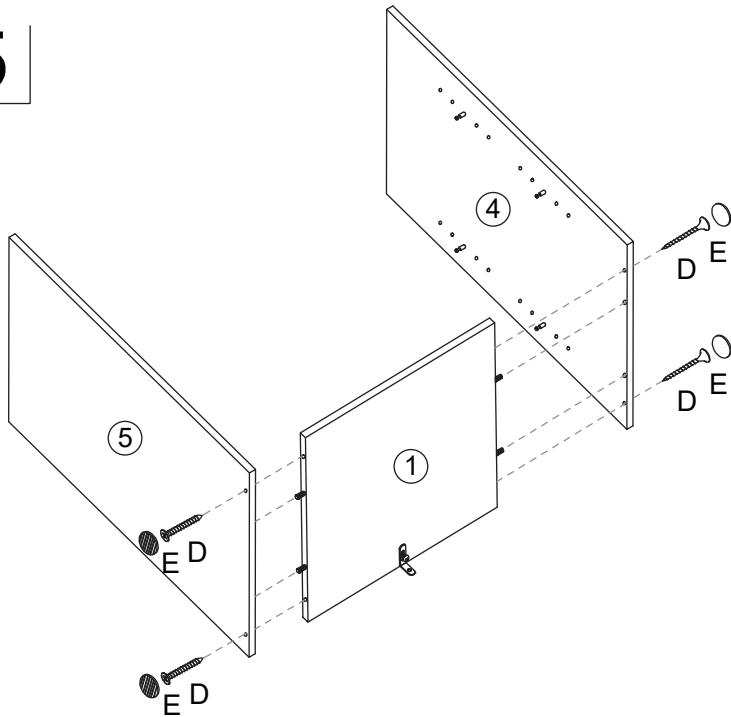


5




D	x4	E	x4
			
M4x40mm			

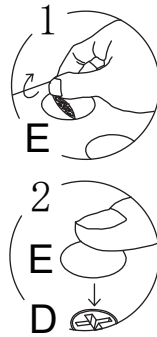


7

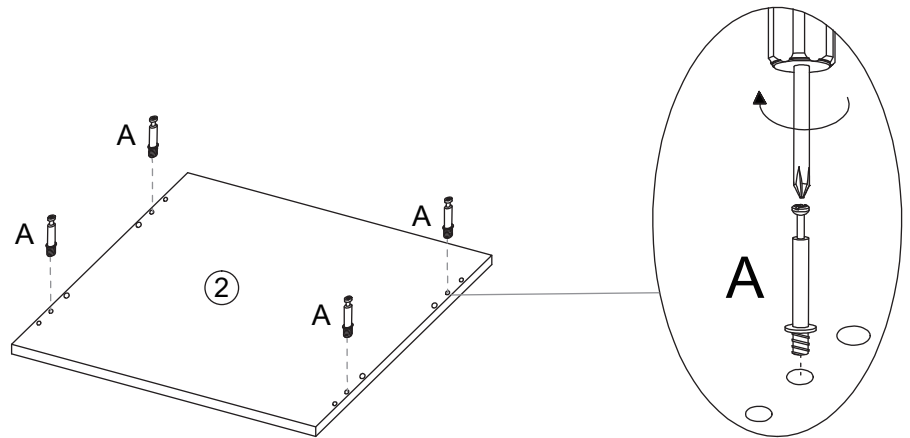


A	x4
	
7x35mm	


# 8

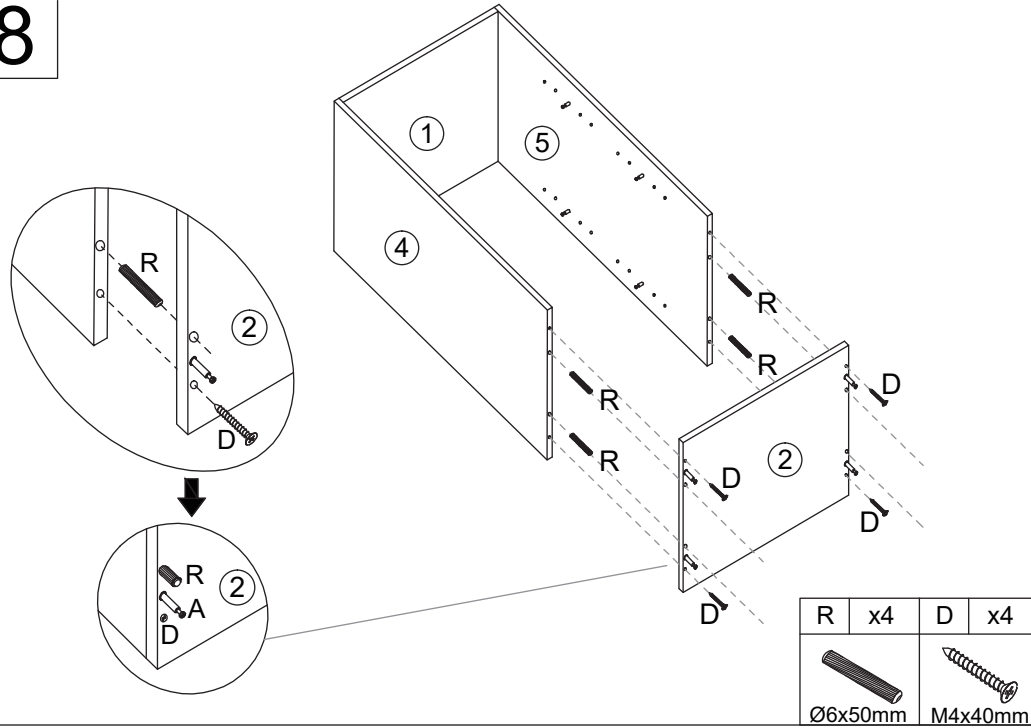


# 10

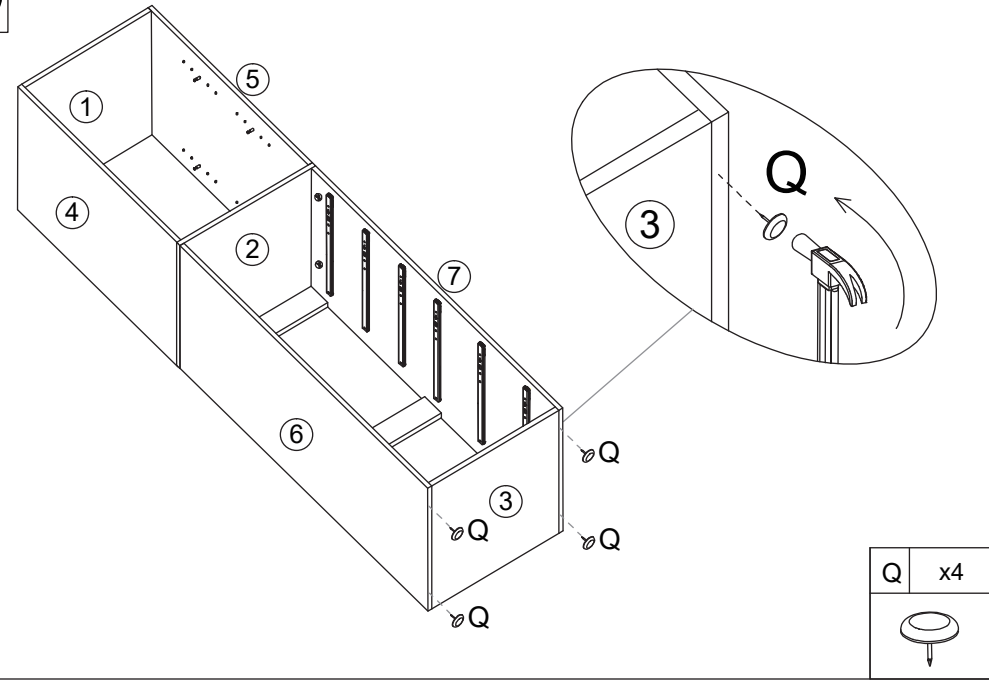






# 9

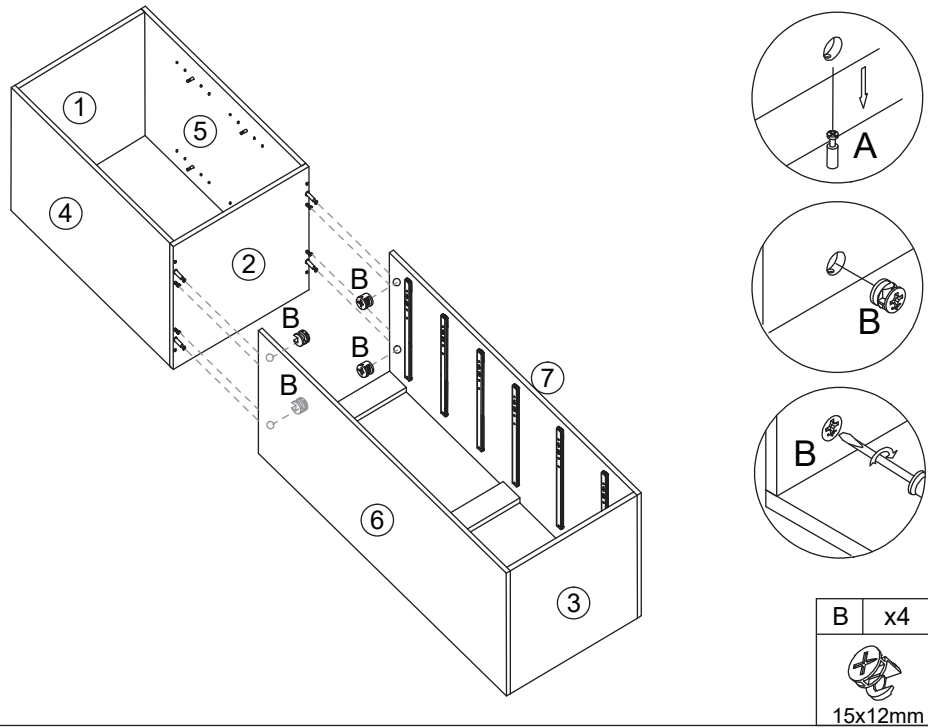

# 11

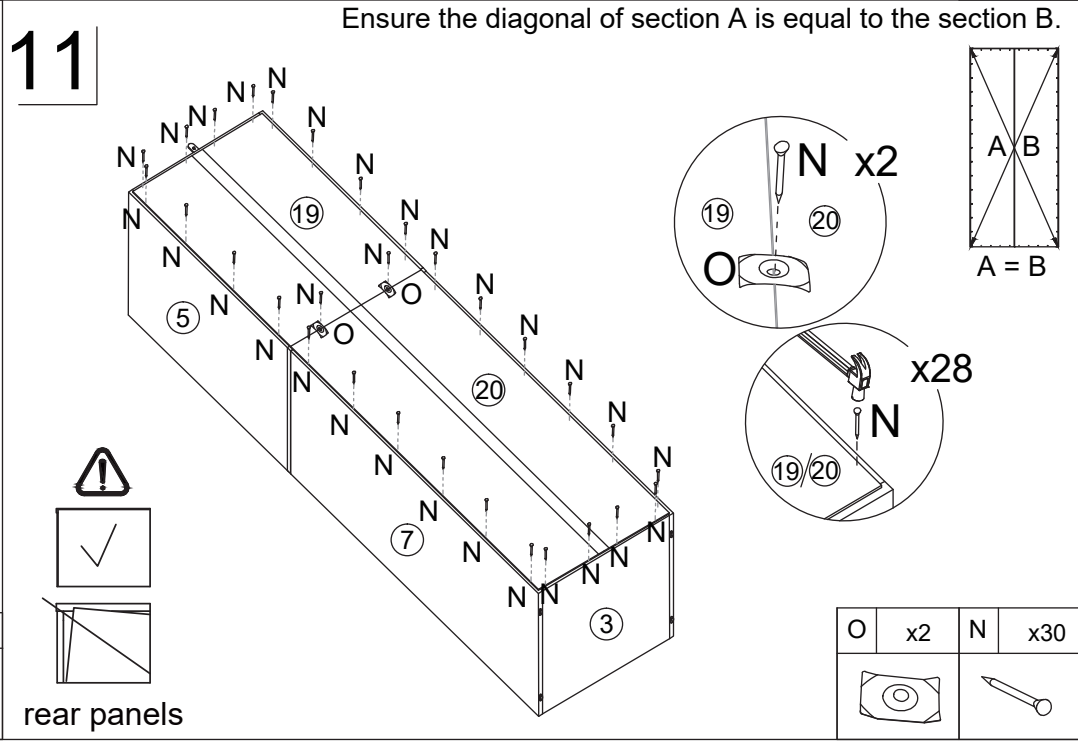






# 12

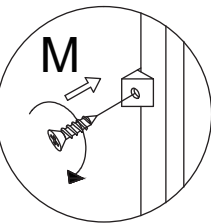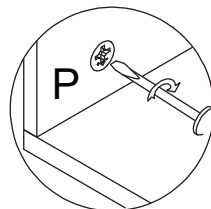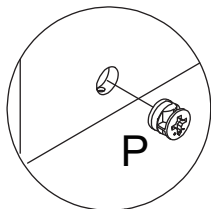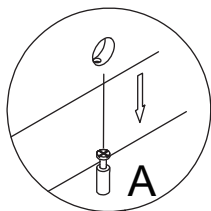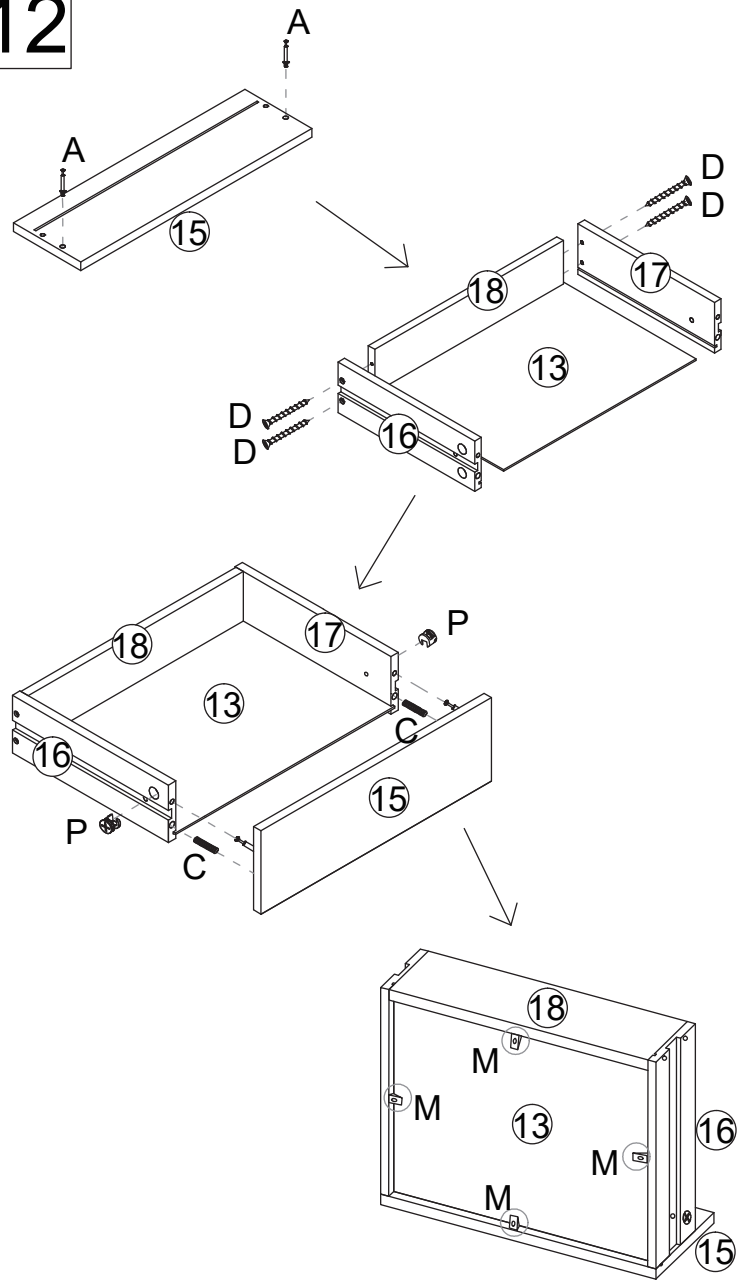

## x4

C	X8	A	x8	P	x8	M	x16	D	x16
Ø6x30mm		7x35mm		12x10mm		M3x14mm		M4x40mm	


# 13

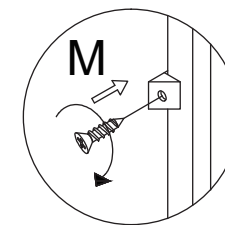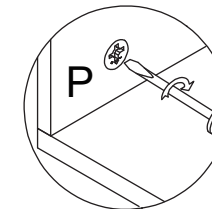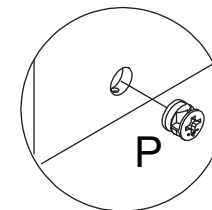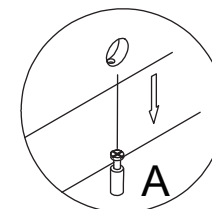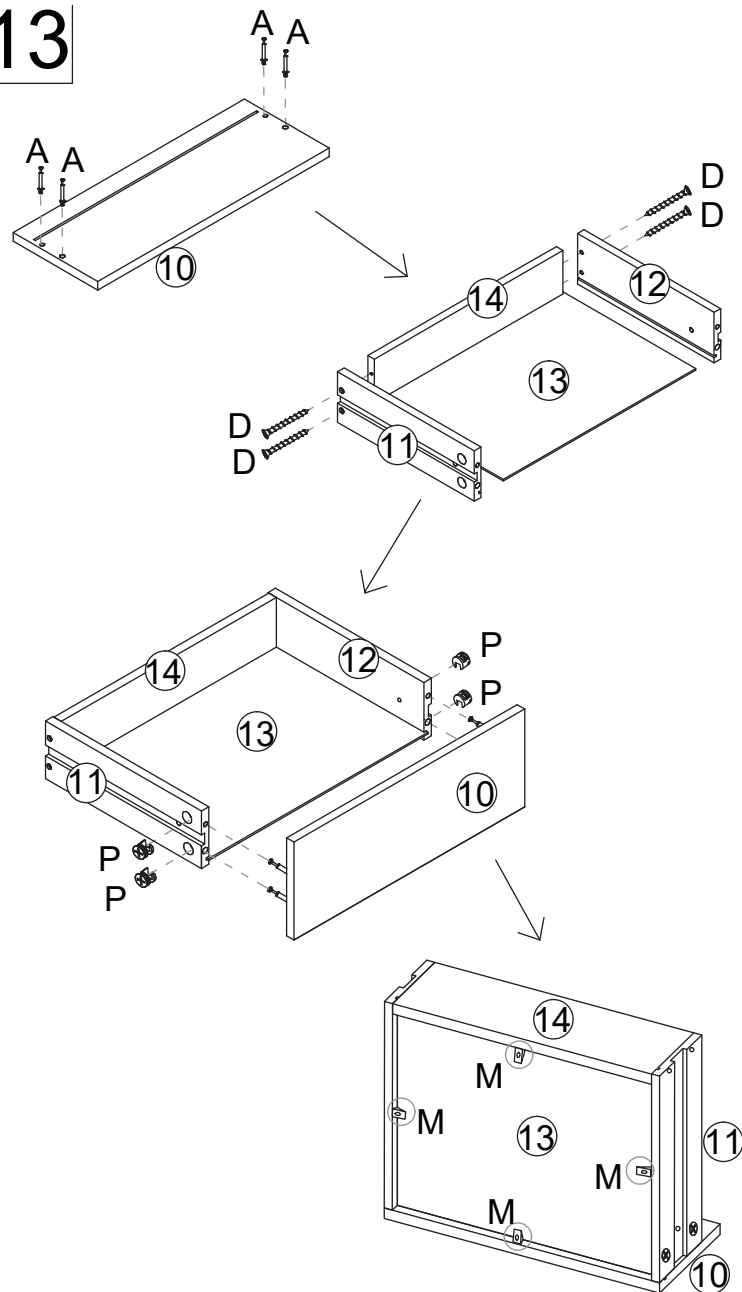


## x2

A	x8	P	x8	M	x8	D	x8
7x35mm		12x10mm		M3x14mm		M4x40mm	


14

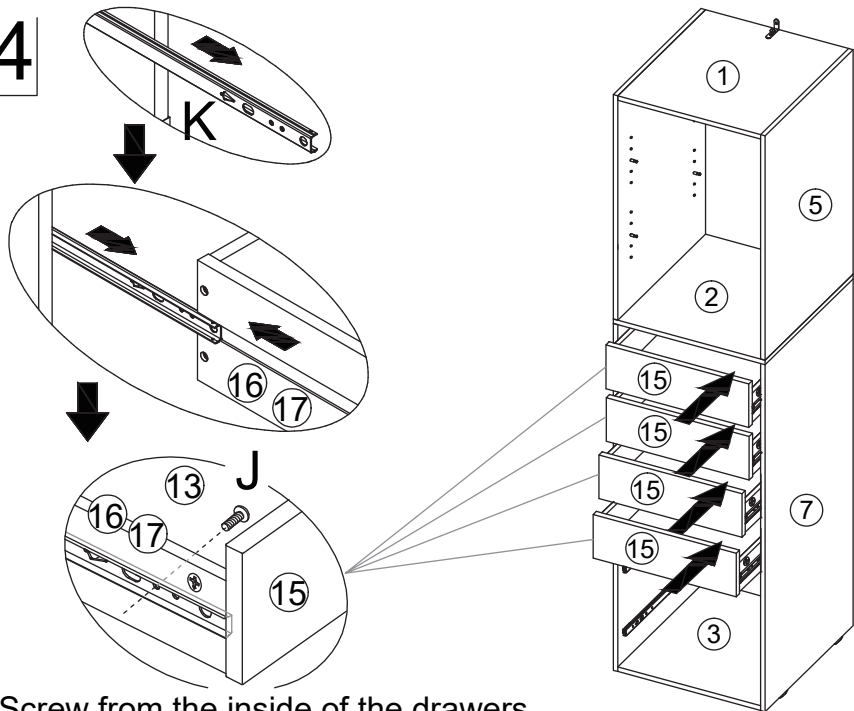


Screw from the inside of the drawers




16

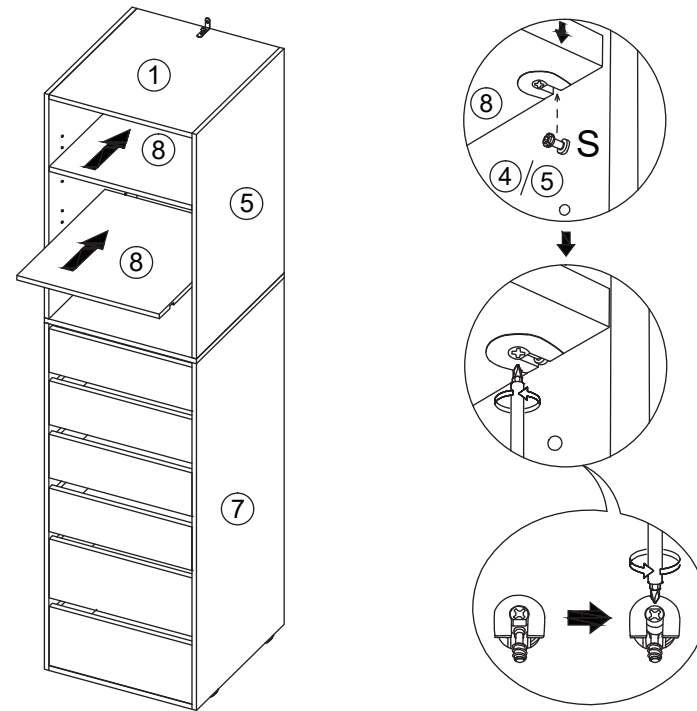


15

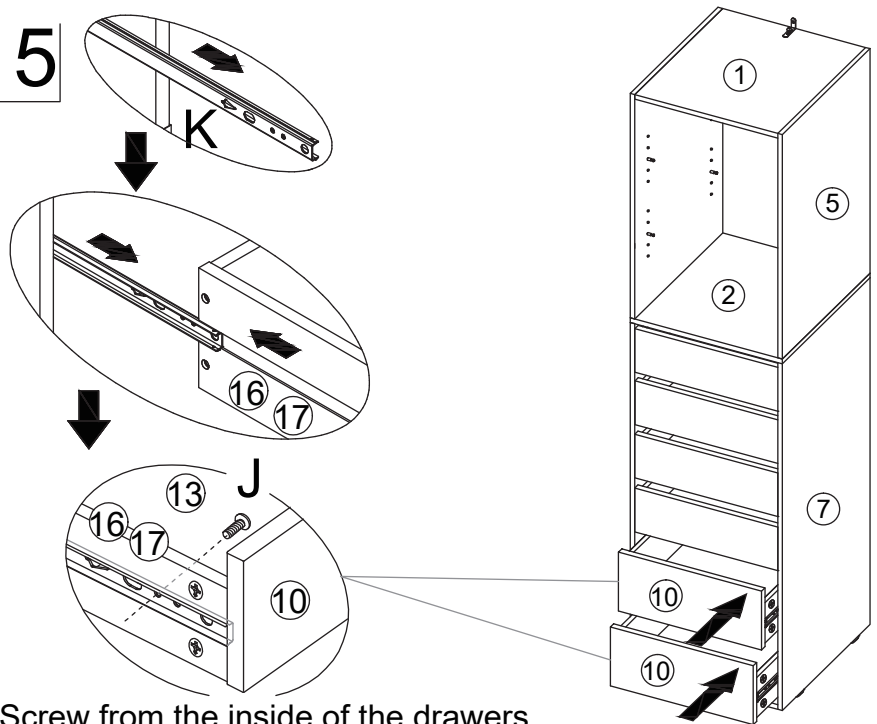

Screw from the inside of the drawers



17

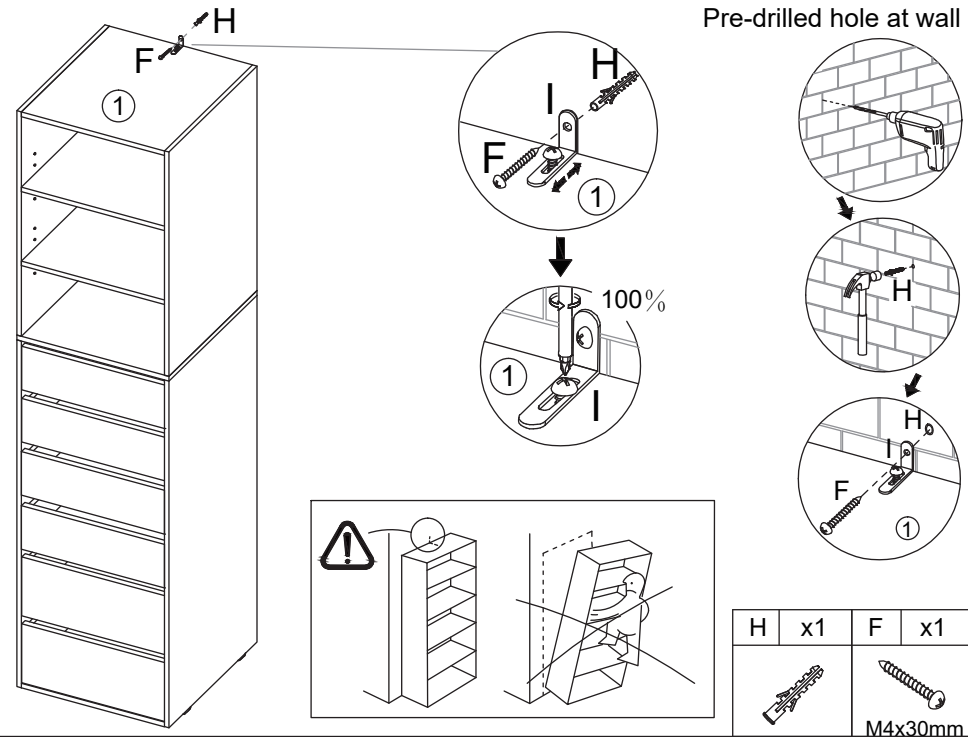

Pre-drilled hole at wall