


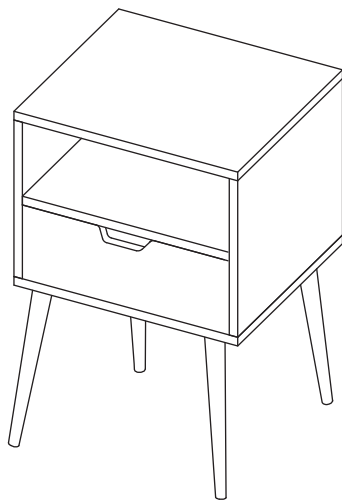

BEDSIDE TABLE

MODEL:BT-A4-WD/WHWD




















ASSEMBLY INSTRUCTIONS

Please read instructions carefully before assembly.




Two persons and
tools required for
assembly

HARDWARE


A	x6	B	x4	C	x14	D	x8	E	x6	F	x2
											
7x35mm		15x12mm		Ø6x30mm		M4x40mm		M3x12mm			
G	x2	H	x4	I	x20	J	x1	K	x4	L	x4
											
M4x10mm				M4x14mm							
M	x12	N	x1	O	x1	P	x1	Q	x2		
											
		M4x14mm		M4x30mm				12x10mm			

PARTS

Wipe with dry cloths

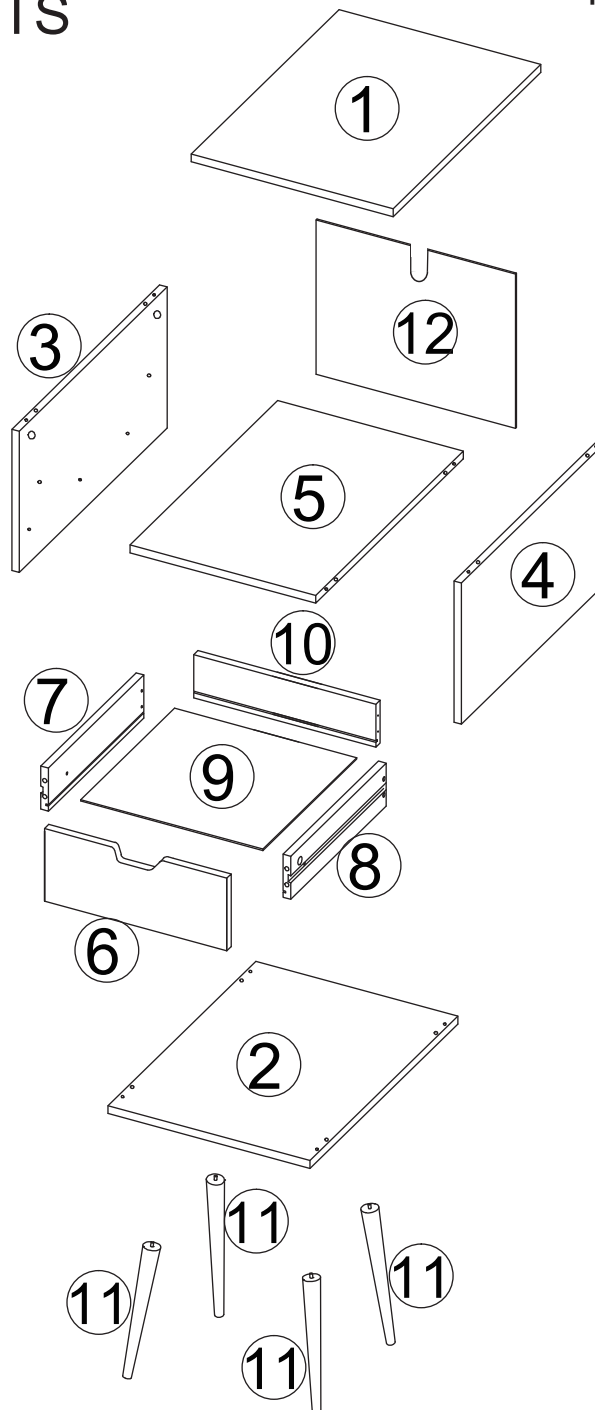


1

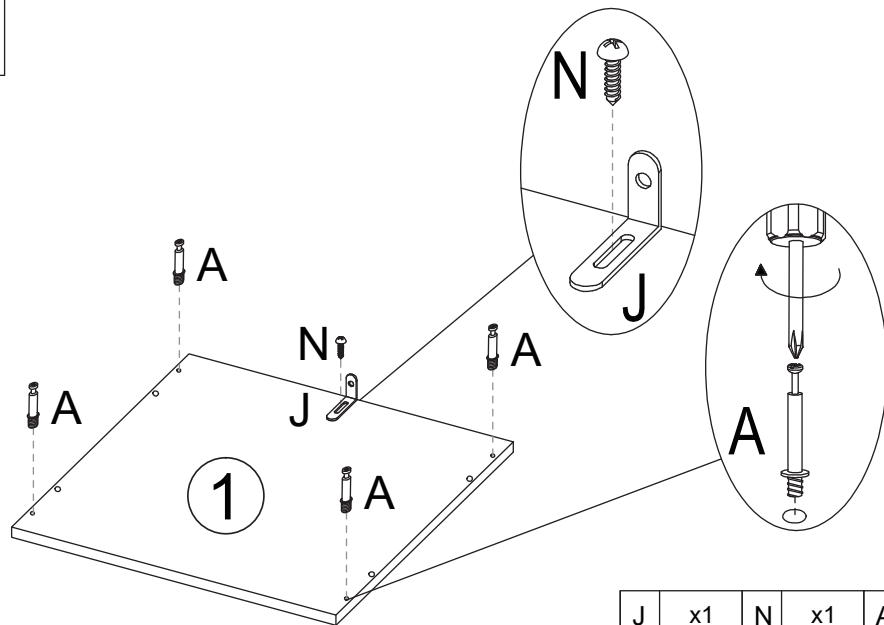




J	x1	N	x1	A	x4
		M4x14mm		7x35mm	

3

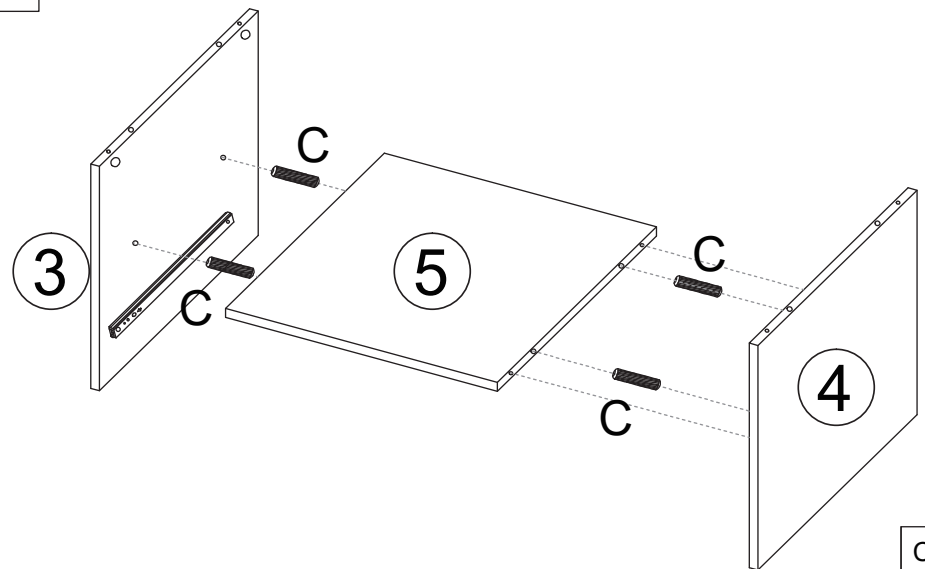



C	x4
Ø6x30mm	

2

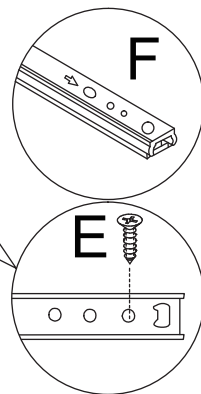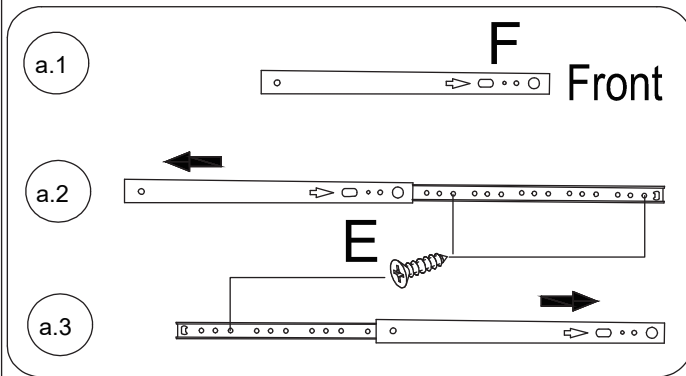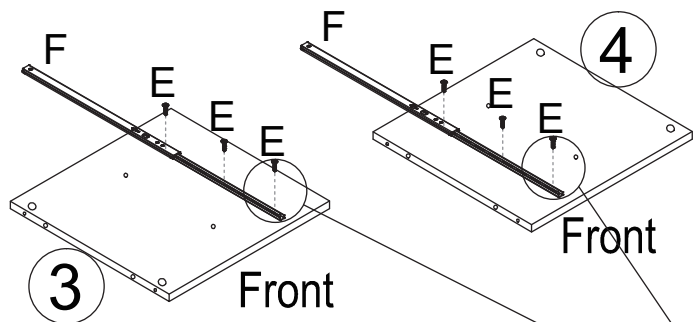


E	x6	F	x2
M3x12mm			

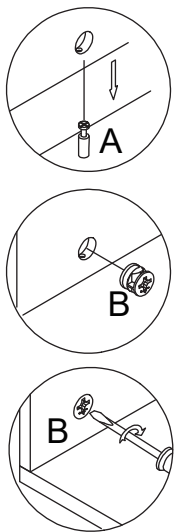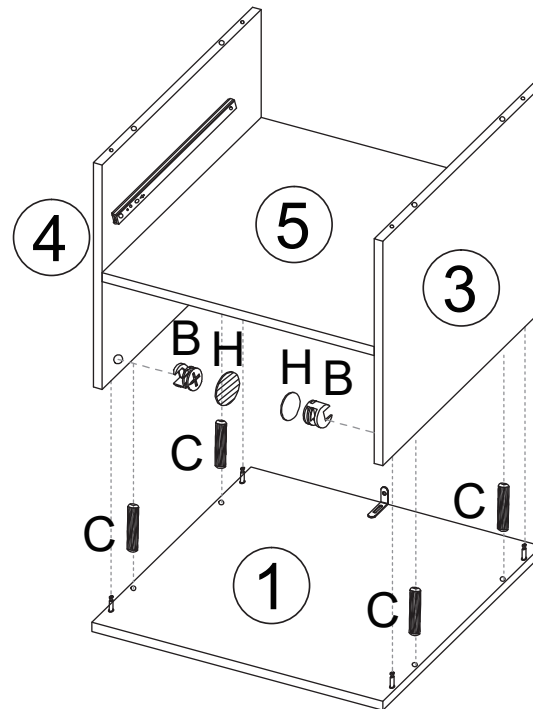

4




C	x4	B	x4	H	x4
Ø6x30mm		15x12mm			

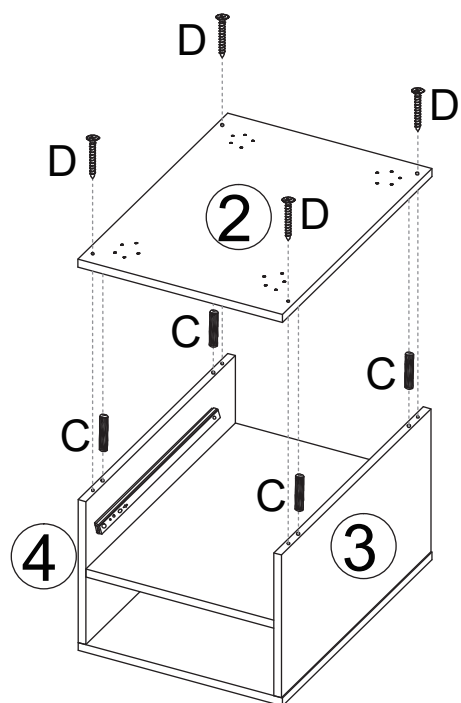
5




C	x4	D	x4
			
Ø6x30mm		M4x40mm	

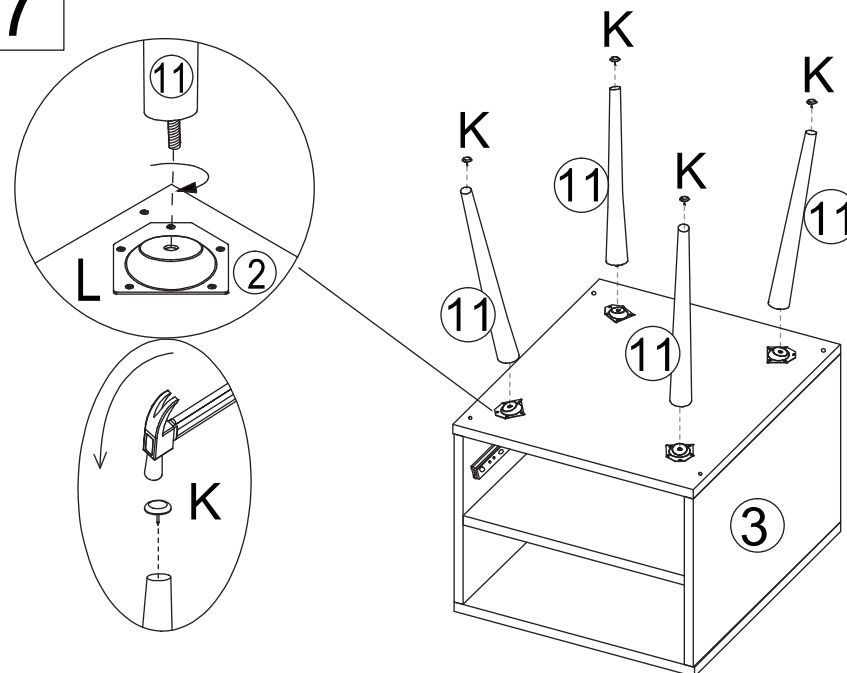

7




K	x4
	

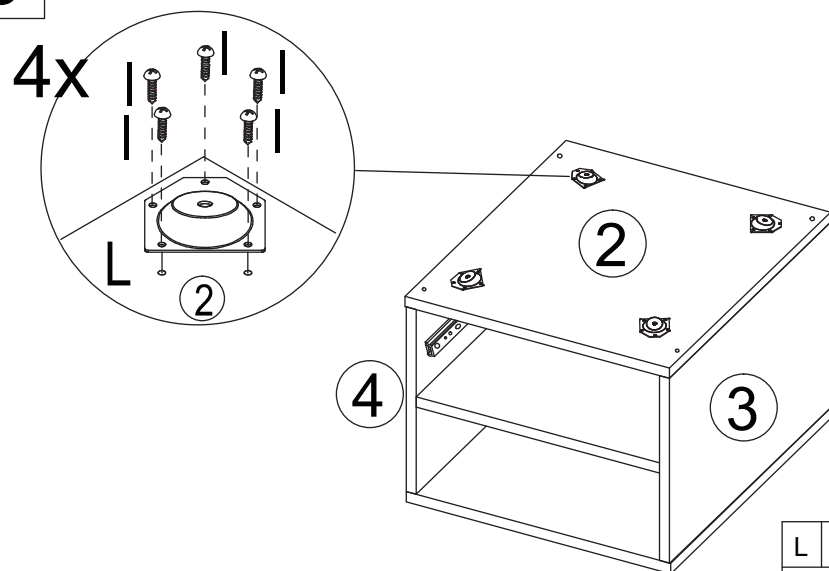
6








L	x4	I	x20
			
		M4x14mm	

8

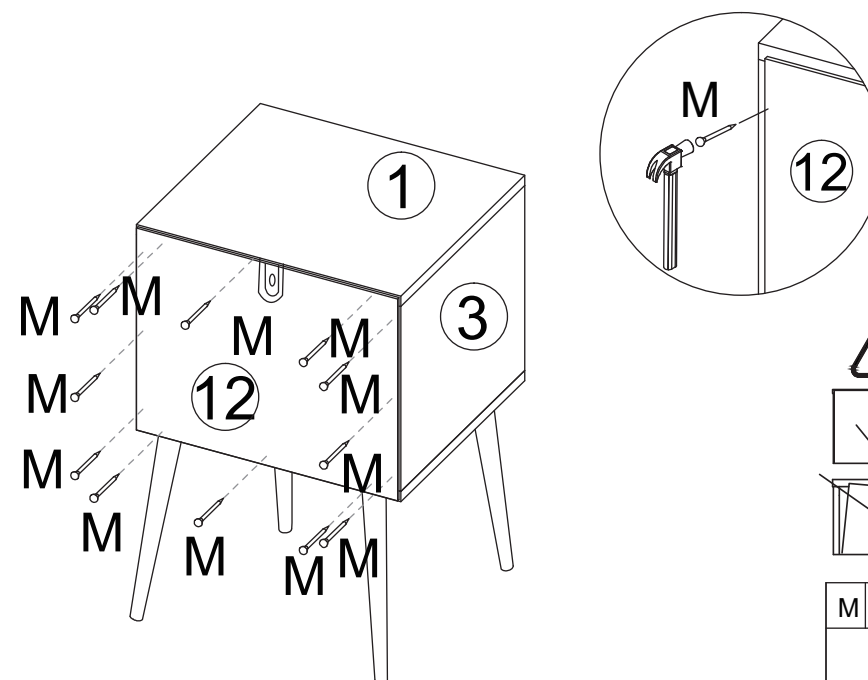




M	x12
	

9

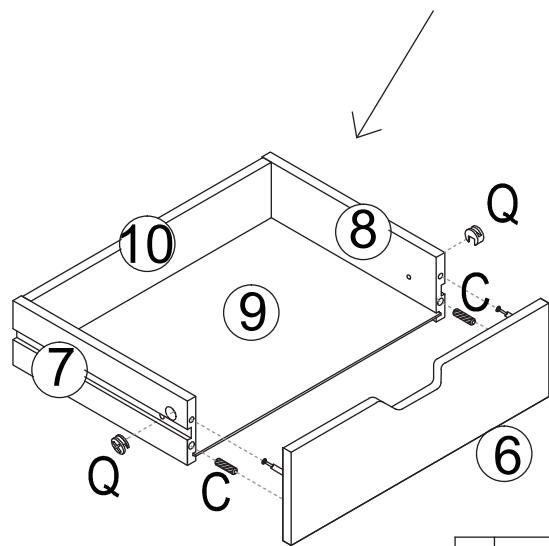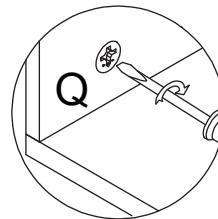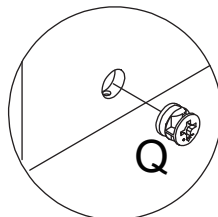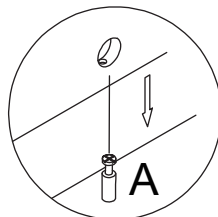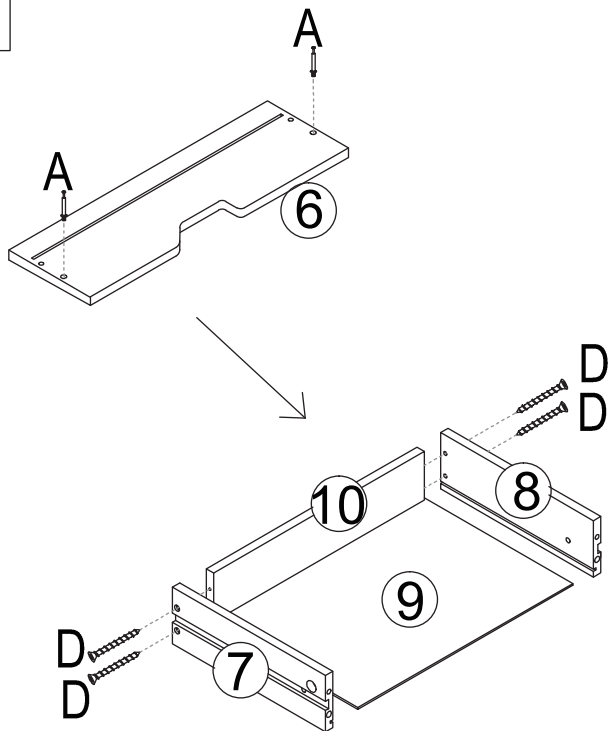

A	x2	Q	x2	C	x2	D	x4
7x35mm		12x10mm		Ø6x30mm		M4x40mm	

10

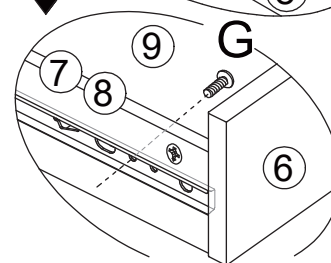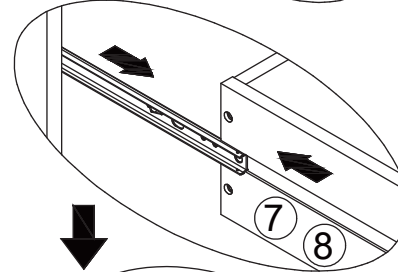
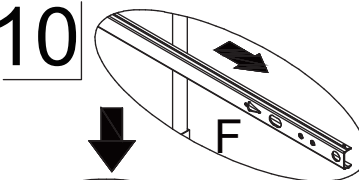


Screw from the inside of the drawers

G	x2
M4x10mm	

Pre-drill hole in wall

11

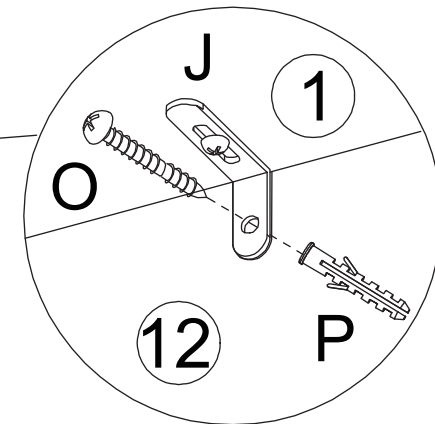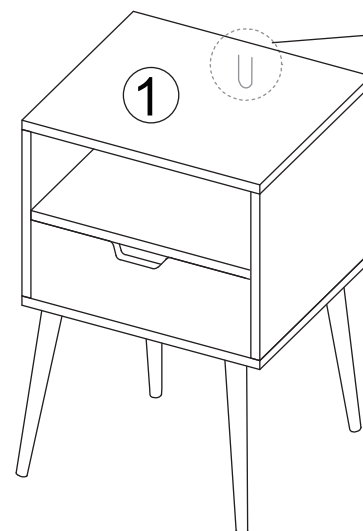

O	x1	P	x1
M4x30mm			